


Shift Solenoids (SS)

 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV

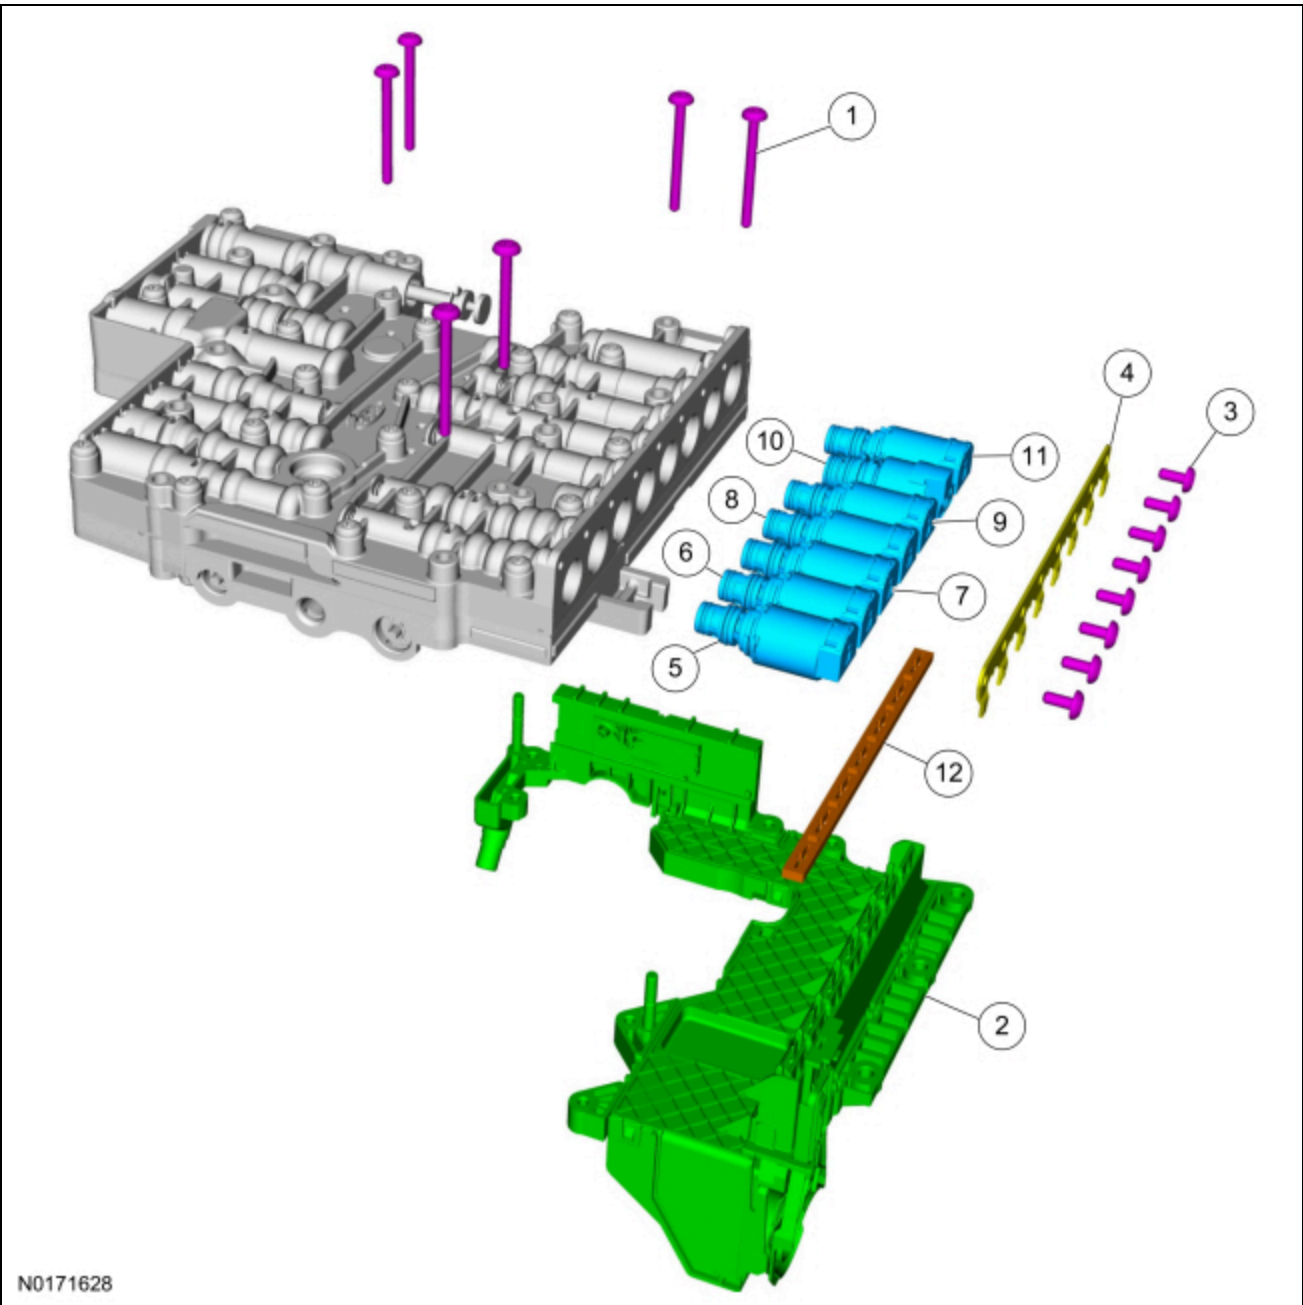


Item	Part Number	Description
1	W707884 W707884	Main control-to-molded leadframe bolts


2	7G2767G276	Molded leadframe
3	W707885W707885	Solenoid hold-down bracket bolt (8 required)
4	7Z3697Z369	Solenoid hold-down bracket
5	7G3837G383	SSA , Forward (1,2,3,4) clutch, normally low YES (brown nozzle).
6	7G3837G383	SSB , Direct (3,5,R) clutch, normally high YES (black nozzle).
7	7G3837G383	SSC , Intermediate (2,6) clutch, normally low YES (brown nozzle).
8	7G3837G383	LPC solenoid, normally high YES (black nozzle).
9	7G3837G383	SSD , low/reverse/overdrive clutch, normally high YES (black nozzle).
10	7G4847G484	SSE , normally off ON/OFF solenoid.
11	7G3837G383	TCC solenoid, normally low YES (brown nozzle).
12	—	Foam strip seal

Removal


1. Remove the main control. Refer to Main Control.
2. Remove the 6 long bolts from the molded leadframe.

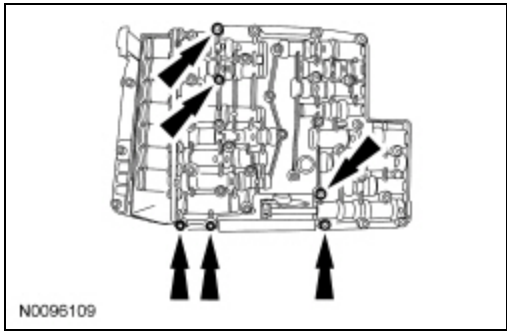


3. Carefully separate the molded leadframe from the main control assembly.
 1. Molded leadframe.
 2. Main control.

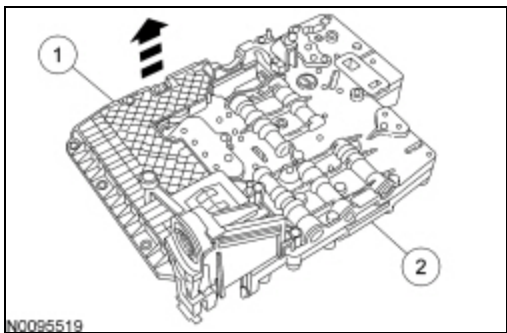

4. If equipped, remove and discard the foam strip seal.

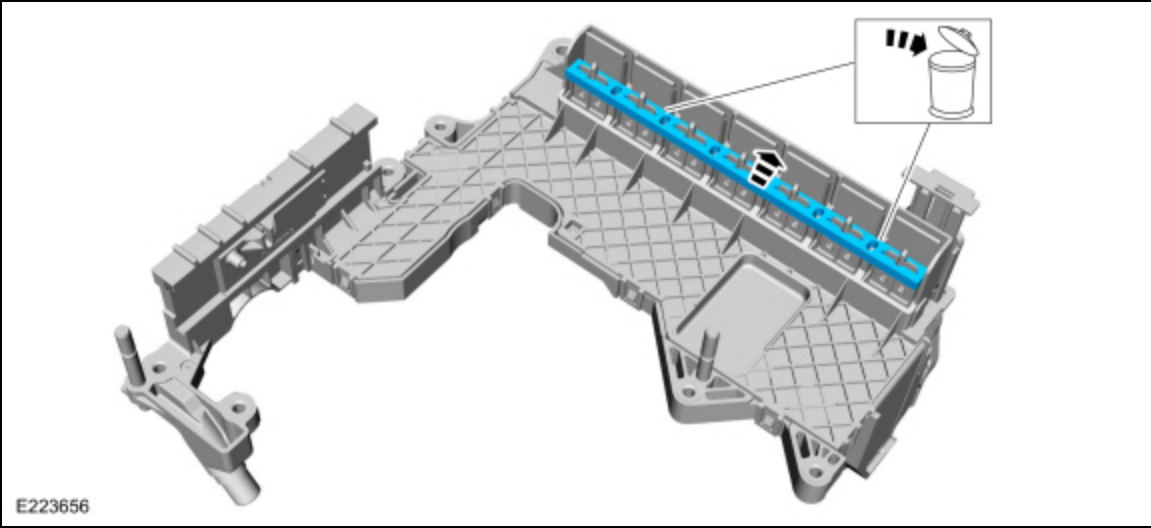


5. Remove the 8 solenoid bracket bolts and the solenoid bracket.

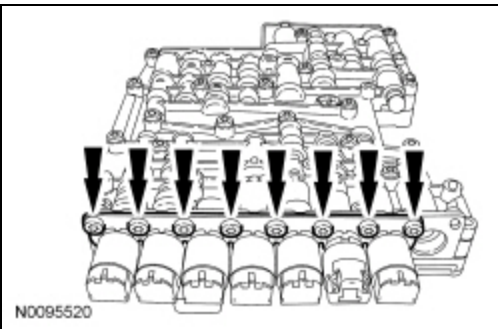

6. **NOTICE:** A YFS is calibrated from the factory and are not all the same. To replace a YFS , match the replacement solenoid nozzle color and the band number with the original solenoid or harsh/erratic shifts, harsh/soft engagement or damage to the transmission can occur.

If replacing more then 1 solenoid, number the solenoids and number the main control solenoid ports to correspond to the solenoid. Pull the solenoid(s) out of the main control valve body.

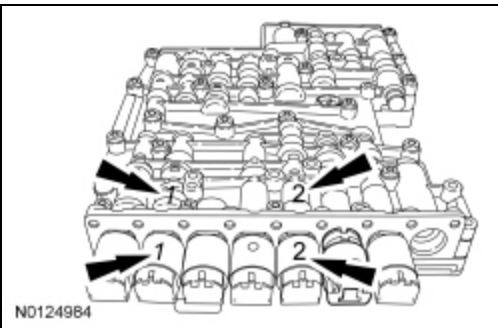

Installation


1. **NOTICE:** A YFS is calibrated from the factory and are not all the same. To replace a YFS , match the replacement solenoid nozzle color and the band number with the original solenoid or harsh/erratic shifts, harsh/soft engagement or damage to the transmission can occur.

Use the solenoid exploded view at the beginning of this procedure to identify what type of solenoid is being replaced. The solenoid can be a normally high YFS with a black nozzle, normally low YFS with a brown nozzle or an ON/OFF solenoid.

If replacing a YFS , record the band number and the solenoid nozzle color to get the correct part number for the solenoid.

Lubricate the solenoid O-rings with clean transmission fluid.

1. Solenoid Nozzle
2. Solenoid band number

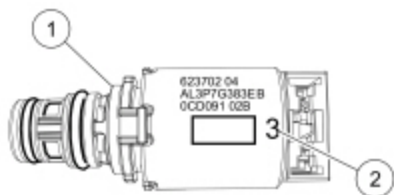

N0152363


2. Position the solenoid(s) in the main control in the correct port(s) as marked during removal.



N0124985

3. Position the solenoid bracket in place and install the 8 bolts.


- Tighten to 6 Nm (53 lb-in).

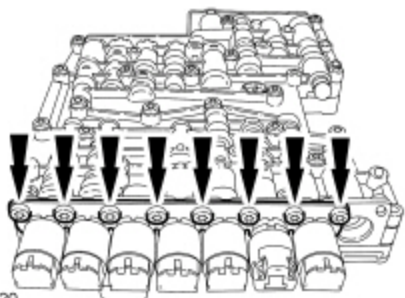

N0095520

4. **NOTE:** Some vehicles may not have been built with a foam strip seal. A new foam strip seal should be installed on all molded leadframes.

Install a new foam strip seal on the molded leadframe.

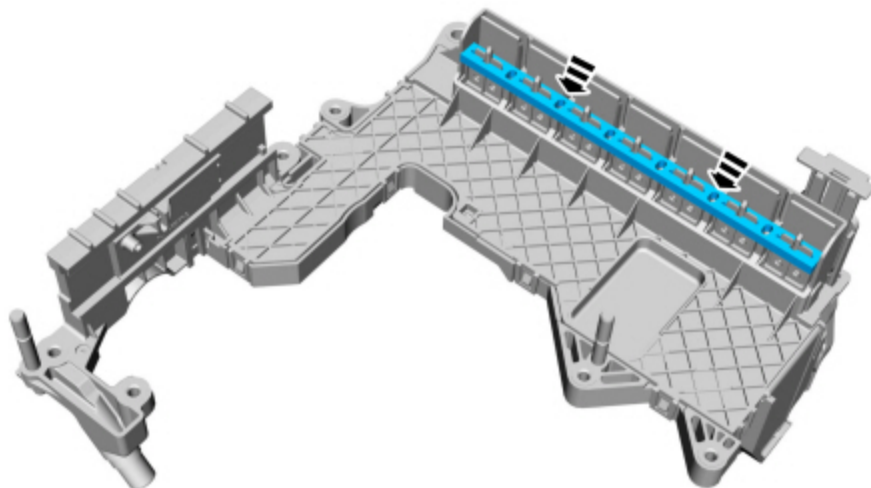


E223657


5. **NOTE:** The $\overline{TR}$ sensor pin must be aligned with the manual control valve during installation.

Position the molded leadframe on the main control.

1. Molded leadframe.
2. Main control.
3. TR sensor pin.

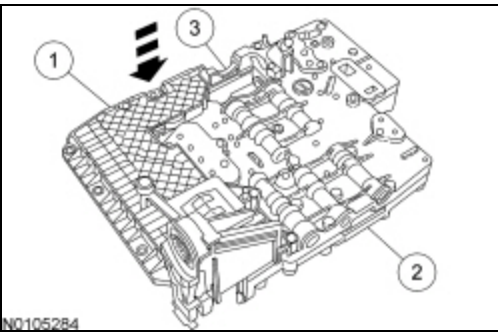

6. Install the 6 long bolts into the molded leadframe. Tighten the bolts in the sequence shown.
 - Tighten to 6 Nm (53 lb-in).

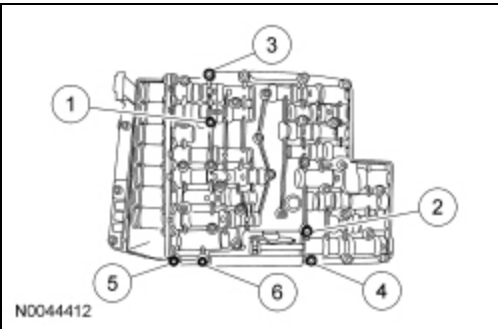

7. Install the main control. Refer to Main Control.