


Transmission Insulator and Retainer


 [Ford Ecat Electronic Parts Catalog](#)

Transmission Insulator and Retainer Rear Wheel Drive (RWD)

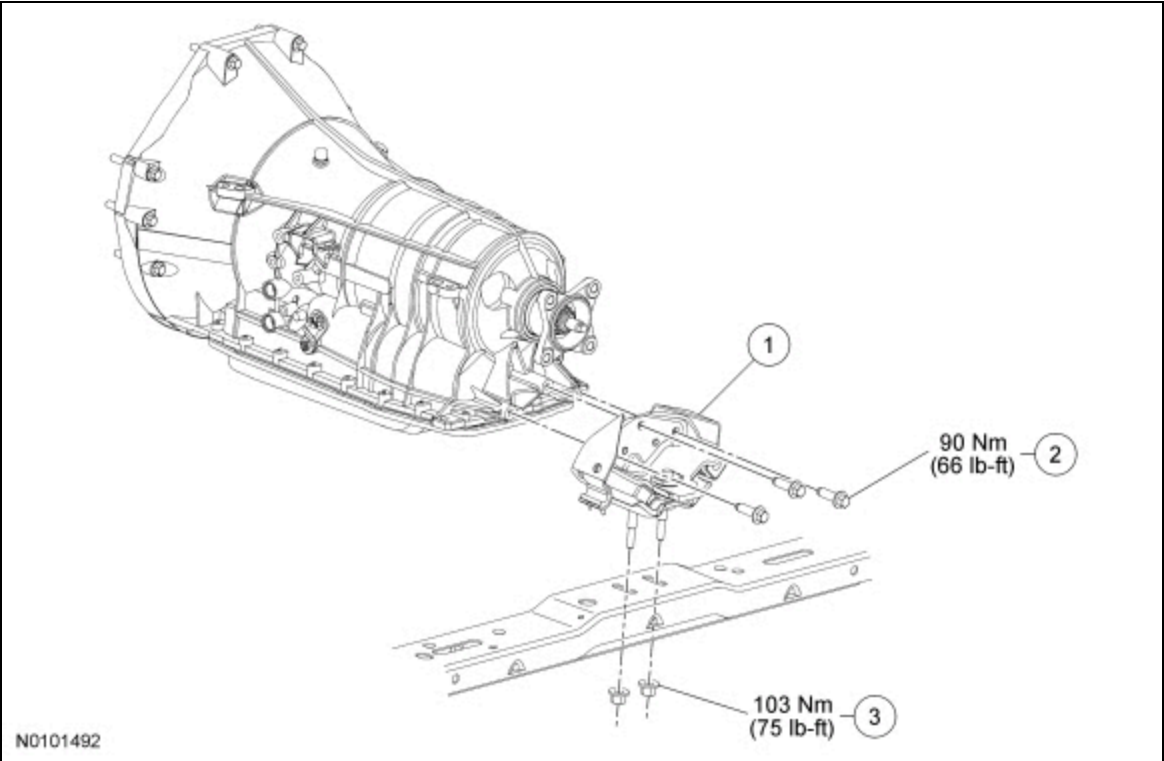

Item	Part Number	Description
1	60686068	Transmission insulator and retainer
2	W713728W713728	Transmission insulator and retainer bolt
3	N621945N621945	Transmission insulator and retainer nut

Transmission Insulator and Retainer 4WD

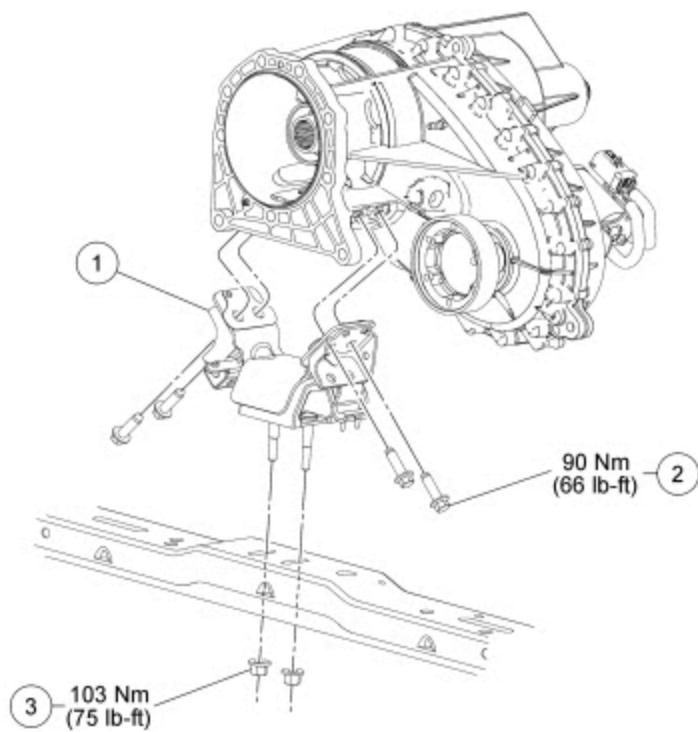


N0101493

Item	Part Number	Description
1	60686068	Transmission insulator and retainer
2	W713728W713728	Transmission insulator and retainer bolt
3	N621945N621945	Transmission insulator and retainer nut

Removal


All vehicles

1. With the vehicle in NEUTRAL, position it on a hoist. Refer to Section 100-02.
2. Remove the RH exhaust heat shield bolt from the transmission support crossmember.

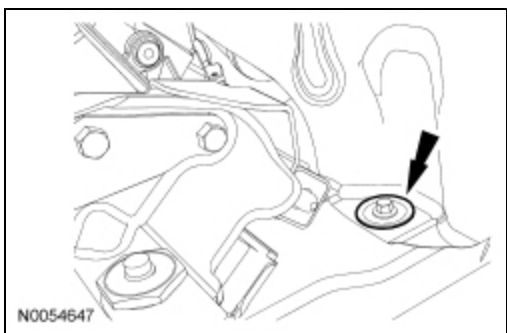

N0054647


3. Remove the LH exhaust heat shield bolt from the transmission support crossmember.

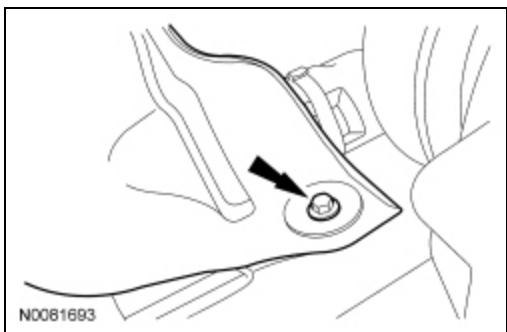


N0081693

RWD vehicles

4. Remove the 2 transmission insulator and retainer nuts.

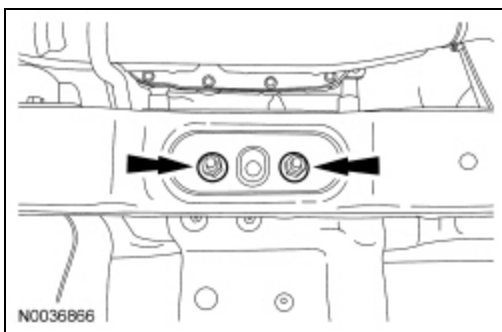


5. Remove the LH isolator cap bolt.

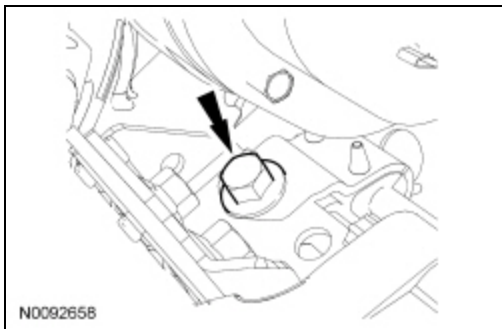


6. Position a high-lift transmission jack under the transmission.

7. Remove and discard the 4 transmission support crossmember nuts and bolts (2 each side) and remove the transmission support crossmember.

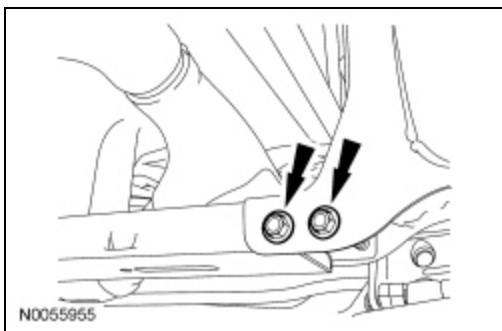


8. Remove the 3 transmission insulator and retainer bolts and remove the transmission insulator and retainer.

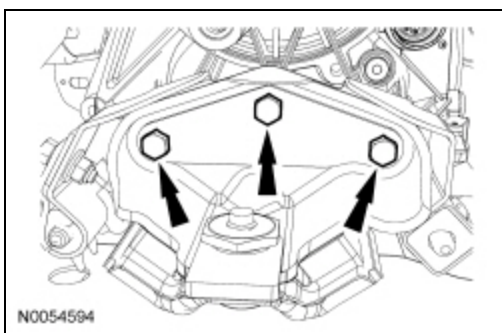


4WD vehicles


9. If equipped, remove the 4 skid plate bolts and remove the skid plate.

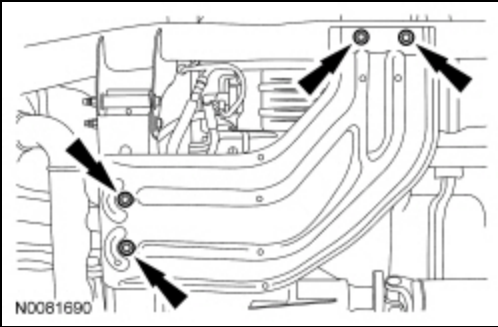

10. Remove the 2 transmission insulator and retainer nuts.

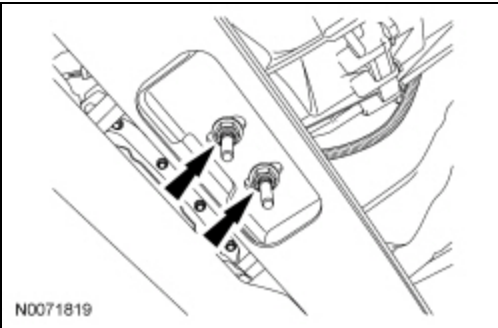


11. Remove the LH insulator cap bolt.

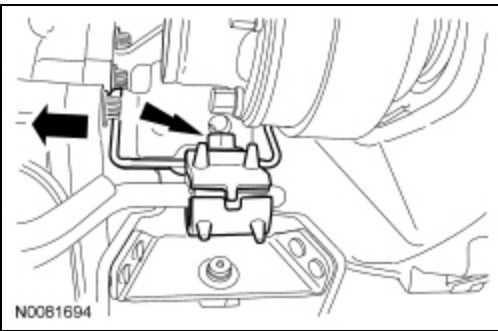


12. **NOTE:** *Right side shown, left side similar. Transmission crossmember removed for clarity.*


Remove the 4 transmission insulator and retainer bolts.

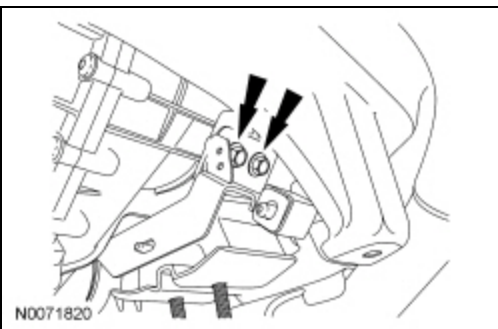

13. Support the transfer case.

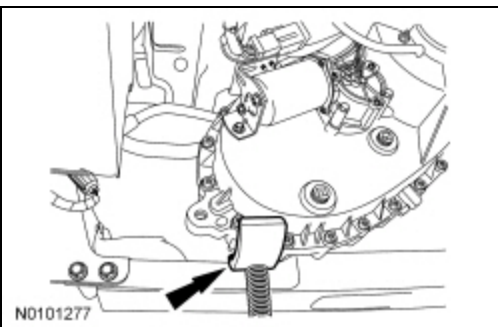

14. Remove and discard the 4 transmission support crossmember nuts and bolts.

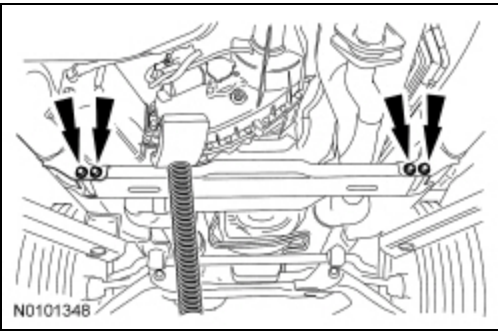


15. Remove the transmission insulator and retainer.


Installation

RWD vehicles


1. Install the transmission insulator and retainer and the 3 bolts.
 - Tighten to 90 Nm (66 lb-ft).

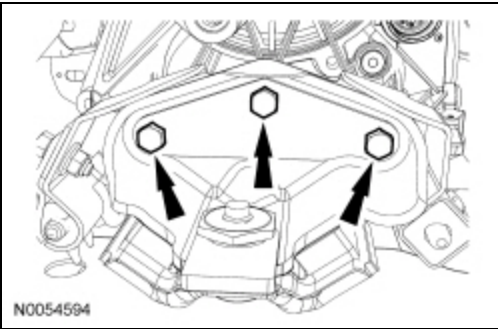


2. Install the transmission support crossmember and the 4 new transmission support crossmember nuts and bolts (2 each side).
 - Tighten to 90 Nm (66 lb-ft).

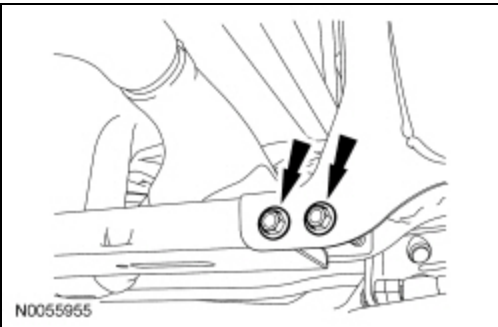

3. Lower the transmission onto the transmission support crossmember and install the 2 transmission insulator and retainer nuts.
 - Tighten to 103 Nm (75 lb-ft).

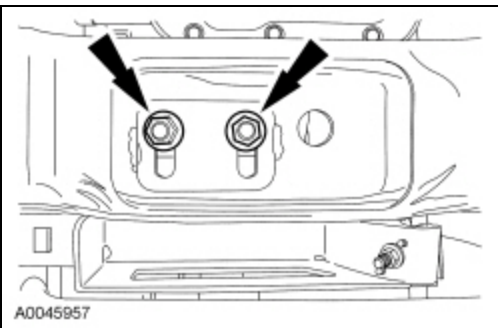


4. Install the LH isolator cap bolt.
- Tighten to 35 Nm (26 lb-ft).

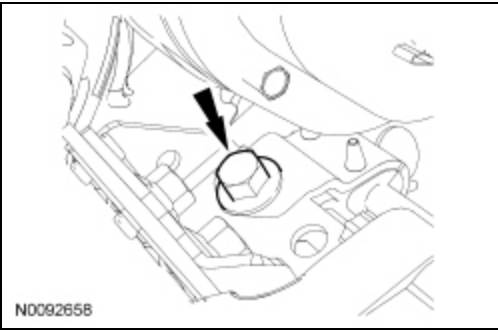


4WD vehicles


5. Loosely install the transmission insulator and retainer and the 4 bolts.

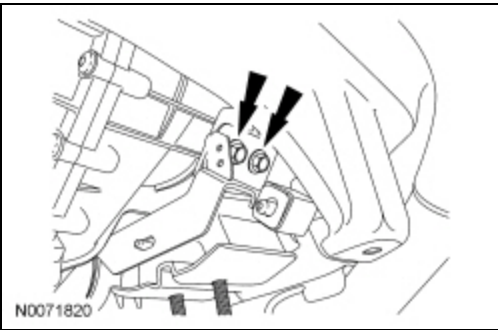


6. Position the transmission support crossmember and loosely install the 2 transmission insulator and retainer nuts.

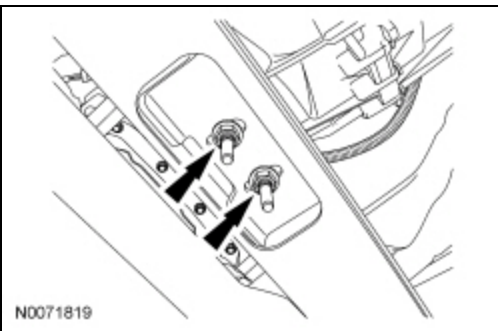

7. Install the 4 new transmission support crossmember bolts and nuts.
- Tighten the transmission insulator and retainer bolts to 90 Nm (66 lb-ft).
 - Tighten the transmission support crossmember bolts and nuts to 90 Nm (66 lb-ft).
 - Tighten the transmission insulator and retainer nuts to 103 Nm (75 lb-ft).

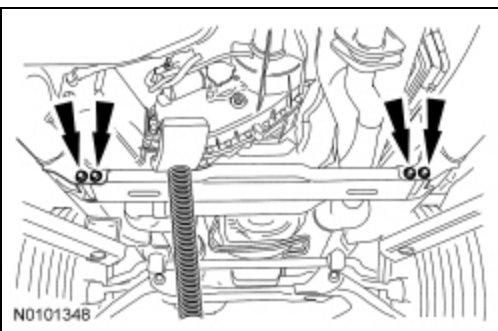


8. Install the bolt for the LH isolator cap bolt.
- Tighten to 35 Nm (26 lb-ft).

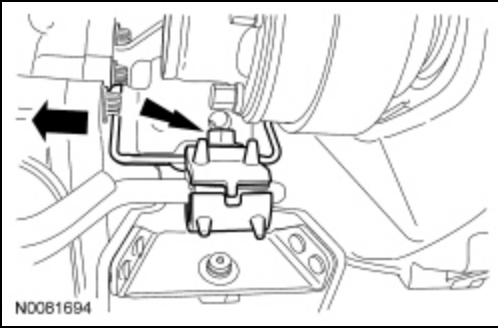


All vehicles

9. Install the LH exhaust heat shield bolt to the transmission support crossmember.
 - Tighten to 15 Nm (133 lb-in).

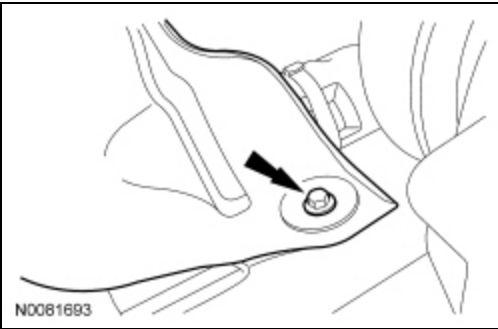

10. Install the RH exhaust heat shield bolt to the transmission support crossmember.
 - Tighten to 15 Nm (133 lb-in).

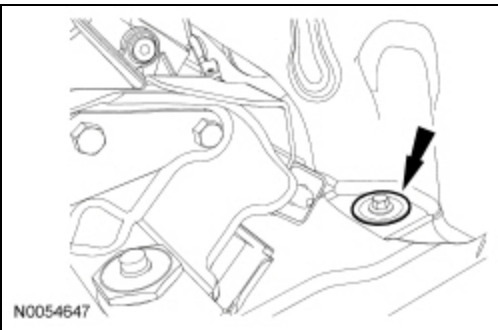

4WD vehicles

11. If equipped, install the skid plate and the 4 skid plate bolts.
 - Tighten to 40 Nm (30 lb-ft).

