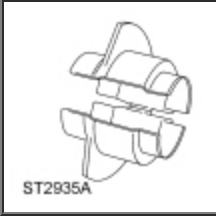


Transmission Fluid Cooler Tubes — 3.5L GTDI, 3.7L

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

	Disconnect Tool, Transmission Cooler Line 307-569
--	--


Material

Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV

3.5L GTDI and 3.7L Transmission Fluid Cooler Tubes

NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

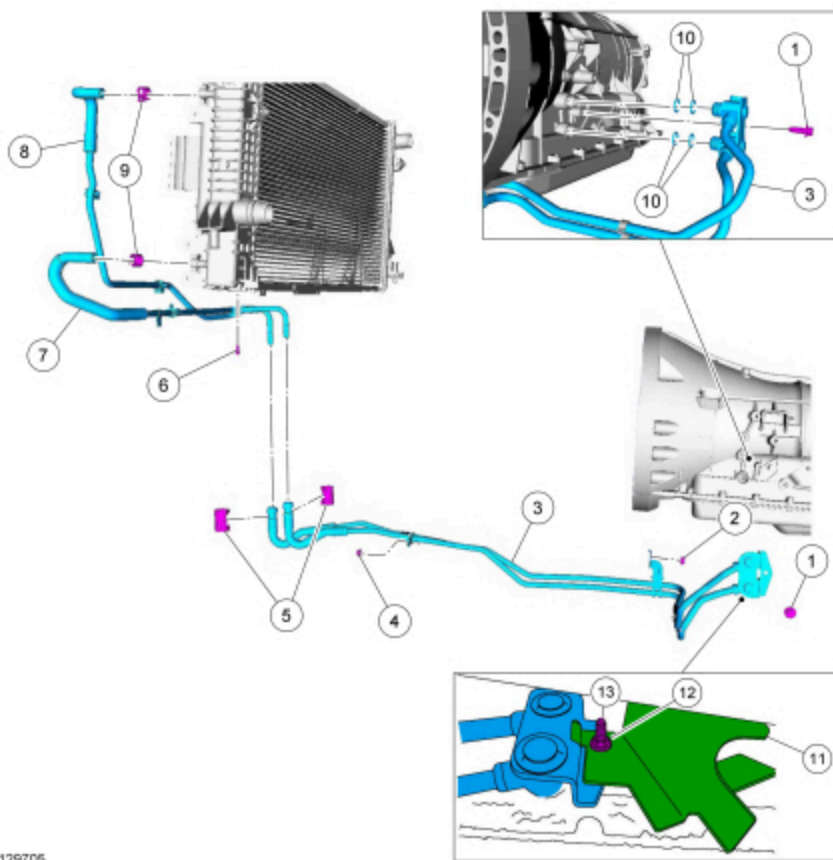


NO129705

Item	Part Number	Description
1	W715131 W715131	Transmission fluid cooler tubes-to-transmission bolt
2	W709450 W709450	Transmission fluid cooler tube bracket nut
3	7R081 7R081	Transmission fluid cooler inlet and outlet tubes
4	W709450 W709450	Transmission fluid cooler tube bracket-to-front of engine nut
5	7Z465 7Z465	Transmission fluid cooler inlet and outlet tube secondary latches
6	W500212 W500212	Transmission fluid cooler tube bracket bolt
7	7B028 7B028	In-tank transmission fluid cooler inlet tube
8	7B028 7B028	In-tank transmission fluid cooler outlet tube
9	7C107 7C107	Transmission fluid cooler hose clamps
10	7J227 7J227	Transmission fluid cooler tube O-rings (4 required)
11	7B147 7B147	Selector lever cable splash shield (if equipped)
12	W520111 W520111	Selector lever cable splash shield nut
13	W715798 W715798	Transmission fluid cooler tubes-to-transmission bolt (with selector lever cable splash shield)

3.5L GTDI and 3.7L With Auxiliary Transmission Fluid Cooler

NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

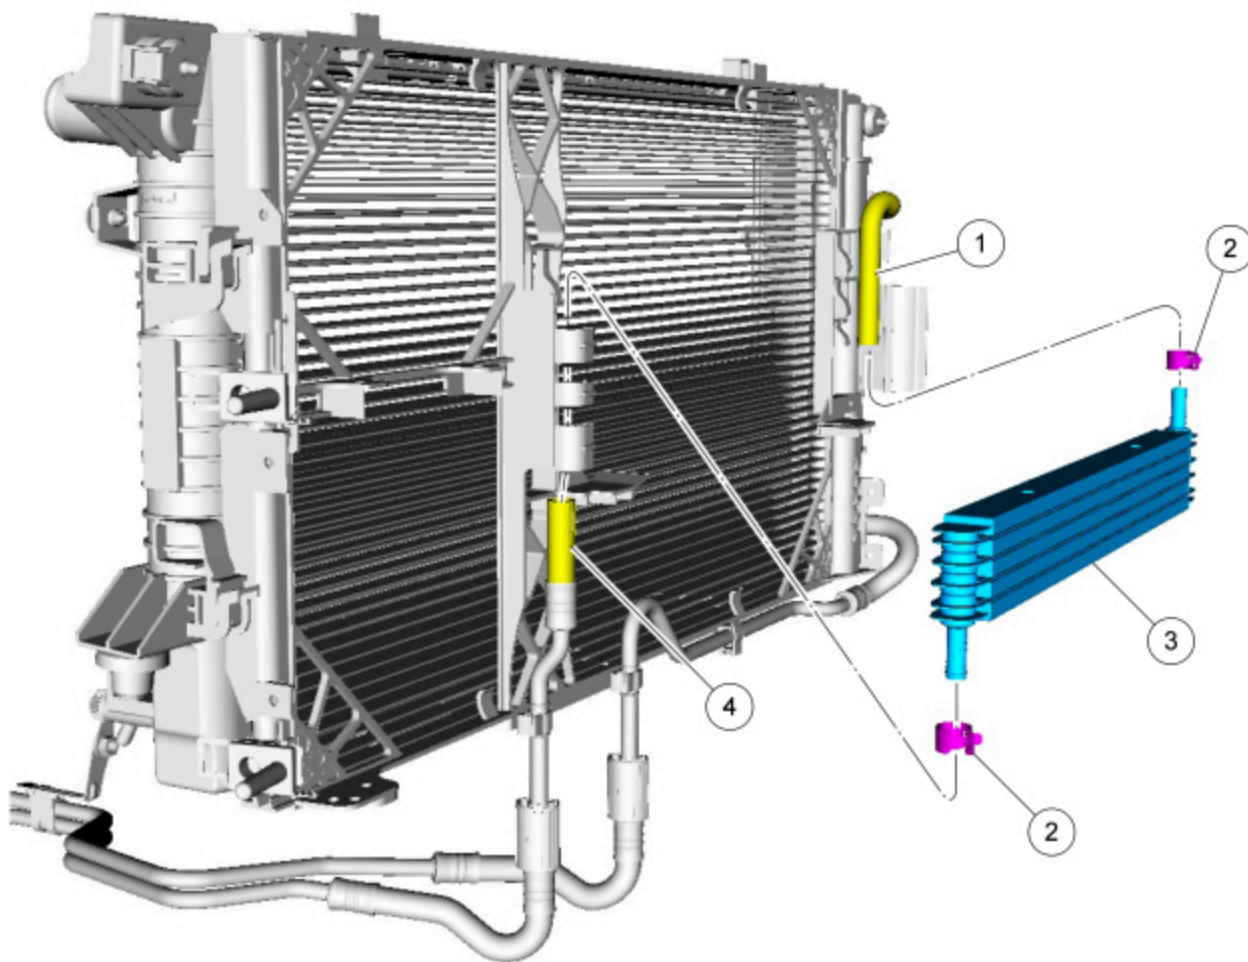


N0123773


Item	Part Number	Description
1	7C4107C410	Auxiliary transmission fluid cooler inlet hose
2	7C1077C107	Transmission fluid cooler hose clamps
3	7A0957A095	Auxiliary transmission fluid cooler
4	7B0287B028	Auxiliary transmission fluid cooler outlet hose

Removal


1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. If equipped, remove the 4 fasteners and the splash shield.

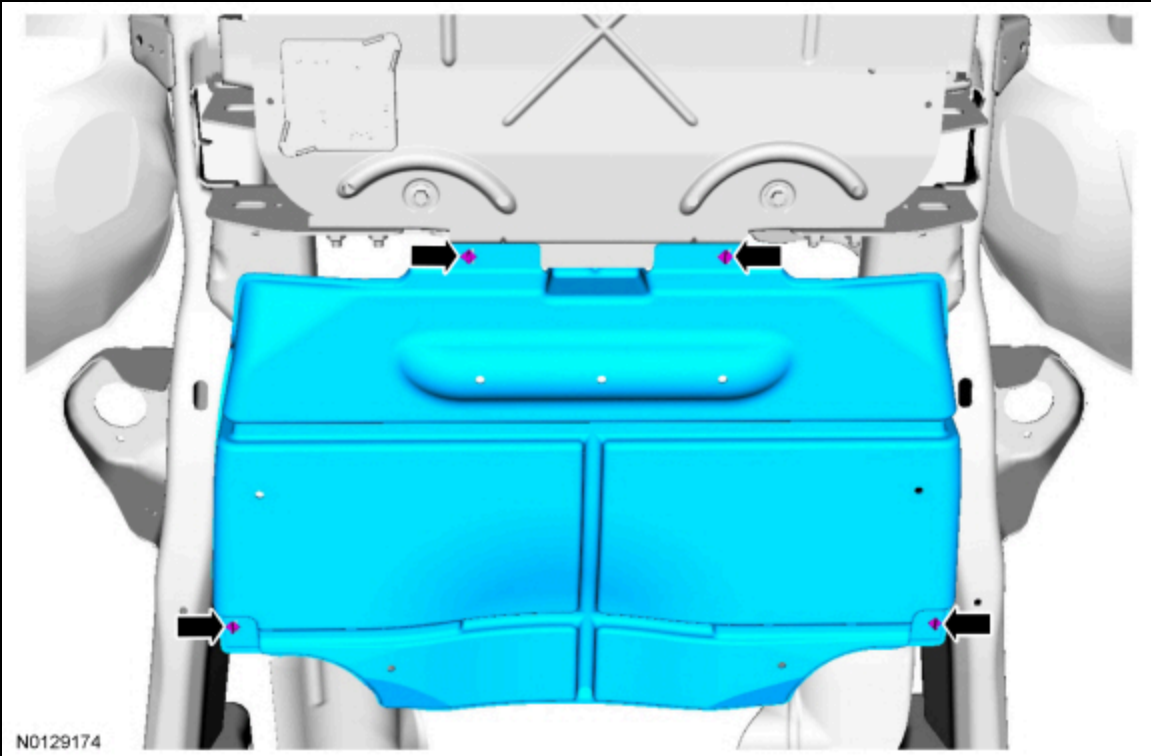


3. If equipped, remove the 12 pushpins and the air deflector.

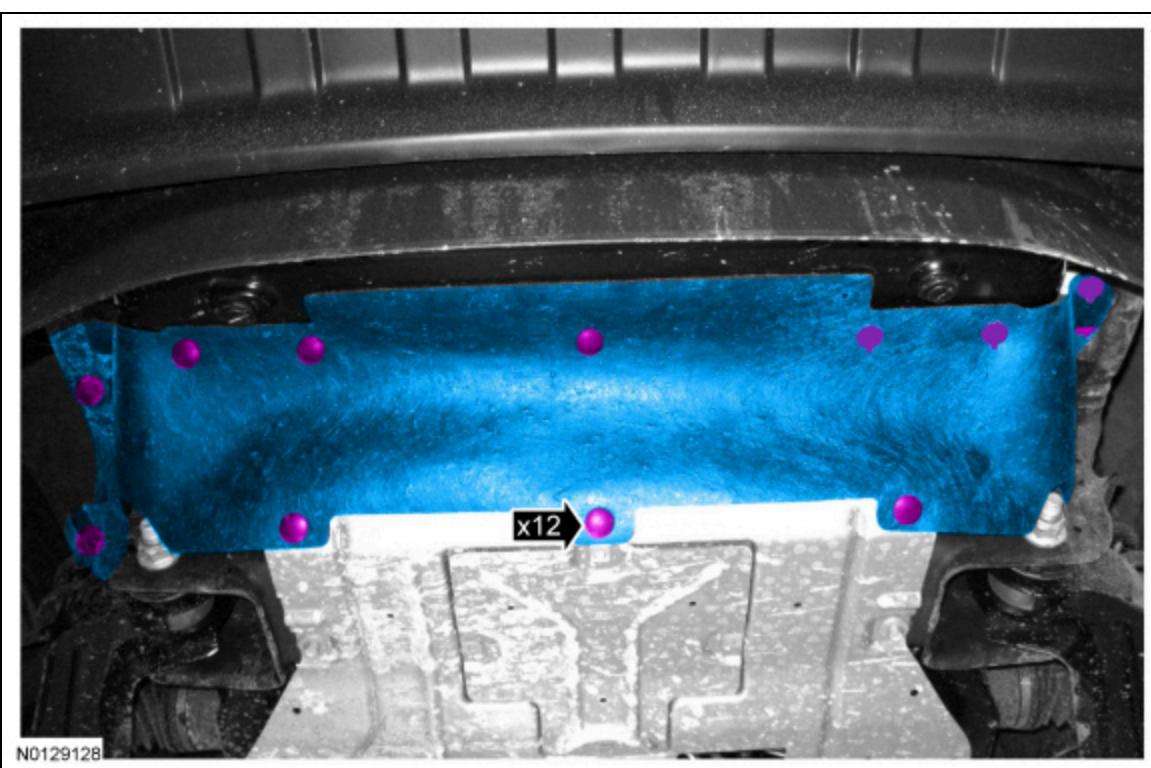


4. If equipped, remove the 4 bolts and the skid plate.

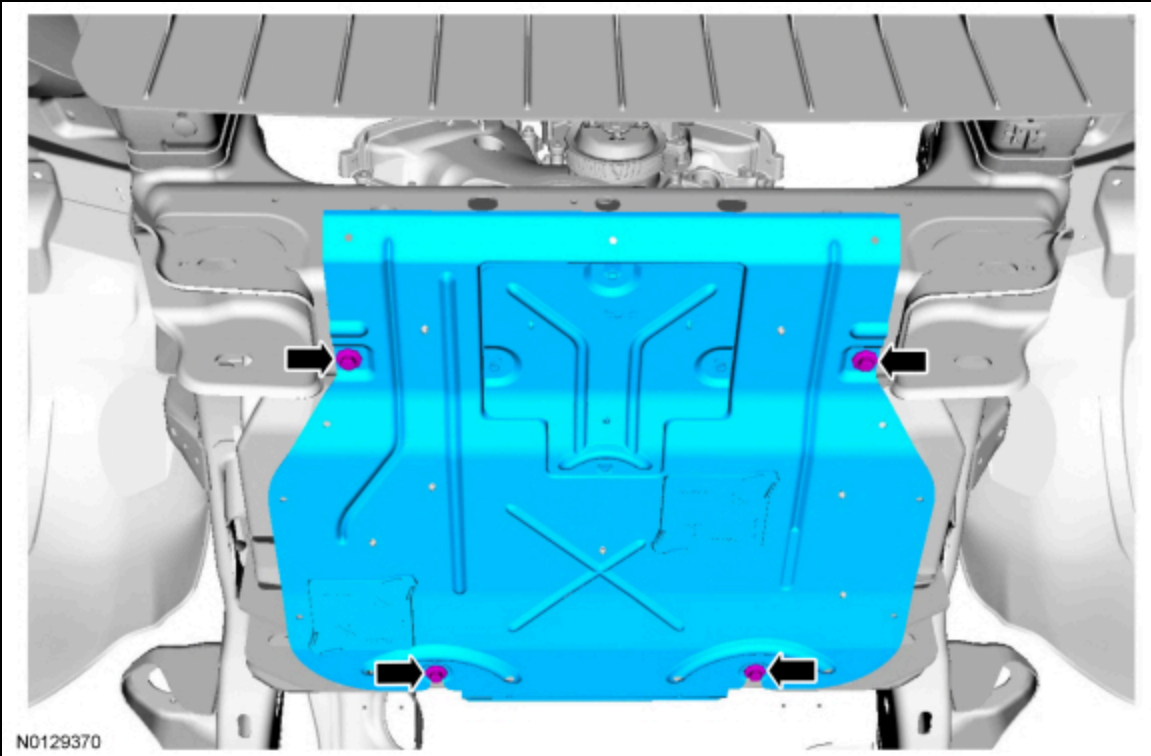


5. Remove the transmission fluid cooler tube secondary latches.

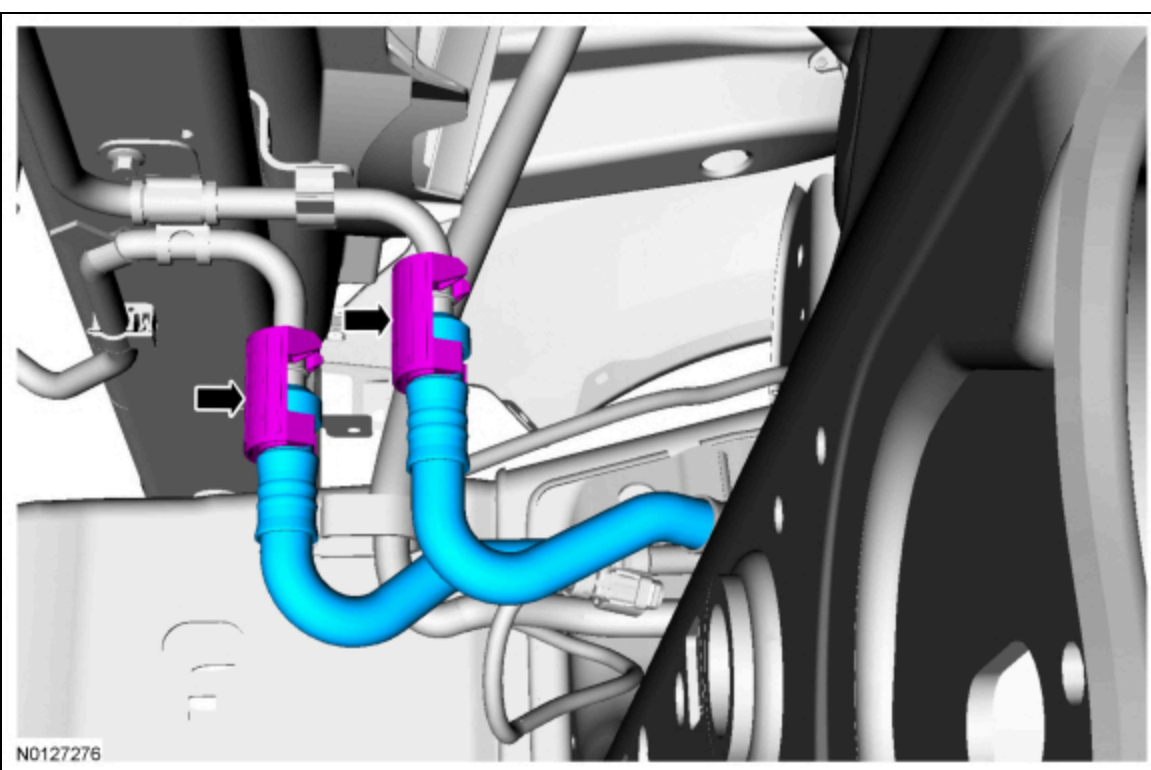


6. Using the Transmission Cooler Line Disconnect Tool, disconnect the transmission fluid cooler tubes from the transmission fluid cooler hoses.

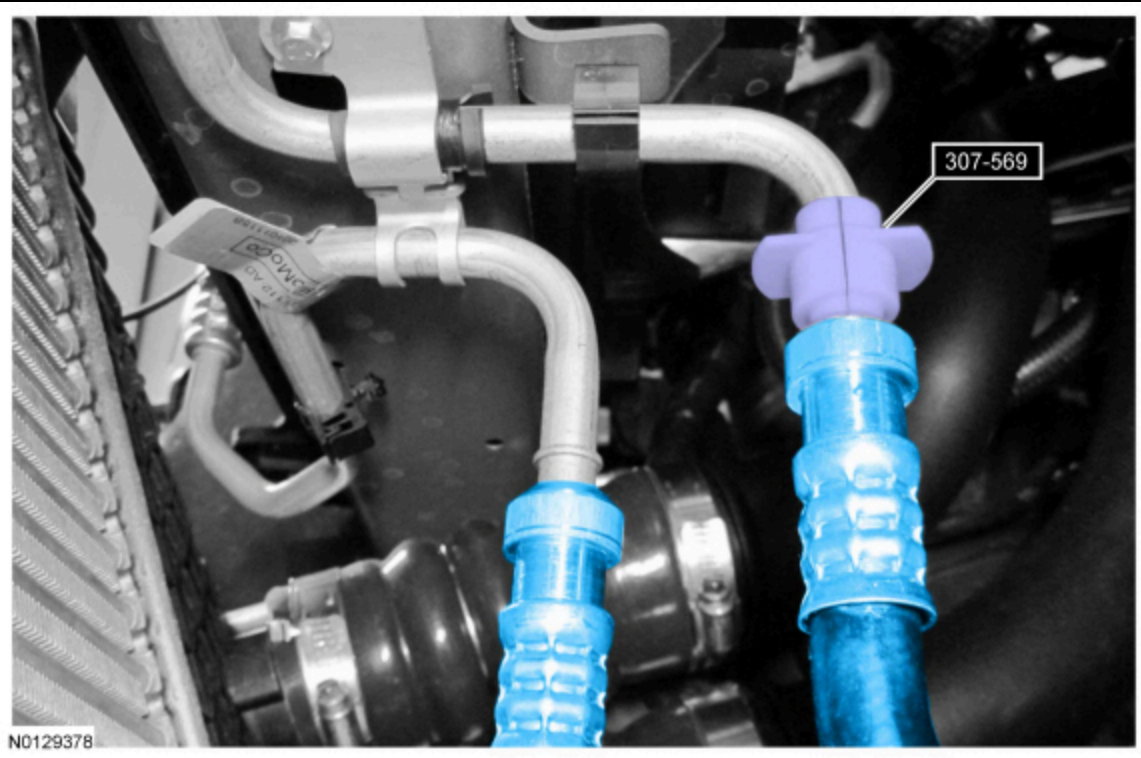


7. Remove the transmission fluid cooler tube bracket nut from the front of the engine.

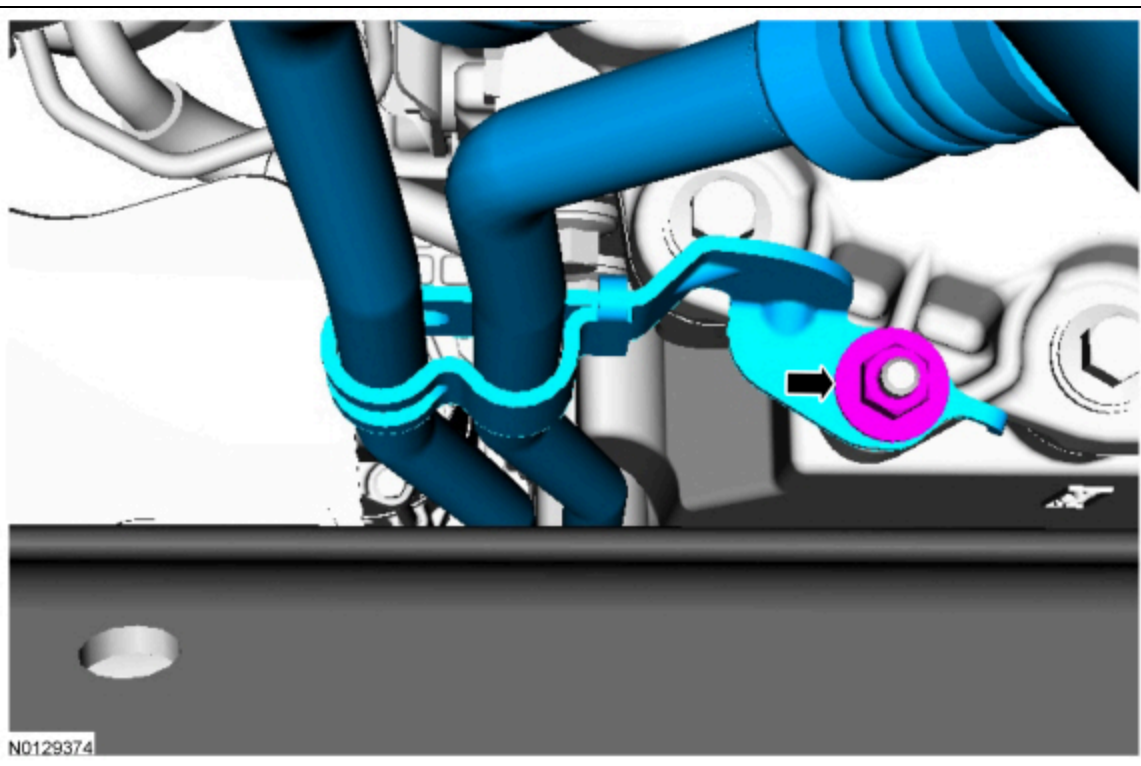

8. Remove the transmission fluid cooler tube bracket nut from the starter motor stud bolt.

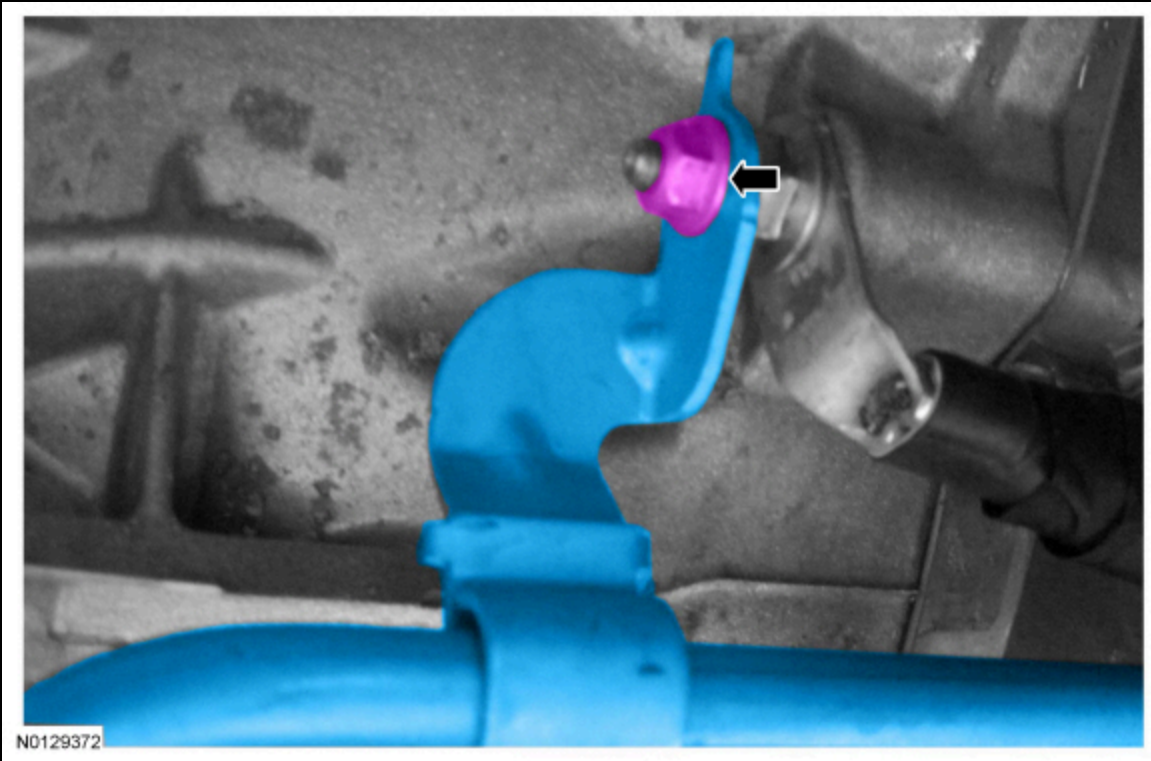


9. If equipped, remove the selector lever cable splash shield nut and the selector lever cable splash shield.

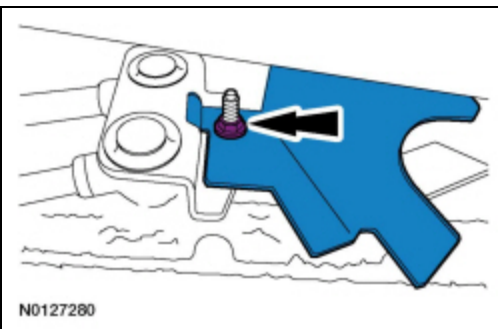


10. **NOTE:** *The transmission fluid cooler tube O-rings may remain in the transmission case. Carefully remove them from the case if retained.*

Remove and discard the transmission fluid cooler tubes-to-transmission bolt and separate the transmission fluid cooler tubes from the transmission.

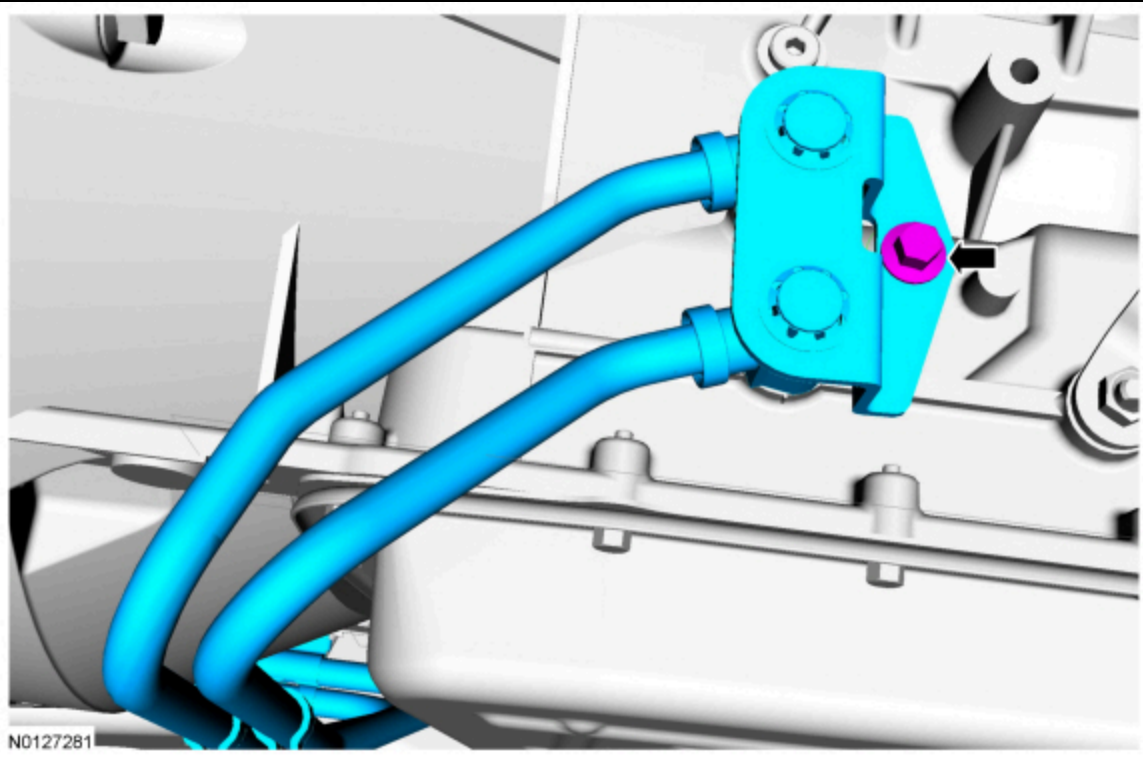

11. Remove and discard the 4 O-rings on the transmission fluid cooler tubes.

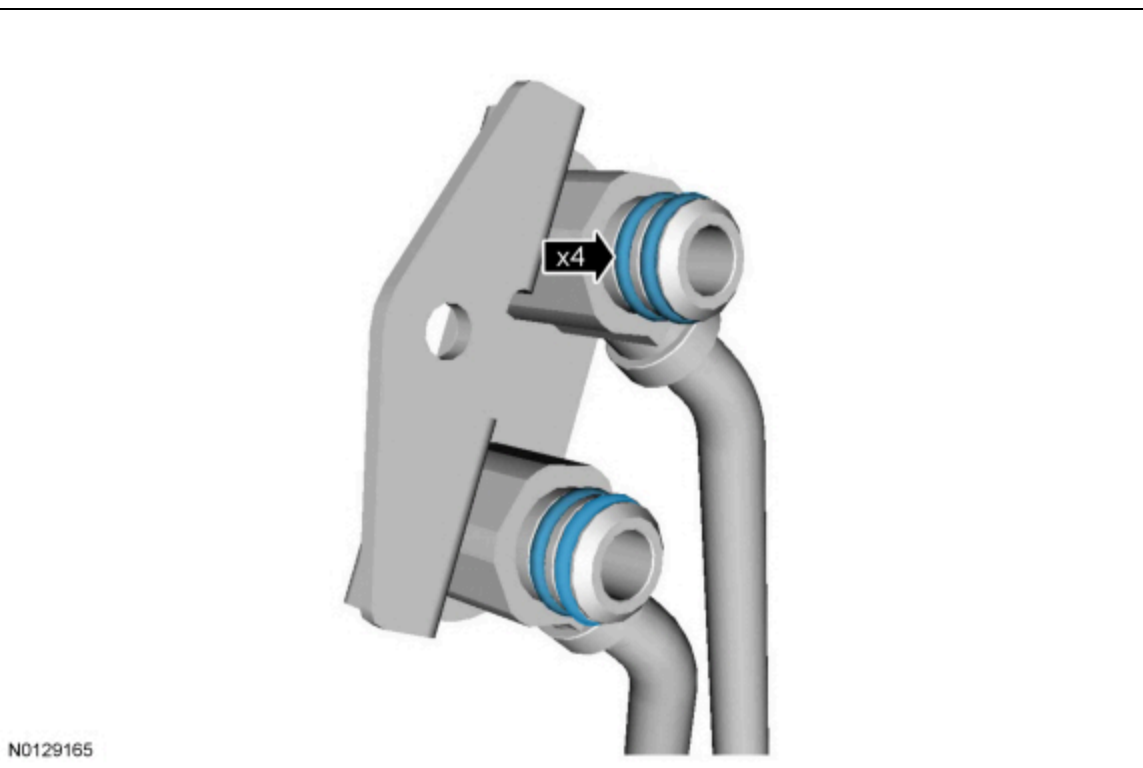


12. Remove the transmission fluid cooler tubes from the transmission.

Installation

1. Route the transmission fluid cooler tubes and position them in place.
2. **NOTE:** *Inspect the transmission case to make sure that the transmission fluid cooler tube O-rings did not remain in the transmission case. Carefully remove and discard them from the case if retained.*


Install 4 new O-rings on the transmission fluid cooler tubes.

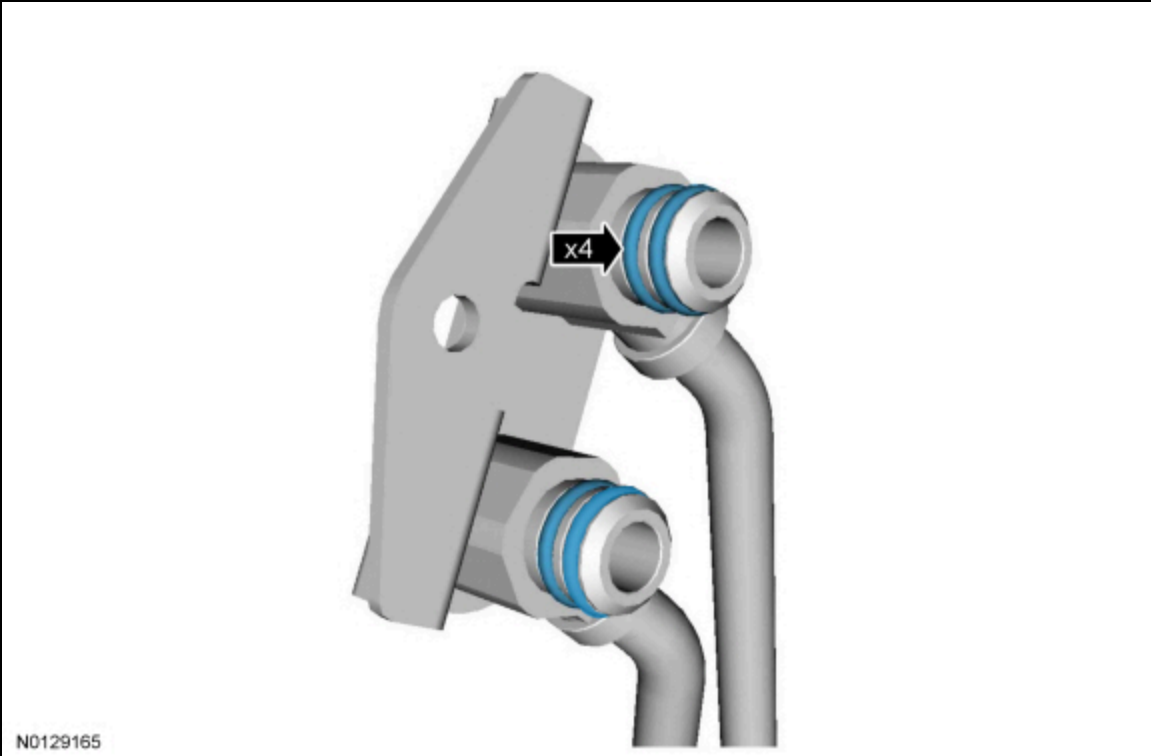

3. NOTICE: Install a new transmission fluid cooler tubes-to-transmission bolt.


Install the transmission fluid cooler tubes and a new transmission fluid cooler tubes-to-transmission bolt.

- Tighten to 30 Nm (22 lb-ft).

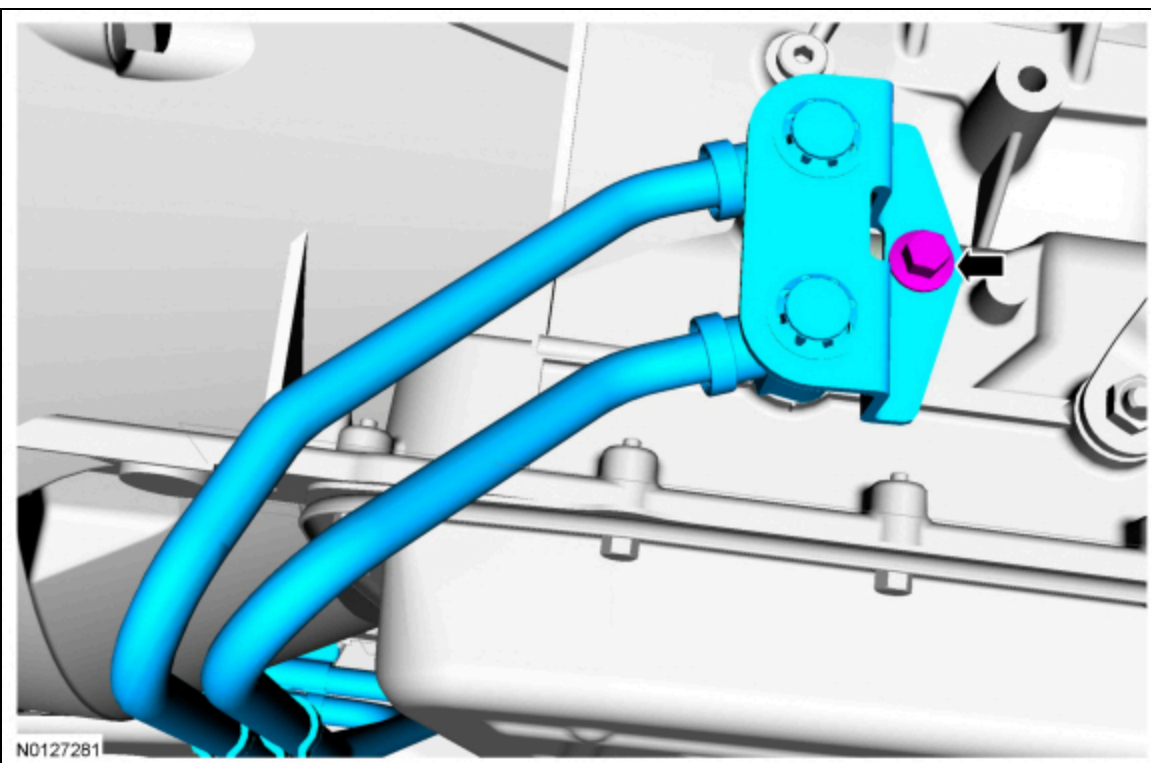


4. If equipped, install the selector lever cable splash shield and the splash shield nut.

- Tighten to 12 Nm (106 lb-in).

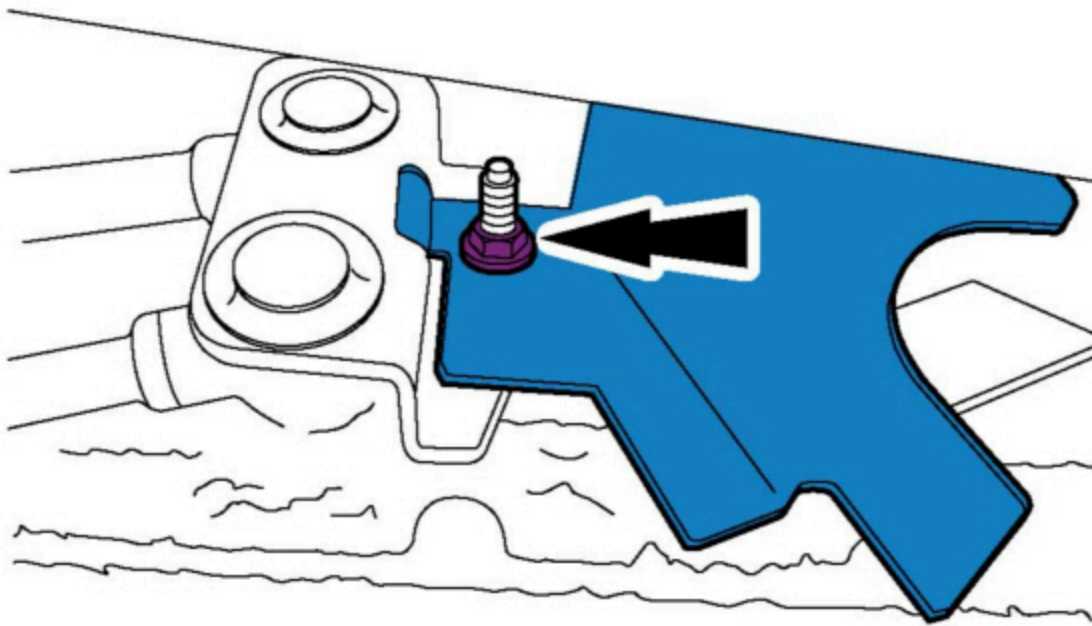


N0127280

5. Install the transmission fluid cooler tube bracket nut to the starter motor stud bolt.
 - Tighten to 12 Nm (106 lb-in).

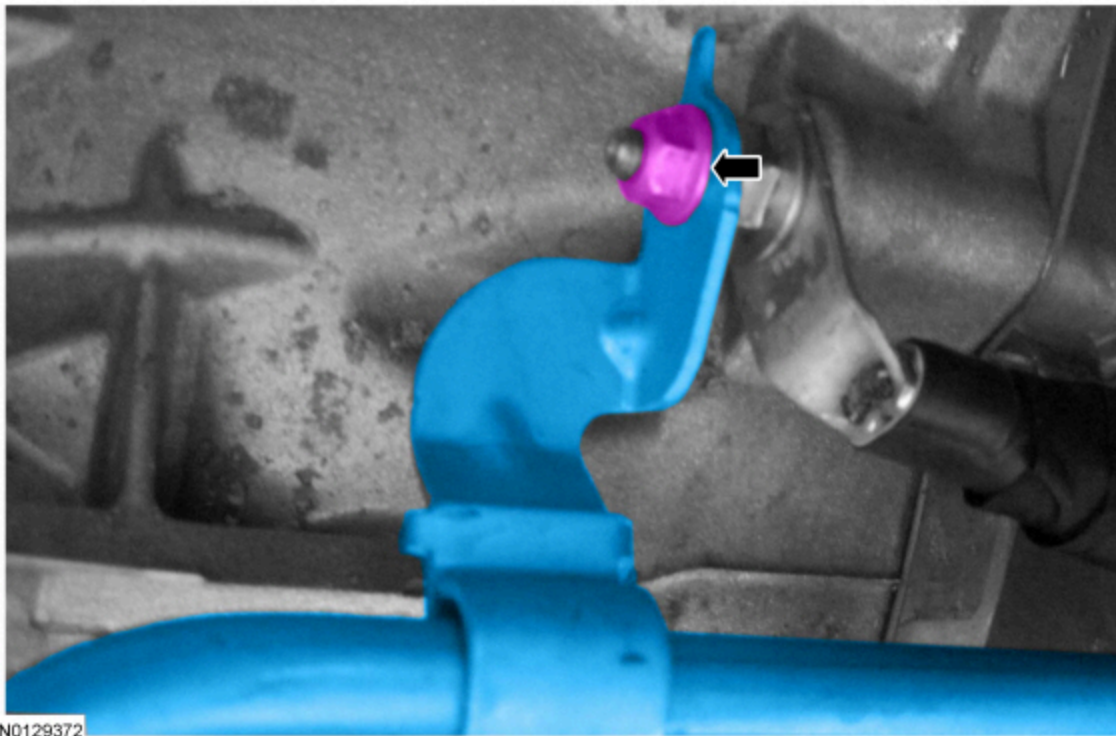


N0129372


6. Install the transmission fluid cooler tube bracket nut to the front of the engine.
 - Tighten to 12 Nm (106 lb-in).

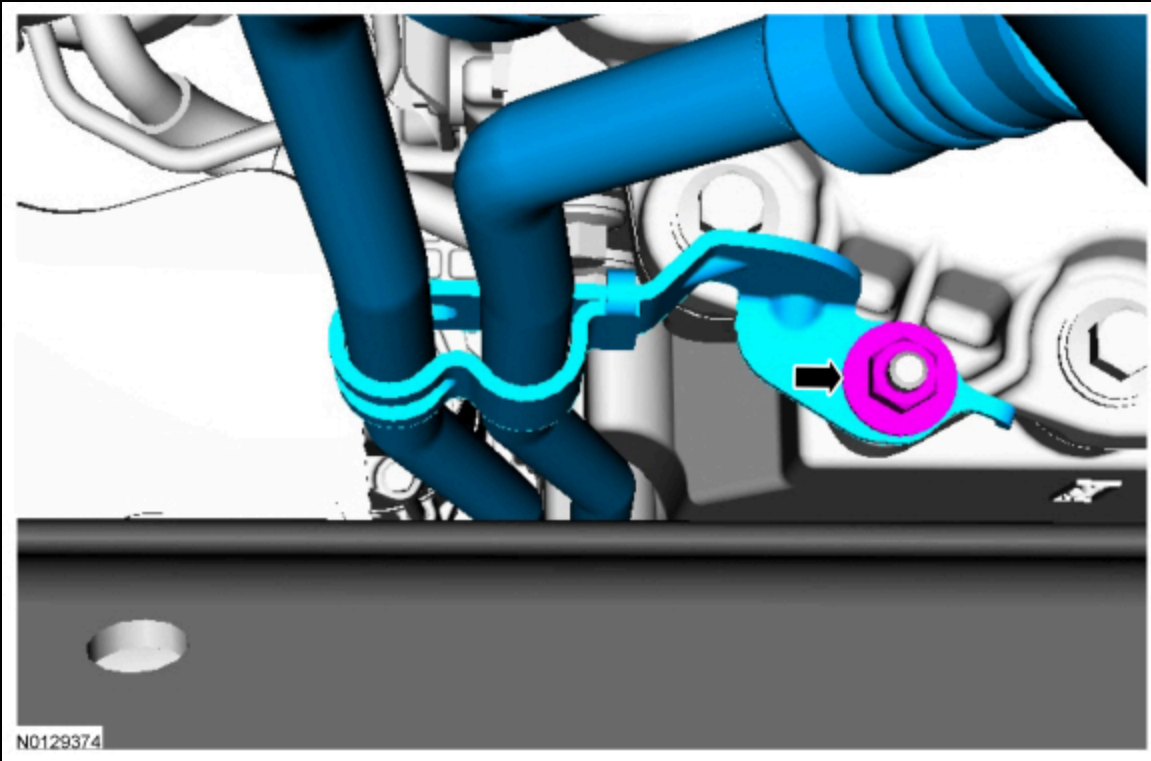


7. Connect the transmission fluid cooler tubes to the transmission fluid cooler hoses.

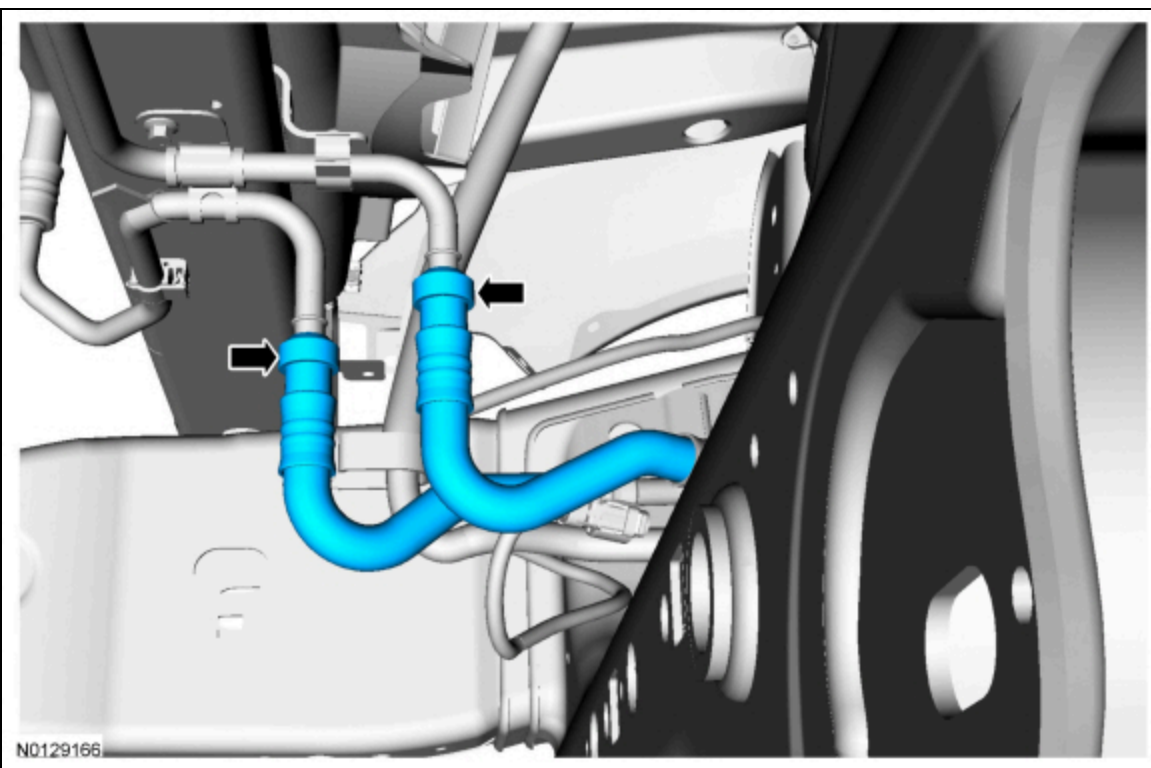


8. Install the transmission fluid cooler tube secondary latches.

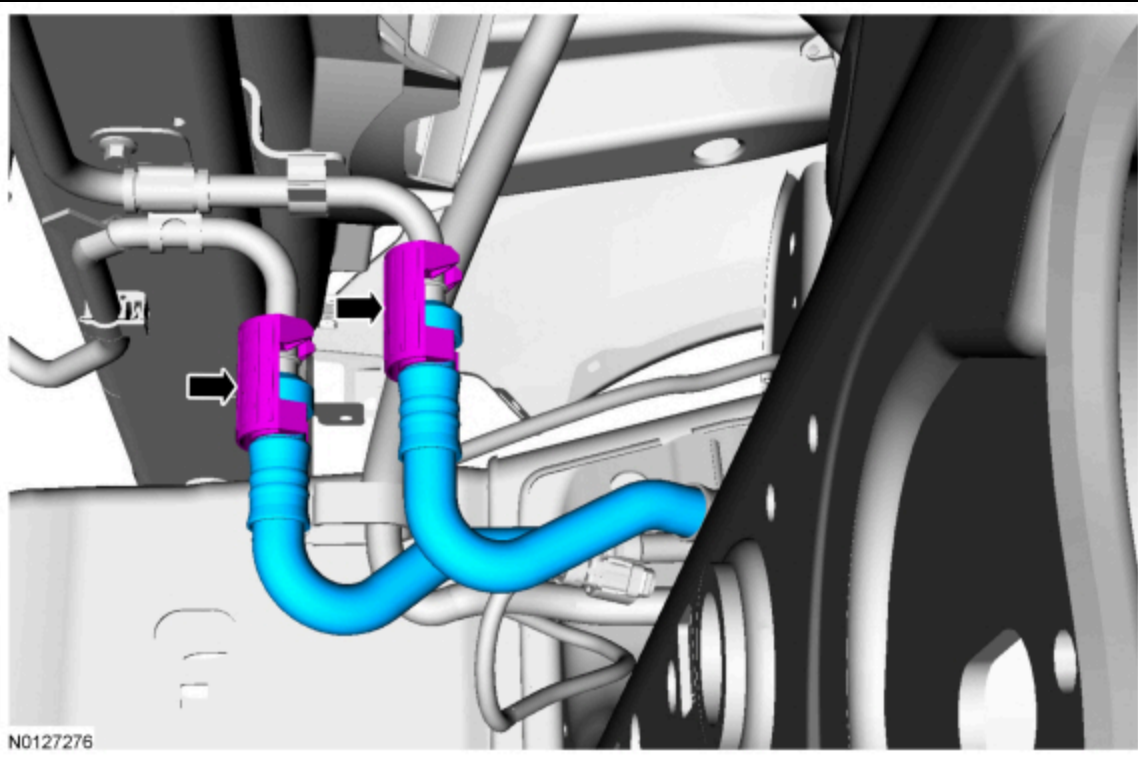


9. If equipped, install the skid plate and the 4 bolts.
- Tighten to 48 Nm (35 lb-ft).

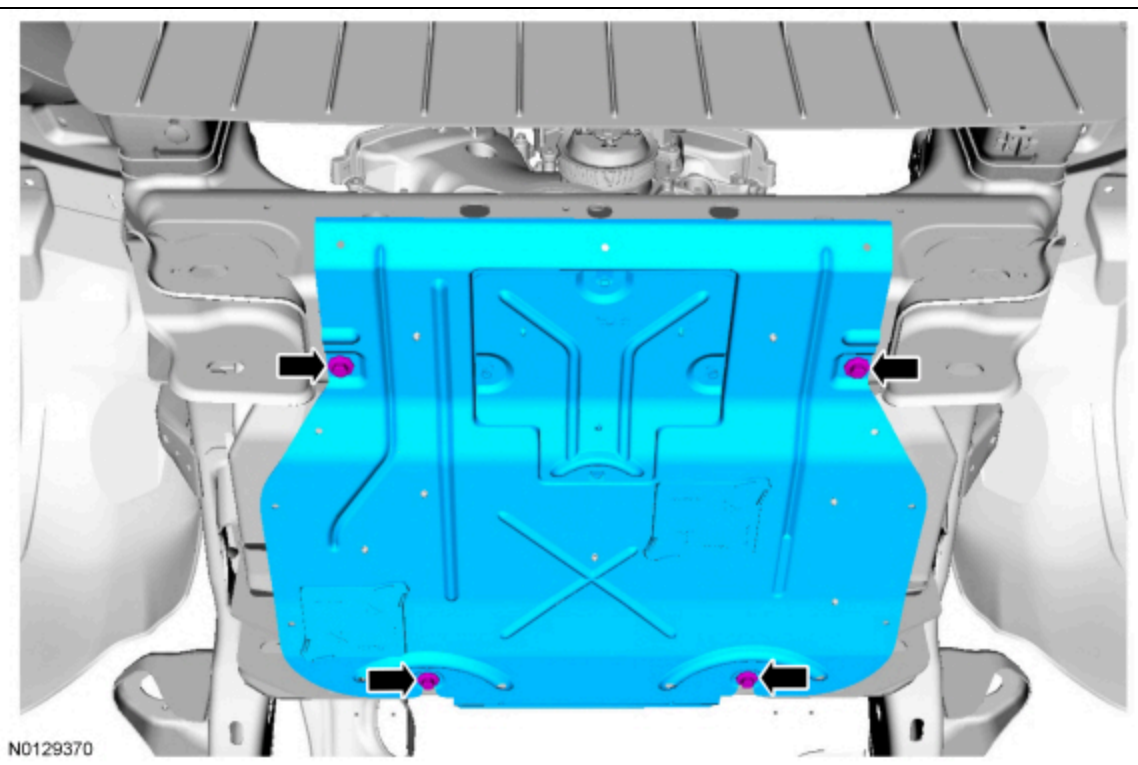

10. If equipped, install the air deflector and the 12 pushpins.

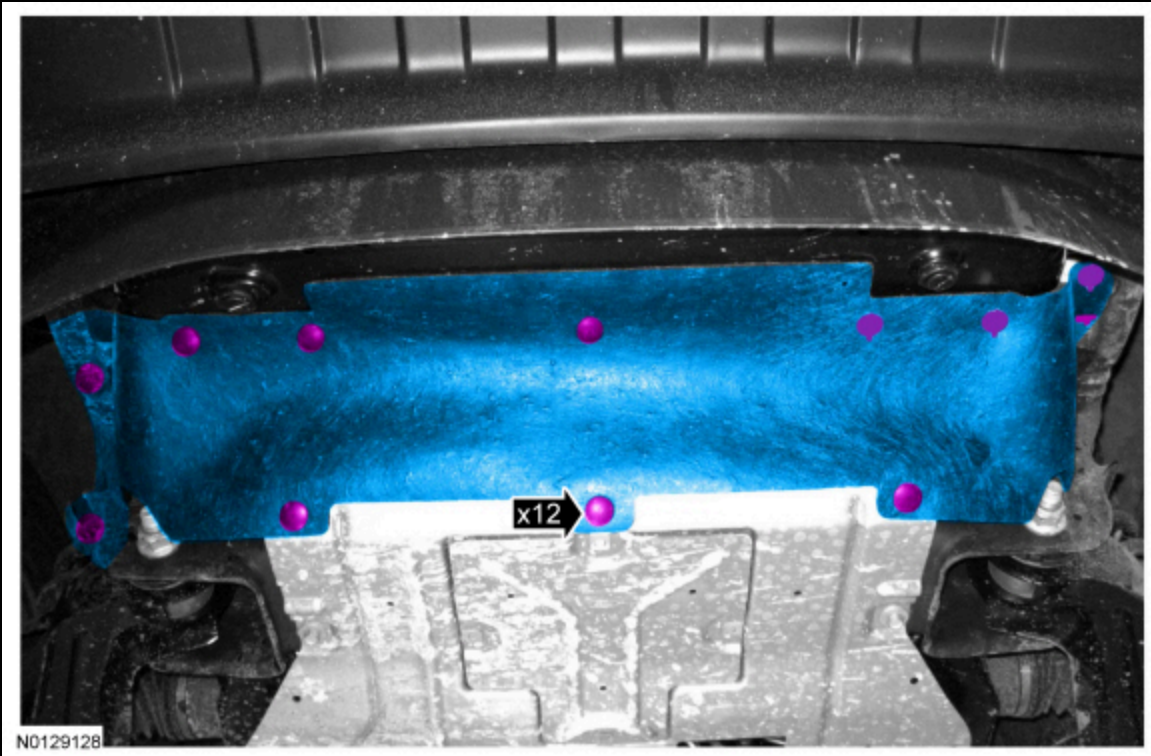

11. If equipped, install the splash shield and the 4 fasteners.

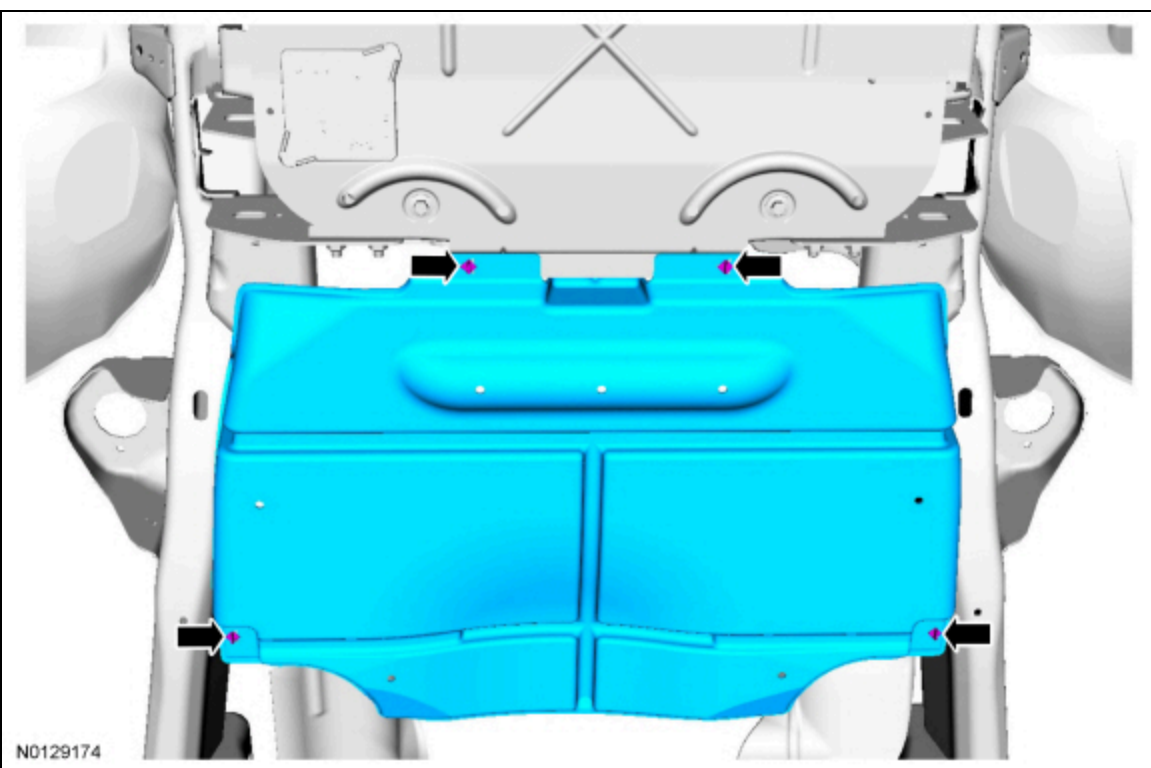

12. Fill the transmission with fluid and verify correct operation. For additional information, refer to Transmission Fluid Level Check in Section 307-01.

13. Check for leaks.