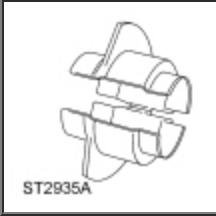


Transmission Fluid Cooler Tubes — 5.0L (4V), 6.2L (2V)

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)


	Disconnect Tool, Transmission Cooler Line 307-569
--	--

Material

Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV

5.0L (4V) Transmission Fluid Cooler Tubes

- NOTE:** [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)
- NOTE:** [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

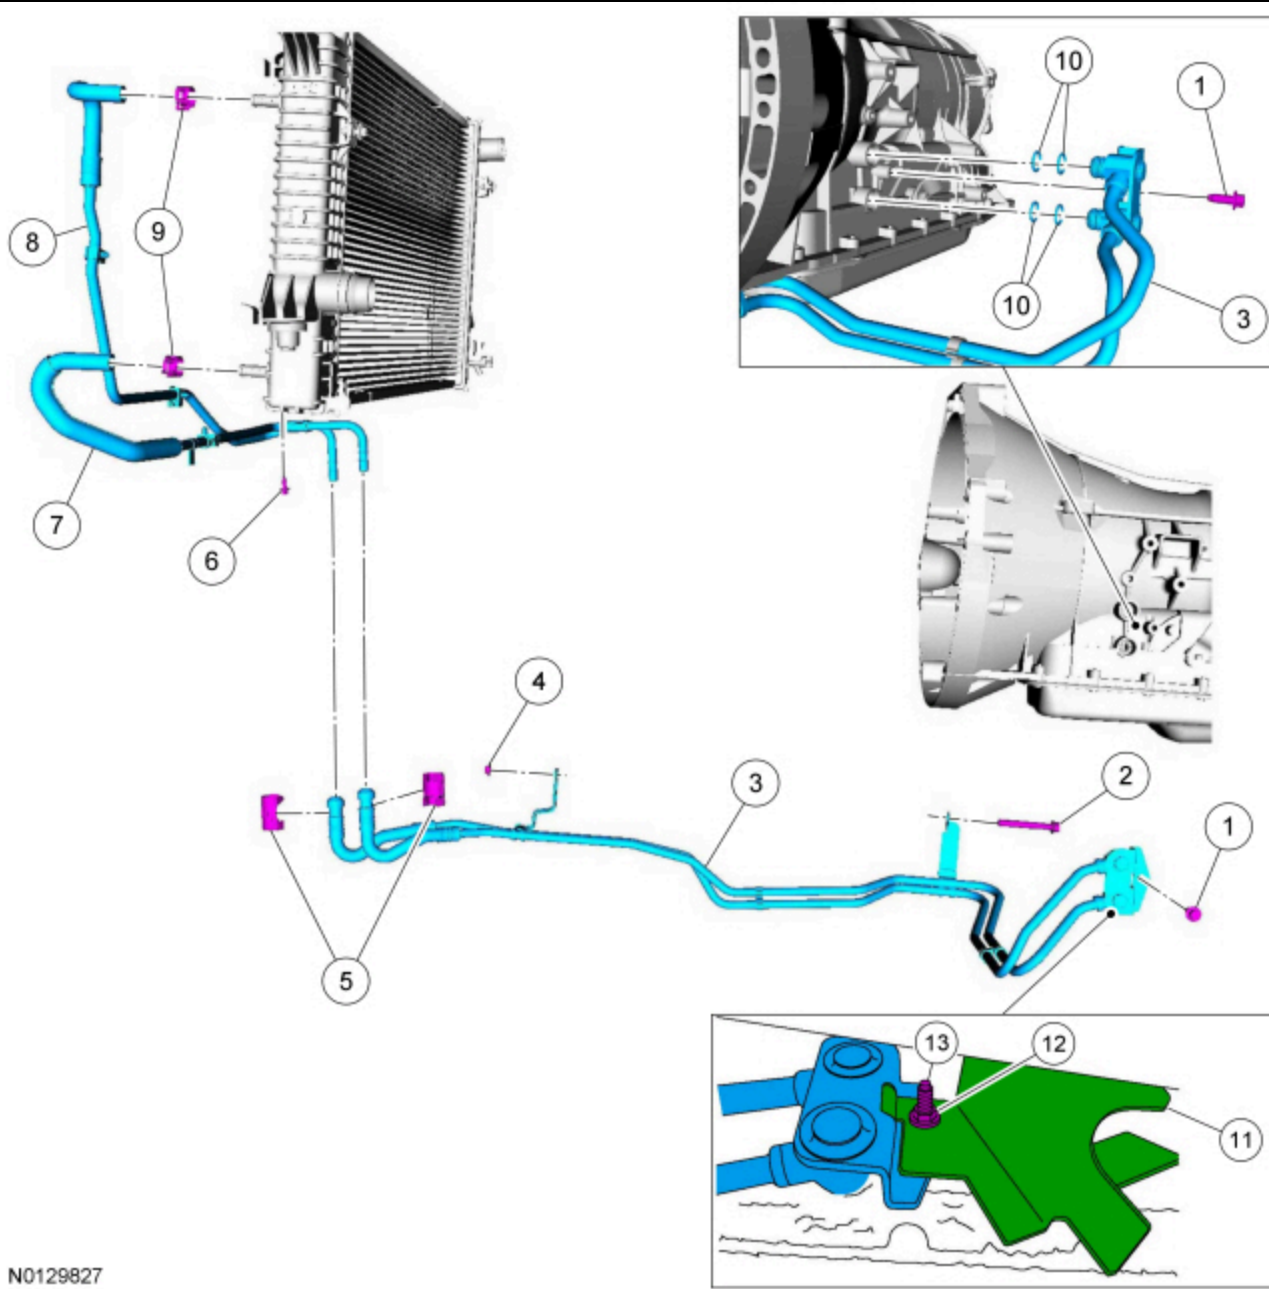


Item	Part Number	Description
1	W715131 W715131	Transmission fluid cooler tubes-to-transmission bolt
2	W714012 W714012	Transmission-to-engine bolt
3	7R081 7R081	Transmission fluid cooler inlet and outlet tubes
4	W520822 W520822	Transmission fluid cooler tube bracket-to-front of engine nut
5	7Z465 7Z465	Transmission fluid cooler inlet and outlet tube secondary latches
6	W500212 W500212	Transmission fluid cooler tube bracket bolt
7	7B028 7B028	In-tank transmission fluid cooler inlet tube
8	7B028 7B028	In-tank transmission fluid cooler outlet tube
9	7C107 7C107	Transmission fluid cooler hose clamps
10	7J227 7J227	Transmission fluid cooler tube O-rings (4 required)
11	7B147 7B147	Selector lever cable splash shield (if equipped)
12	W520111 W520111	Selector lever cable splash shield nut

13	W715798W715798	Transmission fluid cooler tubes-to-transmission bolt (with selector lever cable splash shield)
----	----------------	--

6.2L (2V) Transmission Fluid Cooler Tubes

NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

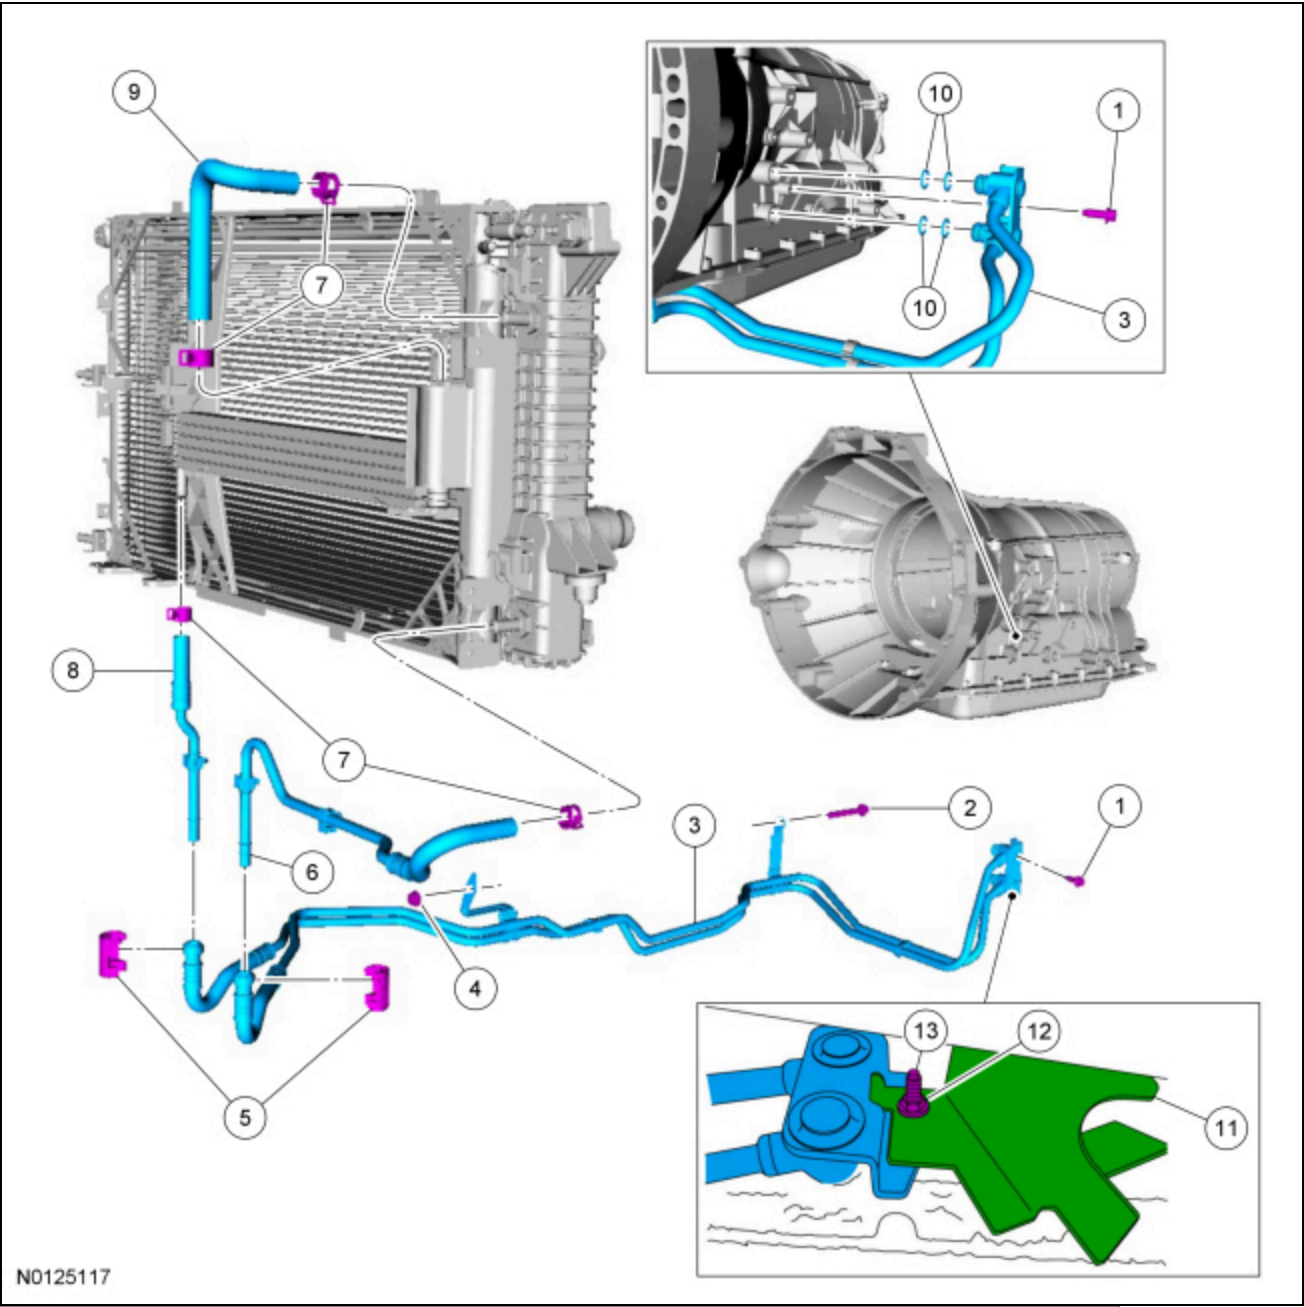


Item	Part Number	Description
1	W715131W715131	Transmission fluid cooler tubes-to-transmission bolt
2	W714012W714012	Transmission-to-engine bolt
3	7R0817R081	Transmission fluid cooler inlet and outlet tubes
4	W707014W707014	Transmission fluid cooler tube bracket-to-front of engine nut

5	7Z465 7Z465	Transmission fluid cooler inlet and outlet tube secondary latches
6	7B028 7B028	In-tank transmission fluid cooler inlet tube
7	7C107 7C107	Transmission fluid cooler hose clamps
8	7B028 7B028	Auxiliary transmission fluid cooler outlet hose
9	7C410 7C410	Auxiliary transmission fluid cooler inlet hose
10	7J227 7J227	Transmission fluid cooler tube O-rings (4 required)
11	7B147 7B147	Selector lever cable splash shield (if equipped)
12	W520111 W520111	Selector lever cable splash shield nut
13	W715798 W715798	Transmission fluid cooler tubes-to-transmission bolt (with selector lever cable splash shield)

5.0L (4V) With Auxiliary Transmission Fluid Cooler

NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

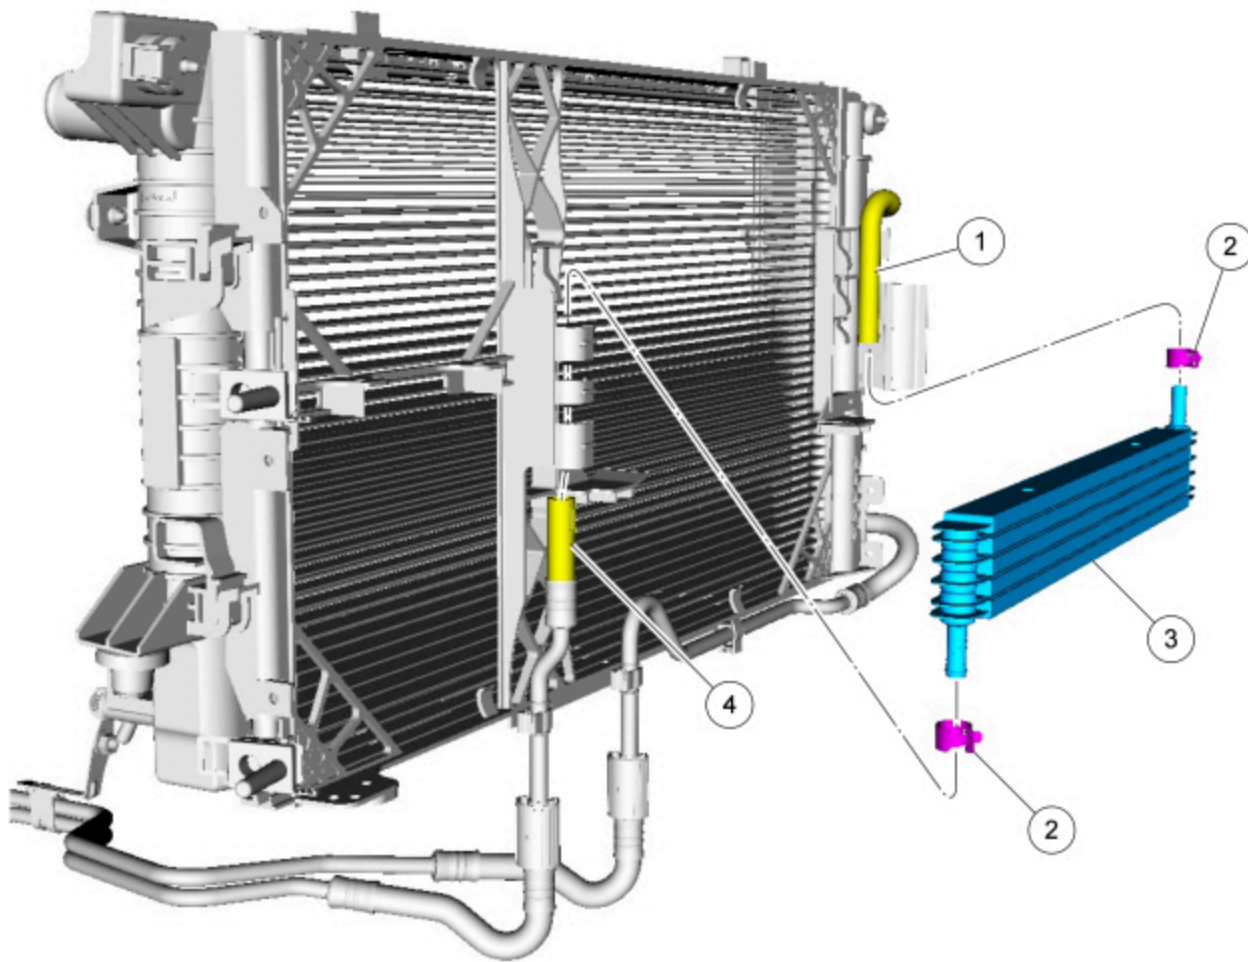

N0123773

Item	Part Number	Description
1	7C4107C410	Auxiliary transmission fluid cooler inlet hose
2	7C1077C107	Transmission fluid cooler hose clamps
3	7A0957A095	Auxiliary transmission fluid cooler
4	7B0287B028	Auxiliary transmission fluid cooler outlet hose

Removal


All vehicles

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.


4WD

2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.

3. If equipped, remove the 6 bolts and the forward skid plate.

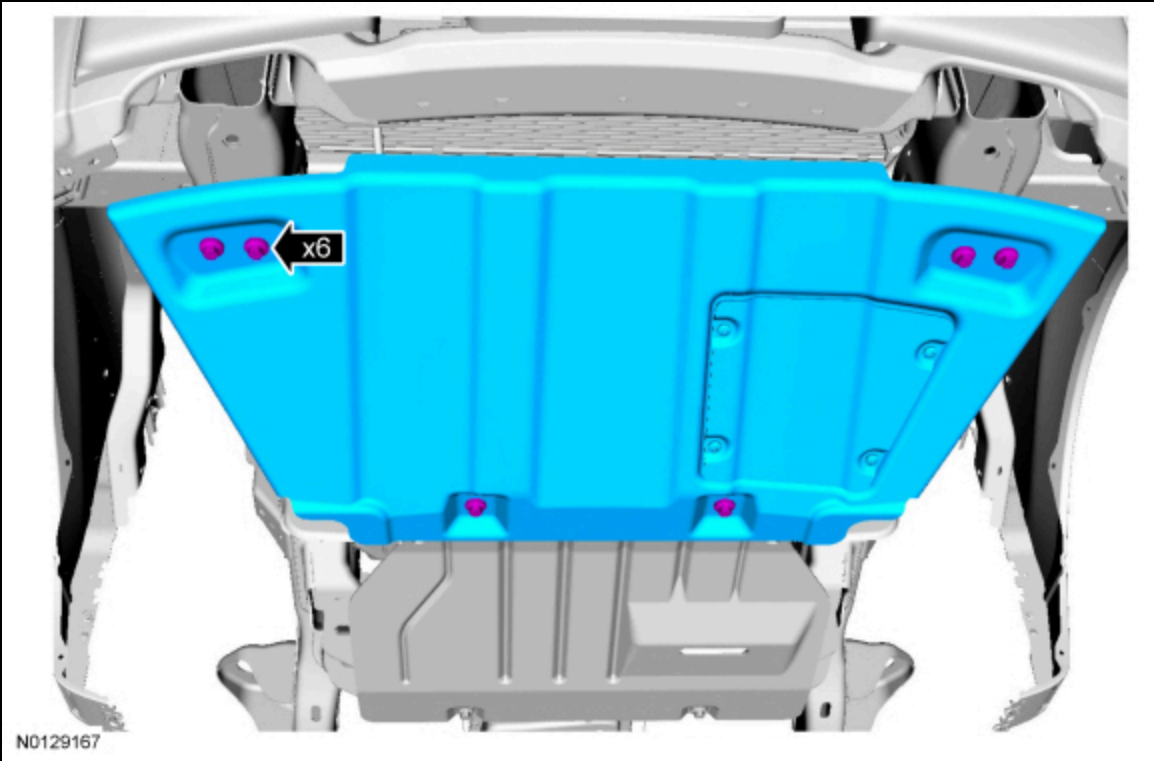


4. Remove the 4 bolts and the rearward skid plate.

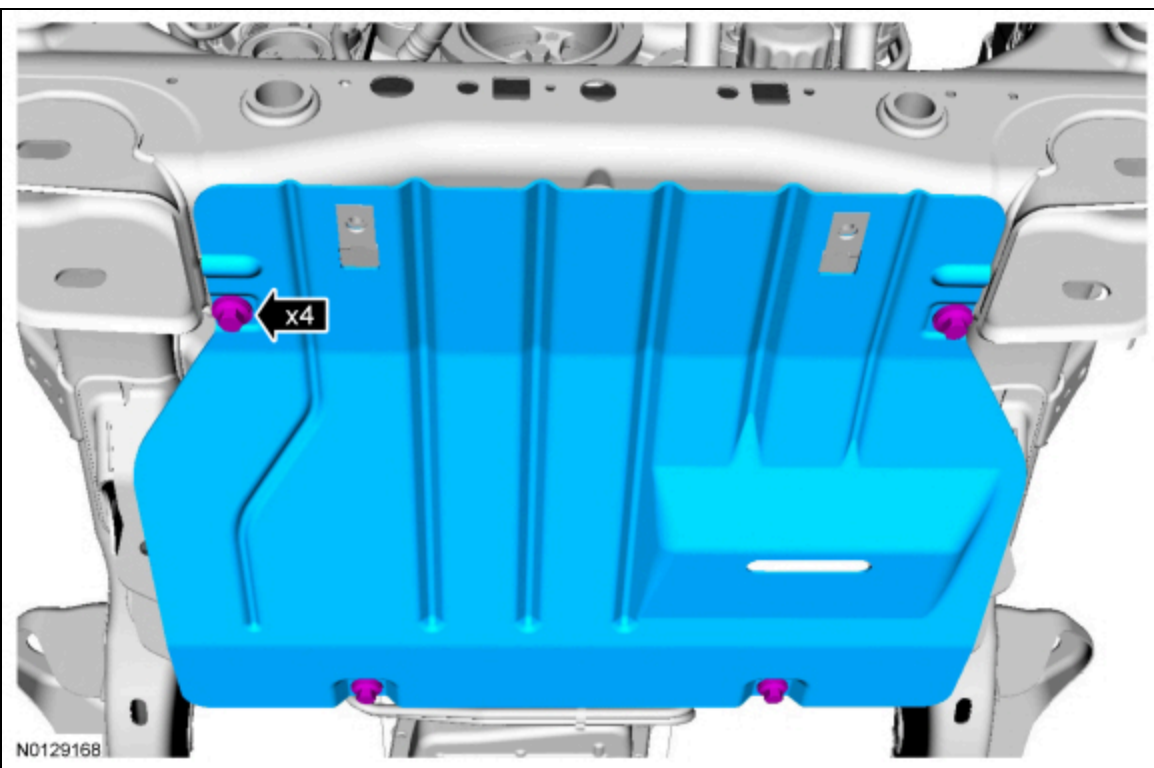

All vehicles


NOTE: 5.0L (4V) Shown, 6.2L (2V) similar.

5. Remove the transmission fluid cooler tube secondary latches.

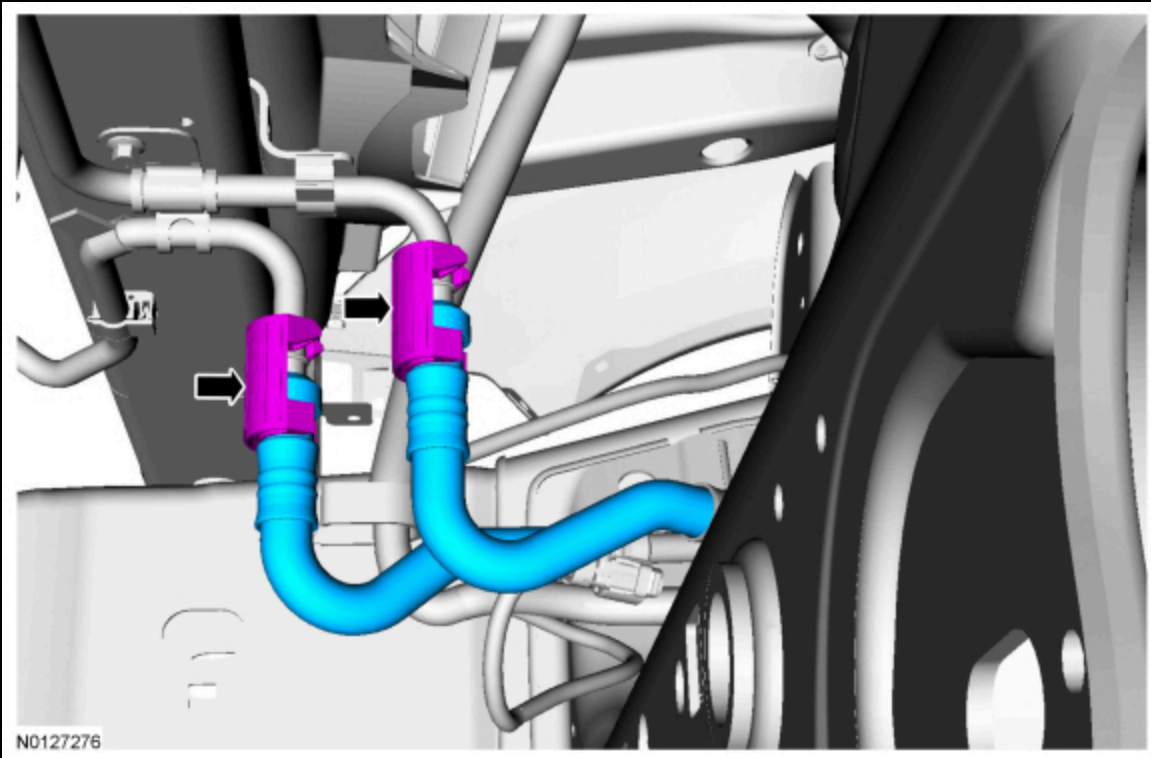


NOTE: 5.0L (4V) Shown, 6.2L (2V) similar.


- 6. Using the Transmission Cooler Line Disconnect Tool, disconnect the transmission fluid cooler tubes from the transmission fluid cooler hoses.

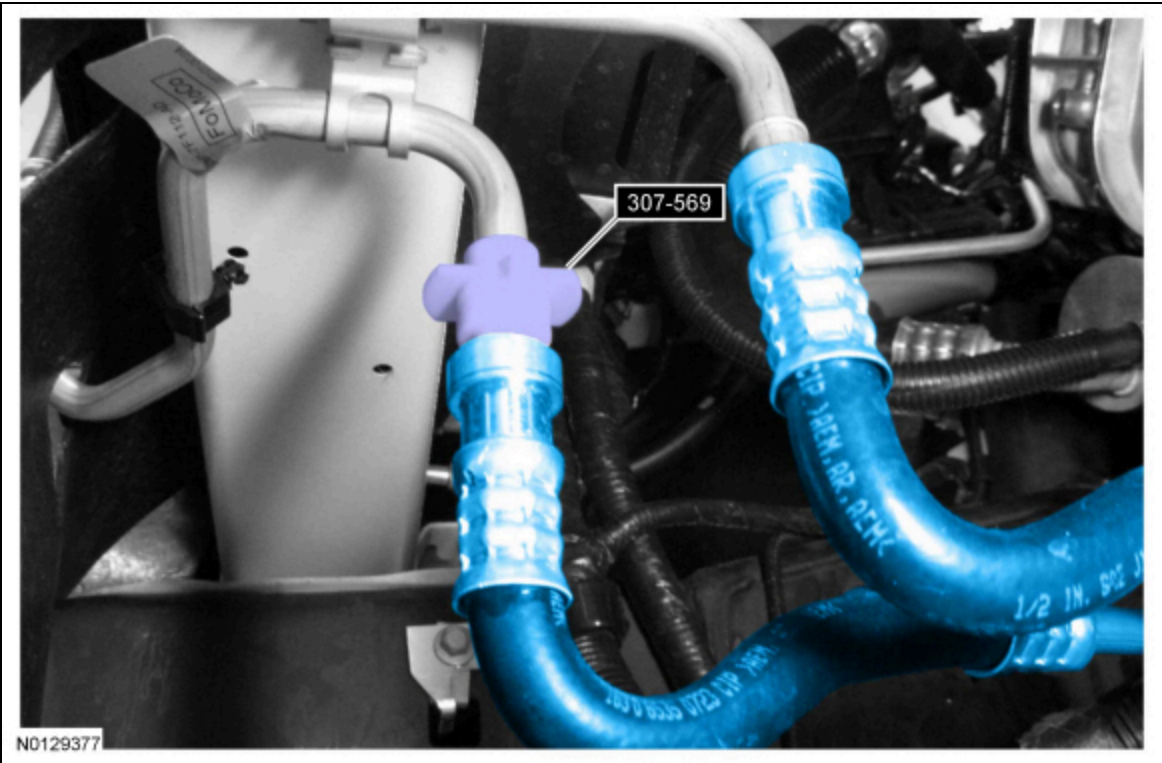


- 7. Remove the transmission fluid cooler tube bracket nut from the front of the engine.

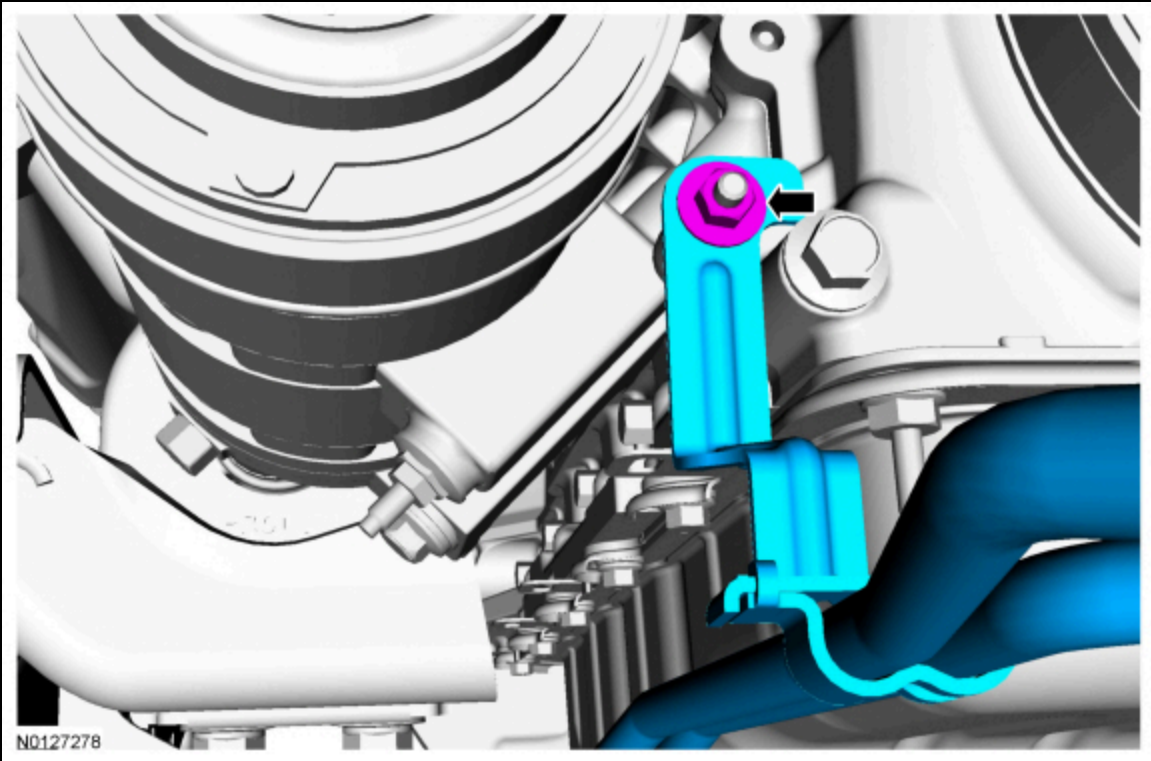

8. Remove the transmission-to-engine bolt and transmission fluid cooler tube bracket from the engine.

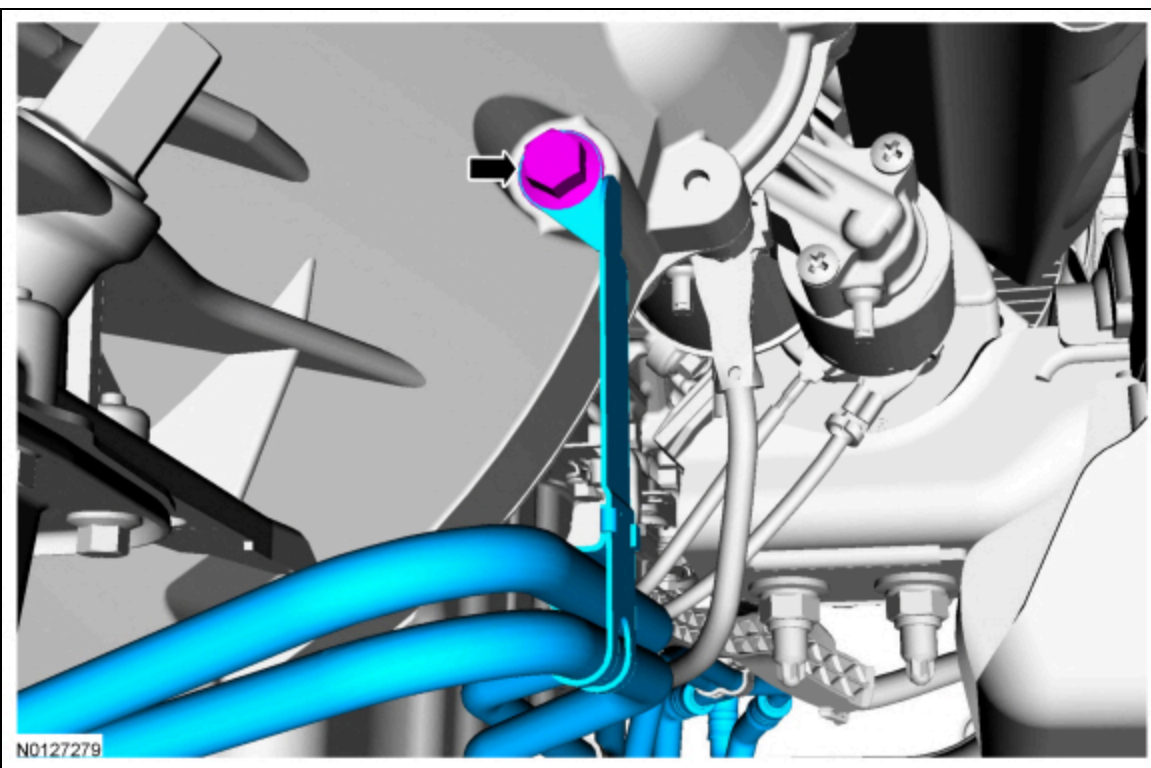


9. If equipped, remove the nut and the selector lever cable splash shield.

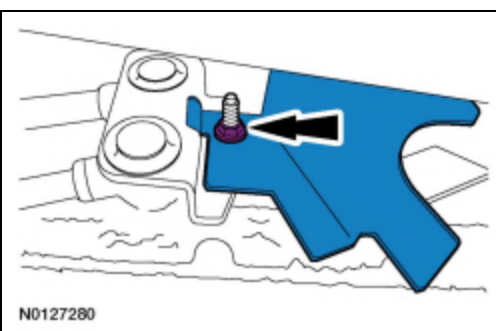


10. **NOTE:** The transmission fluid cooler tube O-rings may remain in the transmission case. Carefully remove them from the case if retained.

Remove and discard the transmission fluid cooler tubes-to-transmission bolt and separate the transmission fluid cooler tubes from the transmission.

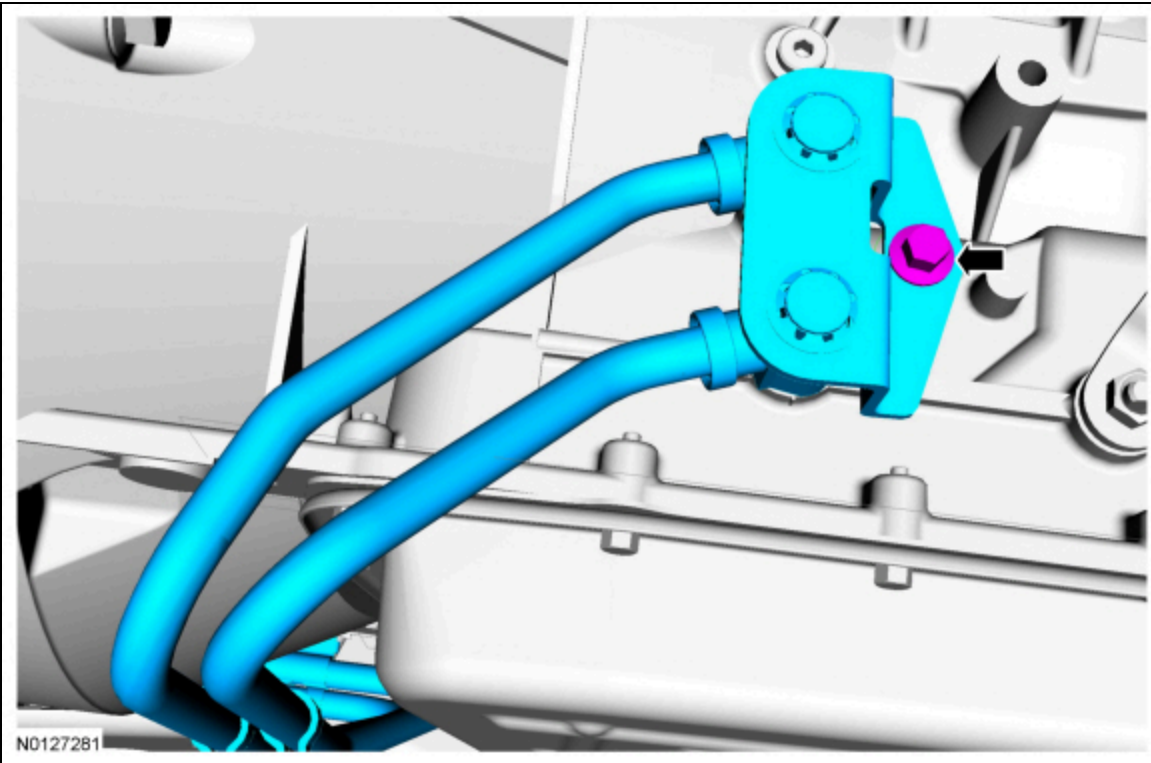


11. Remove and discard the 4 O-rings on the transmission fluid cooler tubes.

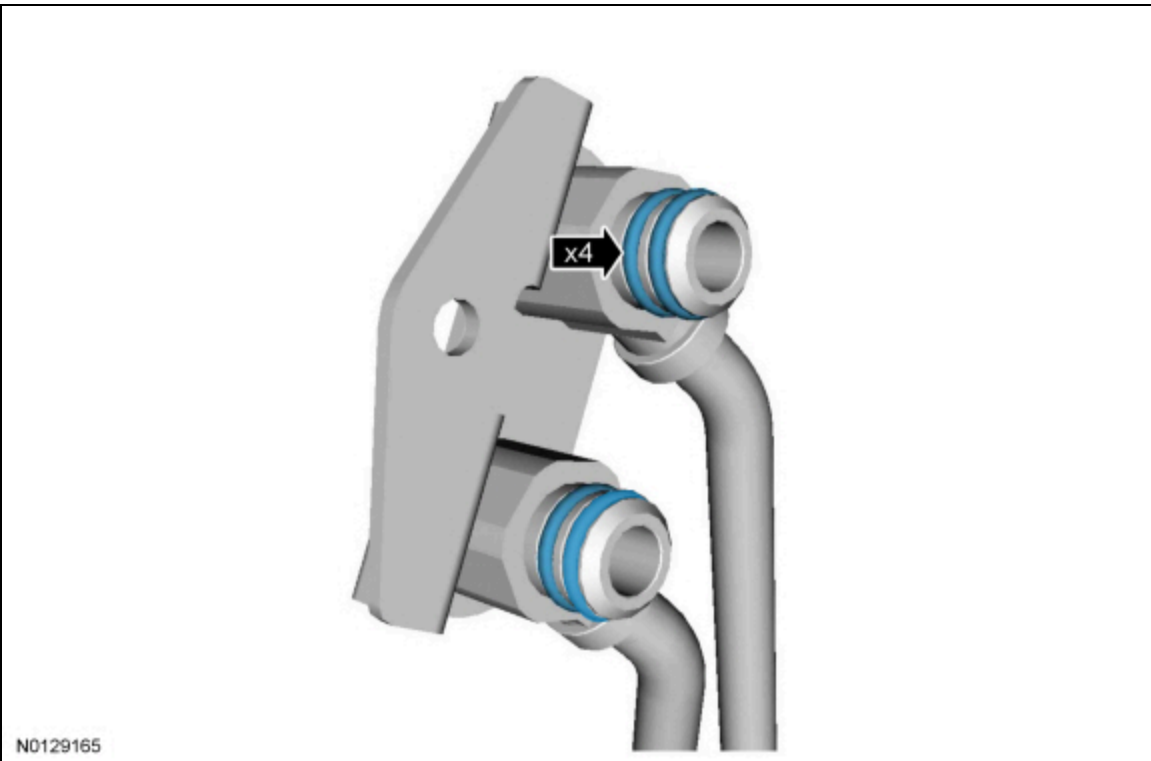

Raptor


12. Remove the 2 nuts and the heat shield.

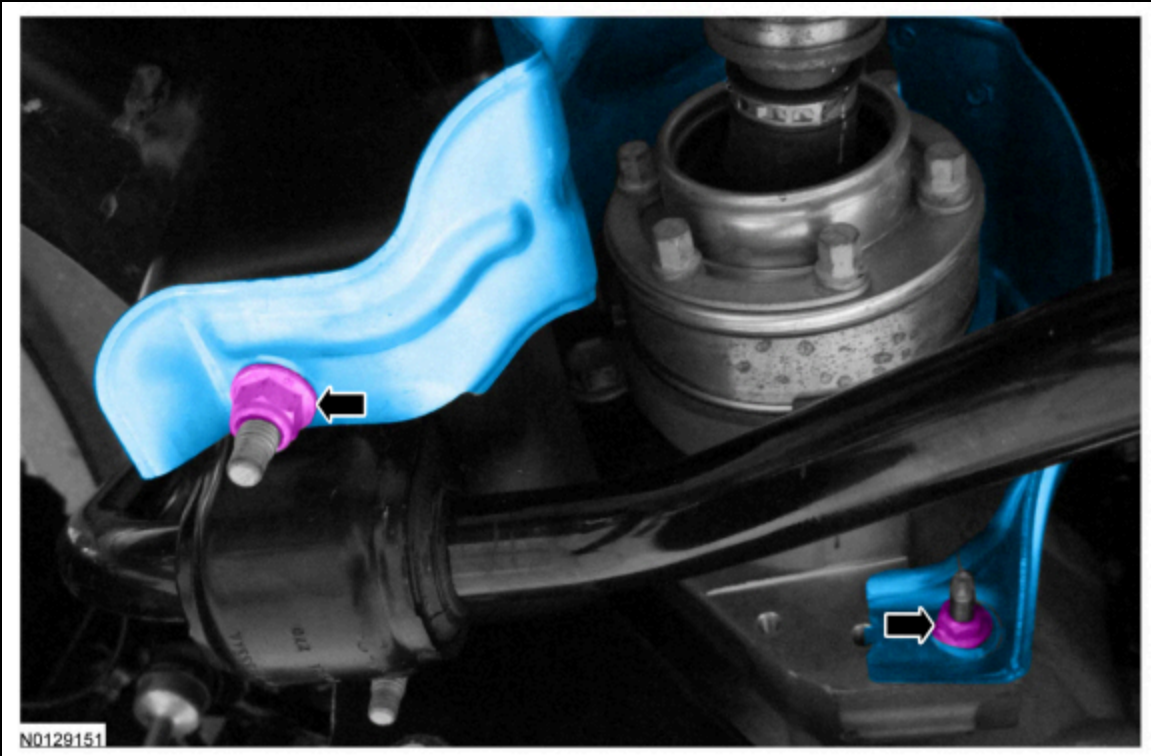

All vehicles


13. **NOTE:** *Right side shown, left side similar.*

Remove and discard the 4 nuts and lower the front sway bar.

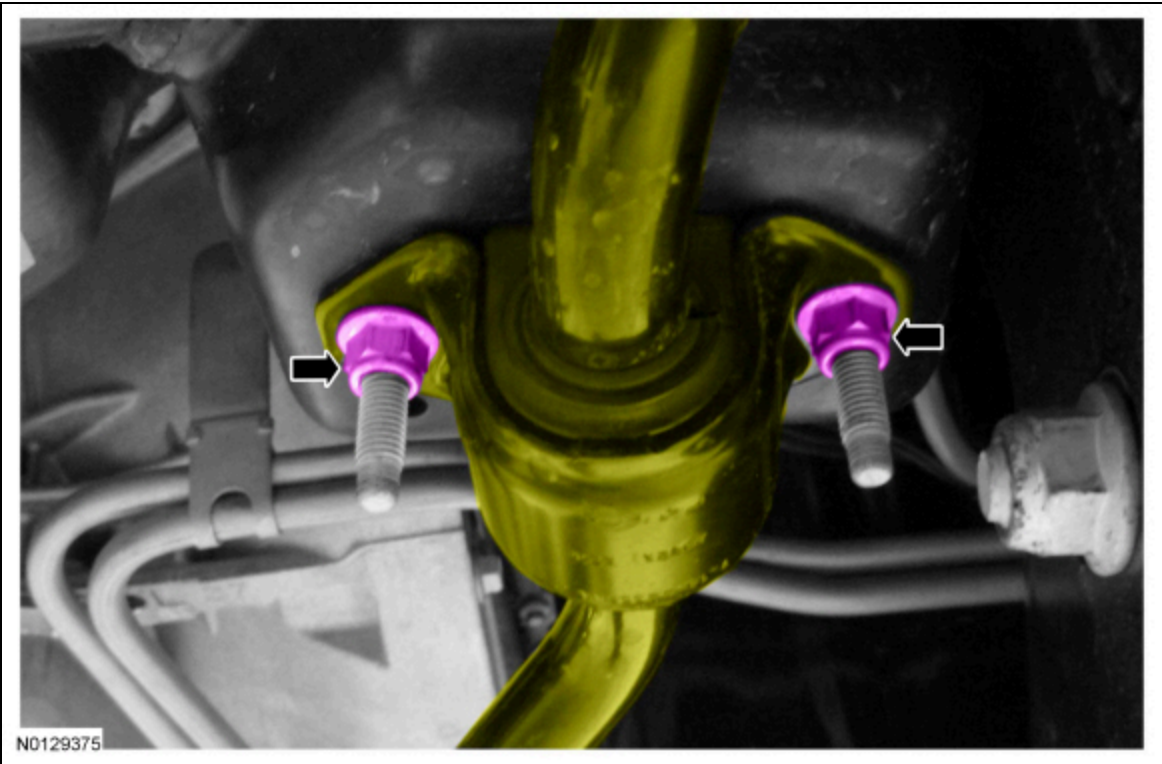


4WD


14. Remove the starter terminal cover.

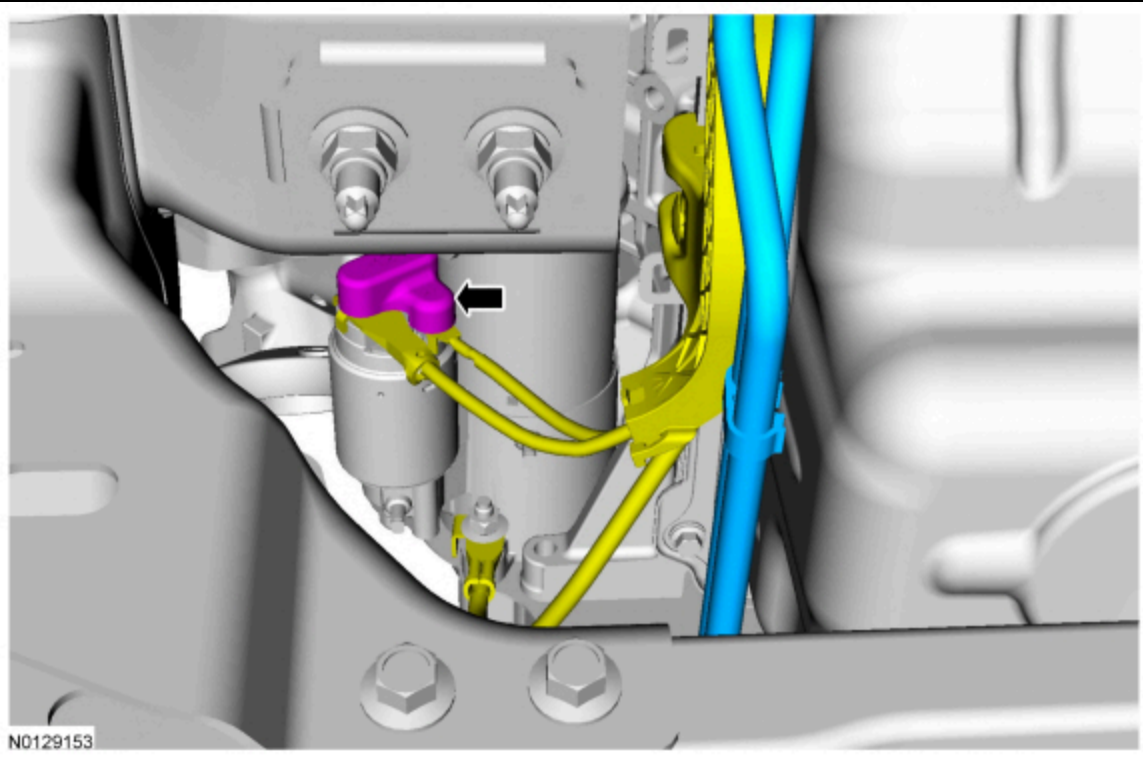


15. Remove the nut and disconnect the starter solenoid S-terminal eyelet.

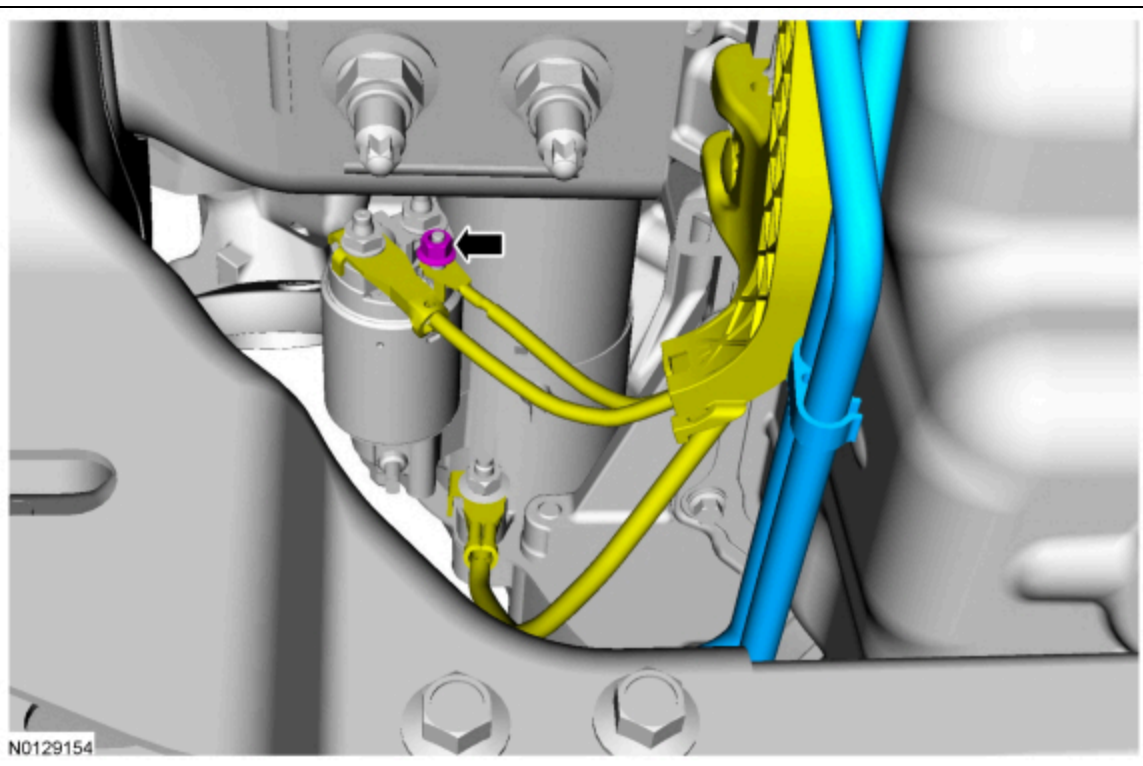


16. Remove the nut and disconnect the starter solenoid B-terminal eyelet.

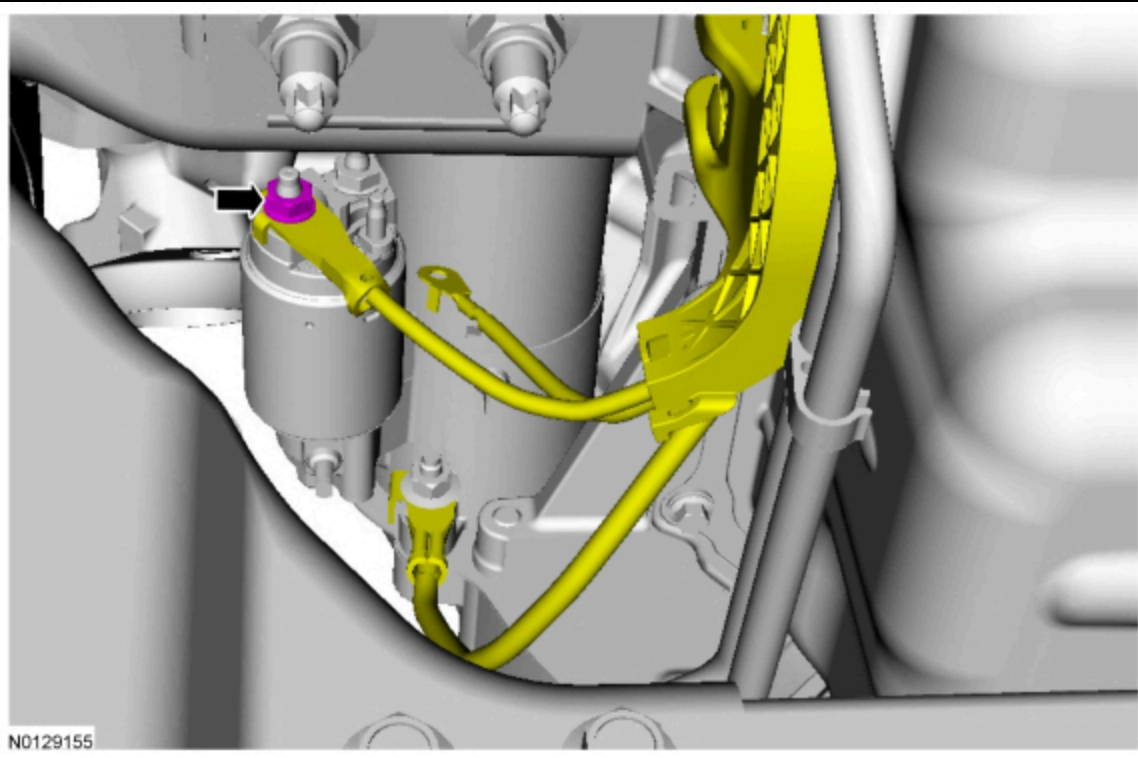


17. Remove the nut and disconnect the starter motor ground cable eyelet.

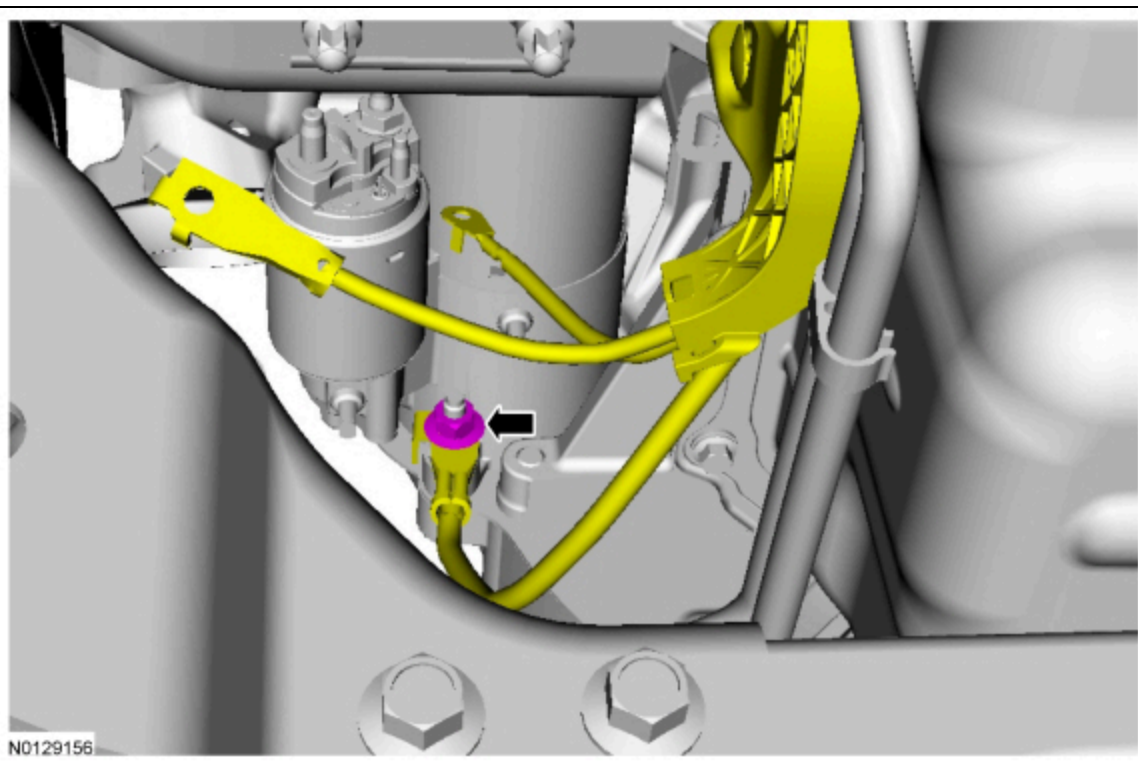

18. Detach the starter wiring harness from the oil pan.

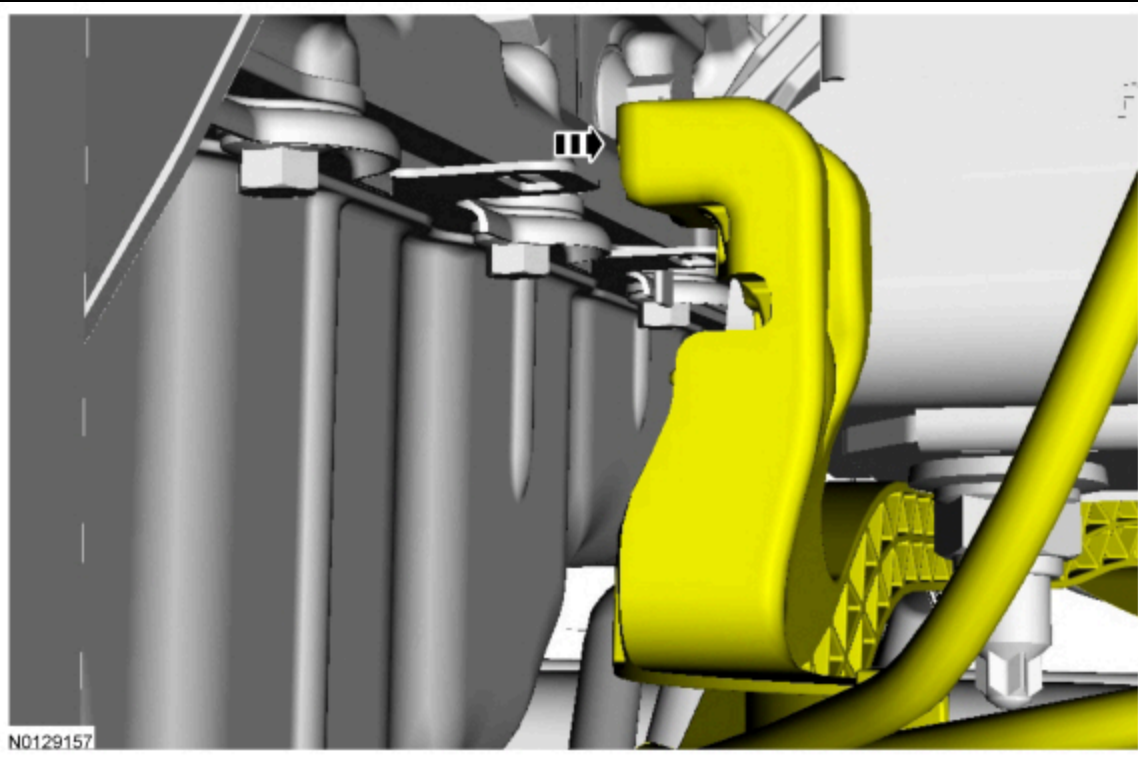


19. Remove the starter wiring harness form the front engine cover stud and position the starter wiring harness aside.

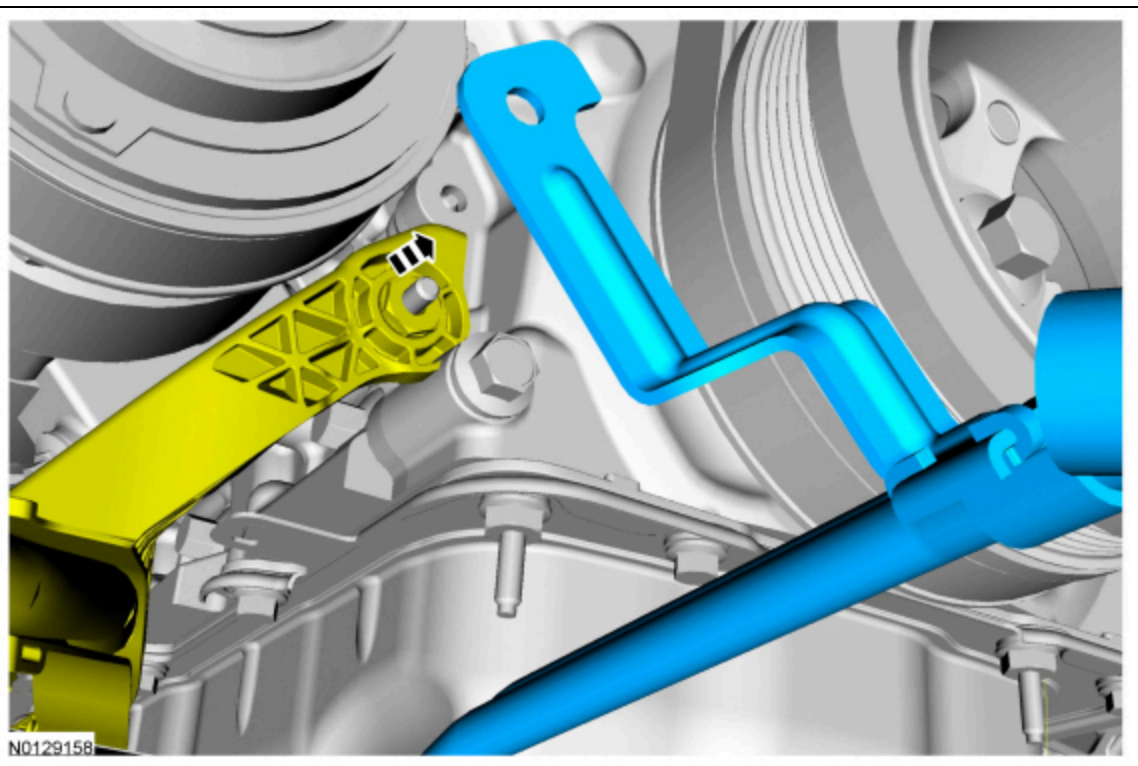

20. **NOTE:** Rotate the steering column so that the pinch bolt for the steering column coupler allows clearance for the upper front axle carrier mounting bushing bolt.


Remove the upper front axle carrier mounting bushing bolt.

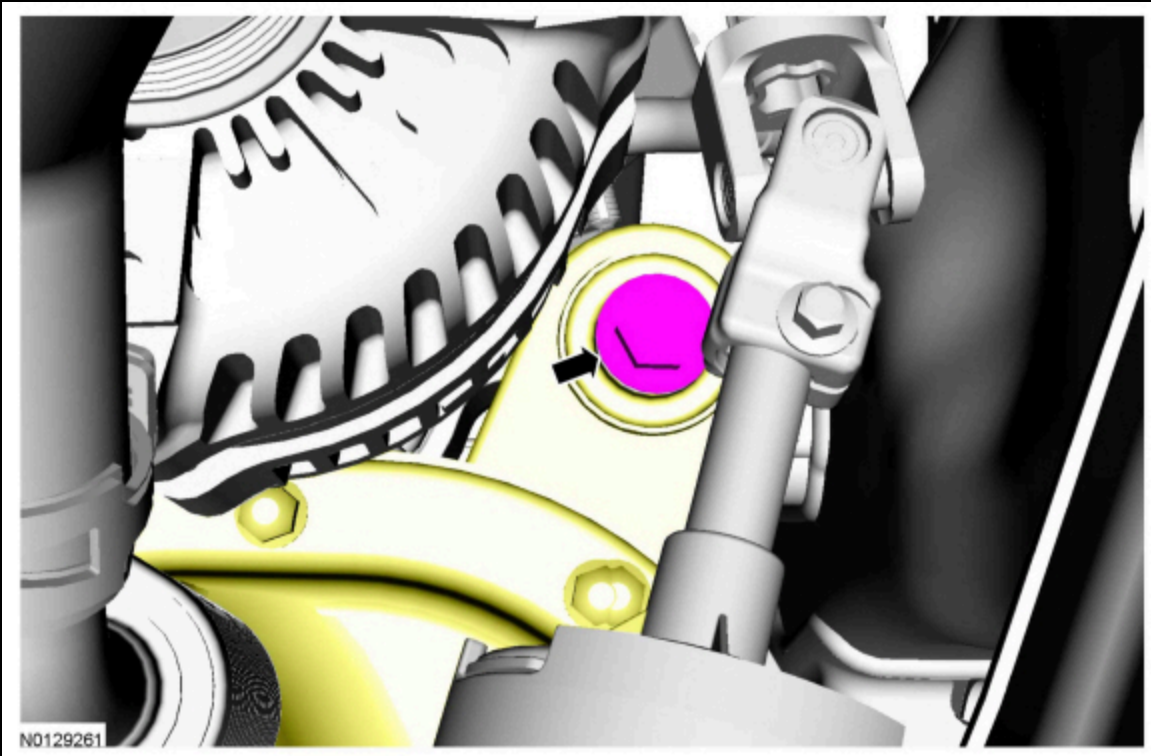

21. Position a jack stand under the right side of the front axle.



22. Remove the axle shaft housing carrier bushing bolt.

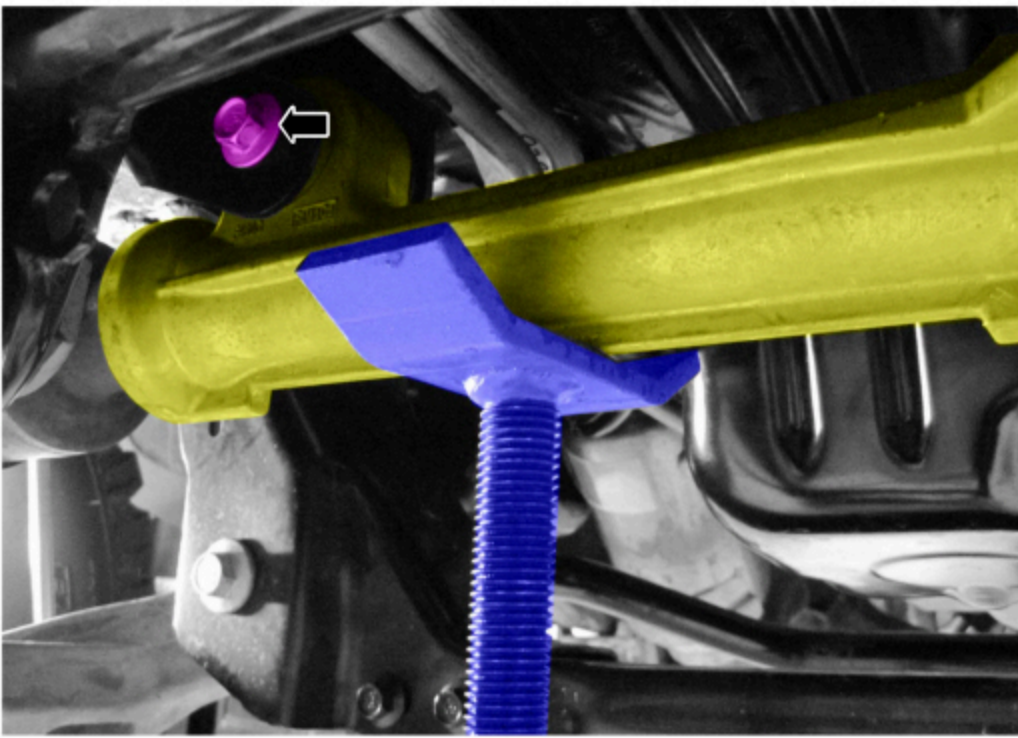

23. Lower the right side of the front axle.

All vehicles

24. Remove the transmission fluid cooler tubes.

Installation

All vehicles


1. Route the transmission fluid cooler tubes and position them in place.

4WD


2. Raise the right side of the front axle.

3. Install the axle shaft housing carrier bushing bolt.


- Tighten to 115 Nm (85 lb-ft).

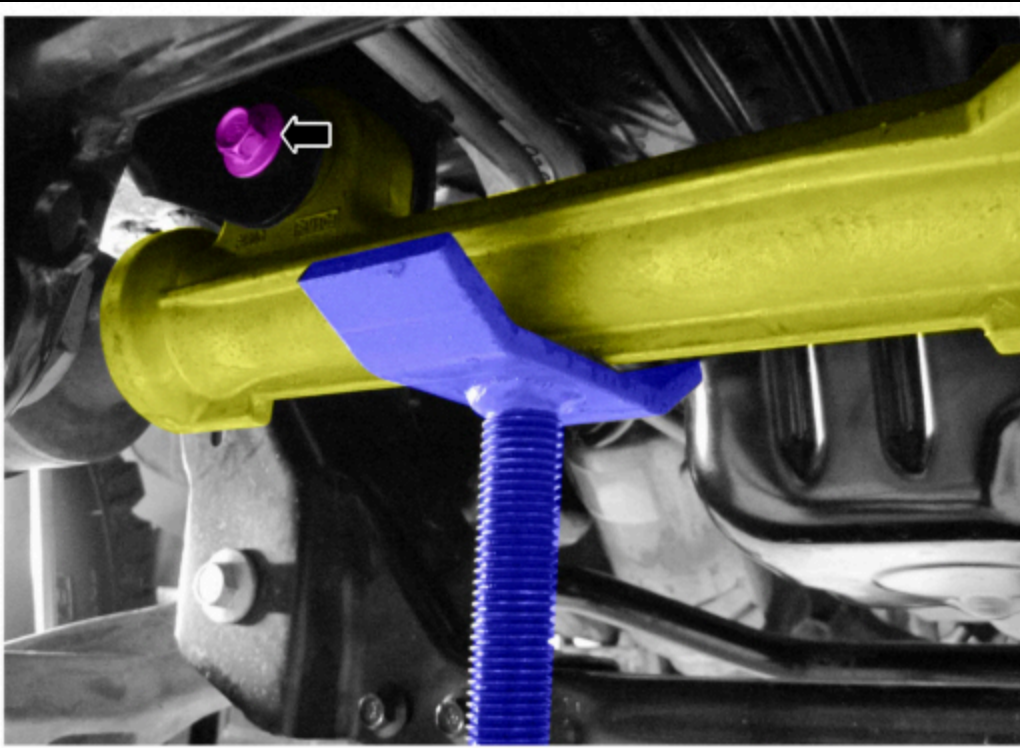


4. Install the upper front axle carrier mounting bushing bolt.
- Tighten to 115 Nm (85 lb-ft).

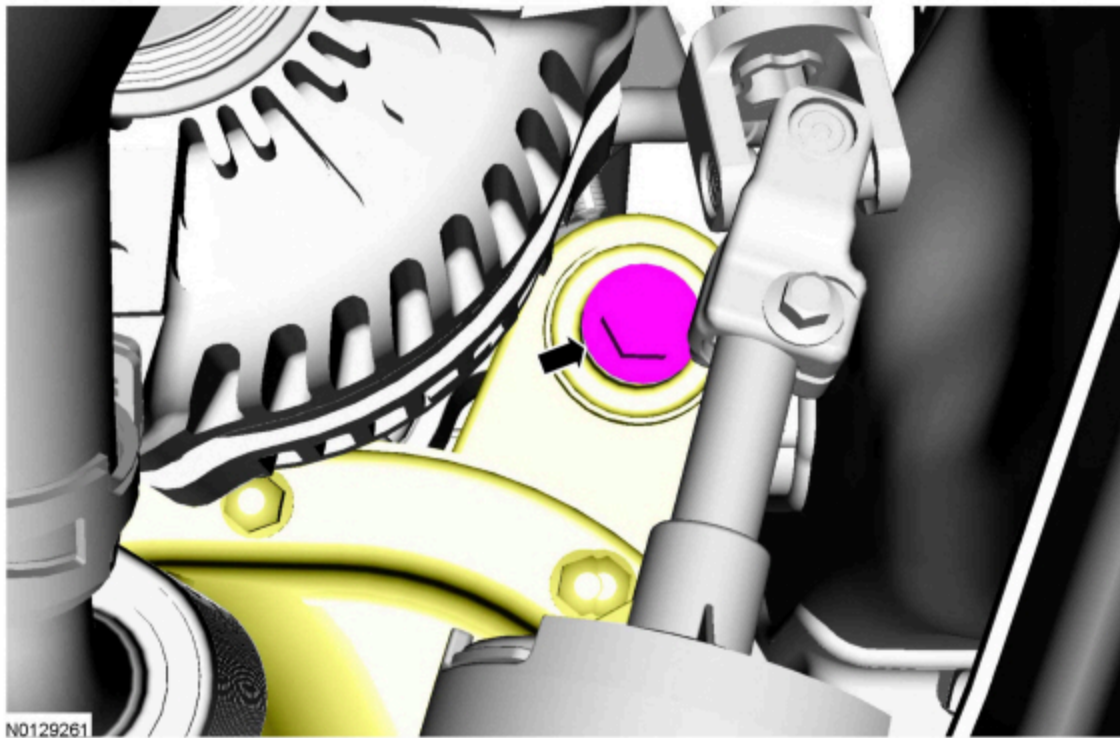

5. Position the starter wiring harness to the front of the engine cover stud.

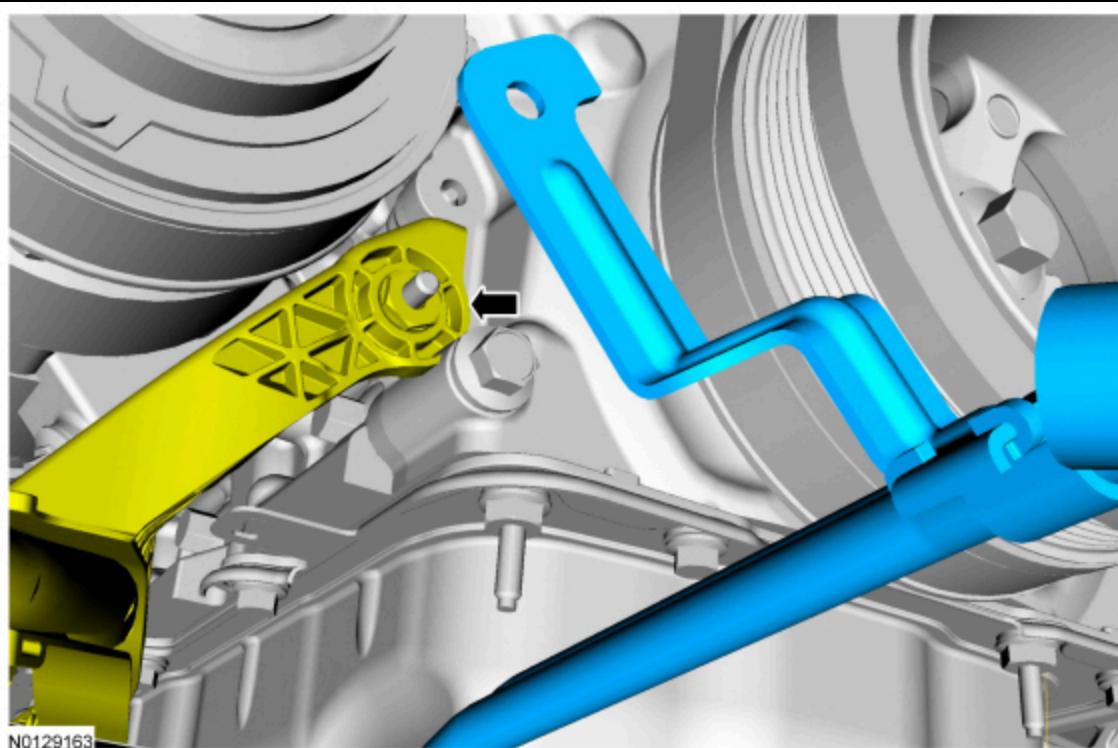


6. Attach the starter wiring harness to the oil pan.

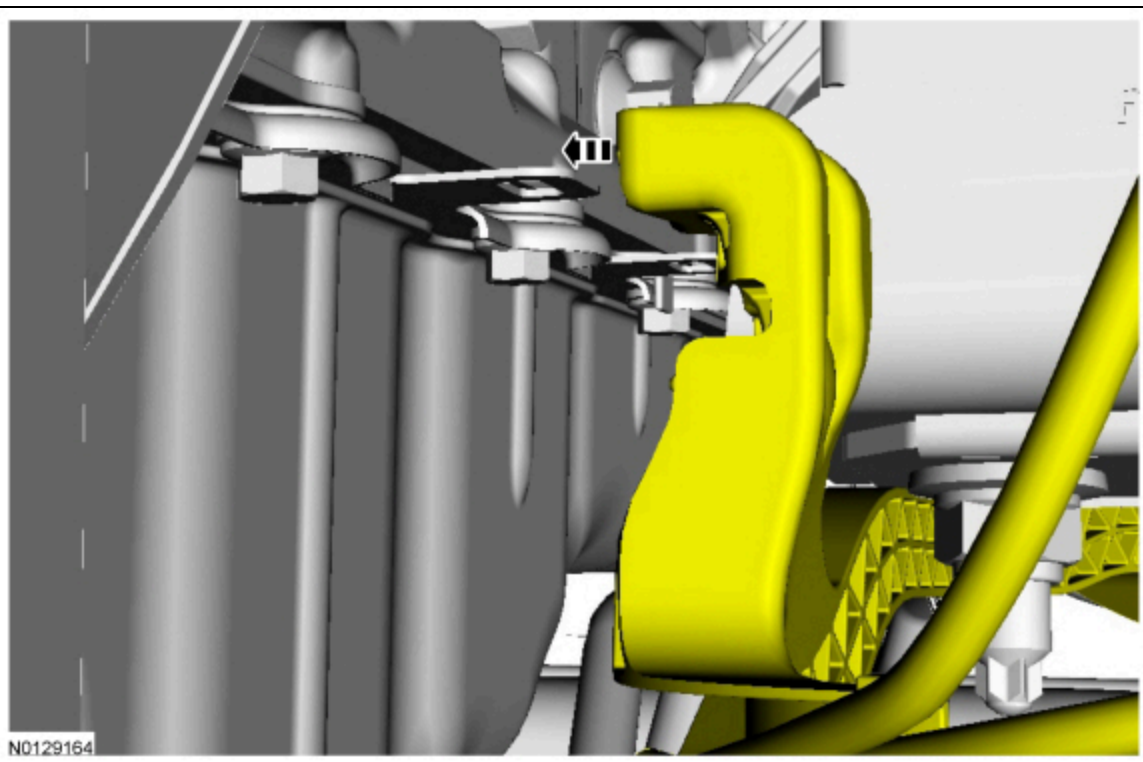


7. Connect the starter motor ground cable eyelet and install the nut.


- Tighten to 25 Nm (18 lb-ft).

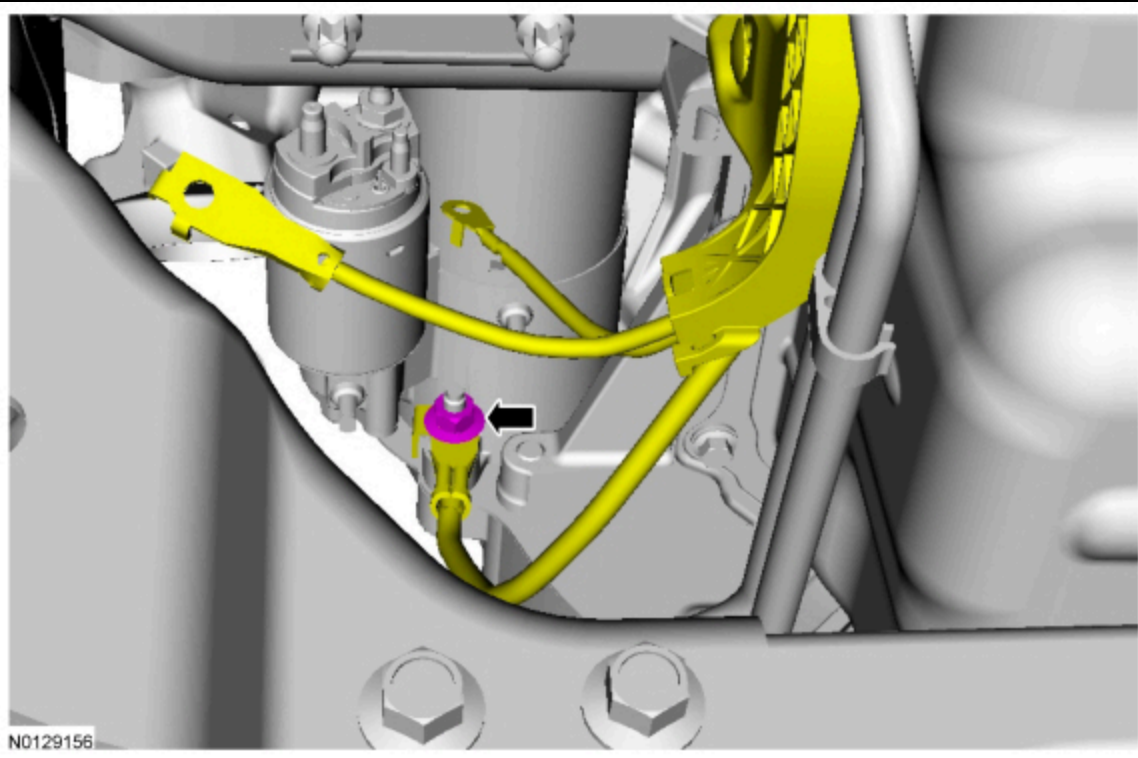


8. Connect the starter solenoid B-terminal eyelet and install the nut.
- Tighten to 12 Nm (106 lb-in).

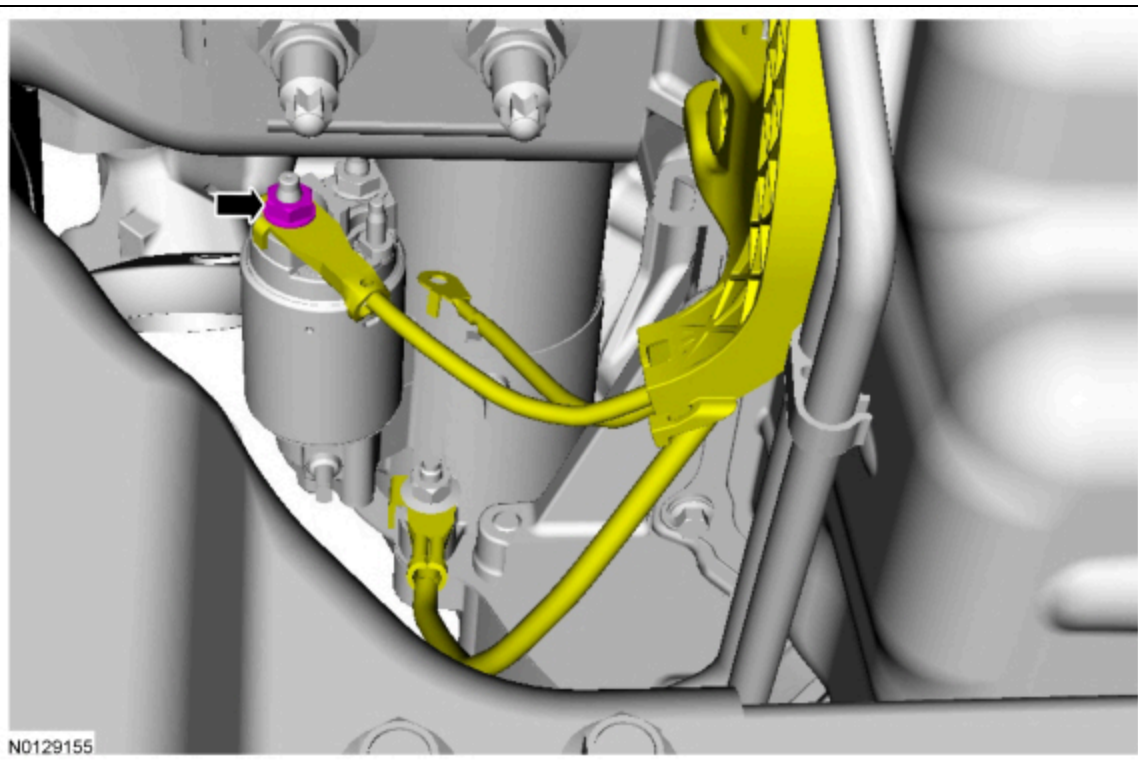

9. Connect the starter solenoid S-terminal eyelet and install the nut.
- Tighten to 5 Nm (44 lb-in).

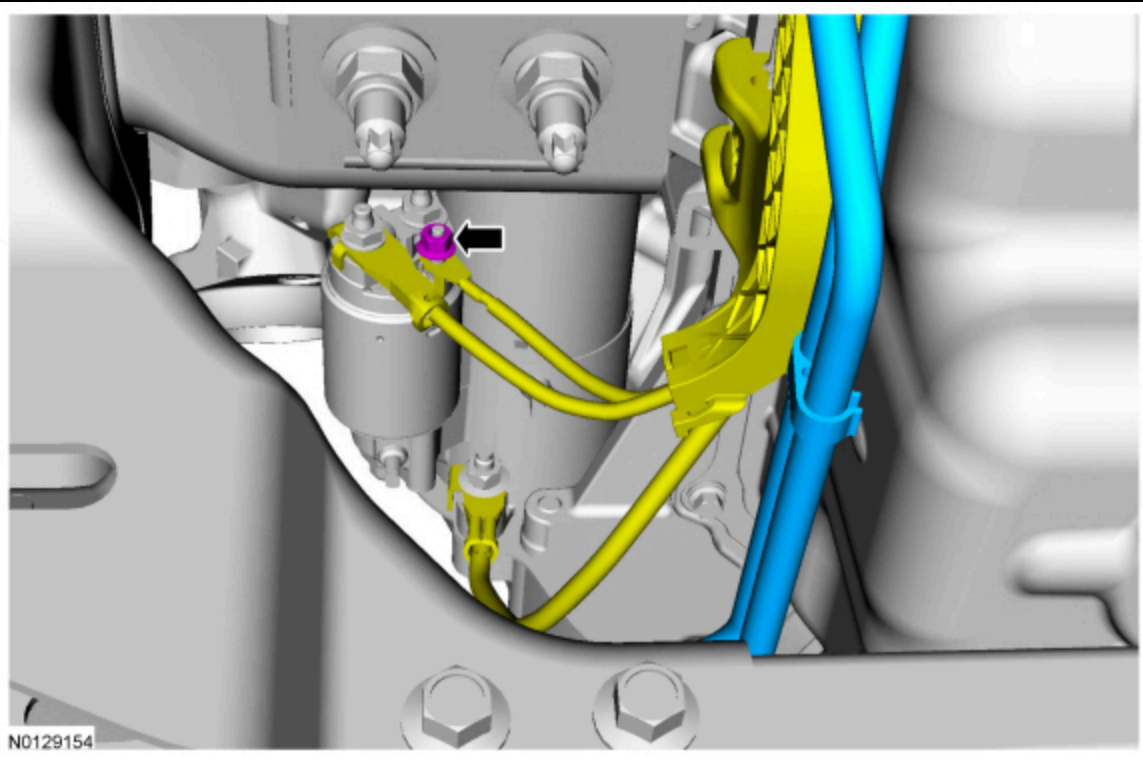


10. Install the terminal cover.

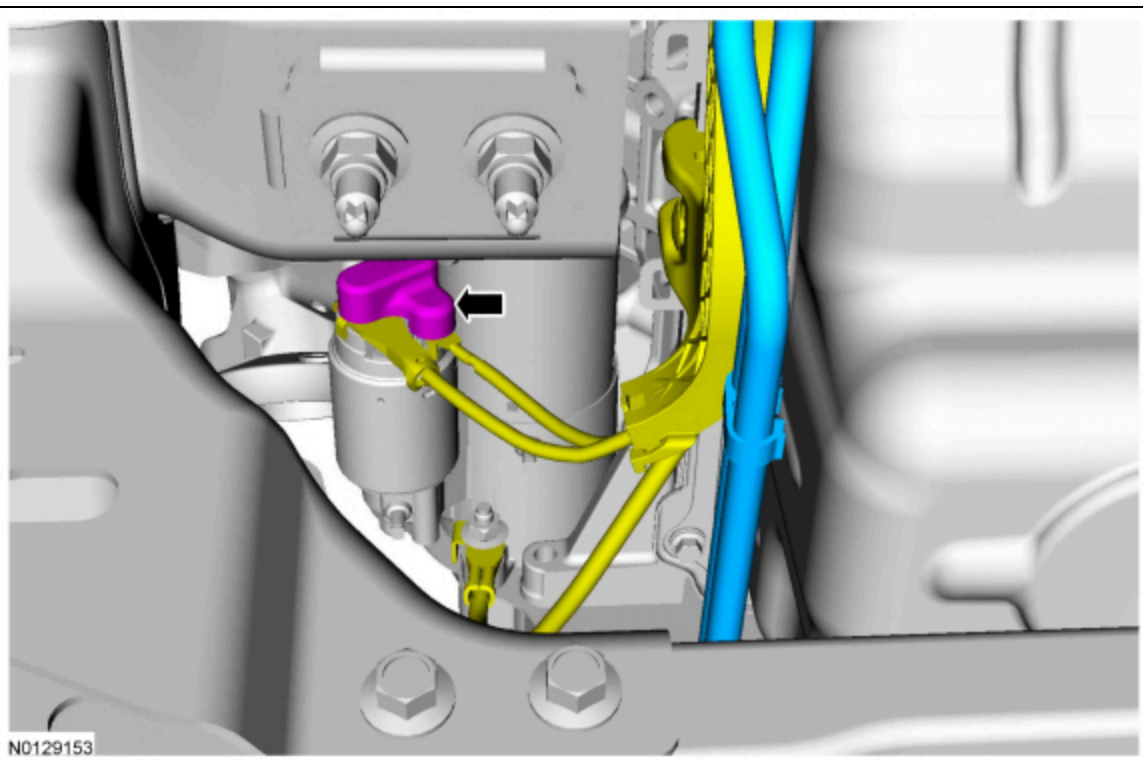

All vehicles


NOTE: *Right side shown, left side similar.*

11. Position the sway bar in place and install 4 new nuts.
- Tighten to 55 Nm (41 lb-ft).

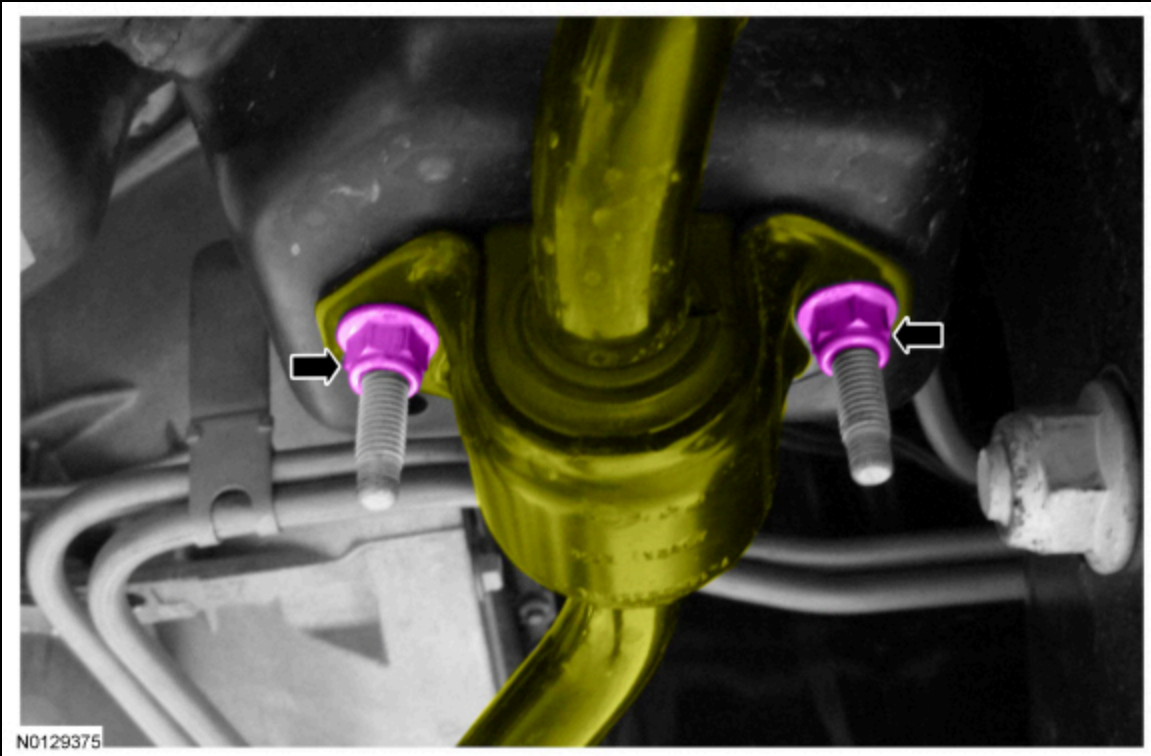

Raptor


- 12. Install the heat shield and the 2 nuts.
 - 1. Tighten to 48 Nm (35 lb-ft).
 - 2. Tighten to 23 Nm (17 lb-ft).

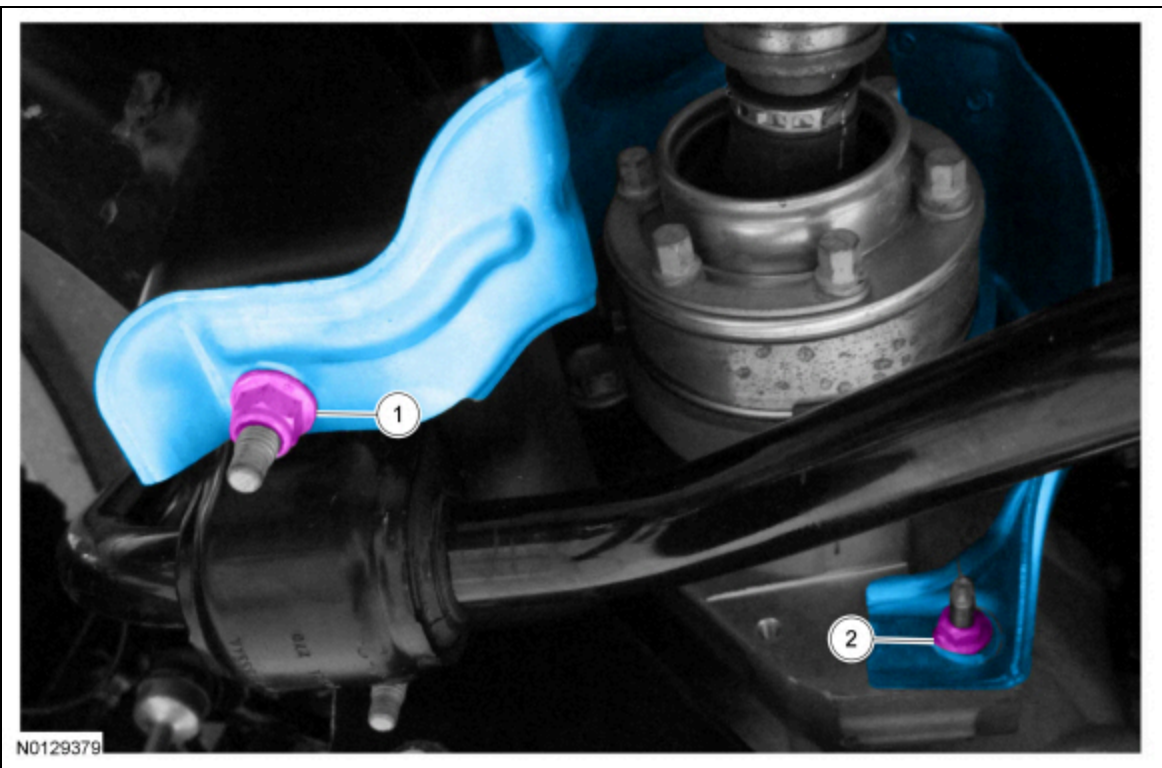

All vehicles

- 13. **NOTE:** *Inspect the transmission case to make sure that the transmission fluid cooler tube O-rings did not remain in the transmission case. Carefully remove and discard them from the case if retained.*


Install 4 new O-rings on the transmission fluid cooler tubes.

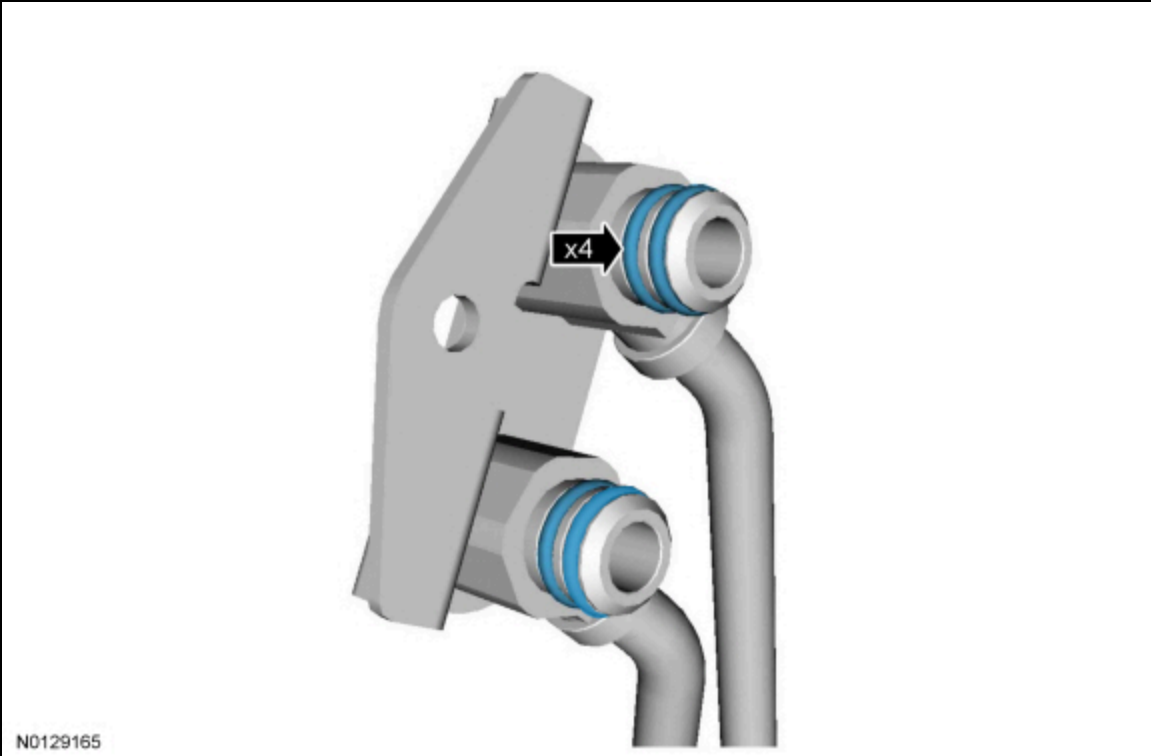

14. NOTICE: Install a new transmission fluid cooler tubes-to-transmission bolt.


Install the transmission fluid cooler tubes and a new transmission fluid cooler tubes-to-transmission bolt.

- Tighten to 30 Nm (22 lb-ft).

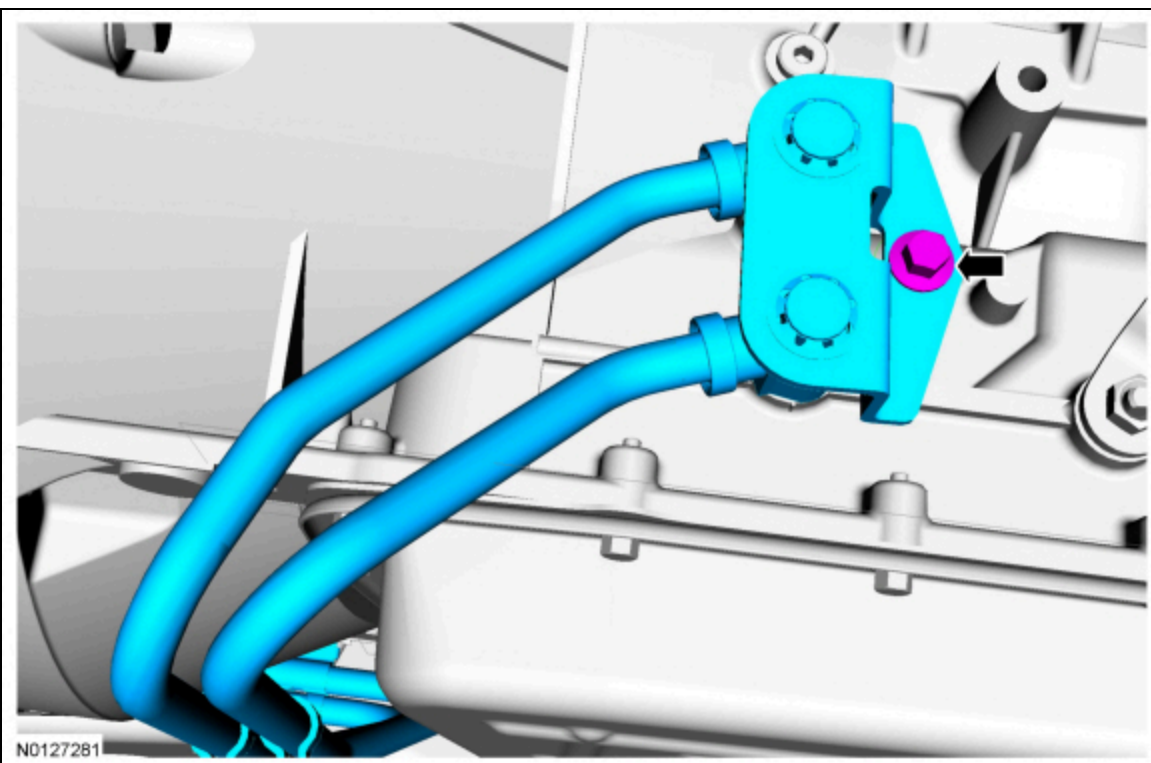


15. If equipped, install the selector lever cable splash shield and the nut.

- Tighten to 12 Nm (106 lb-in).

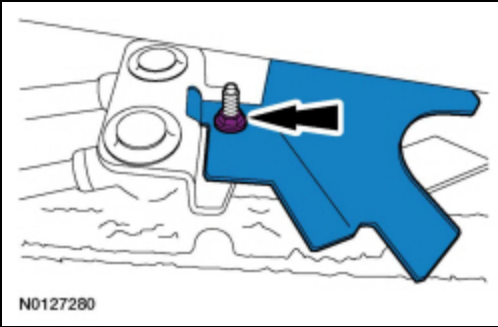

16. Install the transmission fluid cooler tube bracket and the transmission-to-engine bolt.


- Tighten to 48 Nm (35 lb-ft).

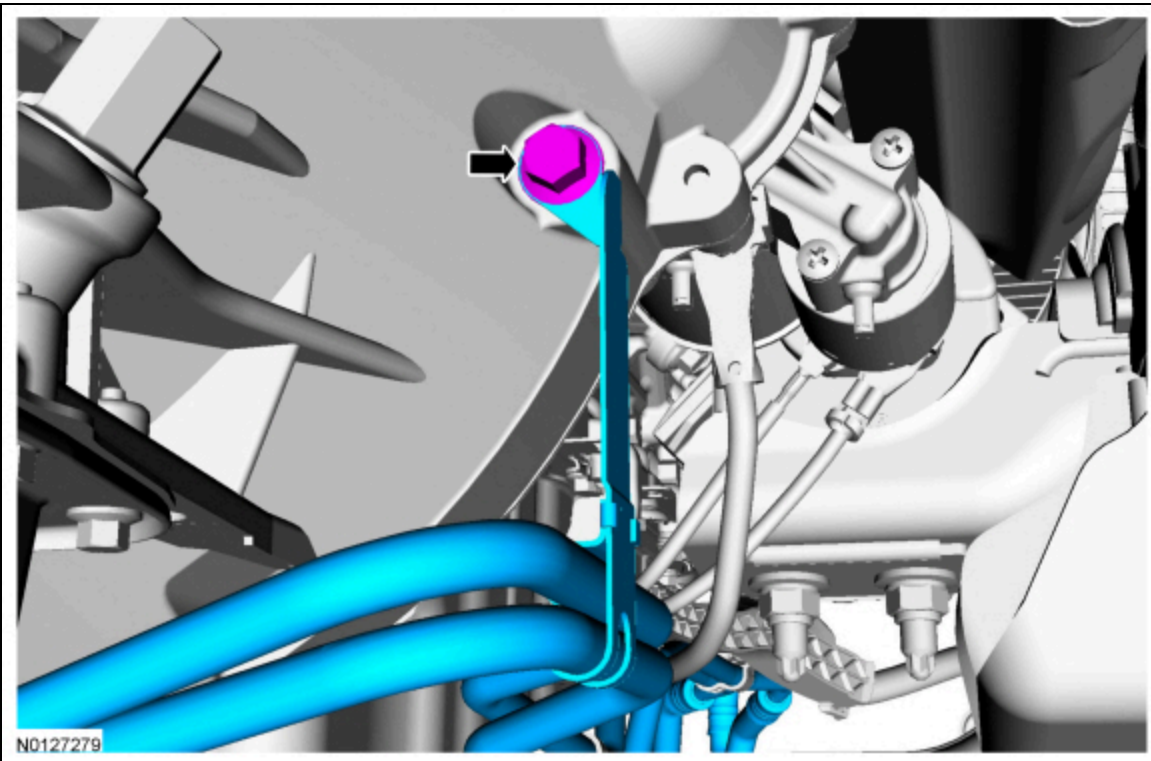

5.0L (4V)


17. Install the transmission fluid cooler tube bracket and the nut to the front of the engine.

- Tighten to 12 Nm (106 lb-in).

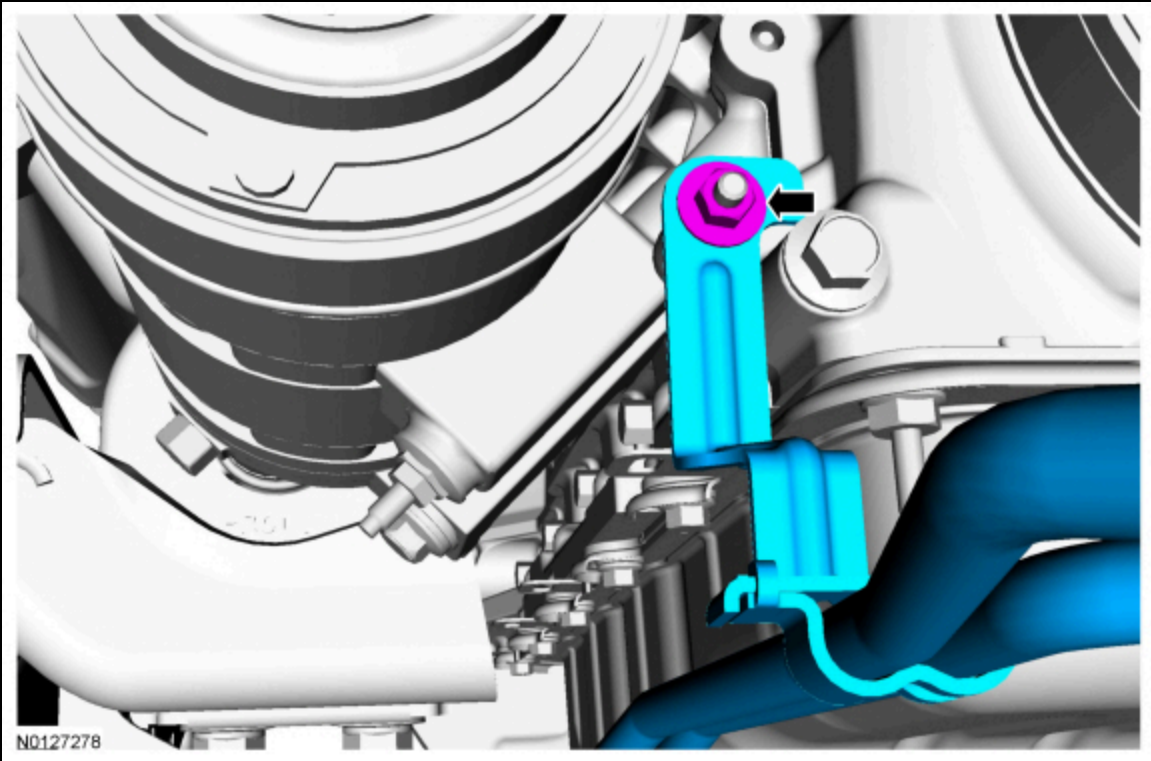


6.2L (2V)

18. Install the transmission fluid cooler tube bracket and the nut to the front of the engine.
- Tighten to 40 Nm (30 lb-ft).

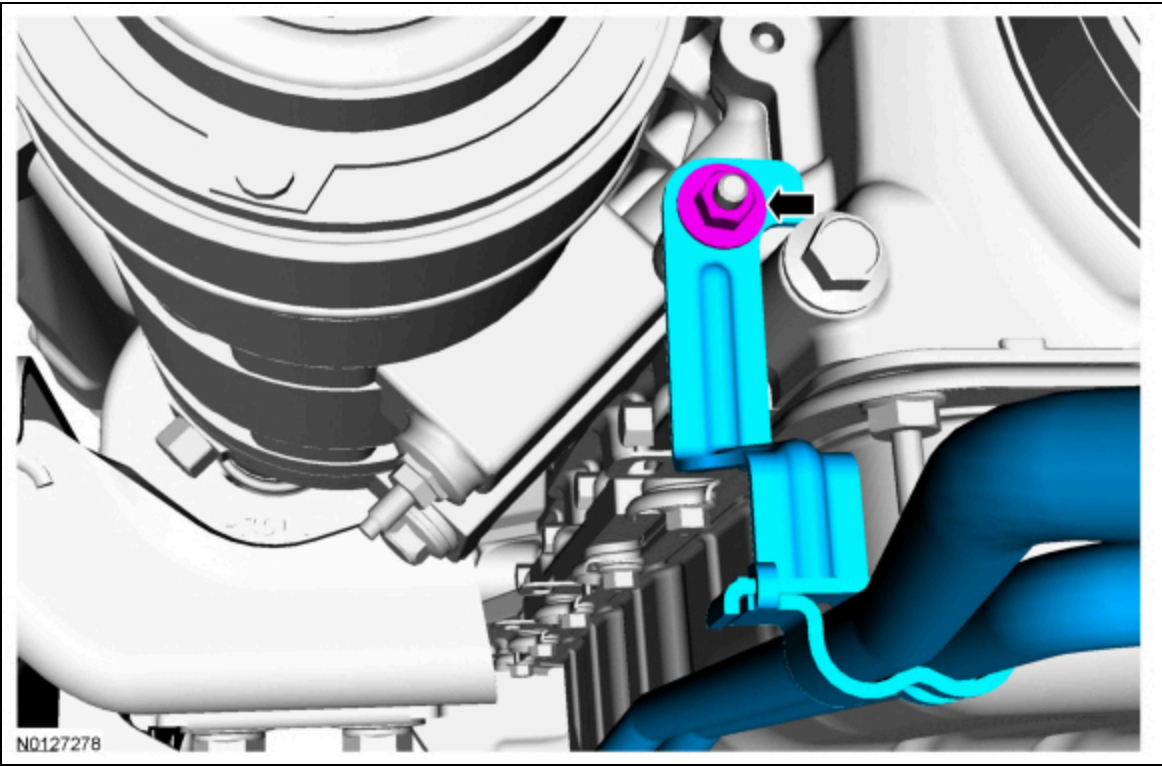


All vehicles

19. Connect the transmission fluid cooler tubes to the transmission fluid cooler hoses.

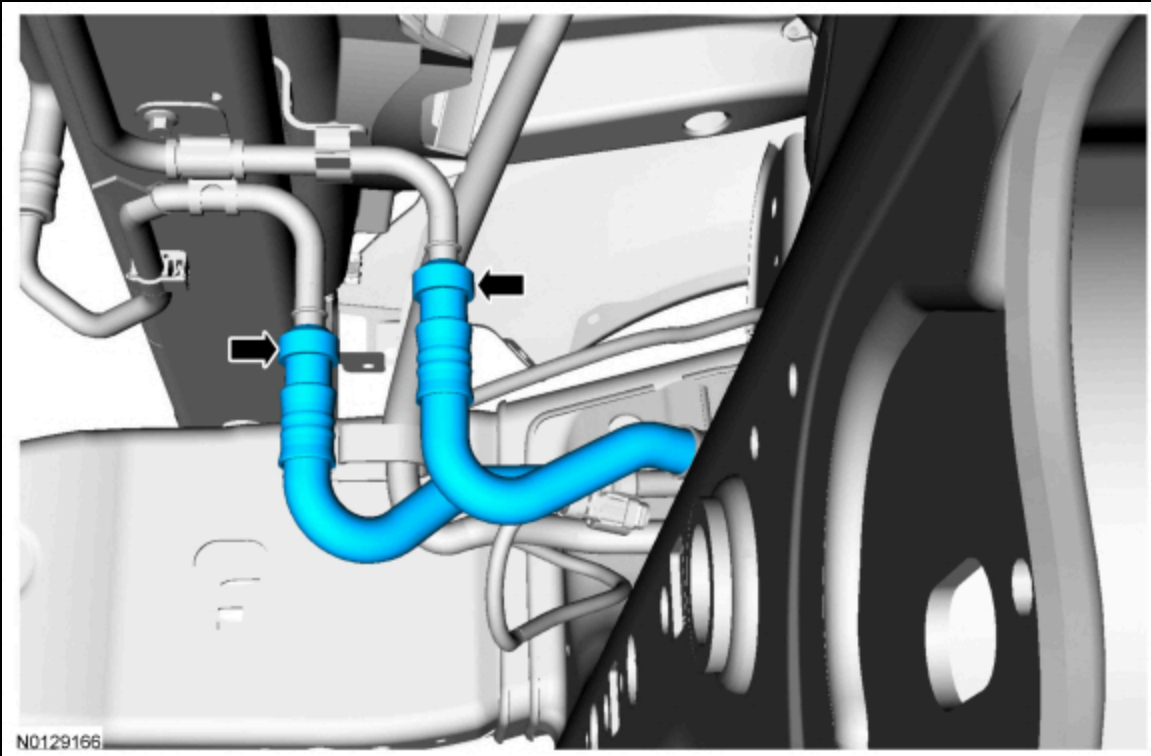


20. Install the transmission fluid cooler tube secondary latches.

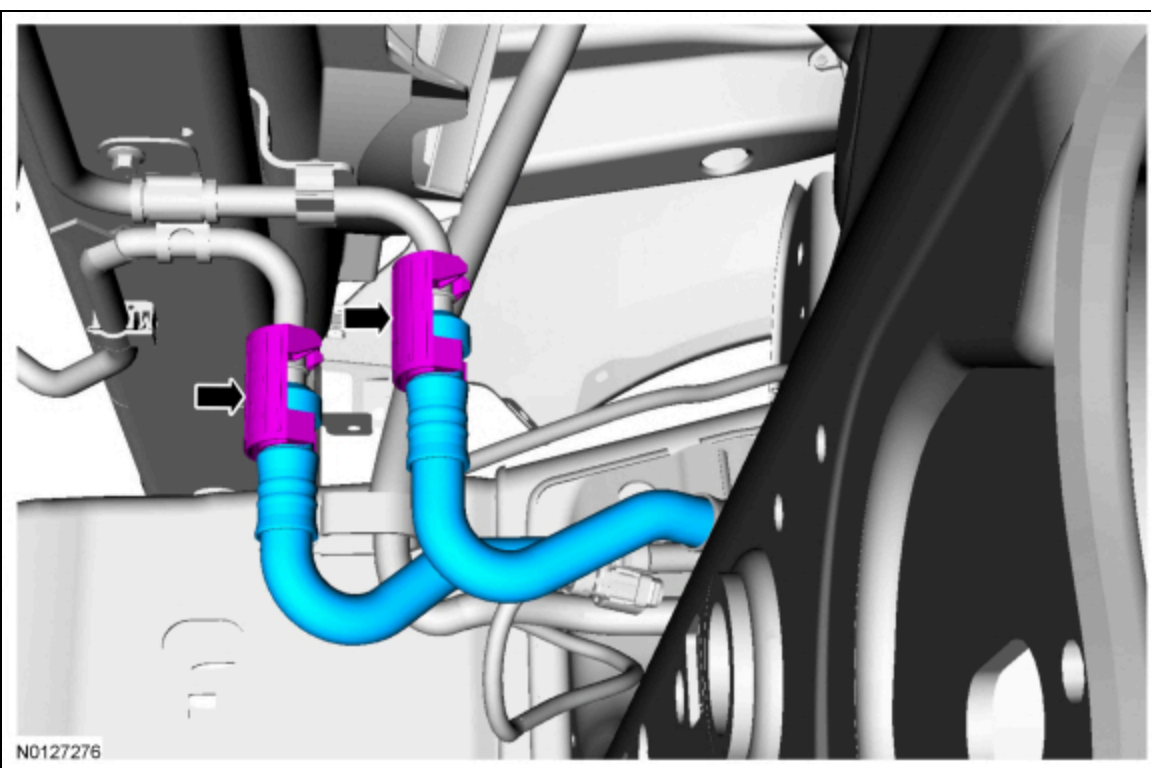


4WD

21. Install the rearward skid plate and the 4 bolts.

- Tighten to 48 Nm (35 lb-ft).

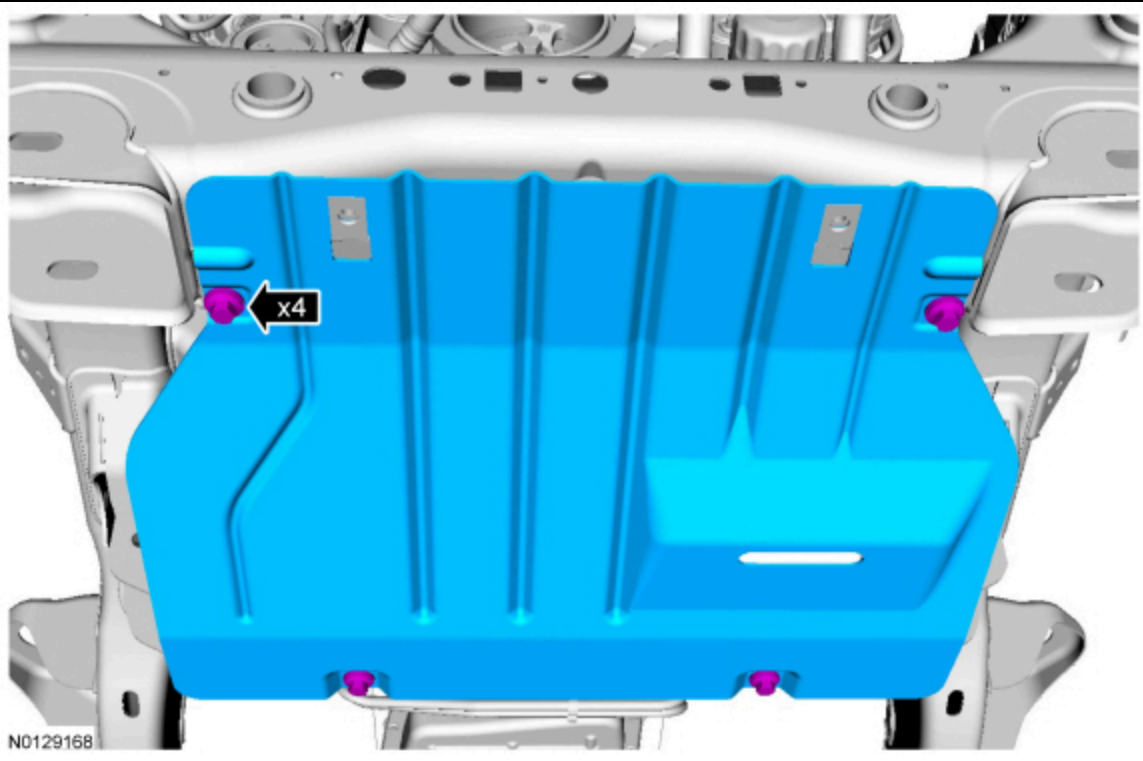

22. If equipped, install the forward skid plate and the 6 bolts.
- Tighten to 48 Nm (35 lb-ft).

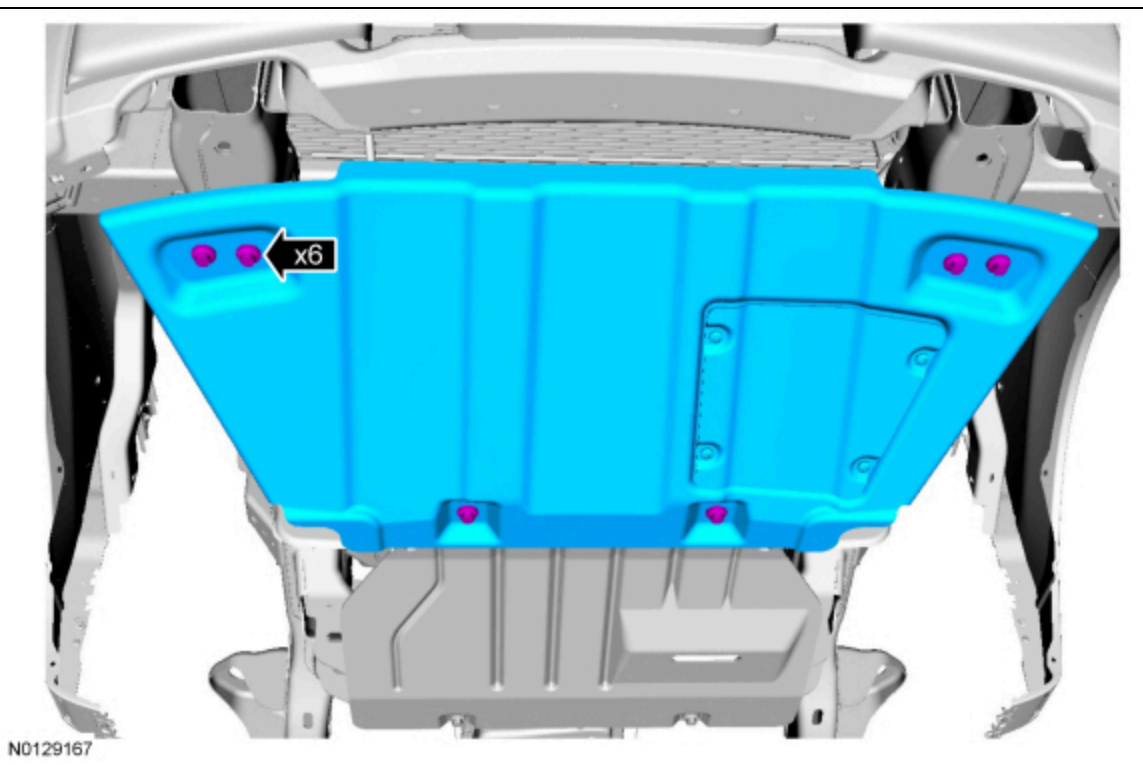

23. Connect the battery ground cable. For additional information, refer to Section 414-01.

All vehicles

24. Fill the transmission with fluid and verify correct operation. For additional information, refer to Transmission Fluid Level Check in Section 307-01.
25. Check for leaks.