


# Transmission Fluid Cooler

 [Ford Ecat Electronic Parts Catalog](#)

| Material                                                                                     |               |
|----------------------------------------------------------------------------------------------|---------------|
| Item                                                                                         | Specification |
| Motorcraft® MERCON® LV Automatic Transmission Fluid<br>XT-10-QLVC (US); CXT-10-LV12 (Canada) | MERCON® LV    |


## Transmission Cooling

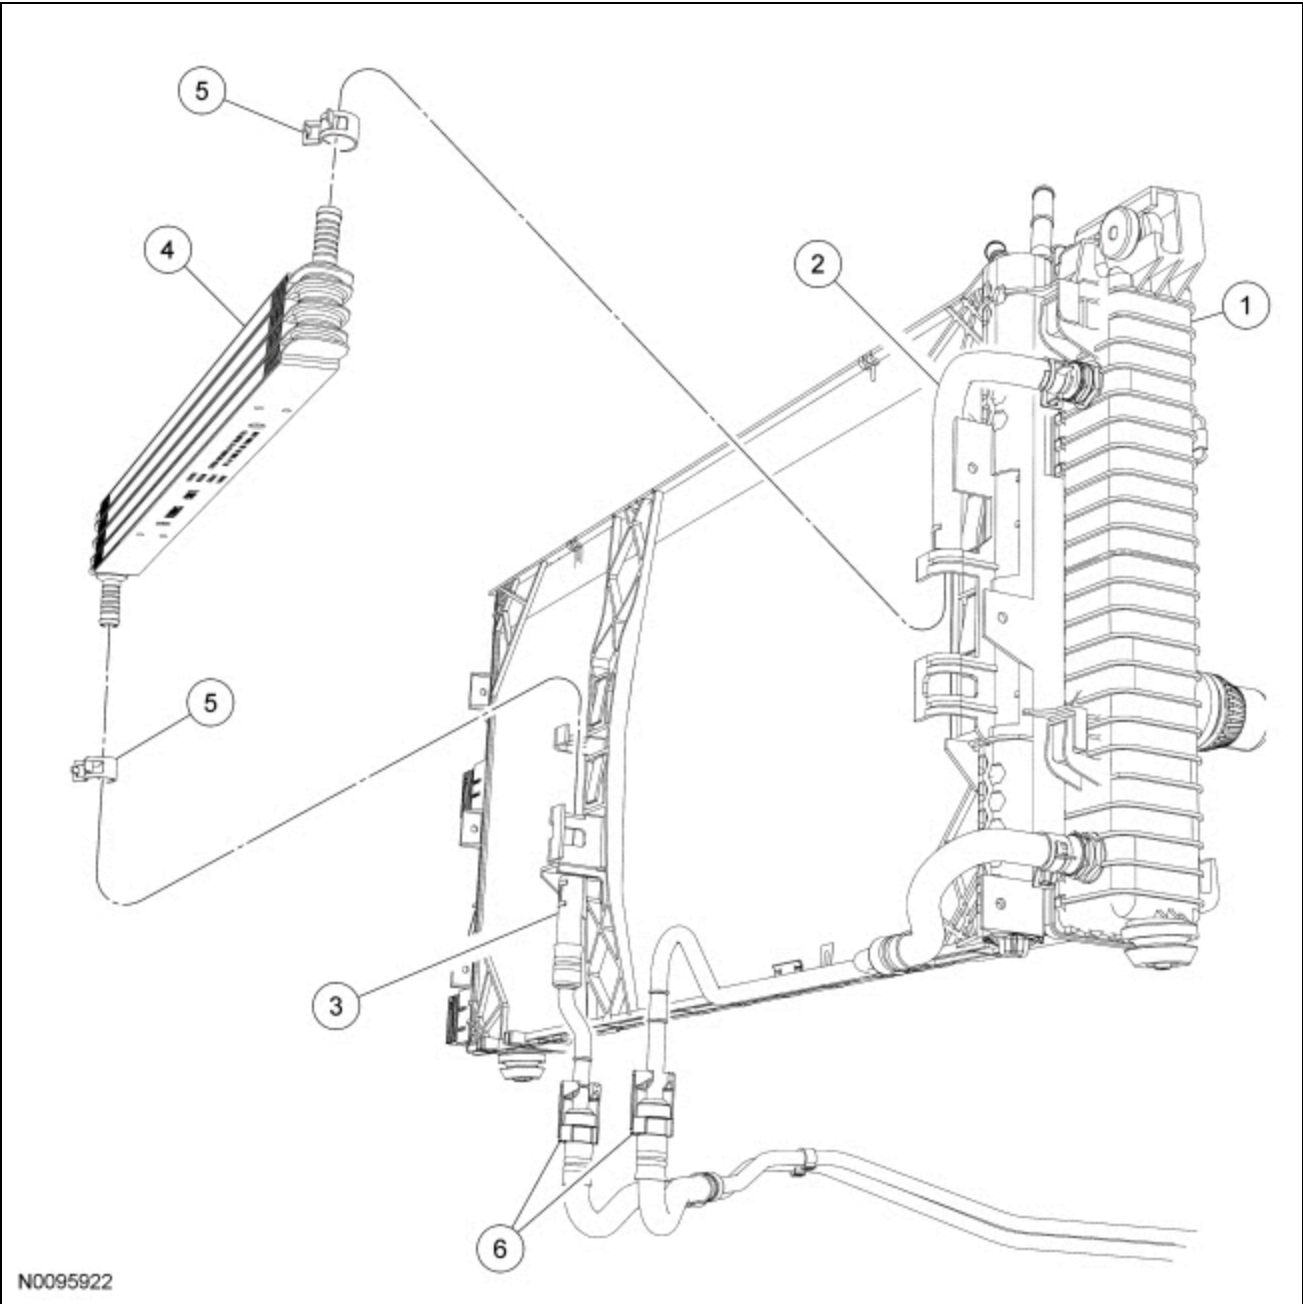


| Item | Part Number                  | Description                                                       |
|------|------------------------------|-------------------------------------------------------------------|
| 1    | 8005 <a href="#">8005</a>    | Radiator                                                          |
| 2    | 7C4107 <a href="#">7C410</a> | In-tank transmission fluid cooler outlet hose                     |
| 3    | 7B0287 <a href="#">B028</a>  | Auxiliary transmission fluid cooler outlet hose                   |
| 4    | 7A0957 <a href="#">A095</a>  | Auxiliary transmission fluid cooler                               |
| 5    | 7C1077 <a href="#">C107</a>  | Clamps                                                            |
| 6    | 7Z4657 <a href="#">Z465</a>  | Transmission fluid cooler inlet and outlet tube secondary latches |

## Removal

1. Remove the transmission fluid cooler inlet hose from the transmission fluid cooler.
  - Discard the clamp.

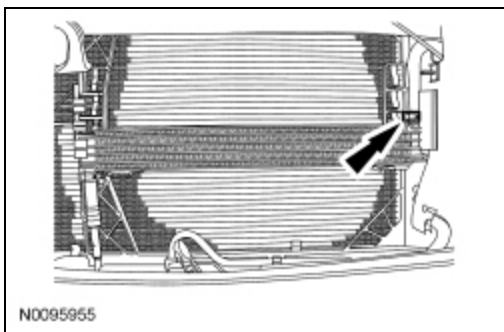


2. Remove the transmission fluid cooler outlet hose from the transmission fluid cooler.
  - Discard the clamp.

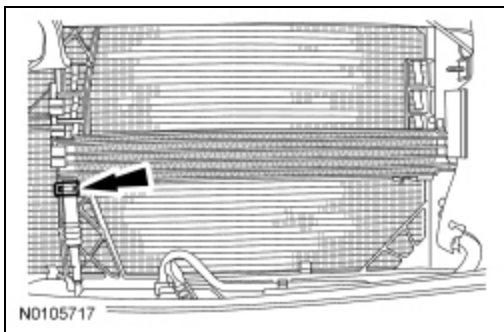


3. Remove the transmission fluid cooler.

## Installation

1. Install the transmission fluid cooler.
2. Install a new transmission fluid cooler outlet hose clamp.
3. Install the transmission fluid cooler outlet hose to the transmission fluid cooler.

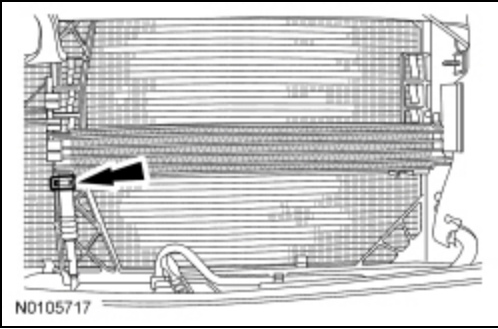

4. Install a new transmission fluid cooler inlet hose clamp.
5. Install the transmission fluid cooler inlet hose to the transmission fluid cooler.

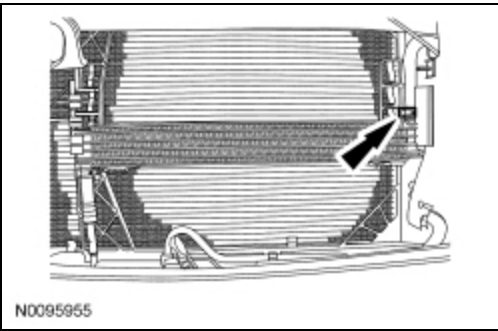

6. Fill the transmission with transmission fluid. For additional information, refer to Transmission Fluid Level Check in Section 307-01.
7. Check for leaks.