


Brake Shift Interlock Actuator — Column Shift

 [Ford Ecat Electronic Parts Catalog](#)

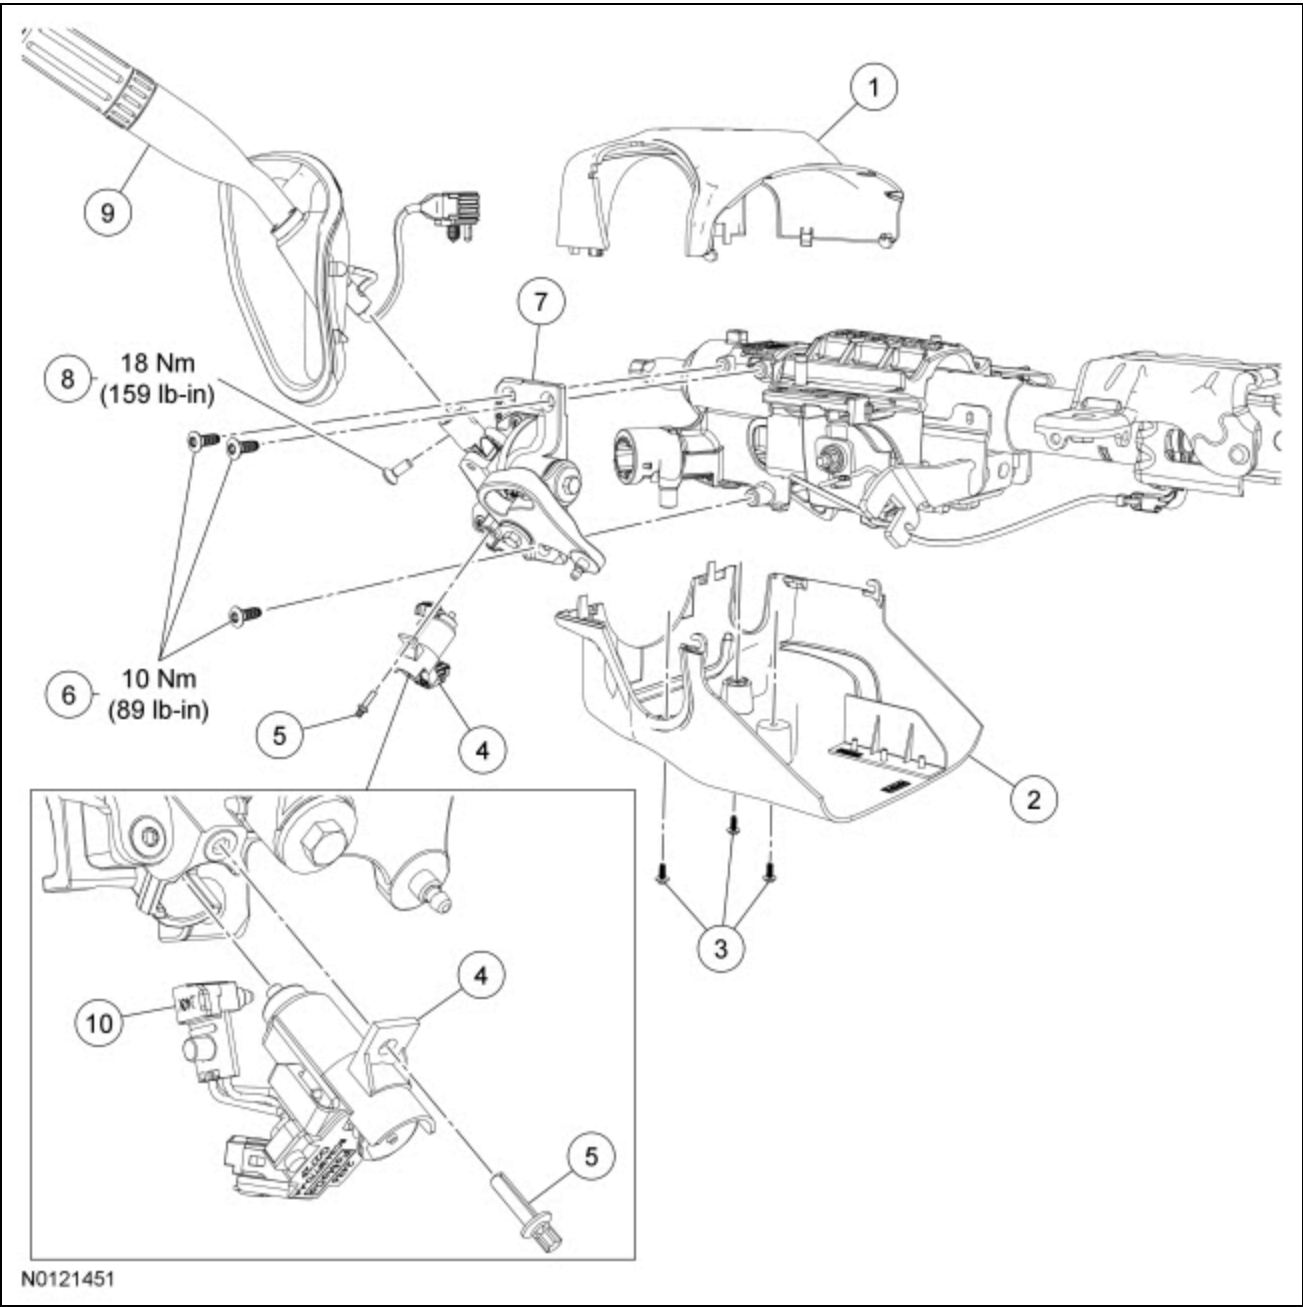


Item	Part Number	Description
1	35303530	Upper steering column shroud
2	35303530	Lower steering column shroud
3	W710485W710485	Lower steering column shroud screws (3 required)
4	3Z7193Z719	Brake Shift Interlock Actuator (BSIA)
5	3F9073F907	BSIA screw
6	W790181W790181	Selector lever mechanism bolts (3 required)
7	7210B7210B	Selector lever mechanism


8	W712000W712000	Selector lever bolt
9	7210A7210A	Selector lever
10	—	Park position switch (part of 3Z719)

Removal and Installation


1. Remove the selector lever mechanism. For additional information, refer to Selector Lever Mechanism — Column Shift in this section.
2. Remove the Brake Shift Interlock Actuator (BSIA) screw.

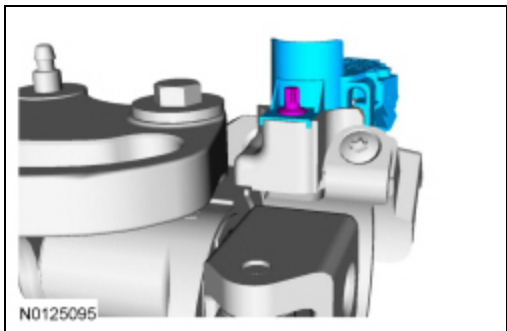

3. Remove the BSIA .
 1. Gently pry out the clip.
 2. While prying out the clip, simultaneously remove the BSIA from the selector lever mechanism housing.

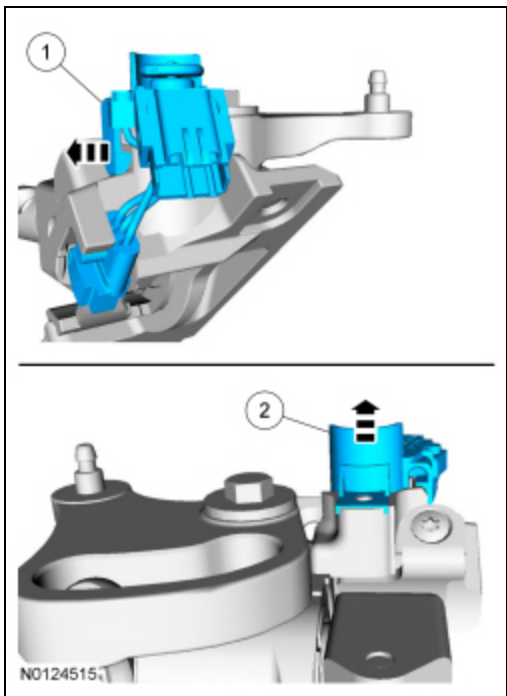


4. Remove the park position switch.
 1. Press the spring loaded pin.
 2. While pressing in on the spring loaded pin, rotate the park position switch clockwise and remove it from the selector lever mechanism.

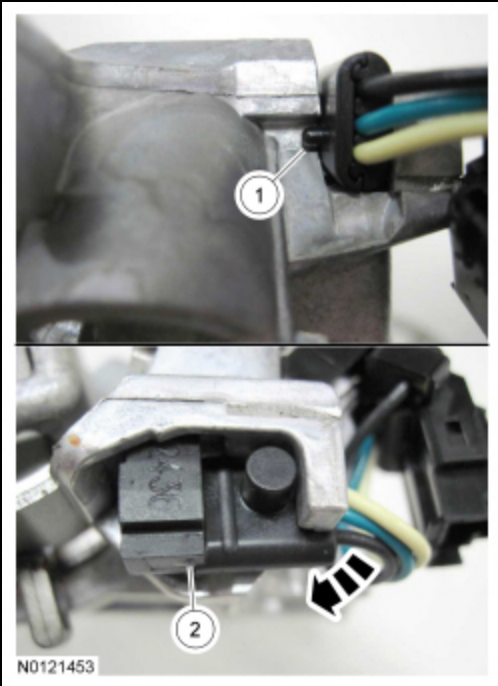


Installation

- 1. Install the park position switch.
 - 1. Place the large plunger on the park position switch in the locating hole and position the switch as shown.
 - 2. Rotate the park position switch counterclockwise making sure the tab locks under the housing lip.

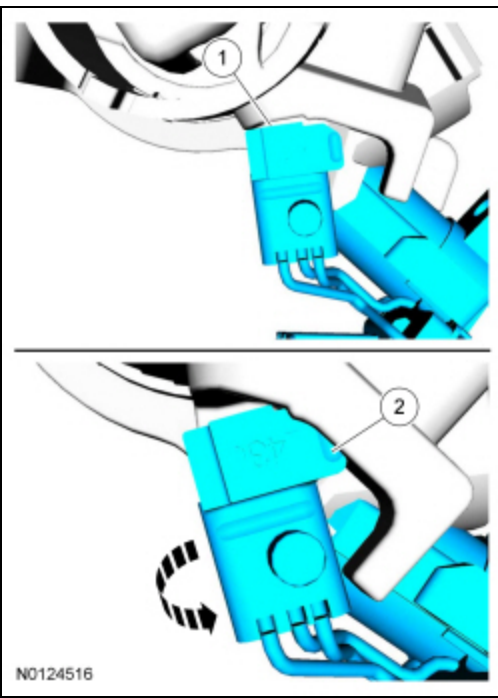


- 2. Verify small plunger is fully extended.

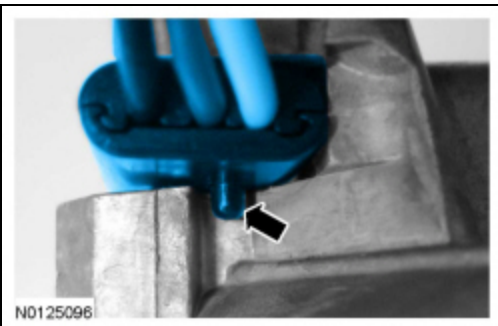


3. Install the BSIA .

1. Insert the BSIA into the selector lever mechanism housing.
2. Gently push the snap lock clip in place.

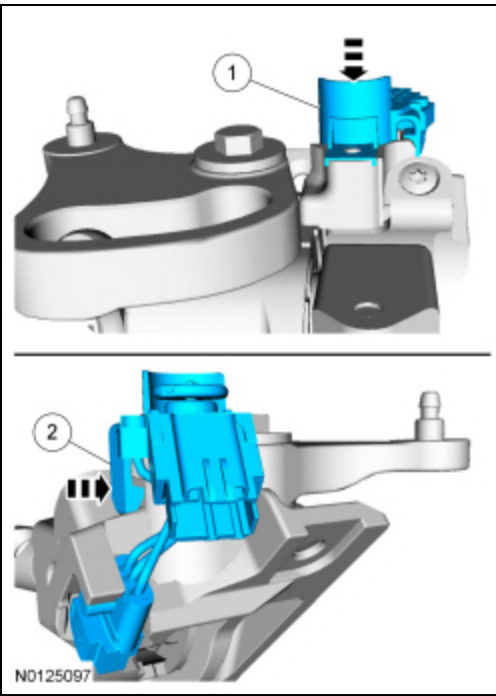

4. Install the BSIA screw.

- Tighten to 2 Nm (18 lb-in).

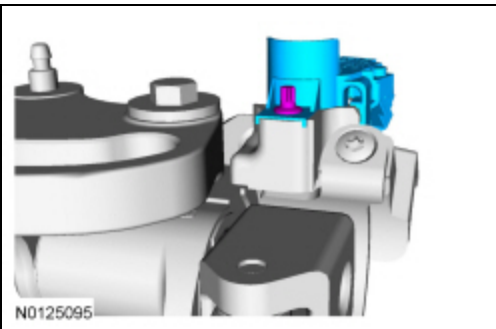

5. Install the selector lever mechanism. For additional information, refer to Selector Lever Mechanism — Column Shift in this section.