


Selector Lever Mechanism — Column Shift

 [Ford Ecat Electronic Parts Catalog](#)

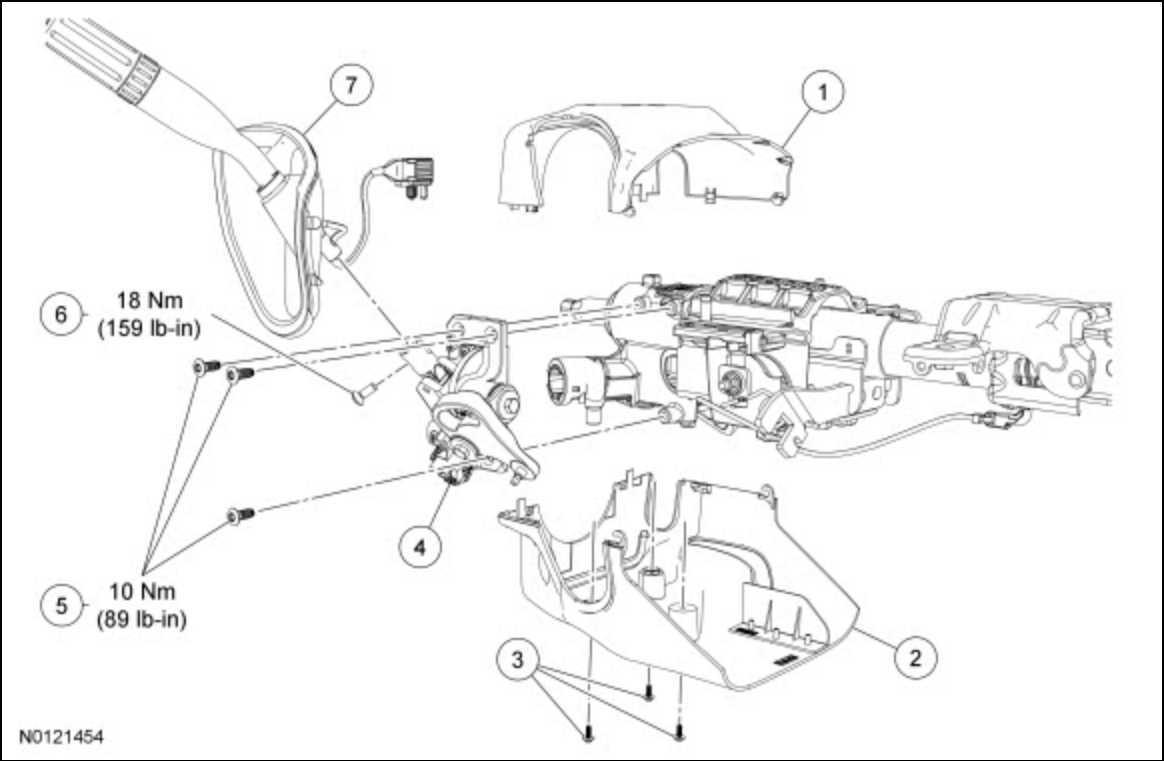


Item	Part Number	Description
1	3530 3530	Upper steering column shroud
2	3530 3530	Lower steering column shroud
3	W710485 W710485	Lower steering column shroud screws (3 required)
4	7210B 7210B	Selector lever mechanism
5	W790181 W790181	Selector lever mechanism bolts (3 required)
6	—	Selector lever bolt (part of 7210A)
7	7210A 7210A	Selector lever

Removal and Installation


1. **NOTE:** To access the top selector lever mechanism bolts, position the selector lever in NEUTRAL before removing the selector lever.

Remove the selector lever. For additional information, refer to Selector Lever — Column Shift in this section.

2. Disconnect the Brake Shift Interlock Actuator (BSIA) electrical connector.

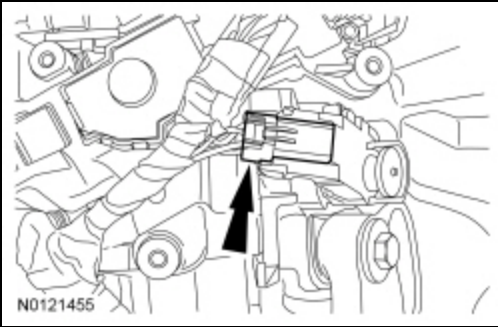


3. Disconnect the selector lever cable.

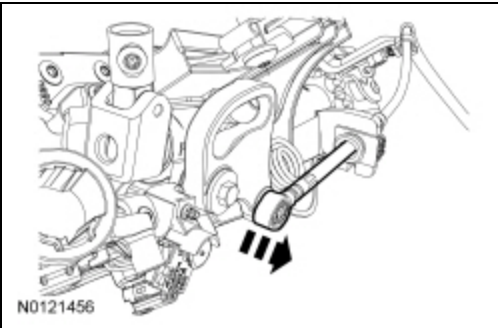

4. Remove and discard the 3 bolts and remove the selector lever mechanism.

- To install, tighten to 10 Nm (89 lb-in).

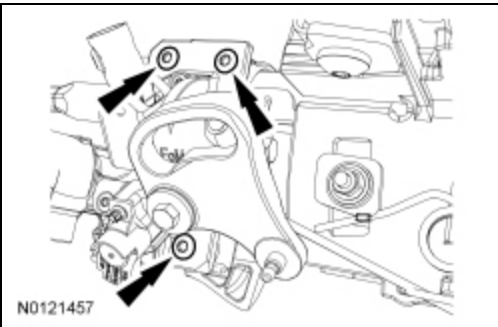

5. To install, reverse the removal procedure.