


Selector Lever — Column Shift



NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

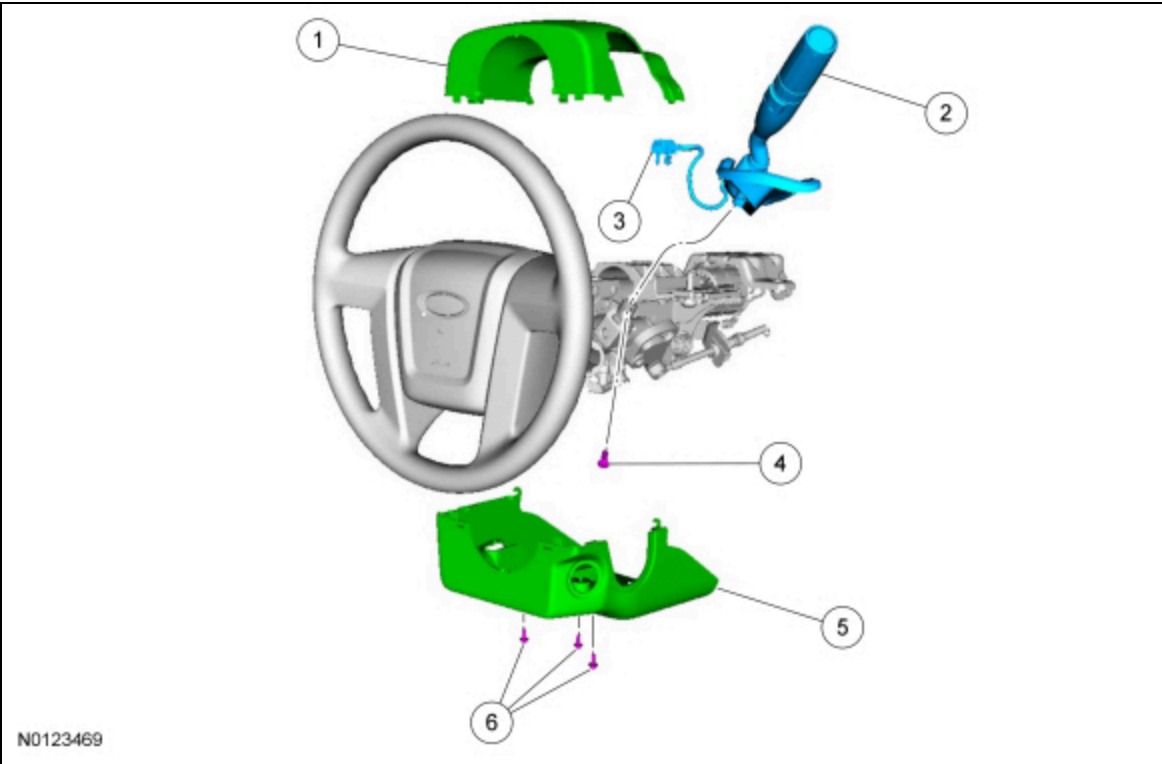

Item	Part Number	Description
1	3530 3530	Upper steering column shroud
2	7210A 7210A	Selector lever
3	—	Tow/Haul switch electrical connector (part of 7210A)
4	W712000 W712000	Selector lever bolt
5	3530 3530	Lower steering column shroud
6	W710485 W710485	Lower steering column shroud screws (3 required)

Removal and Installation

1. Remove the steering column shrouds. For additional information, refer to Section 211-04.
2. Disconnect the Tow/Haul switch electrical connector.



3. Remove and discard the selector lever bolt.
 - To install, tighten to 18 Nm (159 lb-in).



4. Remove the selector lever.
5. To install, reverse the removal procedure.