

Transfer Case Draining and Filling


 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2323-A	Oil Suction Gun 303-D104 (D94T-9000-A)
--	---


Material

Item	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC (US); CXT-10-LV12 (Canada)	MERCON® LV
Motorcraft® Transfer Case Fluid (US; Canada) XL-12 (US); CXL-12 (Canada)	ESP-M2C166-H
Motorcraft® Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2

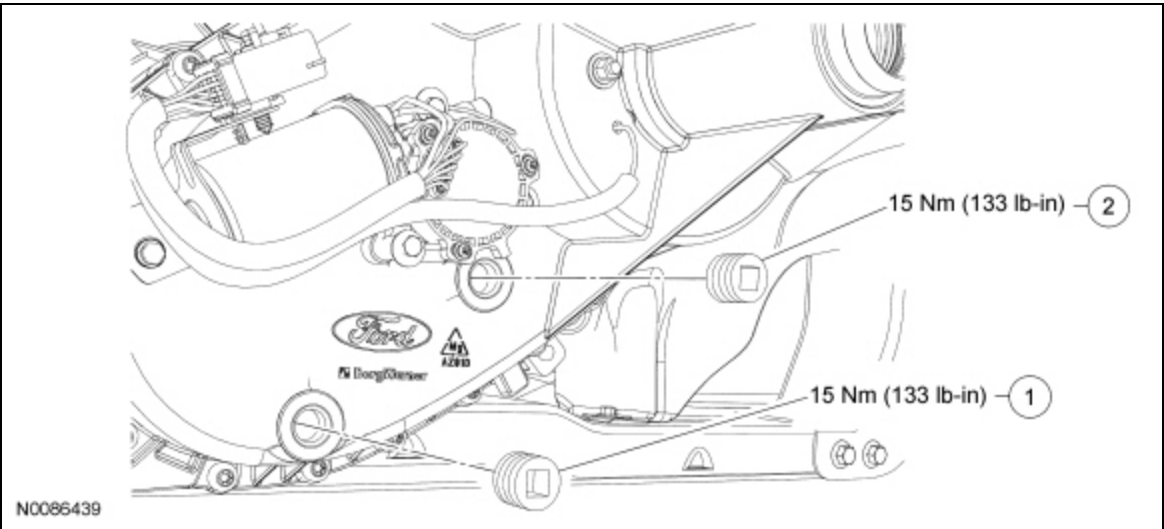

Item	Part Number	Description
1	7A1107A110	Drain plug
2	7A1107A110	Fill plug


1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the drain plug and drain the fluid.

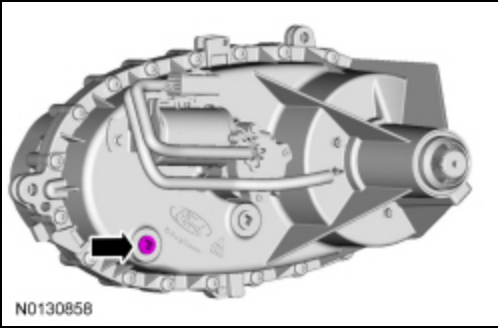

3. Clean the drain plug and the drain plug area. Apply thread sealant to the drain plug threads and install the drain plug.
 - To install, tighten to 15 Nm (133 lb-in).

4. **NOTE:** *Prior to removal, clean the area around the fill plug.*


Remove the fill plug.

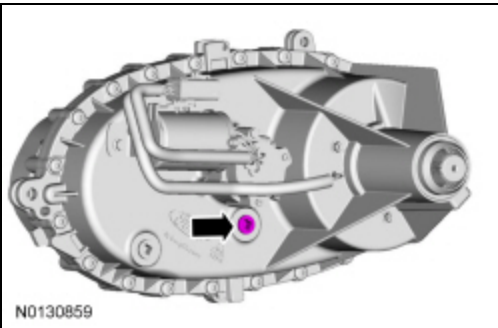

5. **NOTICE:** In the Electronic Shift-On-The-Fly (ESOF) transfer case use Motorcraft® Transfer Case Fluid and in the 2-speed torque-on-demand transfer case use Motorcraft® MERCON® LV Automatic Transmission Fluid. Incorrect fluid fill will result in transfer case failure.

Using the Oil Suction Gun, fill the transfer case with the recommended fluid, to specification.

- Transfer case capacity is 1.4L (2.9 pt).
- The fluid must be 10 mm (0.393 in) below the fill plug hole.

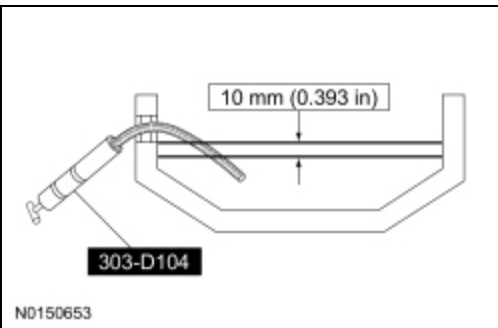

6. Apply thread sealant to the fill plug threads and install the fill plug.
 - Tighten to 15 Nm (133 lb-in).