


Fuel Tank Draining

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

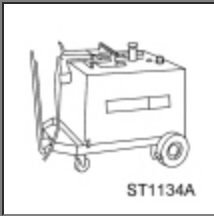

100 Gallon Gasoline Hand Pump Storage Tanker
292-00007 or equivalent

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.


WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: When handling fuel, always observe fuel handling precautions and be prepared in the event of fuel spillage. Spilled fuel may be ignited by hot vehicle components or other ignition sources. Failure to follow these instructions may result in serious personal injury.

WARNING: Remove the fuel filler cap slowly. The fuel system may be under pressure. If the fuel filler cap is venting vapor or if you hear a hissing sound, wait until it stops before completely removing the fuel filler cap. Otherwise, fuel may spray out. Failure to follow these instructions may result in serious personal injury.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Relieve the fuel system pressure. For additional information, refer to Fuel System Pressure Release in this section.
3. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
4. Remove the driveshaft. For additional information, refer to Section 205-01.
5. Disconnect the fuel tank filler pipe from the fuel tank.
 - To install, tighten to 4 Nm (35 lb-in).

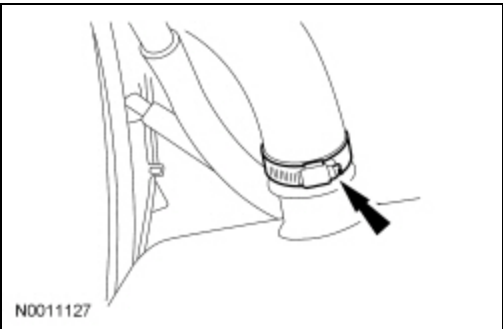

6. **NOTE:** *Follow the operating instructions supplied by the equipment manufacturer.*

Insert the hose from the 100 Gallon Manual Fuel Tanker and siphon the fuel through the fuel tank inlet spout.

