


Fuel Lines

 [Ford Ecat Electronic Parts Catalog](#)

NOTE: 5.0L (4V) automatic transmission with Rear Wheel Drive (RWD) shown, others similar.

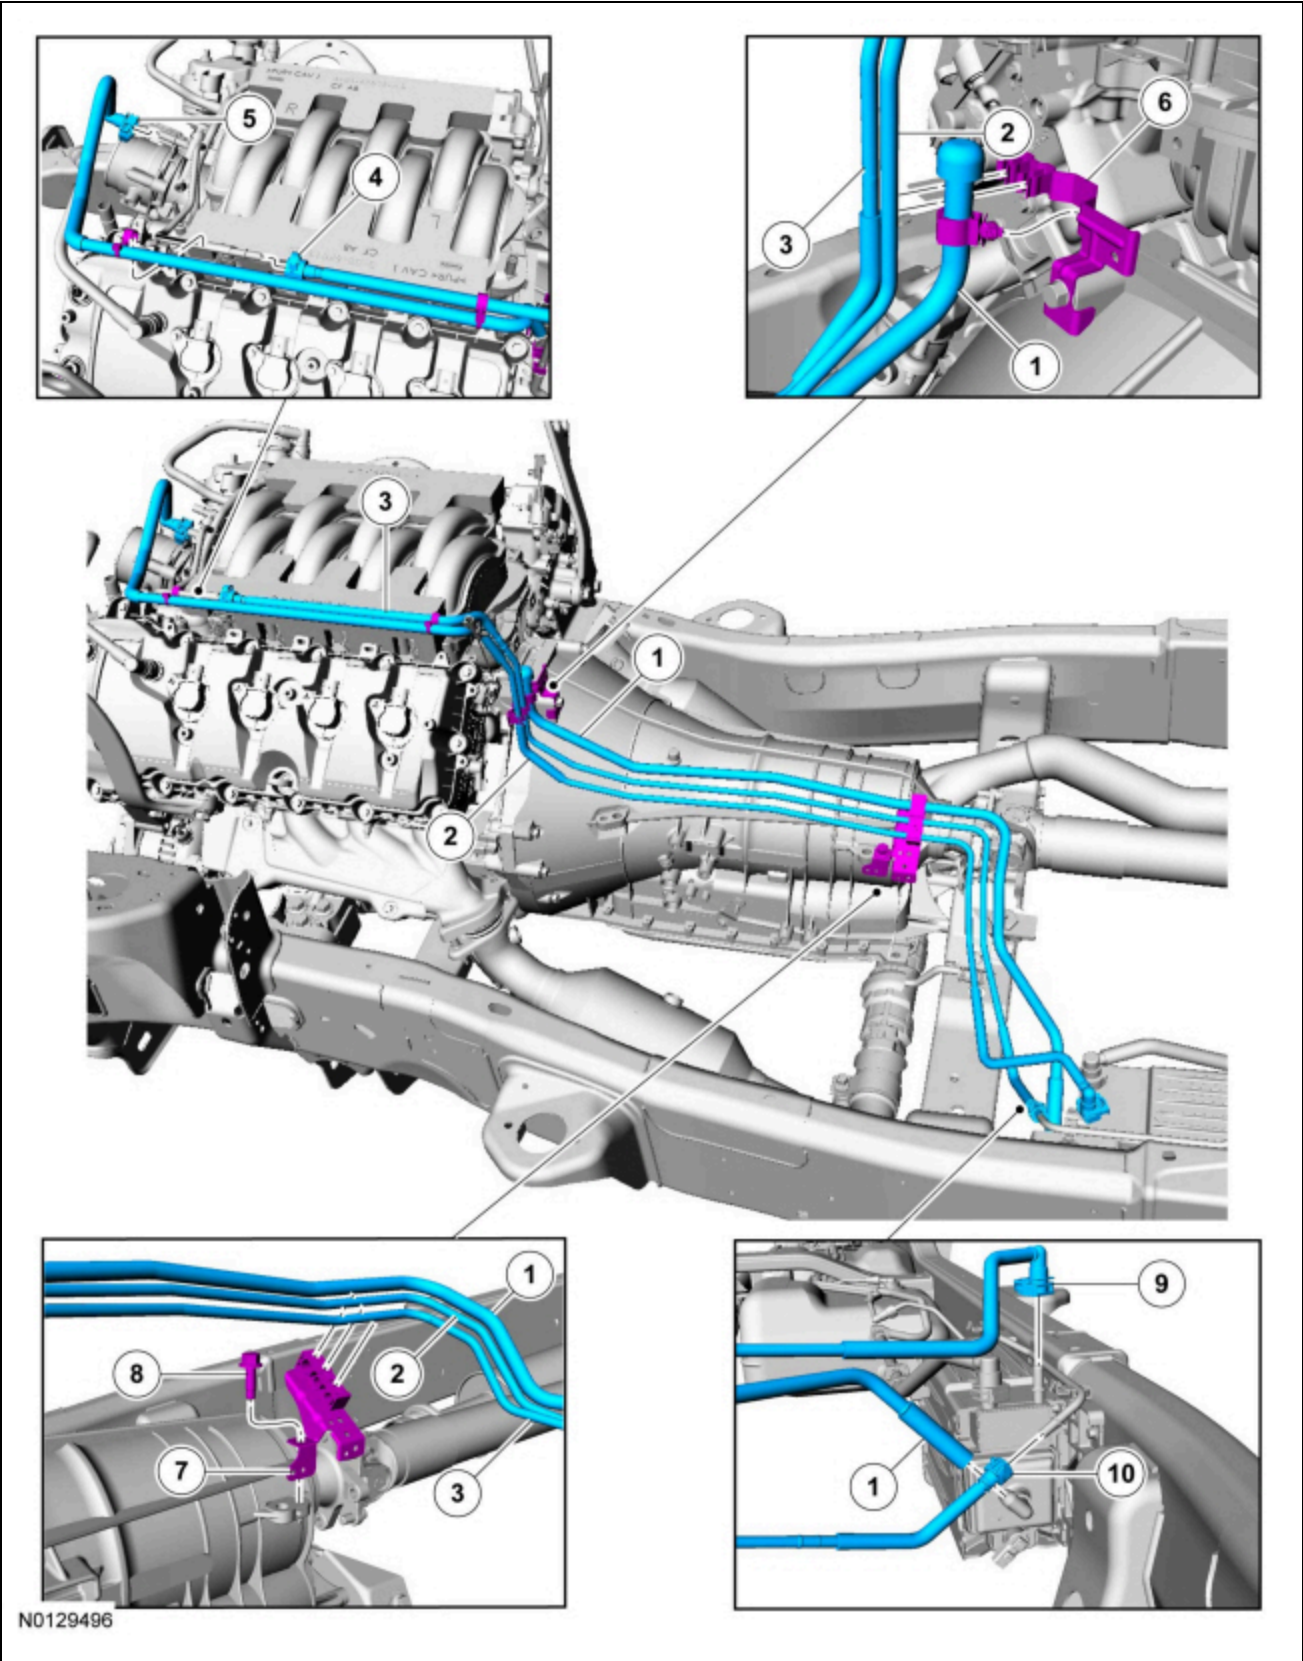

Item	Part Number	Description
1	9J338 9J338	Fresh air tube
2	9D676 9D676	Fuel vapor tube
3	9J280 9J280	Front fuel supply tube
4	—	Fuel vapor tube-to-Evaporative Emission (EVAP) canister purge valve quick connect coupling (part of 9D676)
5	—	Front fuel supply tube-to-fuel rail quick connect coupling (part of 9J280)
6	2S284 2S284	Front fuel supply tube, vapor tube and fresh air tube transmission bellhousing bracket
7	9D319 9D319	Front fuel supply tube, vapor tube and fresh air tube rear bracket
8	W715531 W715531	Front fuel supply tube, vapor tube and fresh air tube rear bracket bolt
9	—	Fuel vapor tube-to-EVAP canister quick connect coupling (part of 9D676)
10	—	Front fuel supply tube-to-center fuel supply tube quick connect coupling (part of 9J280)

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

WARNING: Remove the fuel filler cap slowly. The fuel system may be under pressure. If the fuel filler cap is venting vapor or if you hear a hissing sound, wait until it stops before completely removing the fuel filler cap. Otherwise, fuel may spray out. Failure to follow these instructions may result in serious personal injury.

All vehicles

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Release the fuel system pressure. For additional information, refer to Section 310-00.
3. Disconnect the battery ground cable. For additional information, refer to Section 414-01.

3.5L Gasoline Turbocharged Direct Injection (GTDI)


4. Remove the fuel injection pump noise insulator shield.
5. Disconnect the front fuel supply tube-to-fuel injection pump quick connect coupling. For additional information, refer to Section 310-00.

3.7L, 5.0L (4V), 6.2L (2V) engines


6. Disconnect the front fuel supply tube-to-fuel rail quick connect coupling. For additional information, refer to Section 310-00.

All vehicles

7. Disconnect the fuel vapor tube-to-Evaporative Emission (EVAP) canister purge valve quick connect coupling. For additional information, refer to Section 310-00.
8. Move the locking tab up and disconnect the selector lever cable from the manual lever ball stud.

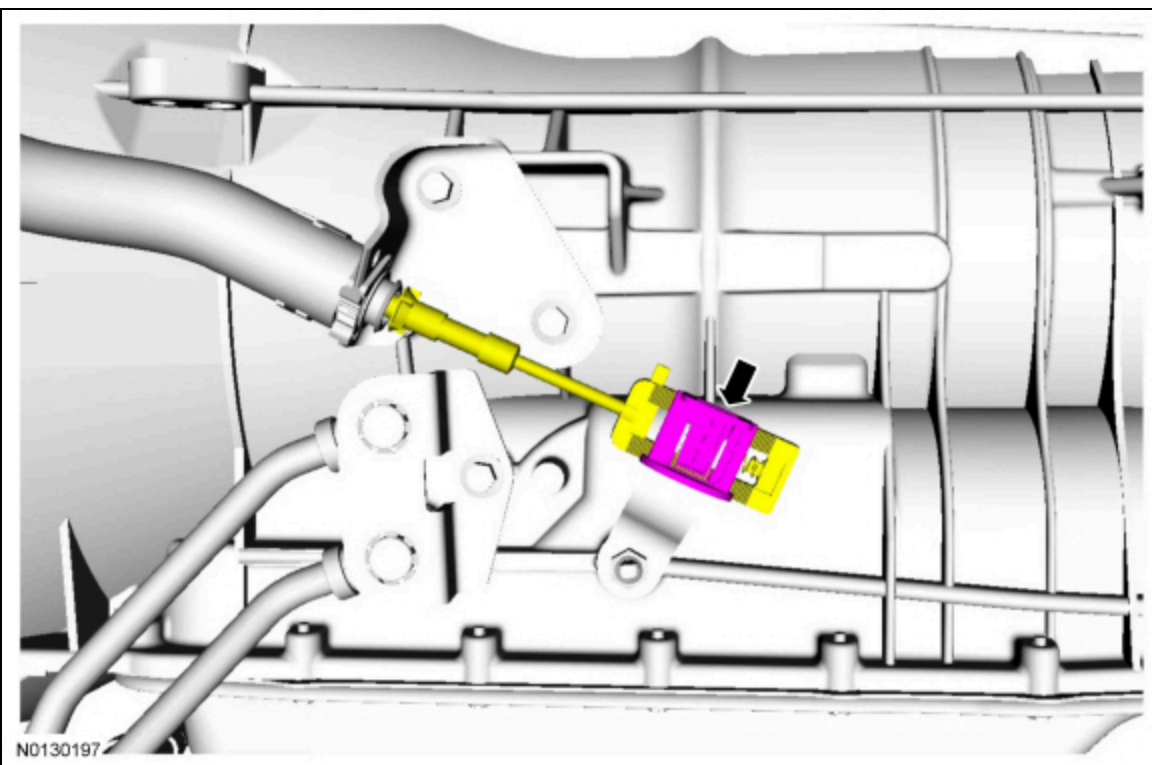

9. Remove the selector lever cable bracket and 2 bolts.
 - To install, tighten to 48 Nm (35 lb-ft).

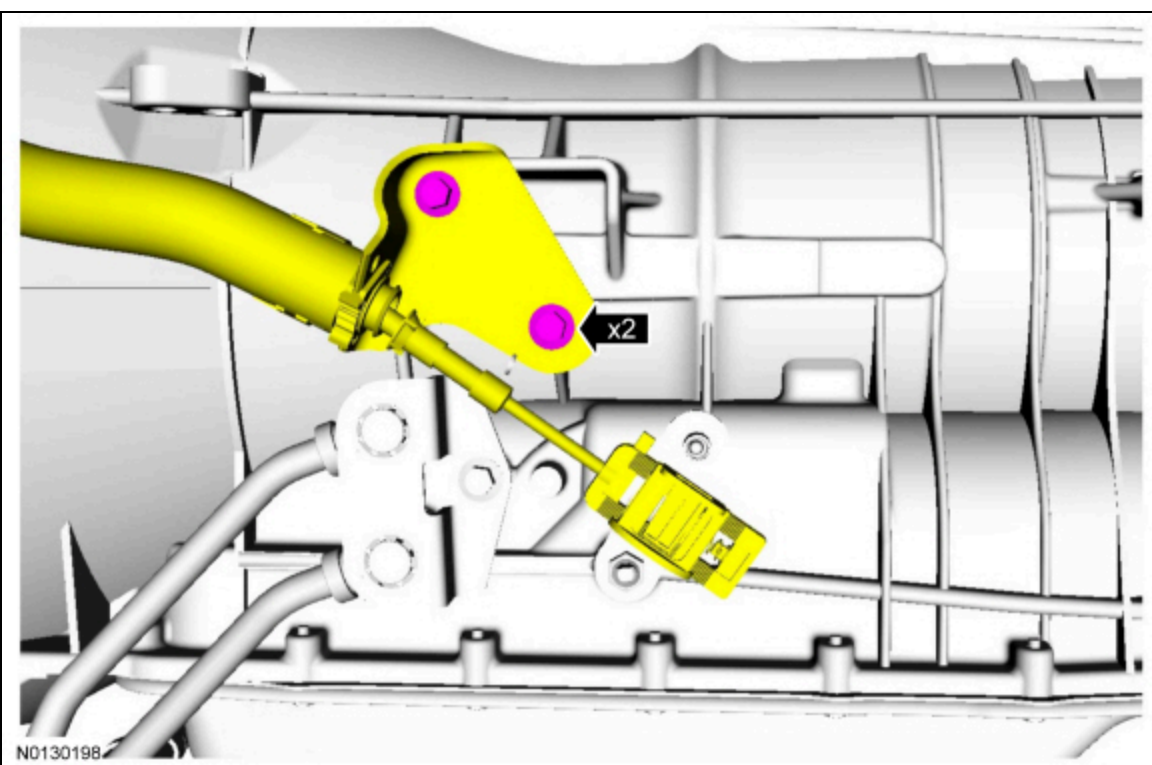

10. If equipped, remove the transfer case shift lever. For additional information, refer to Section 308-07B.
11. Disconnect the vapor tube-to-EVAP canister quick connect coupling. For additional information, refer to Section 310-00.

12. Disconnect the fresh air tube from the ~~EVAP~~ EXAP canister vent solenoid and dust separator assembly.
13. Disconnect the front fuel supply tube-to-center fuel supply tube quick connect coupling. For additional information, refer to Section 310-00.
14. If necessary, remove the front fuel supply tube, vapor tube and fresh air tube bracket bolt at the rear of the transmission.
 - To install, tighten to 35 Nm (26 lb-ft).
15. Unclip the front fuel supply tube, vapor tube and fresh air tube from the bracket at the rear of the transmission.
16. Unclip the front fuel supply tube and vapor tube from the bracket at the transmission bellhousing.
17. Remove the front fuel supply tube from the vehicle.
18. Remove the vapor tube from the vehicle.
19. Unclip the fresh air tube retainer from the bracket at the transmission bellhousing and remove from the vehicle.
20. To install, reverse the removal procedure.