

Fuel Tank Filler Pipe



Removal and Installation

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.


WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

WARNING: When handling fuel, always observe fuel handling precautions and be prepared in the event of fuel spillage. Spilled fuel may be ignited by hot vehicle components or other ignition sources. Failure to follow these instructions may result in serious personal injury.

WARNING: Remove the fuel filler cap slowly. The fuel system may be under pressure. If the fuel filler cap is venting vapor or if you hear a hissing sound, wait until it stops before completely removing the fuel filler cap. Otherwise, fuel may spray out. Failure to follow these instructions may result in serious personal injury.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
3. Remove the driveshaft. For additional information, refer to Section 205-01.
4. Loosen the worm gear clamp and disconnect the fuel tank filler pipe from the fuel tank.
 - To install, tighten to 4 Nm (35 lb-in).
5. Disconnect the fuel tank filler pipe-to-Fuel Tank Pressure (FTP) sensor and vapor tube assembly quick connect coupling. For additional information, refer to Section 310-00.
6. Loosen the fuel tank filler pipe-to-body worm gear clamp.
 - To install, tighten to 5 Nm (44 lb-in).

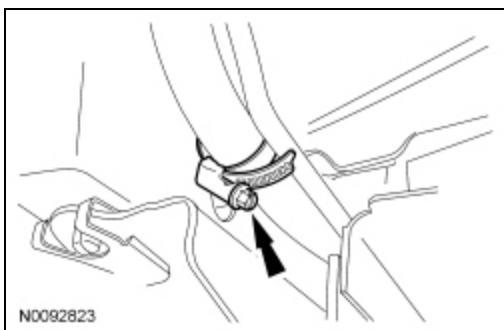

7. Remove the fuel tank filler pipe information bezel.
8. Remove the 3 screws from the fuel tank filler pipe and remove the fuel tank filler pipe.

- To install, tighten to 3 Nm (27 lb-in).

9. To install, reverse the removal procedure.