
Configurable BlueBoat simulator

Same initial state and motor-percentage tape across cumulative model stages. Seed 792.

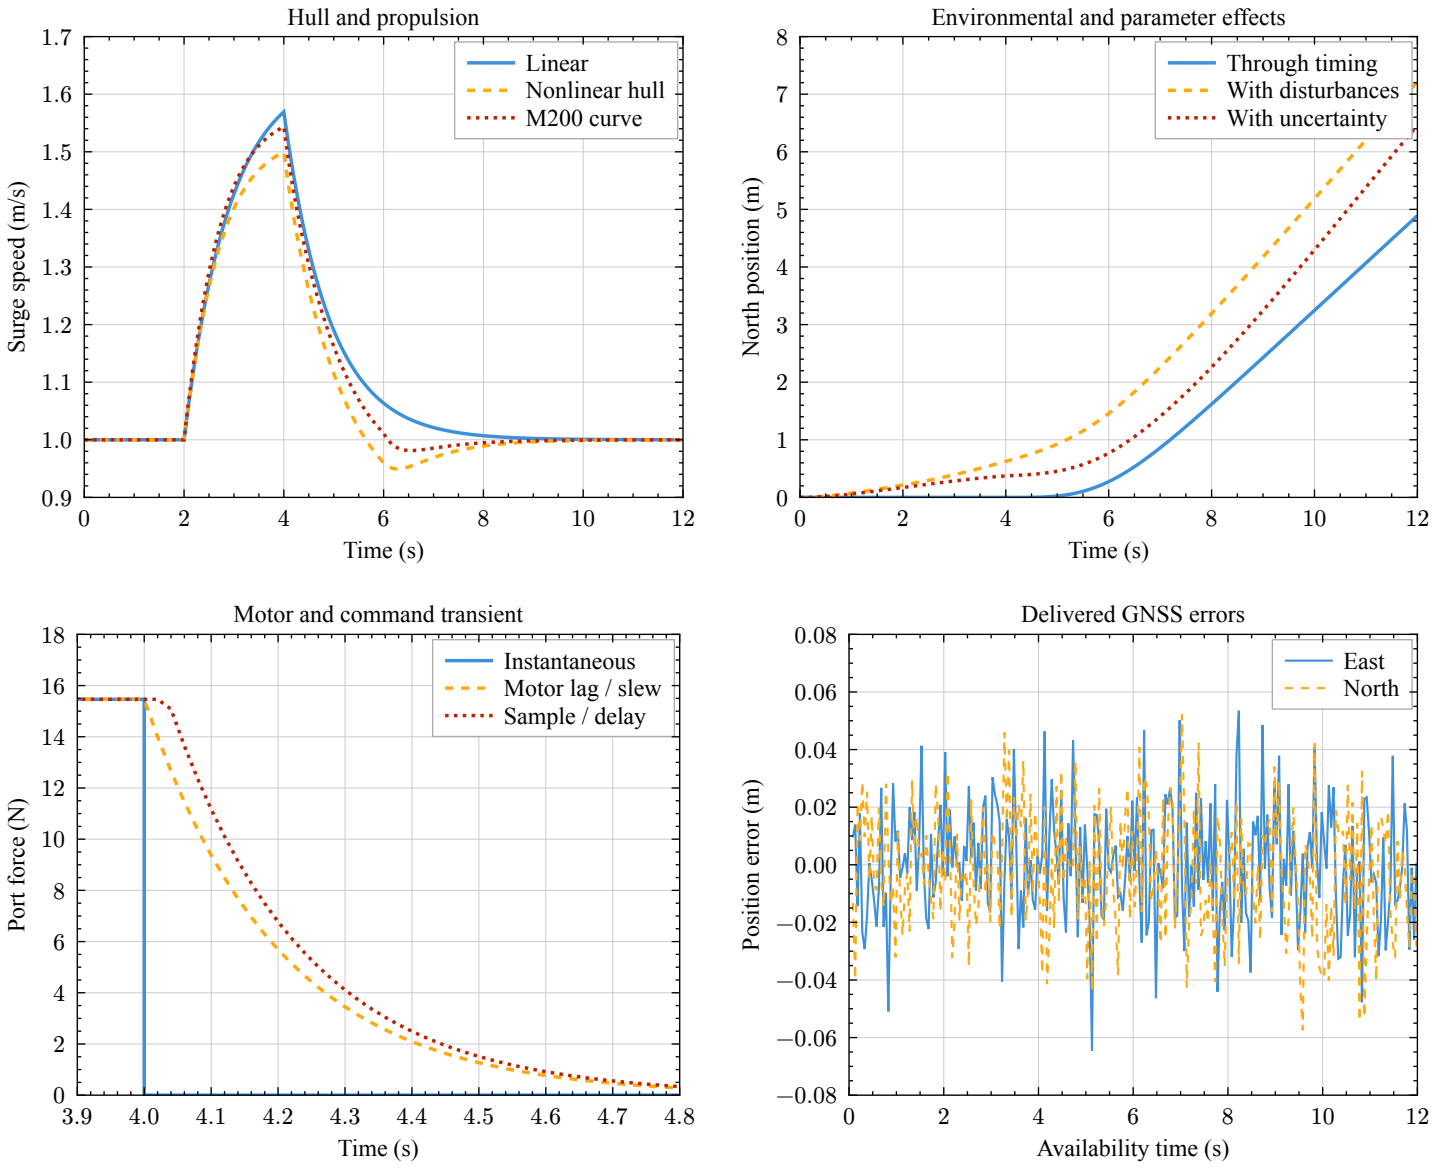

The input starts at the 1 m/s trim, adds 20 percentage points to both motors at 2 s, commands differential thrust at 4 s, and returns to trim at 6 s. The larger excitation reveals departures from the local linear model. The force panel expands the 4 s command transition.

GNSS errors compare measured antenna position with antenna truth at acquisition; points appear at delivery time. Sensor errors do not change this open-loop path. Wind, motor timing, and sensor parameters retain the report's stated assumptions.

The curves show the effect of model detail. Measured boat logs are required to establish improved prediction; controller tracking is a subsequent experiment.