
USER MANUAL

VMI Analysis GUI

Velocity-map imaging photoelectron analysis
and the NiceGUI web interface

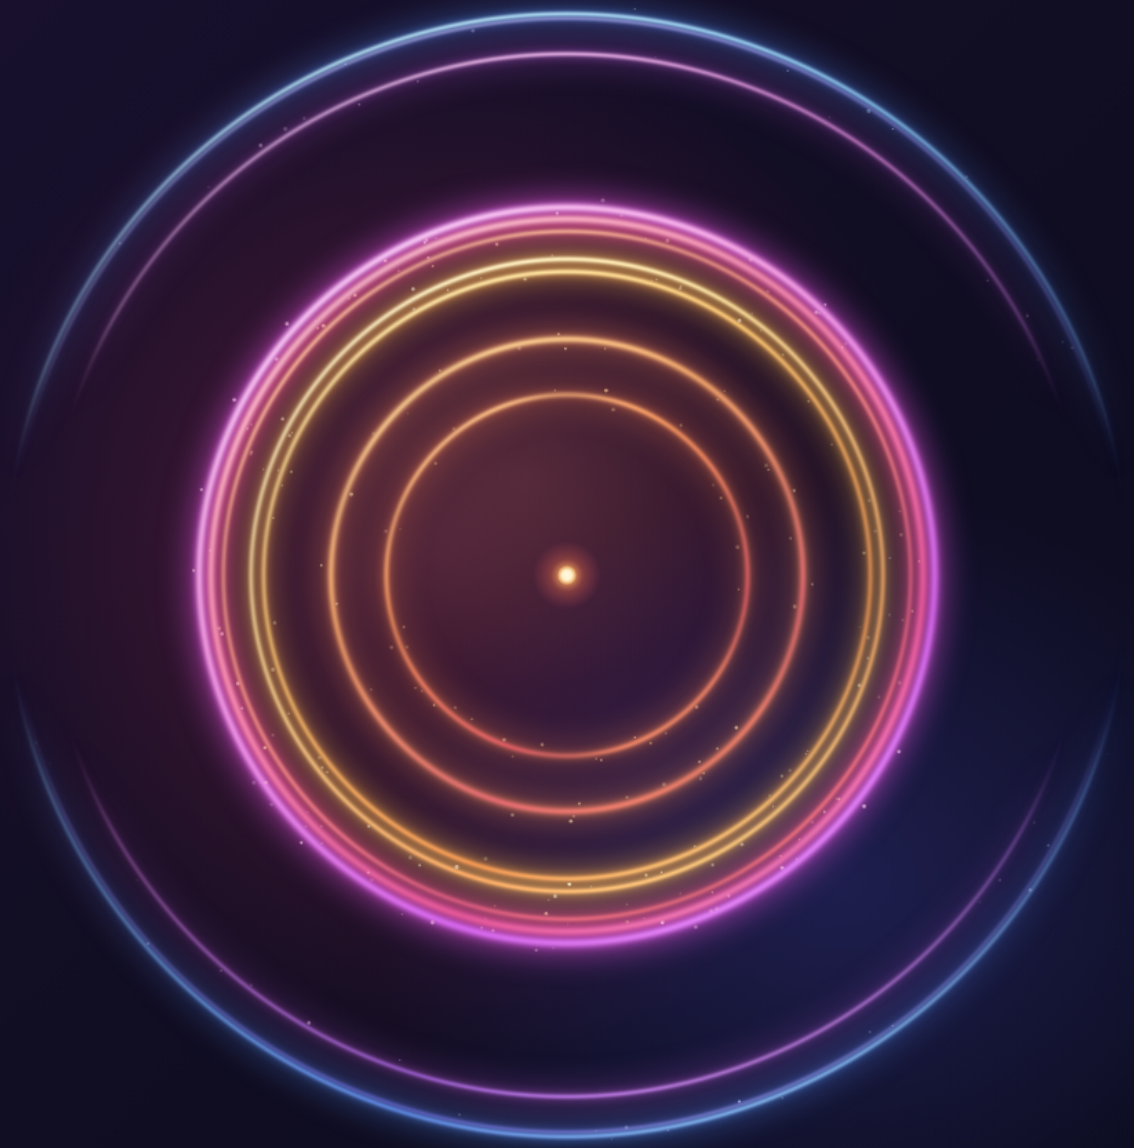

Application version 0.1.0
Document revision 1.0

Date November 13, 2026
License Apache License, Version 2.0

This manual describes the panels, input fields, processing stages, output files, and operating constraints of the application. Bundled CPBASEX uses the MIT License.

Contents

1 Introduction **3**
1.1 The analysis chain . . . 3
1.2 How this manual is organised . . . 3

2 Installation and first run **3**
2.1 Requirements . . . 4
2.2 Install . . . 4
2.3 Start the interface . . . 4
2.4 A first end-to-end run . . . 4
2.5 What to check after the first run . . . 4

3 The shared interface **5**
3.1 Window layout and tabs . . . 5
3.2 The Run/Stop control . . . 5
3.3 Job queue, concurrency and file reservations . . . 5
3.4 The log console and progress . . . 6
3.5 The results area . . . 6
3.6 The local file picker . . . 6
3.7 The image inspection overlay . . . 6
3.8 Saved settings . . . 6
3.9 Server lifecycle, ports and reconnecting . . . 7
3.10 Connect from Windows to a Linux host . . . 7

4 Data you must provide **8**
4.1 Camera files (`RAW-*.h5`) . . . 8
4.2 GMD timestamp file (`current-time-both.txt`) . . . 8
4.3 Dark frames . . . 8
4.4 Circularization calibration files . . . 8
4.5 Workspace and output folders . . . 9

5 Panel reference **9**
5.1 GMD Map . . . 9
5.2 Movie . . . 10
5.3 Dark Frame . . . 11
5.4 Accumulate . . . 12
5.4.1 Histogram previews . . . 13
5.5 Centroiding . . . 14
5.6 Binning . . . 18
5.7 Trig Calibration . . . 19
5.8 Circularize . . . 22
5.9 PES / Abel inversion . . . 23
5.10 Pipeline . . . 24

6 Output files **26**

7 Energy calibration **26**
7.1 The Xe 4d reference . . . 26
7.2 Procedure . . . 27
7.3 Working with the spectrum file . . . 27

8 Command-line reference **27**
8.1 Conventions shared by all programs 28
8.2 Environment variables 28

9 Troubleshooting and constraints **28**

A Glossary **29**

B Formulas used by the pipeline **29**

1 Introduction

The application analyzes camera frames from velocity-map imaging (VMI) experiments. It can produce detector images, calibrated energy spectra, and angular anisotropy parameters (β). The repository provides:

- a set of standalone Python command-line programs that perform the numerical analysis, and
- a NiceGUI web interface with panels for individual tools and an ordered Pipeline job.

Supply your experiment data through the interface or on the command line. The Binning, PES, and Pipeline panels are immature and need restructuring. Their sections document the current behavior.

1.1 The analysis chain

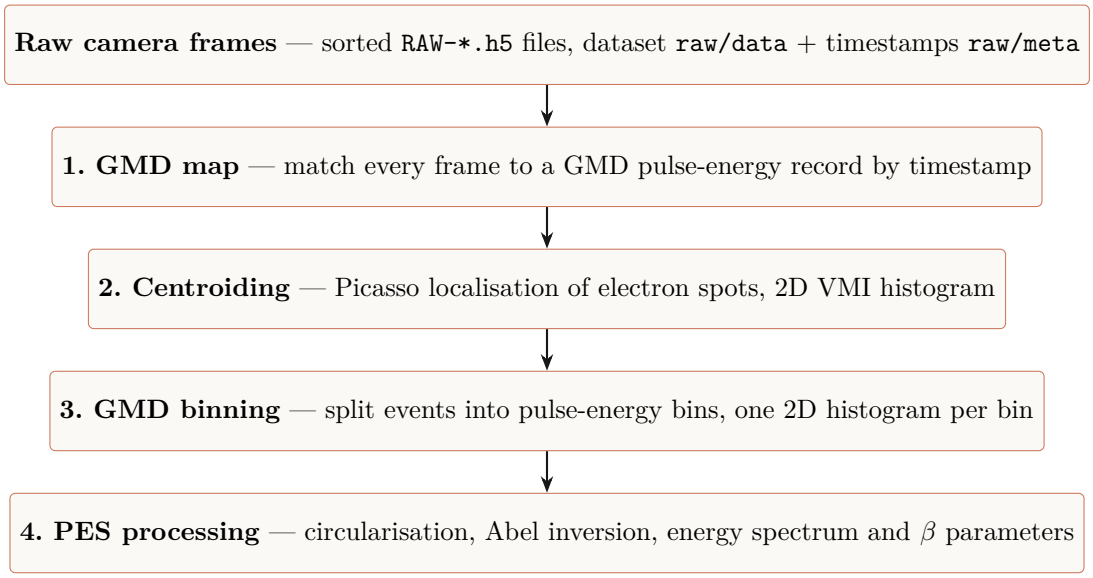


Figure 1: The four-stage analysis pipeline. Stages 1–4 are available as individual panels and as a single Pipeline run.

Run each stage from a terminal or from the web interface. The job panels launch the command-line programs as subprocesses. Trig Calibration runs interactive remapping and fitting in the web process.

1.2 How this manual is organised

Section 2 explains installation, starting the interface, and a first end-to-end run. Section 3 describes behaviour shared by every panel: the window layout, the Run/Stop control, the job queue, the log console, the file picker, the image-inspection overlay, and saved settings. Then Section 4 describes the files the user must supply. Section 5 is the reference: one subsection per panel, with every field and button. Sections 6 and 7 explain the files produced and the energy calibration procedure, and Sections 8–9 cover command-line use and troubleshooting. The appendices hold a glossary and the main formulas.

Conventions used in the field tables: *verbatim* labels reproduce the interface text exactly; "saved key" is the name under which the value is persisted (Section 3.8); "CLI flag" is the equivalent command-line argument; "default" is the value shown on a fresh installation, i.e. before any saved setting exists.

2 Installation and first run

2.1 Requirements

- Python 3.12 or newer and `uv`, the project manager used for installation and for launching the application.
- Optional: `ffmpeg` on the system path, needed only to write MP4 movies in the Movie panel (otherwise a GIF is written).
- Optional: MATLAB, needed only for the CPBASEX inversion backend in PES. The default PyAbel backend is pure Python.

2.2 Install

```
git clone <repository-url>
cd vmi-analysis-gui
uv sync
```

`uv sync` creates the virtual environment and installs every dependency, including the web interface. The package is installed in editable mode, so later source edits take effect without reinstalling.

2.3 Start the interface

```
uv run vmi-analysis
```

The application serves `http://localhost:13517` and opens a browser. Set `VMI_GUI_PORT` to use another port and `VMI_GUI_NO_SHOW=1` to suppress the browser window. If the port is busy, the program prints a suggested free port with ready-to-paste commands and exits; it does not switch automatically.

Each analysis stage can also be run without the interface: `uv run python -m vmi_analysis.<module> --help` lists the options of every program (Section 8).

2.4 A first end-to-end run

For a single-image distortion check, run Centroiding first. Open its raw VMI image in Trig Calibration. Fit and accept rings. Send the calibration to Circularize. Compare the two polar views after the run.

The following sequence uses the current Binning and PES panels.

1. **GMD Map.** Choose the folder of HDF5 files, its HDF5 pattern (`RAW-*.h5` by default, or `*RAW-*.h5` when names have a prefix before `RAW-`), and the GMD timestamp file; choose an output map path, and Run. The result is a frame-to-GMD map.
2. **Centroiding.** Choose the same HDF5 folder and an output directory. First tick *Tuning mode only*, enter a tuning frame index or leave it blank for a random frame, and run to inspect detection. Adjust box size or minimum net gradient if spots are missed or noise dominates. Then untick it and run the full batch. Expect a checkpoint, a 2D histogram, and summary figures.
3. **Binning.** Choose the checkpoint, the GMD map, the output directory, the threshold values, and the weighting mode. Run to produce one 2D histogram per GMD bin.
4. **PES.** Put the two circularisation calibration files in `circularization/`, keep the PyAbel backend, and Run. The results are energy spectra, anisotropy parameters, and an archive of all arrays.

To run the same stages in one job, open *Pipeline*. Set the dataset, GMD timestamp file, and map output. Click *Run pipeline*. The job runs stages 1–4 in order. With *Skip stages whose outputs exist* selected, the job checks for the declared output files before each stage.

2.5 What to check after the first run

- The GMD map has two header lines plus one row per frame; the console reports the time-difference statistics and the share of frames within 20 and 40 ms.

- The Centroiding tuning figure shows localisations on real spots, and the final summary shows a VMI image with a physically plausible spectrum.
- Binning produced the expected number of `.npy` files (thresholds plus one) with the expected suffix for the chosen weight mode.
- PES produced three overview figures and a `.npz` archive. PES plots use energy channels with the current fixed alpha of 1. Centroiding has its own alpha field (Section 7).

3 The shared interface

All panels follow the same pattern: a section heading with a one-line description, a cream feature card holding the parameter form, one Run/Stop control, a dark log console, and a results area below it. This section describes the parts that behave identically everywhere; the panel-specific fields are in Section 5.

3.1 Window layout and tabs

Open *Settings* to set the job limit or control shutdown after a disconnect. Use the same menu to save and load workflow files. The tab bar shows *GMD Map*, *Movie*, *Dark Frame*, *Accumulate*, and *Centroiding*. Open *More...* to access *Binning*, *Trig Calibration*, *Circularize*, *PES*, and *Pipeline*.

Every panel is built when the page loads and keeps its own run state, progress, log, and results. Switching tabs does not stop or restart work.

3.2 The Run/Stop control

Each job panel uses one button to start or stop its job. Trig Calibration uses separate controls for remapping, processing, and fitting. The job button reads *Run* when idle (*Run pipeline* in Pipeline). It changes to

- *Stop* while the panel's job is running,
- *Cancel queued* while it is waiting for a slot or for a file conflict to clear,
- a disabled *Stopping...* during cleanup.

Stopping a queued job removes it from the queue immediately. Stopping a running job terminates the whole subprocess tree (on Windows with `taskkill /T /F`), so the analysis program and its worker processes end together. Stopping one panel's job never stops another panel's job. The button never starts a second job from a stale click, and it returns to `Run` when the job finishes, fails, or is cancelled.

A job that is active when the page is reloaded is reattached by its panel from the job name, restoring its Run/Stop state, progress, and current log. A job that had already finished before the reload is not restored.

3.3 Job queue, concurrency and file reservations

All job panels share one queue. Open *Settings* to set *Maximum concurrent jobs*. Choose a value from 1 to 10. The default is 2. Running jobs continue when you lower the limit. The server saves the value for the next start.

The queue also enforces file safety. Each submitted command declares the files and directories it reads and writes. A job whose output overlaps another job's input or output waits, and shows a reason such as `Waiting for <job>: <path>` or *Waiting for a concurrent job slot.* Unrelated jobs can start in the free slots. Only one job per panel may be active at a time. Jobs launched by the Pipeline panel reserve the inputs and outputs of all four stages for the whole run. GMD Map can write a file inside a standalone Centroiding output directory when the map path is separate from the run's inputs and outputs.

The MATLAB/CPBASEX backend takes an exclusive lock because the MATLAB script uses a shared working file, so MATLAB jobs never overlap each other or a job writing the same directory.

3.4 The log console and progress

Every panel has a dark console under the form. It shows the exact command that was launched, prefixed with `[gui] $`, followed by the merged standard output and standard error of the program. Output is decoded as UTF-8 and streamed while the job runs; the console keeps the most recent 2000 lines, and the panel refreshes it about every 0.7 seconds.

Lines in the standard tqdm form `NN% |...` drive the progress bar. Some stages (for example Circularize and PES) do not print that form, so their bar stays empty while the spinner indicates activity.

3.5 The results area

Most job panels show results below the console after a successful run. Circularize shows its polar comparison below *Run*, inside the settings card. It shows the corrected Cartesian image below the console. When a job fails, read the console for error details. Results can include

- interactive Plotly figures (hover for values, drag to zoom, choose *Pan*, double-click or *Reset axes* to restore),
- images and videos served from local paths, with a click-to-inspect overlay (Section 3.7),
- *open containing folder* buttons, and
- the exact output paths and a summary of what was written.

View saved result(s) reopens existing results on panels that offer it. Use *Clear output(s)* to delete the listed files after confirmation. Trig Calibration has separate clear buttons for the calibration and session files. Pipeline clears files written during the last selected run in this server session, excluding stages that it skipped. Jobs can reserve files and prevent deletion while they run or wait in the queue.

3.6 The local file picker

Every path field has a round folder button that opens a server-side file picker. The application and the data are on the same machine, so nothing is uploaded; the dialog browses the local disks directly.

The dialog title matches the field: *Select file*, *Select folder*, or *Save as*. It has an up-arrow button, the current path, and a *Drive* dropdown listing the available Windows drives. Folders are listed before files; dot-files are hidden; file and save modes apply the field's extension filter (for example `.txt`, `.npy`, `.h5`), while folder mode lists folders only. Long directories stop after 1000 entries with a note that more are not shown.

`New folder` creates a folder in the directory currently shown, then opens it. Names containing path separators, Windows-reserved characters, or reserved device names (`CON`, `NUL`, `COM1`, ...) are rejected, and an existing entry is never overwritten.

3.7 The image inspection overlay

Clicking any result image opens a dark full-screen overlay with the image and a toolbar: *Pan*, *Crop area*, +, −, *reset*, and ×. In *Pan* mode, drag to move and use the mouse wheel to zoom around the pointer. *Crop area* lets you drag a rectangle; on release the overlay keeps only that region, enlarged to fit. Repeated crops operate on the current preview, and *reset* restores the whole image. Escape cancels an active selection, or closes the overlay when no selection is active. Zooming and cropping are display-only: they never change the saved image or the analysis data.

3.8 Saved settings

Form values are stored server-side in `.nicegui/storage-general.json` inside the workspace. Editing a field saves it immediately, even without clicking Run; the values survive a server restart and are shared by every browser connected to the same server. Job submissions take a snapshot of the inputs, so editing a form after starting a job does not change that job or where its results appear.

Saved keys follow the pattern `<panel>.<field>` and are listed in the field tables of Section 5. Some panels derive initial values from another panel's saved settings (for example PES suggests the saved Centroiding output directory). Legacy `centroiding/config.toml` values are migrated once, read-only, for Centroiding and Binning; no GUI job passes a configuration file to a script.

Choose *Save workflow* in *Settings*. The JSON file includes saved panel fields and their defaults. It stores file paths and display settings, including the polar percentile limits. Choose *Load workflow* to restore those values. Save a separate Trig Calibration session for applied processing, the selected band, masks, and fitted rings.

3.9 Server lifecycle, ports and reconnecting

Launch the application with `uv run vmi-analysis`; it serves `http://localhost:13517` and opens a browser. The environment variable `VMI_GUI_PORT` selects another port, and `VMI_GUI_NO_SHOW=1` suppresses the automatic browser window. If the port is unavailable the program prints an error plus a ready-to-paste suggestion for a free port; it does not switch ports on its own.

What happens when the last browser client disconnects is controlled by *Keep running on disconnect* in the header *Settings* panel (off by default). When it is on, the server stays available even when no jobs are running. Jobs continue after all browsers disconnect, and you can reopen the page to reattach. When the option is off, the server shuts down after the last browser disconnects and the grace period expires. The default grace period is 2 s. Set `VMI_GUI_SHUTDOWN_GRACE` to change it.

Choose *Settings* → *Stop server* and confirm to shut down the server for all browsers. You can also press `Ctrl+C` if you started the server from a terminal. Shutdown cancels queued jobs and waits for running process trees to terminate.

The browser reconnect window is `VMI_GUI_RECONNECT_TIMEOUT` seconds (default 30). It also sets the socket ping interval and timeout. The browser can reconnect within that window while the server remains up. Silent connection loss is detected through the socket pings. Both timing settings use their defaults for invalid or non-finite values.

3.10 Connect from Windows to a Linux host

The Linux host reads the datasets and runs the analysis. The Windows computer connects to the web interface through MobaXterm. You need the Linux host's LAN address and an authorized SSH account.

1. In the repository checkout on Linux, start the web server on the loopback interface:

   ```
   VMI_GUI_PORT=13517 VMI_GUI_NO_SHOW=1 uv run python -c \
     "from vmi_analysis.gui.app import main; main(host=\"127.0.0.1\")"
   ```

2. In MobaXterm on Windows, choose *Tunneling*, *New SSH tunnel*, then *Local port forwarding*. Set *Forwarded port* to `13517`, *Remote server* to `127.0.0.1`, and *Remote port* to `13517`. Set *SSH server* to the Linux host's LAN address, *SSH login* to your Linux username, and *SSH port* to `22` or the port configured on the host. Save and start the tunnel.

3. On Windows, open `http://127.0.0.1:13517` in a browser. Select datasets using their paths on Linux.

Use SSH keys for approved users and restrict SSH access to your LAN or private VPN. Keep port `13517` closed to inbound network traffic. On Windows, check the tunnel listener in PowerShell:

```
Get-NetTCPConnection -LocalPort 13517 -State Listen |
    Select-Object LocalAddress
```

Only loopback addresses (`127.0.0.1` or `::1`) should appear. The web interface uses the SSH tunnel for access and has no separate login.

Closing the tunnel disconnects the browser. With *Keep running on disconnect* on, you can restart the tunnel and reopen the page. If you start the server from an SSH terminal, leave that terminal open or run the server in `tmux` or as a Linux service.

4 Data you must provide

The repository contains **no experiment data**. Analysis paths are always supplied by the user through the interface or on the command line. This section describes the files the pipeline expects.

4.1 Camera files (`RAW-*.h5`)

A dataset is a folder of HDF5 files, usually named `RAW-*.h5`. Tools that scan a pattern default to `RAW-*.h5`; if the acquisition adds a prefix before `RAW-`, set the panel's *HDF5 pattern* to `*RAW-*.h5`. Each file holds two datasets:

Dataset	Shape	Content
raw/data	`(N, 1024, 1024) uint16`	Camera image frames.
raw/meta	`(N, 5) uint64`	Per-frame metadata, five columns.

The metadata columns are: 0 = frame counter, 1 = high-resolution hardware timestamp, 2 = status flag, 3 = Unix seconds, 4 = nanosecond offset, so the frame timestamp is `col3 + col4/1e9`. The camera and the free-electron laser both run at about 25 Hz. Some frames carry zeroed metadata (`col3 = col4 = 0`); their timestamps are meaningless and should be ignored when judging GMD matching quality.

The number of frames per file is typically about 126, but the pipeline reads `N` from the file, so other counts also work. Individual tools differ slightly in which files they scan (for example `RAW-*.h5` versus all `*.h5`); the panel reference notes this where it matters.

4.2 GMD timestamp file (`current-time-both.txt`)

GMD (gas monitor detector) binning and weighting need a text table of pulse energies with timestamps. The file has four whitespace-separated columns: index, timestamp, GMD value 1, GMD value 2. The GMD Map stage matches camera frames to the **second** column (0-based index 1) and copies both GMD values into its map.

4.3 Dark frames

A dark frame is a `.npy` array with the same shape as one camera frame. Dark Frame computes the array from dark acquisitions. Movie and Accumulate subtract the array when you supply it. In Centroiding, select the precomputed dark array and enable dark subtraction.

4.4 Circularization calibration files

The PES stage requires two per-experiment text files in `circularization/`:

`extracted-FOC100eV-20260710.txt` A Gascooke circularization software export: one block per fitted ring with a Gaussian centre (radius in pixels) and the trigonometric terms $\sin(n\theta)$, $\cos(n\theta)$ and their 1-σ uncertainties.

`reassignment-FOC100eV-20260710.txt` A two-column radial reassignment map `r_circ r_fixed`. For the reference dataset this was the identity map, so only the azimuthal terms act and any radial nonlinearity propagates into the energy axis.

Trig Calibration can create the extracted fit file. Supply the radial reassignment map separately if your experiment requires one. Circularize accepts the two paths as fields and uses an identity map when the reassignment field is blank. PES and the PES stage in Pipeline require both files under the exact names shown above.

4.5 Workspace and output folders

In a checkout the workspace is the repository root; an installed copy uses the launch directory unless `VMI_WORKSPACE_DIR` is set. The following locations are conventional:

Path	Created by	Purpose
centroiding/	user / GUI	Centroiding working data and default outputs
circularization/	user / GUI	Calibration files and PES results
.cache/vmi-analysis/	the GUI	Disposable previews, frame dumps, screenshots
.nicegui/	the GUI	Saved form settings
vendor/pbasex-matlab/	repository	Bundled MATLAB CPBASEX code

Check each panel for its output paths. Some tools use workspace defaults. The MATLAB backend also writes shared files in the CPBASEX checkout.

5 Panel reference

This section documents every panel in tab order. Each subsection gives the panel's purpose and the command-line module it launches, a table of every input field in user-interface order, the buttons and controls, what the results and log show, the output files, and panel-specific pitfalls.

Field tables use these columns: *Field* (the verbatim label), `Type and default` (widget kind and the value on a fresh installation), `Saved key` (the persistent setting name; "–" means the value is not saved), *CLI flag* (the equivalent command-line argument), and `Meaning`. Numeric values are raw counts, pixels, or seconds where stated. A cleared number field is usually sent as an empty value; where that fails, the table says so.

5.1 GMD Map

Purpose. Match every camera frame to its nearest GMD pulse-energy record by timestamp. The resulting map is required before GMD weighting (Accumulate) or GMD binning (Binning). The panel launches `vmi_analysis.gmd.build_gmd_map`.

Field	Type and default	Saved key	CLI flag	Meaning
HDF5 directory	folder, empty	`gmd_map.h5_dir`	*--h5-dir*	Folder scanned for the pattern below. Required.
HDF5 pattern	text, `RAW-*.h5`	`gmd_map.h5_pattern`	`--h5-pattern`	Glob inside the HDF5 directory; files are sorted by name. Use `*RAW-*.h5` when filenames have a prefix before `RAW-`.
`GMD timestamp file (current-time-both.txt)`	file, empty	`gmd_map.gmd_path`	`--gmd-path`	The GMD table (Section 4.2); column 2 is the timestamp, columns 3–4 are copied as GMD values. Required.
Output map file	save, `gmd_map_all.txt` in the workspace	`gmd_map.output_path`	`--output-path`	Destination map. It is overwritten without asking; its folder must already exist.
First N files (0 = all)	number, 0	`gmd_map.n_files`	*--n-files*	Analyse only the first *N* sorted files. 0 means all. A map built for a subset is valid only for that subset.

Buttons. *Run/Stop* submits the five values as job `GMD map`. *Clear output* asks for confirmation and deletes the output file so the next run rewrites it. *open containing folder* appears in the results and opens the output's folder in the file manager.

Results and log. On success the results show `Map written: <path> (<n> lines, <size> MB)`; the line count includes two `#` header lines. The map is a whitespace-separated text file with two

header lines and one row per frame:

```
frame_idx h5_file frame_in_file gmd_idx gmd_val1 gmd_val2 time_diff_ms
```

Indices are 0-based and `time_diff_ms` is signed. The console prints the number of GMD entries, the frame count, matching progress, time-difference statistics (mean, standard deviation, minimum, maximum and the fraction of frames within 20 ms and 40 ms), and a sequential check of the frame-to-GMD step.

Pitfalls. There is no resume: an existing map is overwritten silently. Matching is nearest-neighbour; exact ties pick the earlier GMD entry. Frames with zeroed metadata get timestamp 0 and match the first GMD entry, which pollutes the time-difference statistics but does not stop the run. An empty HDF5 folder produces a header-only map and still reports success, so check the line count. Clear output uses the current field value, not the last submitted path.

5.2 Movie

Purpose. Render the first N frames as a movie and inspect them frame by frame, for quality control of spot structure, background and detector artifacts. The panel launches `vmi_analysis.imaging.h5_play_frames_movie`; in the GUI it always runs headless, and with *Save movie file* unchecked it plays live in the page instead of writing a file.

Field	Type and default	Saved key	CLI flag	Meaning
HDF5 directory	folder, empty	`movie.h5_dir`	*--h5-dir*	Folder of HDF5 files; all `*.h5` files are used, sorted by name, frames in file order. Required. The folder name becomes the movie file name.
Frame dataset	text, `raw/data`	`movie.h5_dataset`	*--h5-dataset*	Dataset path inside each HDF5 file.
`Dark frame .npy (optional)`	file, empty	`movie.dark_path`	*--dark-path*	Subtracted from every frame before display; the result is clipped at 0 so a log scale is defined. Shape is not checked here.
Frames	number, 20	`movie.n_frames`	`--n-frames`	Total frames across files. 0 lists no frames and produces no movie.
Interval (ms)	number, 500	`movie.interval_ms`	*--interval-ms*	Playback delay, stream-dump pace, and (when the saved fps is 0) the saved frame rate. The in-page player clamps it to at least 40 ms.
Scale frames	number, 10	`movie.scale_frames`	*--scale-frames*	The first k frames define one fixed colour maximum for the whole movie, so brightness is comparable across frames. 0 breaks the estimate.
Colormap	text, `gray`	`movie.cmap`	`--cmap`	Matplotlib colormap name for the frame images.
Log scale	checkbox, off	`movie.log_scale`	*--log-scale*	Logarithmic colour normalisation instead of linear.
vmin fraction	number, 0.5	`movie.vmin_frac`	*--vmin-frac*	Lower colour limit as a fraction of the maximum.
vmax percentile	number, 99.9	`movie.vmax_pct`	*--vmax-pct*	Percentile of the first *Scale frames* used as the colour maximum.
Save movie file	checkbox, checked	`movie.save_movie`	*--save-movie* / `--no-save-movie`	Uncheck to preview frames without writing any movie or frame files. The next three fields apply when saving.
Movie output folder	folder, workspace `movies/`	`movie.movie_dir`	`--movie-dir`	Where the movie is written; created on demand. Disabled when not saving.
Format	select, `.mp4`	`movie.movie_ext`	*--movie-ext*	MP4 needs ffmpeg; the program writes a GIF instead when ffmpeg is unavailable. Disabled when not saving.
Saved fps (0 = playback)	number, 0	`movie.movie_fps`	*--movie-fps*	0 saves at the playback pace. Disabled when not saving.

Buttons and controls. *Run/Stop* submits job `Frame movie`. *Clear outputs* lists the saved movie files for the selected dataset name and the frame dumps linked to the dataset and output folder. Older dumps without dataset information remain on disk. The same button dismisses a completed live preview. In preview mode, *Pause* freezes the displayed frame while the job continues. Resume shows the latest available frame. The counter stops at the end of the run or when you click *Stop*. Saved runs include a frame slider and a button to open the movie's folder.

Results and log. Saved runs write frames to `.cache/vmi-analysis/movie_frames/<run>/frame_0000.png`, `frame_0001.png`, and so on. A saved movie is `<output folder>/<dataset folder name>.mp4` (or `.gif`). The console reports the fixed display scale and either preview progress or the saved output paths. The preview shows zero-based X and Y pixel axes and *frame N / total*, where the total is the number of frames available for the run.

Pitfalls. The movie name comes from the dataset folder's basename, so two datasets with the same folder name overwrite each other. Unlike GMD Map and Dark Frame, this panel enumerates *all* `*.h5` files, so extra files change frame ordering. The colour maximum comes from the first `Scale frames` frames only; later brighter frames saturate.

5.3 Dark Frame

Purpose. Compute a mean or median dark frame from a folder of dark HDF5 files and save it as `dark_{method}.npy`, so downstream tools can reuse it instead of recomputing. The panel launches `vmi_analysis.centroiding.compute_dark`.

Field	Type and default	Saved key	CLI flag	Meaning
Dark HDF5 directory	folder, empty	`dark.dark_dir`	*--dark-dir*	Folder of dark acquisitions. Required; an empty value makes the job fail immediately.
HDF5 pattern	text, `RAW-*.h5`	`dark.pattern`	*--pattern*	Glob used inside the dark folder; files are sorted by name.
Frame dataset	text, `raw/data`	`dark.dataset`	*--dataset*	Frame stack path inside each HDF5 file.
Method	select, `median`	`dark.method`	*--method*	`mean` uses a streaming running sum (low memory); `median` loads the selected frames and works in parallel (high memory). The method is part of the output file name.
Dark frame count (0 = all)	number, 2000	`dark.frames`	*--frames*	Number of frames to use; 0 means every frame of every matched file. With a positive value the file list is trimmed using the first file's frame count.
Output directory	folder, workspace `centroiding/`	`dark.out_dir`	`--output-dir`	Where the `.npy` and its info file are written; created if missing.

Buttons. *Run/Stop* submits job *Dark frame*. `Clear output` deletes `dark_<method>.npy` and `dark_<method>_info.txt` for the *currently selected* method only.

Results and log. The results show `Dark frame: <npy> -- mean=..., std=..., min=..., max=...`, a grayscale preview, and the contents of the info file. Outputs are `<output dir>/dark_<method>.npy` (float64) and `dark_<method>_info.txt` with the method, frame count, statistics, and computation time. The console reports the number of files found, progress and rate, and per-file read warnings.

Pitfalls. Every run recomputes and overwrites. There is no shape check against the science data; the dark frame must match the camera frame shape used downstream. `median` can consume a lot of memory. Switching the method leaves the other method's files in place.

5.4 Accumulate

Purpose. Sum thresholded, morphologically denoised frames into one image, optionally weighting each frame by GMD pulse energy. This is a quick-look tool; the Picasso path in Centroiding is the precise one. The panel launches `vmi_analysis.imaging.h5_accumulate_fast_gmd`, and also provides interactive histograms for a single frame and for an average of frames from randomly selected files (Section 5.4.1).

Field	Type and default	Saved key	CLI flag	Meaning
HDF5 directory	folder, empty	`accumulate.h5_dir`	*--h5-dir*	Required folder of `*.h5` files for accumulation and histogram previews.
`Output image (.txt)`	save, empty	`accumulate.output_path`	*--output-path*	Accumulated matrix (text) and the base name for the script's PNG. Unlike the CLI, the GUI has no default path: a blank value fails only after the whole computation, so set it first.
Threshold	number, 5	`accumulate.im_threshold`	*--im-threshold*	Pixels with value $\geq$ threshold are kept, after optional dark subtraction. Ignored in simple-sum mode.
Workers	number, 6	`accumulate.max_workers`	*--max-workers*	Worker processes; the program caps them at the number of files.
Frame limit (0 = all)	integer, 0	`accumulate.frame_limit`	`--frame-limit`	Processes up to the first N frames in filename order and frame order within each file. Zero processes all frames. Use a fresh output path or clear the result when changing the limit.
Denoise (2×2 opening)	checkbox, on	`accumulate.do_denoise`	*--do-denoise* / `--no-do-denoise`	Applies a 2×2 morphological opening to each threshold mask before summing, removing isolated pixels. Ignored in simple-sum mode.
Simple sum (no threshold)	checkbox, off	`accumulate.simple_sum`	*--simple-sum*	Skips thresholding and denoising. The panel disables both controls and keeps their saved values. Dark subtraction and GMD weighting still apply.
`Dark frame .npy (optional)`	file, empty	`accumulate.dark_path`	*--dark-path*	Subtracts the dark frame before thresholding and weighting in Accumulate. The previews have a separate checkbox.
Subtract dark frame in previews	checkbox, on	`accumulate.histogram_subtract_dark`	none (GUI preview)	Applies the selected dark frame to both histogram previews. A blank dark-frame field makes this setting inactive.
Histogram X min	number, blank	`accumulate.histogram_x_min`	none (GUI preview)	Lower bound in pixel counts. Blank uses the data range.
Histogram X max	number, blank	`accumulate.histogram_x_max`	none (GUI preview)	Upper bound in pixel counts. Blank uses the data range.
Bin width (counts)	number, blank	`accumulate.histogram_bin_width`	none (GUI preview)	Width of each bin in pixel counts. Blank uses 160 bins.
Frame index (0-based)	number, blank	`accumulate.frame_index`	none (GUI preview)	Global zero-based index for one frame. A blank field selects a random frame. The panel saves the field on edit.
Files to average	whole number, 1	`accumulate.histogram_file_count`	none (GUI preview)	Number of distinct HDF5 files to sample for the average.
GMD weighting	checkbox, off	`accumulate.enable_gmd`	*--enable-gmd*	Enables per-frame GMD weights. The map and weight range are still sent when off, but the program ignores them.

Field	Type and default	Saved key	CLI flag	Meaning
GMD map file	file, workspace `gmd_map_all.txt`	`accumulate.gmd_map_path`	`--gmd-map-path`	Map produced by the GMD Map panel. Only the frame index and GMD value 1 columns are used.
Weight min	number, 0.0	`accumulate.gmd_w_min`	*--gmd-w-min*	Lower weight bound; frames below it get weight 0 (discarded).
Weight max	number, 4.0	`accumulate.gmd_w_max`	*--gmd-w-max*	Upper weight bound; frames above it get weight 0. The filter is active when *either* bound is above 0, so the default pair `does` filter. Set both to 0 to disable filtering.
Colormap	select, Viridis	`accumulate.colormap`	none (display)	Colour scale for the interactive image and live preview. Two selects (above the live figure and above a saved result) share this one saved key.

Buttons. *Run/Stop* submits job *Accumulate*. *Histogram frame* and *Histogram average* open the previews described in Section 5.4.1. *View saved result* re-renders the file at the current output path without rerunning. *Clear output* deletes the `.txt` and its `.png` so the next run recomputes. `open containing folder` and a *Saved PNG* expansion appear with results.

Results and log. During a run, the panel shows the live image below the console. The program writes a partial `.npy` after every 25 completed files. Small datasets may finish before a preview appears. On success the results show the interactive accumulated image with the *Colormap* selector and hover counts. Outputs are the chosen `.txt`, its sibling `.png`, and the disposable partial file `.cache/vmi-analysis/accum_live_*.npy`. The console reports the dark-frame status, GMD weighting status, the weight filter range, the processing rate and the sum of counts.

Pitfalls. *Resume skip:* if the output `.txt` already exists, the program skips the accumulation and only replots (*[Resume] ... skipping accumulation*); use *Clear output* or a new path to force a recomputation. GMD weighting corrects yield, never image shape. Frames missing from the map keep weight 1.0, so a partial map built with *First N files* silently leaves later frames unweighted. Threshold units are raw ADC counts unless a dark frame is set, in which case they apply to dark-subtracted values.

5.4.1 Histogram previews

Expand *Histogram previews* to see the controls and plots. The section starts collapsed. Both plots use a logarithmic count axis. Hover over a bar for its pixel-value interval and pixel count, or drag to zoom.

- **Single frame.** Enter a global 0-based index, or leave it blank to choose a frame uniformly at random. The index follows file name order, then frame order within each file. Click *Histogram frame*. The caption identifies the file and frame.
- **Average.** Set *Files to average* and click *Histogram average*. The preview randomly chooses that many distinct files and calculates a pixel-by-pixel mean across every frame in them. Each frame contributes equally. The caption reports the file and frame counts.
- **Dark subtraction.** Select a dark `.npy` and check *Subtract dark frame in previews* to apply it to either plot. The plots retain negative pixel values after subtraction. Clear the checkbox to preview raw values while keeping the file selected for the Accumulate run.
- **Range and binning.** Both previews use the same X limits and bin width. Pixels outside the chosen X range are excluded from the histogram. A custom bin width may leave a narrower final bin at X max. Click the corresponding histogram button again to apply changes. *Hide* collapses that plot.
- **Console.** The Accumulate console reports when each preview starts, its source and elapsed time on completion, and any errors.

Thresholding, denoising, and GMD weighting apply only to the accumulation job.

5.5 Centroiding

Purpose. Localise electron spots in the selected frames with Picasso, build the 2D VMI histogram, optionally invert it, and produce the photoelectron spectrum. The panel launches `vmi_analysis.centroiding.process_andor_vmi_PICASSO_v5_h5_batch` with the working directory `centroiding/`. Settings are saved automatically: each edit is stored immediately, and Run validates a snapshot before submitting, so an invalid value blocks the run but stays visible in the form.

The form shows *Paths and detection*, *Processing*, *Histogram*, and *GMD normalization*. Expand *Advanced Options* for camera and fitting settings. Expand *Energy Calibration and Spectrum Plot* for Xe fitting and spectrum axes. Both sections start collapsed. The saved keys below use the prefix `centroid.`.

Paths, detection and fitting

Field	Type and default	Saved key	CLI flag	Meaning
HDF5 directory	folder, empty	`vmi_picasso.h5_dir`	*--h5-dir*	Dataset folder; combined with the file pattern to find frames. Required: a blank value fails with a validation error. Relative paths resolve from `centroiding/`.
HDF5 pattern	text, `RAW-*.h5`	`vmi_picasso.h5_pattern`	*--h5-pattern*	Glob inside the directory; files are processed in sorted order and the global frame index runs across all of them.
Frame dataset	text, `raw/data`	`vmi_picasso.h5_dataset`	*--h5-dataset*	Frame stack inside each HDF5 file, expected `(N, H, W)` `uint16`. Also read from dark files.
Metadata dataset	text, `raw/meta`	`vmi_picasso.h5_meta`	*--h5-meta*	Kept for command-line compatibility; the current script does not read metadata. GMD values always come from the map file.
GMD map file (empty = raw/meta)	file, empty	`vmi_picasso.gmd_map_path`	`--gmd-map-path`	Frame-to-GMD table, used only when GMD weighting is on. The label is misleading: an empty or missing file produces a warning and all event weights become 1.0; there is no fallback to `raw/meta`.
`Pre-computed dark .npy`	file, empty	`vmi_picasso.dark_file`	*--dark-file*	Required when dark subtraction is on. Use the array from the Dark Frame panel or an equivalent precomputed array. Relative paths are joined to `centroiding/`.
Output directory	folder, `vmi_output`	`vmi_picasso.output_dir`	*--output-dir*	Directory for every output (created if missing). A relative value is resolved under `centroiding/`, so the default is `centroiding/vmi_output`.
Checkpoint filename	text, `vmi_results_raw.h5`	`vmi_picasso.checkpoint_file`	`--checkpoint-file`	Name inside the output directory. If the file exists, the batch *skips localisation* and rebuilds the histogram and summary from it (see the pitfalls).
Box size (odd)	number, 5	`vmi_picasso.box_size`	*--box-size*	Picasso box side in camera pixels: local-maximum search and fit cut-out. Must be an odd integer of at least 3. Larger tolerates larger spots but mixes neighbours and slows fitting.
Min net gradient	number, 400.0	`vmi_picasso.min_net_gradient`	*--min-net-gradient*	Detection threshold passed to Picasso's `identify`, in camera counts. Too high loses dim events; too low floods the fit with noise. The tuning check plots its histogram with this value marked.

Field	Type and default	Saved key	CLI flag	Meaning
Camera baseline	number, 0.0	`vmi_picasso.camera_baseline`	*--camera-baseline*	ADU offset removed in the counts-to-photons conversion. Independent of dark subtraction.
Camera sensitivity	number, 1.0	`vmi_picasso.camera_sensitivity`	*--camera-sensitivity*	Electrons per ADU used in the photon conversion.
Camera gain	number, 1.0	`vmi_picasso.camera_gain`	*--camera-gain*	Gain divisor in the same conversion; use 1.0 for a non-multiplying sensor.
Camera QE	number, 0.9	`vmi_picasso.camera_qe`	*--camera-qe*	Passed to Picasso's camera information. With the Picasso version currently pinned by this project the quantum-efficiency term is not applied, so the value has no effect on results.
MLE convergence	number, 0.1	`vmi_picasso.mle_convergence`	*--mle-convergence*	MLE fitting only: iteration stops when the fitted position change falls below this many pixels. Lower is slower and stricter.
MLE max iterations	number, 50	`vmi_picasso.mle_max_iterations`	*--mle-max-iterations*	MLE only: hard iteration cap.
MLE method	select, `sigma`	`vmi_picasso.mle_method`	*--mle-method*	MLE only: `sigma` fits one shared width; `sigmaxy` fits independent horizontal and vertical widths.
Fitting method	select, `mle`	`vmi_picasso.fitting_method`	*--fitting-method*	`mle` is Poisson-optimal and uses the three MLE fields; `lq` is a faster least-squares fit that ignores them. Both discard fits with a width of 0.3 pixels or less.
Tuning frame index (blank = random)	number, blank	`vmi_picasso.tuning_frame_index`	*--tuning-frame-index*	Blank picks a random frame from all available frames. An explicit global 0-based index past the end uses the last frame. The console reports the selected index.

Processing

Field	Type and default	Saved key	CLI flag	Meaning
Parallel processing	checkbox, on	`processing.enable_parallel`	*--parallel* / `--no-parallel`	One worker per HDF5 file. Each file must still fit in memory. Off runs sequentially.
CPU cores	number, 6	`processing.num_cores`	`--num-cores`	Worker-pool size; must be at least 1. It is sent even when parallel processing is off.
Dark subtraction	checkbox, off	`processing.enable_dark_subtraction`	*--dark-subtraction* / `--no-dark-subtraction`	Master switch for dark correction. Requires a valid precomputed dark array. Disables the per-frame median option.
Per-frame median subtraction	checkbox, on	`processing.enable_median_subtraction`	`--median-subtraction` / `--no-median-subtraction`	Subtracts the 3σ-clipped median from every pixel in each frame when dark subtraction is off. To compare batch runs, use separate checkpoint files.
Flat field	checkbox, off	`processing.enable_flat_field`	*--flat-field* / `--no-flat-field`	Enables per-pixel flat correction (divide by the flat normalised to its mean).
Flat field file	file (.txt/.npy), empty	`processing.flat_field_file`	*--flat-field-file*	Flat image. The loader expects a TIFF despite the picker filter, so convert the flat to TIFF before use.

Field	Type and default	Saved key	CLI flag	Meaning
Circular mask	checkbox, off	`processing.enable_circular_mask`	*--circular-mask* / `--no-circular-mask`	Present in the form and recorded in the summary, but the current script does not apply any mask to events or images.
Mask center X (empty = image center)	number, empty	`processing.mask_center_x`	`--mask-center-x`	Mask geometry, currently unused.
Mask center Y (empty = image center)	number, empty	`processing.mask_center_y`	`--mask-center-y`	Mask geometry, currently unused.
Mask radius (empty = automatic)	number, empty	`processing.mask_radius`	`--mask-radius`	Mask geometry, currently unused.
Tuning mode only	checkbox, off	`processing.tuning_only`	*--tuning-only* / `--no-tuning-only`	Runs the single-frame tuning check and stops before the batch (see below). The Pipeline panel forces this off in its own snapshot without changing the saved form.
Frame limit (0 = all)	integer, 0	`processing.frame_limit`	`--frame-limit`	Processes up to the first N frames in filename order and frame order within each file. Zero processes all frames. This field is disabled in Tuning mode. Use a fresh checkpoint filename or clear the checkpoint when changing the limit.

Histogram, energy calibration, spectrum axes and GMD weighting

Field	Type and default	Saved key	CLI flag	Meaning
Abel inversion	checkbox, on	`histogram.enable_abel`	*--abel* / `--no-abel`	Enables the PyAbel inversion, the photoelectron spectrum, the CSV, and the Xe 4d fit. When off there is no `vmi_3d_abel.npy` and no spectrum.
Image rotation before Abel inversion (°)	number, 0	`histogram.abel_rotation_deg`	`--abel-rotation-deg`	Rotate after centering on the brightest pixel to align the polarization vertically. Use 0 if it is already vertical. Positive angles turn counterclockwise. Other than right angles, rotations interpolate on the centered grid.
Histogram resolution factor	number, 1	`histogram.resolution_factor`	*--resolution-factor*	Upscales the 2D histogram and the event coordinates by this factor. Must be at least 1. Alpha is defined in `histogram` pixels, so changing this factor invalidates an old alpha.
α (eV/pixel^2; empty = uncalibrated)	number, empty	`energy_calibration.alpha`	`--alpha`	Converts the spectrum x axis with $E = \alpha r^2$. Empty keeps the squared-radius axis in pixel^2. Must be positive when set. Intensity is never divided by alpha.
Fit Xe 4d doublet -> $h\nu$ and α in console	checkbox, off	`energy_calibration.fit_xe_4d`	`--fit-xe-4d` / `--no-fit-xe-4d`	Fits two Gaussians plus a linear background to the two strongest peaks in r^2 and prints suggested alpha and photon energy. Advisory only: it changes neither alpha nor the plotted coordinates. Requires Abel inversion.
Xe fit min (pixel^2; empty = auto)	number, empty	`energy_calibration.fit_min_px2`	`--fit-min-px2`	Lower bound of the fit window in pixel^2. Use it to isolate the doublet from other lines.
Xe fit max (pixel^2; empty = auto)	number, empty	`energy_calibration.fit_max_px2`	`--fit-max-px2`	Upper bound of the fit window; same rules.

Field	Type and default	Saved key	CLI flag	Meaning
Spectrum x min (-1 = auto)	number, −1	`spectrum_plot.x_min`	*--spectrum-x-min*	Left limit of the summary spectrum panel only (not the CSV). Negative means automatic. Units follow alpha.
Spectrum x max (-1 = auto)	number, −1	`spectrum_plot.x_max`	*--spectrum-x-max*	Right limit; zero or negative means the last energy.
Spectrum y min (-1 = auto)	number, −1	`spectrum_plot.y_min`	*--spectrum-y-min*	Bottom limit; negative means zero.
Spectrum y max (-1 = auto)	number, −1	`spectrum_plot.y_max`	*--spectrum-y-max*	Top limit; zero or negative means automatic. Reset the limits when switching between pixel^2 and eV.
GMD weighting	checkbox, off	`gmd.enable_gmd_weighting`	*--gmd-weighting* / `--no-gmd-weighting`	Weights each event by mean GMD divided by its frame's GMD. GMD is a per-frame scalar, so this corrects yield, never spectral shape.
GMD weight min	number, 0.0	`gmd.gmd_weight_min`	*--gmd-weight-min*	Weights below this are zeroed when the value is above 0.
GMD weight max	number, 4.0	`gmd.gmd_weight_max`	*--gmd-weight-max*	Weights above this are zeroed when the value is above 0. With the default, frames whose GMD is below a quarter of the mean contribute nothing.

Four schema keys have no widget but are migrated and passed to the script: `meta_column_gmd`, `tuning_bins_photons`, `tuning_bins_net_gradient`, and `tuning_bins_precision`. They are unused or fixed by the schema, so they are not documented as user controls.

Tuning mode versus full batch

`Tuning mode only` runs Picasso on one selected frame, writes the tuning figure and its data sidecar, and stops before localisation of the whole dataset, before the histogram, Abel inversion and summary, and without writing a checkpoint. The console ends with `TUNING MODE - Batch processing skipped`. Tuning is not a parameter scan: edit the detection fields and run again. The usual sequence is to tune one frame, then untick the checkbox and run the full batch.

A full batch first prepares dark and flat corrections, then localises (or resumes from an existing checkpoint), builds the 2D histogram, optionally inverts it and builds the spectrum, and finally writes the summary. Progress appears in the console (*Processing HDF5 files*, *Building histogram*).

Results

After a successful run the results area shows two interactive Plotly figures when their data sidecars exist: *Tuning check* (corrected frame with localisation circles, photon distribution, net-gradient distribution with the threshold line, and localisation precision) and *Final summary* (raw VMI, Abel-inverted VMI, photoelectron spectrum, and a text block of run settings). Each has a colormap selector (*Tuning colormap*, *Raw VMI colormap*, *Abel VMI colormap*) and a `Saved PNG` expansion for the original figure. Hover for values, drag to zoom, double-click to reset. If only the PNG exists, the panel says so and asks you to rerun once to create the interactive data. *View saved results* rebuilds these views from the current output directory without rerunning; *Clear outputs* deletes the listed files after confirmation, including the checkpoint if its checkbox is ticked.

The final summary axes are *Squared radius (pixel^2)* or `Kinetic energy (eV)` depending on whether alpha was set at run time; the y axis is always *Intensity (arb. units)*.

Files written

File	Written when	Contents
`vmi_results_raw.h5`	full batch, kept on resume	Localisation checkpoint and archive: one row per event with position, photons, size, eccentricity, signal, net gradient and global frame index. Downstream binning reads this file.
`vmi_2d_raw.npy`	full batch	2D VMI histogram (weighted if GMD weighting is on).
`vmi_3d_abel.npy`	full batch with Abel	Centred and rotated Abel-inverted distribution.
`energy_spectrum.csv`	full batch with Abel	Columns `r_px,r2_px2,energy,dN_per_dr,intensity`; energy is αr^2 or r^2 when alpha is empty.
`04_final_summary.png` / `.npz`	full batch	The 2×2 summary figure and its interactive data (metadata plus arrays).
`01_tuning_check_picasso.png` / `.npz`	tuning mode only	The four-panel tuning figure and its data (frame, positions, photons, net gradient, precision).

The constants `vmi_results.h5` and `vmi_results.csv` exist in the script but are never written; do not expect them.

Pitfalls

- **Resume skips localisation silently.** If the checkpoint file already exists, the batch skips Picasso and rebuilds the histogram and summary from it. Changes to box size, threshold or fitting method are ignored until the checkpoint is deleted (tick the checkpoint checkbox in *Clear outputs*).
- **Tuning artifacts are directory-scoped.** A full batch never overwrites the tuning figure, so *View saved results* can show a tuning check from an earlier parameter set.
- α **is per histogram pixel.** Recalibrate it whenever the histogram resolution factor changes.
- **The Xe fit is advisory.** It prints suggested values but never changes alpha or the coordinates; with Abel off it does not run at all.
- **Unused controls.** The metadata dataset, circular mask and its centre/radius fields, and camera QE currently have no effect on the numerical result.
- **Flat-field format mismatch.** The picker offers `.txt`/`.npy`, but the loader reads TIFF images.
- **Empty numeric values.** Empty spectrum limits become −1 (automatic), empty alpha and mask values stay empty, and other empty numbers become 0, which often fails validation (for example CPU cores).

5.6 Binning

Status. This panel is immature and needs restructuring.

Purpose. Partition the localised events into bins of GMD pulse energy and build one 2D histogram per bin. The panel launches `vmi_analysis.centroiding.vmi_histogram_gmd_bins` with working directory `centroiding/`; run it after Centroiding.

Field	Type and default	Saved key	CLI flag	Meaning
`Localization checkpoint (.h5)`	file, the Centroiding output's `vmi_results_raw.h5`	`binning.checkpoint`	*--checkpoint-path*	Checkpoint written by the Centroiding batch. A missing file fails with *Checkpoint not found.*
Output directory	folder, the Centroiding output directory	`binning.output_dir`	`--output-dir`	Where the per-bin `.npy` files and the overview PNG are written.
Frame-to-GMD map	file (.txt), migrated from Centroiding	`binning.gmd_map`	`--gmd-map-path`	The map produced by GMD Map. A missing file fails with *GMD map not found.*

Field	Type and default	Saved key	CLI flag	Meaning
Histogram resolution factor	number, 1	`binning.resolution_factor`	`--resolution-factor`	Multiplies event coordinates and histogram size. It must match the Centroiding value, otherwise alpha means a different energy per pixel.
GMD thresholds (comma-separated)	text, `3.75e-8,5.5e-8,7.25e-8`	*binning.thresholds*	`--thresholds`	Ascending GMD cut values. N thresholds define $N+1$ bins: below the first, between successive values, and above the last. The values are not sorted or validated.
GMD column (4=m1, 5=m2)	select, 4	`binning.gmd_col`	*--gmd-col*	Which GMD value column of the map to use: 4 for method 1, 5 for method 2.
Weight mode	select, `gmd_norm`	`binning.weight_mode`	*--weight-mode*	`none`: every event counts 1. `gmd`: weight equals the frame's GMD value. `gmd_norm`: weight equals mean GMD divided by the frame's GMD, raised to *Weight power*.
Weight power	number, 1.0	`binning.weight_power`	*--weight-power*	Exponent for `gmd_norm`. Linear (1.0) over-corrects for the reference dataset; an effective exponent near 0.42 flattened the yield.
GMD floor	number, 1e-12	`binning.gmd_floor`	*--gmd-floor*	Non-positive GMD values are raised to this before binning and weighting, avoiding division by zero.
GMD weight min	number, 0.0	`binning.gmd_weight_min`	*--gmd-weight-min*	In `gmd_norm` mode, computed weights below this are zeroed when the value is above 0.
GMD weight max	number, 4.0	`binning.gmd_weight_max`	*--gmd-weight-max*	Weights above this are zeroed when the value is above 0. The default discards frames whose GMD is below a quarter of the mean.

Bin and weight semantics. A frame's bin index is the number of thresholds below its GMD value, so the first bin has no lower bound and the last has no upper bound. Events from frames beyond the end of the map are dropped and counted as *Events w/o GMD*. Events whose frame GMD is NaN are placed in the *highest* bin by the current implementation (despite an in-code comment claiming they are discarded), so inspect a map with gaps before relying on the last bin. The overall histogram is the sum of the per-bin histograms, so it is weighted when a weighting mode is active.

Outputs. One file per bin, `vmi_2d_gmd_bin<b>_<lo>_<hi><suffix>.npy`, where `<lo>`/`<hi>` are `minusinf`, `plusinf` or a threshold; the summed file `vmi_2d_gmd_all<suffix>.npy`; and the overview figure `vmi_gmd_bins<suffix>.png`. The suffix encodes the weighting: empty for `none`, `_w-gmd` for `gmd`, `_w-gmd_norm` for `gmd_norm` with power exactly 1, and `_w-gmd_norm_p<value>` otherwise. The results area displays the overview PNG. *Clear outputs* lists the bin images and overview for the selected output directory and weighting.

Pitfalls. The histogram size is hardcoded to 1024×1024 camera pixels and the checkpoint's real image shape is not read. The resolution factor is independent of the Centroiding one. Invalid thresholds (empty, unparseable, unsorted) are not caught by the panel. The weight minimum and maximum in this panel are a separate copy from the Centroiding tab's values; the Pipeline uses the Centroiding values instead. Binning writes its whole output directory, so it is queued against a concurrent Centroiding or Pipeline job writing the same directory.

5.7 Trig Calibration

Purpose. Build the extracted trig-fit calibration from a VMI image without the Gascooke executable. The panel remaps the image to polar coordinates (x = radius, y = angle, the orientation of the Gascooke *Theta vs r* image) and optionally applies inverse Abel to each constant-angle line. The remap preserves detector intensity units without a $1/r$ correction. The fitter uses the processed polar data to

estimate a Gaussian ridge whose centre varies as $r_g(\theta) = r_0 + \sum_n [A_n \sin(n\theta) + B_n \cos(n\theta)]$. Accepted rings are appended to a trig-fit file in the format consumed by the Circularize and PES panels. This tab is an interactive tool: it submits no job and launches no external program. Selection is manual by design; there is no automatic ridge finder.

Field	Type and default	Saved key	Meaning
`VMI image`	file, Centroiding raw image	`calibration.image`	2D NumPy detector image (`.npy`) in its original orientation.
Use brightest pixel as center	checkbox, on	`calibration.brightest_center`	Use the brightest pixel as the polar origin. Clear the checkbox to enter the origin manually.
Centre X, *Centre Y*	numbers, 511.0	`calibration.center_x`, `.center_y`	Zero-based column and row of the fit origin in the detector image.
Radial bin size (px)	number, 1.0	`calibration.radial_bin_size`	Spacing between radial samples in detector pixels. Sampling starts at $r = 0$ and stops at the last grid point at or below the maximum radius. A spacing of 0.5 gives a radial grid point every half pixel.
Angular bins	number, 720	`calibration.n_theta`	Number of angular samples over one full turn.
Max radius (0 = auto)	number, 0.0	`calibration.r_max`	Largest radius to sample; 0 uses the largest circle inside the image.
Polar remap	select, Interpolation	`calibration.remap_method`	Choose *Grid resampling* to average detector subpixels in each polar bin. Bins with no finite subpixels use interpolation.
Subpixels per side (n)	integer, 5	`calibration.subpixels`	Split each detector pixel into an $n \times n$ grid for resampling. Choose 1 to 16. Larger grids take longer.
Inverse Abel per θ	checkbox, on	`calibration.abel`	Invert each constant-angle radial line to locate ridges. For anisotropic images this is a ridge-finding approximation.
Abel method	select, `hansenlaw`	`calibration.abel_method`	Hansen–Law (the method used by the reference software); Dasch three-point, two-point and onion-peeling are available for comparison.
Hold order	select, 1	`calibration.hold_order`	Available for Hansen–Law inversion. Choose 0 for a constant or 1 for a linear approximation between radial samples. Older Hansen–Law sessions without this setting load with order 0.
Filter placement	select, `post_abel`	`calibration.placement`	With inverse Abel enabled, choose *After Abel inversion* or *Off*. With inverse Abel disabled, choose *Raw polar* or *Off*. *Off* skips filtering.
Enhancement	select, `bandpass`	`calibration.enhance_mode`	Choose `none`, `bandpass`, `ridge`, `unsharp` or `clahe`.
Filter parameters	expansion	`calibration.param.*`	Editable defaults: smooth θ 1.0, smooth r 0.8; bandpass low r 2.0 and high r 20.0; ridge background 8.0/25.0 and ridge σ 1.2; unsharp blur 6.0/18.0; CLAHE clip 0.02 and kernel 24/96.
Select band / Mask	toggle	—	Drag with the left mouse button: a band (blue) selects the fit region, a mask (red) excludes interference.
Full angular range	checkbox, on	`calibration.full_angle`	The band spans 0–360°; untick to use the drawn angular extent.
Trig terms N	number, 3	`calibration.n_terms`	Highest harmonic order fitted in $r_g(\theta)$.
Fit beta	checkbox, on	`calibration.beta`	Fit the $P_2(\cos\theta)$ anisotropy amplitude.
Iterative terms	checkbox, on	`calibration.iterative`	Fit $1, 2, \ldots, N$ terms cumulatively instead of all at once.
Extracted trig-fit file	save, `extracted.txt` beside the VMI image	`calibration.output`	Accepted rings are appended here. Selecting an image in a different folder updates this path. You can edit it.
Provenance comments	checkbox, on	`calibration.provenance`	Include band, filter, Abel method, and RMS comments. The fit center and detector shape are recorded independently of this setting.

Field	Type and default	Saved key	Meaning
Radial model	select, Interp	`calibration.radial_model`	Use shape-preserving cubic interpolation (Interp) or a through-origin polynomial (Poly) to model $A_n(r)$ and $B_n(r)$.
Poly order	number, 1	`calibration.slope_order`	Degree of the through-origin polynomial. Order 1 gives a straight line.
Session file	save, `circularization/trig-calibration.session.json`	`calibration.session`	Save/load image geometry, processing, masks and accepted ring fits. Saves require a separate `.json` file.

Workflow.

1. Choose the detector image. For Centroiding data, use `vmi_2d_raw.npy`. Click *Load image & remap*. The console reports the origin and radial spacing.
2. Select the Abel method and filter settings as needed. Click *Apply processing*. The processed preview appears below the raw preview. The fit uses the processed preview.
3. Select *Select band*. Drag a rectangle around one ring. Click *Zoom to band* to limit the radius range. Click *Inspect band* to open a clipped view. Set the horizontal zoom between 0.05 and 1 to adjust its width.
4. Select *Mask*. Drag rectangles over interference. Masks appear in both previews. Use *Undo selection* to undo the last edit. Use *Clear band* or *Clear masks* to remove the corresponding selection.
5. Click *Fit selection*. The comparison shows the processed band and the fitted model. Gray marks excluded pixels. The yellow line marks the fitted ridge. Review both images.
6. Click *Accept ring* to append the fit to the extracted file. Repeat from step 3 for each ring.
7. Choose a radial model. Click *Update radial model plots* to compare the model and accepted measurements. Click *Send to Circularize* to transfer the input and settings.

Display controls. The previews share *Color scale* and *Colormap*. Each preview calculates its percentile limits from its visible pixels. The default limits are the 1st and 99.5th percentiles. The inspection view applies the processed preview's percentiles to the band. Log scaling uses positive pixels.

Enable *Crosshair guides* to mark the same radius and angle on both previews. Drag a line to move it. Drag the center handle to move both lines. The readout shows the radius in pixels and the angle in degrees.

Radial model. Each harmonic uses the rings that include that harmonic. In Poly mode, each term needs at least as many distinct radii as the polynomial degree. The panel reports when missing or invalid uncertainties require an unweighted fit.

Send to Circularize transfers the image, center, extracted file, and radial model. For Poly, it also transfers the degree. The panel warns if the saved rings differ from the preview. It also warns if *Max trig n* in Circularize excludes a saved term. Circularize reports mismatched or unavailable detector geometry in its console.

Use *Refresh rings from file* to load the saved rings into the table and plots. Use *Clear calibration file* to delete the file. Confirm the deletion to clear the table and plots.

Results. The panel shows both polar previews with band, masks and fitted ridge overlays, a fit comparison, the parameter table, the accepted-ring table, and separate $A_n(r)$ and $B_n(r)$ plots with ring measurements and their uncertainties. The parameter table reports local least-squares errors. These estimates do not account for correlations between interpolated pixels. *Rebuild file from rings* rewrites the file from the accepted rings and is the recovery path after a wrong or duplicate append. If the rebuild would remove or replace saved rings, the panel lists their radii and asks for confirmation. Use *Refresh rings from file* to bring the full saved set back into the table.

The optimizer can report a warning while still returning a model for review. If the data cannot determine some parameters, widen the selected angular range or reduce *Trig terms N* and refit. The panel blocks export when the model is underdetermined or has nonfinite parameters.

When loading a session, the panel checks the detector image fingerprint before restoring a pending fit. If the image changed or the fingerprint is missing, the session still restores the band, masks, and accepted rings, and asks you to refit the band.

Pitfalls. Enhancement can move the fitted ridge. The panel accepts rings from different images or processing settings. Check that the rings describe the same detector geometry before using them together. PES rotates and centers each bin before applying its calibration. Both polar remap methods start at $r = 0$, as Hansen–Law requires.

The session file stores the processing settings and masks. The extracted file stores the ring blocks and available detector geometry. Enable *Provenance comments* to include a summary of each ring's processing. The panel refuses an append if a saved radius differs by less than 0.5 px. Use *Rebuild file from rings* to rewrite the file. Circularize sorts the saved rings by radius before it builds the radial model.

5.8 Circularize

Purpose. Correct radial distortion in one VMI image as a function of angle. Use a Gascooke trig-fit calibration. The panel launches `vmi_analysis.circularization.circularization` with working directory `circularization/`. It is a standalone tool for inspecting the calibration. The PES panel applies its correction to each GMD bin.

For a raw detector-grid calibration, open the same `vmi_2d_raw.npy` in Trig Calibration and Circularize. Use the same origin in both panels. For NumPy input, the default origin is the brightest pixel. Clear *Use brightest pixel as center* to enter an origin. Circularize applies the radial correction about that origin on the input grid. The output keeps the matrix shape and orientation. The text file stores pixel values, so record the center coordinates for later analysis.

Field	Type and default	Saved key	CLI flag	Meaning
`Input image (.npy or .txt)`	file, Centroiding raw image	*circularize.inp*	`--input`	NumPy detector array or legacy text image.
`Output image (.txt)`	save, `circularization/image_circularized.txt`	*circularize.out*	`--output`	Corrected image, written as text in scientific notation.
Shape NY	number, 1023	`circularize.shape_y`	`--shape` (first)	Number of rows for legacy text input. NumPy input uses its native shape.
Shape NX	number, 1023	`circularize.shape_x`	`--shape` (second)	Number of columns for legacy text input.
Use brightest pixel as center	checkbox, on	`circularize.brightest_center`	—	For NumPy input, use the brightest pixel or clear the checkbox to enter a center.
Center X	number, 511.0	`circularize.center_x`	`--center` (first)	Zero-based column of the manually specified origin.
Center Y	number, 511.0	`circularize.center_y`	`--center` (second)	Zero-based row of the manually specified origin.
Extracted trig-fit file	file, `circularization/extracted-FOC100eV-20260710.txt`	`circularize.extracted`	*--extracted*	Gascooke export with one block per fitted ring: radius, trigonometric coefficients and uncertainties. Required.
Reassignment file (optional)	file, blank by default	`circularize.reassign`	*--reassign-file*	Two-column map from fitted to assigned radius. Both columns must increase together. Clear the field to use the identity map.

Field	Type and default	Saved key	CLI flag	Meaning
Radial model	select, `interp`	`circularize.radial_model`	*--radial-model*	`interp` uses shape-preserving interpolation of the coefficients; `poly` fits a polynomial that vanishes at the centre.
Poly order	number, 2	`circularize.poly_order`	*--poly-order*	Degree of the polynomial. This field is enabled when the radial model is `poly`.
Interp order	number, 3	`circularize.interp_order`	*--interp-order*	Spline order used for the inverse warp (3 = cubic).
Max trig n (0 = auto)	number, 0	`circularize.max_trig_n`	*--max-trig-n*	Highest trigonometric order to include; 0 omits the flag and lets the script infer the order from the file.
Polar dr	number, 1.0	`circularize.polar_dr`	*--polar-dr*	Cartesian pixels per polar radial unit for legacy text input. NumPy calibration uses detector pixels directly.
No Jacobian	checkbox, on	`circularize.no_jacobian`	*--no-jacobian*	Checked skips the Jacobian intensity correction. Note that the command-line default is the opposite (correction on).
No diagnostic plots	checkbox, off	`circularize.no_plots`	*--no-plots*	Skips the per-order trigonometric fit figures. A reassignment map figure is still written when a reassignment file is used.
Summary only	checkbox, off	`circularize.summary_only`	*--summary-only*	Parse the extracted file and print its summary, then stop before loading the image or writing outputs.
Plot output dir	folder, `circularization/trig_fit_plots`	`circularize.plot_dir`	`--plot-dir`	Where the diagnostic PNGs are written.

Results. On success the panel shows an interactive Plotly view of the corrected image with a logarithmic colour scale. Hover over a pixel to read its coordinates and intensity. Runs with a radial reassignment file also show their reassignment map. The console prints the parsed rings, the available trigonometric series, the maximum radial contribution of each term, and the applied reassignment. *Raw polar* and *Circularized polar* show the detector images before and after correction on a shared grid about the correction center. The two previews appear below *Run* in the settings card. Each preview has its own percentile limits. *Radius guide* marks the same radius on both previews and displays the radius in pixels. The polar previews also appear with *No diagnostic plots* selected. Outputs are the corrected text image and the diagnostic PNGs; *reassignment_map.png* is written whenever a reassignment file is supplied.

Pitfalls. The calibration files are per-experiment inputs. The extracted trig-fit file can be built clean-room with the Trig Calibration tab. Supply a reassignment file only when the experiment needs radial remapping. A blank field uses the identity map. A missing file at a specified path fails the job. The GUI's *No Jacobian* default differs from the command-line default, which is the most consequential default difference in this panel. Beyond the last assigned radius, reassignment keeps the final radial offset constant. Circularize checks the combined warp for invalid radii and folds on the output grid before resampling. *Clear outputs* lists the selected corrected image, the diagnostic plots in the plot output directory, and any matching polar preview cache from this server session. The script does not print percentages.

5.9 PES / Abel inversion

Status. This panel is immature and needs restructuring.

Purpose. Process every GMD-binned image through hole patching, rotation, centring, circularisation, apodisation and Abel inversion, and produce the photoelectron energy spectrum and angular-

anisotropy parameters for each bin. The panel launches `vmi_analysis.circularization.process_gmd_bins` with working directory `circularization/`.

Field	Type and default	Saved key	CLI flag	Meaning
Weight suffix	text, `_w-gmd_norm`	`pes.weight_suffix`	*--weight-suffix*	Selects which bin files to process: files whose name ends with this suffix. Empty means unweighted bins.
Bin image directory	folder, saved Centroiding output directory	`pes.bin_dir`	`--bin-dir`	Directory holding the `vmi_2d_gmd_bin*.npy` files from Binning.
Output directory (empty = automatic from suffix/ backend)	folder, empty	`pes.output_dir`	`--output-dir`	Where results are written. Empty means `circularization/gmd_bins_results<suffix>`, plus `_pyabel_<method>` for the PyAbel backend.
Inversion backend	select, `pyabel`	`pes.backend`	*--inversion-backend*	`pyabel` is pure Python; `matlab` uses the bundled CPBASEX code and requires MATLAB plus a generated basis file.
PyAbel method	select, `daun`	`pes.method`	*--pyabel-method*	Inversion algorithm. Options: `daun`, `hansenlaw`, `three_point`, `two_point`, `basex`, `rbasex`, `linbasex`, `onion_bordas`, `direct`.
Use cached inversions	checkbox, off	`pes.use_cache`	*--use-cache*	Reuse a bin when its four cached files exist: energy, intensity, beta and cleaned-image text files. Partial caches mix reused and recomputed bins.

Per-bin chain. For each selected bin the program repairs the detector hole with a feathered patch, rotates by 90 degrees, centres the image (cropping 1024×1024 to 1023×1023), runs the circularisation subprocess, centres again and applies a cosine-squared edge apodisation, then inverts the image. The PyAbel path uses the selected method and extracts the energy axis, the intensity and β_2 to β_{10}. The MATLAB path writes the cleaned image to the CPBASEX shared input, runs the MATLAB script, and immediately copies its outputs out before the next bin; this is why bins always run sequentially. Several values are fixed in the script and not exposed by the panel: the old and new centres, the hole radius and donor offsets, the apodisation cutoff and taper, the trigonometric order, the interpolation order, and the alpha used for the energy axis.

Outputs. Per bin, text files for the energy axis, intensity spectrum, beta parameters and the cleaned image, all named `<name>_GMD_<label>.txt`. After all bins, three overview figures (`gmd_bins-energy-spectrum.png`, `gmd_bins-energy-spectrum-normalized.png`, `gmd_bins-betas.png`) and `gmd_bins_results.npz` containing the bin labels and the arrays. The results area shows the three overview figures in that order, with a button to open the results folder.

Calibration and backend requirements. Both calibration files (Section 4.4) must exist in `circularization/`; otherwise the job fails before processing. The MATLAB backend additionally needs the basis file `G_r512_k512_l10.h5`, generated once with `save_gData.m` in MATLAB (time-consuming). The panel warns when the calibration files are missing and when the MATLAB basis is absent. The default PyAbel backend needs neither MATLAB nor the basis file.

Pitfalls. *Clear outputs* lists the overview plots, results archive, and per-bin files for the selected weight suffix. The progress bar stays empty because the script does not print percentages. Individual bin failures are reported and processing continues; if no bin succeeds the job fails. Weighted and unweighted runs write to different automatic output directories so their caches cannot collide.

5.10 Pipeline

Status. This panel is immature and needs restructuring.

Purpose. Run GMD Map, Centroiding, Binning, and PES in sequence. The first failed stage stops the job. Set the Centroiding parameters in the Centroiding panel before you start the pipeline.

Field	Type and default	Saved key	CLI flag	Meaning
HDF5 directory (dataset)	folder, empty	`pipeline.h5_dir`	stage 1 `--h5-dir`	Dataset for the whole pipeline; also forced into the Centroiding snapshot as an absolute path. Required.
HDF5 pattern	text, `RAW-*.h5`	`pipeline.h5_pattern`	stage 1 `--h5-pattern`	Glob for the GMD map and Centroiding stages; also written into the Centroiding snapshot. Use `*RAW-*.h5` for prefixed names.
GMD timestamp file	file, empty	`pipeline.gmd_path`	stage 1 `--gmd-path`	GMD table for stage 1. Required.
GMD map output	save, workspace `gmd_map_all.txt`	`pipeline.map_out`	stage 1 `--output-path`	Where the map is written; also passed to Centroiding and Binning.
Weight mode	select, `gmd_norm`	`pipeline.weight_mode`	Binning `--weight-mode`	Weighting for the Binning stage and the suffix used by later stages.
Weight power	number, 1.0	`pipeline.weight_power`	Binning `--weight-power`	Exponent for `gmd_norm`.
Skip stages whose outputs exist	checkbox, on	`pipeline.skip_existing`	job-level	A stage is skipped when all of its declared output files already exist.

Stages. The panel shows four status badges, *GMD map*, `Centroiding`, *Binning* and *PES*, updated while the job runs. Each stage has a fixed working directory and output fingerprint:

Stage	Command	Working directory	Output fingerprint
GMD map	`build_gmd_map` with the three path fields	repository root	the map file
Centroiding	`process_andor_vmi_PICASSO_v5_h5_batch` with the full Centroiding snapshot	`centroiding/`	the checkpoint file
Binning	`vmi_histogram_gmd_bins` with the checkpoint, output directory, map and thresholds	`centroiding/`	`vmi_2d_gmd_all<suffix>.npy`
PES	`process_gmd_bins` with the weight suffix, bin directory and PyAbel backend	`circularization/`	`gmd_bins_results.npz` in the automatic output directory

Borrowed and forced settings. The pipeline takes every Centroiding setting from the saved form, but overrides exactly three values in its own snapshot: the HDF5 directory, the HDF5 pattern, the GMD map path, and *Tuning mode only* (forced off, so a pipeline run is always a full batch and never produces a tuning check). Thresholds, GMD column and GMD floor are taken from the Binning tab's saved settings; the Pipeline fields supply the weight mode and power. The pipeline has no output-directory field: the Centroiding output directory is used. The PES stage always uses the PyAbel backend with the `daun` method; MATLAB is never selected from the pipeline.

Status, resume and cancellation. With *Skip stages whose outputs exist* checked, a stage whose outputs are all present is marked `skipped` and the log records it; this is the only resume mechanism. The first failing stage stops the pipeline, marks the remaining stages `cancelled`, and fails the job. Stopping cancels queued work immediately and terminates the running process tree. The pipeline reserves the inputs and outputs of all four stages for the whole run, so overlapping jobs wait.

Pitfalls. Read the stage logs and open the files that the stages write. After a page reload, the active job badge and console reconnect. To run all stages again, clear *Skip stages whose outputs exist*. Individual programs can still reuse their own checkpoints or caches.

6 Output files

The table lists the main output files. See each panel section for its output paths and defaults.

Stage	Files	Notes
GMD Map	`gmd_map_all.txt`	Two header lines, then one row per frame: global frame index, file name, frame in file, GMD index, two GMD values, and signed time difference in milliseconds.
Centroiding	`vmi_results_raw.h5`, `vmi_2d_raw.npy`, `vmi_3d_abel.npy`, `energy_spectrum.csv`, `04_final_summary.png/.npz`, `01_tuning_check_picasso.png/.npz`	The checkpoint is both the resume file and the archive of localised events. The tuning files are written only by a tuning run. The CSV exists only when Abel inversion succeeds.
Binning	`vmi_2d_gmd_bin<b>_<lo>_<hi><suffix>.npy`, `vmi_2d_gmd_all<suffix>.npy`, `vmi_gmd_bins<suffix>.png`	One 2D histogram per GMD bin, the sum of the bins, and an overview figure. The suffix encodes the weighting.
PES	`<name>_GMD_<label>.txt`, three overview PNGs, `gmd_bins_results.npz`	Per-bin energy, intensity, beta and cleaned-image text files; overview spectra and beta figures; one archive with all arrays.
Dark Frame	`dark_mean.npy` or `dark_median.npy`, `dark_{method}_info.txt`	Reusable dark frame and its statistics.
Accumulate	`<output>.txt`, `<output>.png`	Accumulated matrix and its log-scale figure.
Circularize	`image_circularized.txt`, diagnostic PNGs	Corrected text image; the plot directory also receives a reassignment map figure when a reassignment file is used.
Movie	`<dataset>.mp4` or `.gif`, dumped frame PNGs	The movie file goes to the selected folder; dumped frames are disposable and live under `.cache/vmi-analysis/movie_frames/`.

The GUI stores previews, frame dumps, and thumbnails under `.cache/vmi-analysis/`. Stop the server before clearing this cache. Back up analysis outputs and calibration files separately. Keep analysis outputs, `.nicegui/`, and `.cache/` outside version control.

7 Energy calibration

The raw VMI radius is converted to energy with

$$E = \alpha r^2, \tag{1}$$

where r is measured in *histogram* pixels and α is in electronvolts per pixel^2. Until an alpha is supplied, the spectrum axis is the squared radius in pixel^2. The intensity is never rescaled: the y axis is always *Intensity (arb. units)*, and alpha changes only the x axis.

7.1 The Xe 4d reference

The gas-phase xenon 4d doublet has ionisation energies

$$\mathrm{IP}(4d_{3/2}) = 69.537 \text{ eV}, \qquad \mathrm{IP}(4d_{5/2}) = 67.548 \text{ eV}. \tag{2}$$

The two peaks appear at squared radii $q_{3/2}$ and $q_{5/2}$ in pixel^2, and the photon energy $h\nu$ is common to both:

$$\alpha q_{3/2} = h\nu - \mathrm{IP}(4d_{3/2}), \qquad \alpha q_{5/2} = h\nu - \mathrm{IP}(4d_{5/2}). \tag{3}$$

Solving the pair gives both the calibration constant and the photon energy:

$$\alpha = \frac{\mathrm{IP}(4d_{3/2}) - \mathrm{IP}(4d_{5/2})}{q_{5/2} - q_{3/2}}, \qquad h\nu = \mathrm{IP}(4d_{3/2}) + \alpha q_{3/2}. \tag{4}$$

The higher-q peak belongs to the $4d_{5/2}$ line, because the smaller ionisation energy leaves more kinetic energy and therefore a larger radius.

7.2 Procedure

1. Select *Abel inversion* in Centroiding.
2. Tick *Fit Xe 4d doublet*. Optionally set *Xe fit min* and *Xe fit max* in pixel^2 to isolate the doublet from other lines; without limits the fit uses the two most prominent peaks.
3. Run. The console prints the fitted peak positions, the implied alpha, and the implied photon energy. The report is advisory: it never changes the calibration and never alters the saved figures.
4. Copy the reported alpha into the α field and run again (the localisation checkpoint is reused, so this is fast).
5. If desired, set the spectrum axis limits, remembering that they are in the displayed units: pixel^2 without alpha, eV with alpha.

If the fit finds fewer than two resolved peaks in the window, or too few samples, the console explains why and no calibration is reported. The reported uncertainties are formal fit errors and do not include systematic effects. Alpha is defined in histogram pixels, so it must be recalibrated if `Histogram resolution factor` changes.

7.3 Working with the spectrum file

`energy_spectrum.csv` has the columns `r_px`, `r2_px2`, `energy`, `dN_per_dr` and `intensity`. The first three are geometric, the fourth is the density per radius bin, and the fifth is the unchanged intensity. Only `energy` depends on alpha; the last column keeps its historical name from the point of view of the detector. Plot `energy` against `intensity` for the calibrated spectrum.

8 Command-line reference

Every stage is a standalone program. Run it from the repository root with `uv run python -m <module> --help` to see all options, or with the virtual-environment interpreter directly. The interface only adds a web form, job control, and result display; it never passes a configuration file.

Module	Purpose and main inputs
`vmi_analysis.gmd.build_gmd_map`	Build the frame-to-GMD map; `--h5-dir`, `--h5-pattern`, `--gmd-path`, `--output-path`, `--n-files`.
`vmi_analysis.imaging.h5_play_frames_movie`	Render or stream a movie; `--h5-dir`, `--n-frames`, `--cmap`, `--log-scale`, `--headless`, `--dump-frames`.
`vmi_analysis.imaging.h5_accumulate_fast_gmd`	Fast accumulation; `--h5-dir`, `--output-path`, `--im-threshold`, `--simple-sum`, `--enable-gmd`, `--no-show`.
`vmi_analysis.centroiding.compute_dark`	Mean or median dark frame; `--dark-dir`, `--method`, `--frames`, `--output-dir`.
`vmi_analysis.centroiding.process_andor_vmi_PICASSO_v5_h5_batch`	Picasso localisation and histogram; `--h5-dir`, `--output-dir`, `--box-size`, `--min-net-gradient`, `--fitting-method`, `--alpha`, `--fit-xe-4d`.
`vmi_analysis.centroiding.vmi_histogram_gmd_bins`	GMD binning; `--checkpoint-path`, `--gmd-map-path`, `--output-dir`, `--thresholds`, `--weight-mode`, `--weight-power`.
`vmi_analysis.circularization.circularization`	Distortion correction of one image; `--input`, `--output`, `--shape`, `--center`, `--extracted`, `--reassign-file`, `--no-jacobian`.
`vmi_analysis.circularization.process_gmd_bins`	PES chain and Abel inversion; `--weight-suffix`, `--bin-dir`, `--output-dir`, `--inversion-backend`, `--pyabel-method`, `--use-cache`, `--no-show`.

8.1 Conventions shared by all programs

- Path options marked required have no defaults: point them at your own data. Relative paths resolve from the program's working directory.
- `--config PATH` is optional and never loaded implicitly; explicit command-line values override the file. The interface never uses it.
- `--no-show` suppresses interactive Matplotlib windows, which is how GUI jobs run. Set `MPLBACKEND=Agg` for headless batch use.
- All programs print progress and a summary to the console; redirect it to a file for long runs.

8.2 Environment variables

Variable	Default	Effect
`VMI_GUI_PORT`	13517	Port for the web interface.
`VMI_GUI_NO_SHOW`	unset	Set to 1 to suppress the browser window.
`VMI_WORKSPACE_DIR`	checkout root	Workspace used for saved settings and relative default paths, important for installed copies.
`NICEGUI_STORAGE_PATH`	`.nicegui`	Overrides where saved settings are stored.
`CPBASEX_DIR`	bundled vendor copy	Root of the MATLAB CPBASEX checkout used by the MATLAB backend.
MPLBACKEND	TkAgg in one script	Forces a non-interactive Matplotlib backend, for example `Agg`.

9 Troubleshooting and constraints

The server exits immediately. The port is in use. Read the printed suggestion, set `VMI_GUI_PORT` to a free port, and rerun. Ports in the Windows excluded ranges are reported as unavailable.

The server stops when I close a tab. Turn on *Keep running on disconnect* in *Settings* to leave the server available when the last browser disconnects. Reopen the page to reattach to jobs.

A job waits forever. Look at the waiting reason: it names the conflicting job or path. Another job writes an overlapping file, or the panel's previous job is still active. Wait, or stop the conflicting job in its own panel.

Changing parameters does nothing. Some stages resume from existing outputs. Accumulate and Centroiding can reuse a result or checkpoint created with the same frame limit. The Pipeline can skip stages whose outputs exist. Delete the relevant output to force recomputation. In Centroiding, leave *Also delete checkpoint* checked in *Clear outputs* to rerun localisation.

GMD weighting has no effect. The map may be missing, partial, or all weights are 1.0. A map built with *First N files* only covers those files; frames outside it silently keep weight 1.0.

MATLAB/PES fails. The MATLAB backend needs MATLAB and the basis file `G_r512_k512_l10.h5`. Generate it once with `save_gData.m`; expect tens of minutes. Use the PyAbel backend to avoid MATLAB entirely. MATLAB bins are processed sequentially by design.

PES reports missing calibration. Both files in `circularization/` are required. Create the extracted fit file in Trig Calibration or supply a compatible export. Supply the radial reassignment file before starting PES.

The frame histogram or movie disagrees with another tool. Frame enumeration differs between tools: GMD Map and Dark Frame use the HDF5 pattern (`RAW-*.h5` by default, adjustable for prefixed names), while Movie, Accumulate and the frame histogram use all `*.h5` files sorted by name. Extra HDF5 files change indices.

GMD Map fails immediately with "No HDF5 files matching". The selected directory contains no file whose name matches the panel's *HDF5 pattern*. For names such as `ODL-150-RAW-S00000.h5`, set the pattern to `*RAW-*.h5`; the job now stops before writing an empty map.

Out-of-memory during dark computation. The median method holds the selected dark frames in memory. Reduce *Dark frame count* or use the mean method.

Some GMD statistics look wrong. Frames with zeroed metadata carry a timestamp of 0 and match the first GMD entry. Exclude them when judging matching quality.

Outputs overwrite silently. The file picker does not prompt on save, and analysis outputs are overwritten. Choose a new output directory or file name when preserving an earlier result.

I cannot reopen old results. Accumulate has *View saved result.* Centroiding has *View saved results.* For other job panels, run the analysis again or open the output files in another tool.

A Glossary

VMI Velocity-map imaging: an electron-optics configuration that maps photoelectron velocity to a position on the detector. The measured image is a 2D projection of the 3D momentum distribution.

GMD Gas monitor detector: records the pulse energy of each free-electron-laser shot, used to weight or bin frames.

FEL Free-electron laser, the photon source; it drives the camera at about 25 Hz together with the acquisition system.

Centroiding Estimating the sub-pixel position and intensity of each electron spot instead of counting whole pixels.

Picasso The localisation library used for spot detection and fitting.

Abel inversion Reconstruction of a 3D distribution from its 2D projection, assuming cylindrical symmetry about the detector axis.

β **parameters** Coefficients of the angular distribution of photoelectrons; β_2 is the leading anisotropy term.

α Energy calibration constant, electronvolts per squared histogram pixel.

Checkpoint The `vmi_results_raw.h5` file of localised events, used both as an archive and as a resume token.

GMD bin A group of frames with similar GMD values; each bin gets its own 2D histogram and its own PES result.

Weight suffix The file-name suffix that distinguishes unweighted, GMD-weighted and normalised bin files.

Workspace The directory that holds saved settings and relative default paths; the repository root in a checkout.

B Formulas used by the pipeline

Energy calibration. $E = \alpha r^2$, with r in histogram pixels and α in eV/pixel^2; the xenon relations in Section 7 determine α and $h\nu$.

Angular distribution. For one-photon ionisation with cylindrical symmetry, the photoelectron angular distribution is

$$I(\theta) \propto 1 + \beta_1 P_1(\cos\theta) + \beta_2 P_2(\cos\theta) + \beta_3 P_3(\cos\theta) + \beta_4 P_4(\cos\theta), \tag{5}$$

where P_ℓ are Legendre polynomials and θ is measured from the light polarisation axis. The pipeline reports β_2 to β_{10}; for the usual experimental geometry the odd terms vanish.

Abel inversion and the spectrum. The 2D image is the line-of-sight integral of the 3D distribution. Abel inversion reconstructs the central slice, and the radial integral of that slice is the speed distribution, converted to an energy spectrum with the calibration above. The pipeline centres the image, applies the distortion correction and an edge taper before inversion so that the reconstruction is not dominated by the detector hole or the image boundary.

GMD weighting. The per-frame weight is

$$w_f = \frac{\overline{\mathrm{GMD}}}{\mathrm{GMD}_f}, \tag{6}$$

optionally raised to a power. It corrects the yield of a frame for its pulse energy; it cannot change the shape of a single-frame distribution.

GMD binning. A frame belongs to bin b when $t_{b-1} \leq \mathrm{GMD} < t_b$, with the first and last bins open-ended.