## Roles Sub-Tab

For each tab shown on the left hand side of the *SpectraView® Prism Client*, very detailed rights are allowed for each role, as seen in <u>Figure Error!</u> No text of specified style in document.-1. For example, the *Calibration Tab* can be expanded to list other rights such as *Start Auto-Cal*, *Stop Auto-Cal*, etc. By checking the option box under each role, the administrator is able to grant rights to that role. The number listed next to a tab name identifies the number of sub-items for that role. Clicking on the rows with numbers will expand those roles.

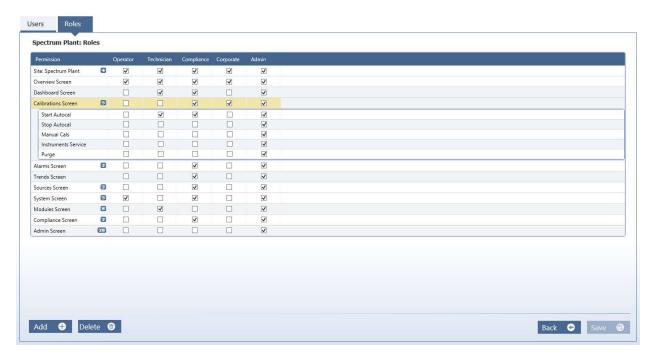


Figure Error! No text of specified style in document.-1 Roles Sub-Tab