Users Sub-Tab

In order for a user to interact with *SpectraView® Prism* the user will need to be created and assigned a role, as seen in <u>Figure Error!</u> No text of specified style in document.-1.

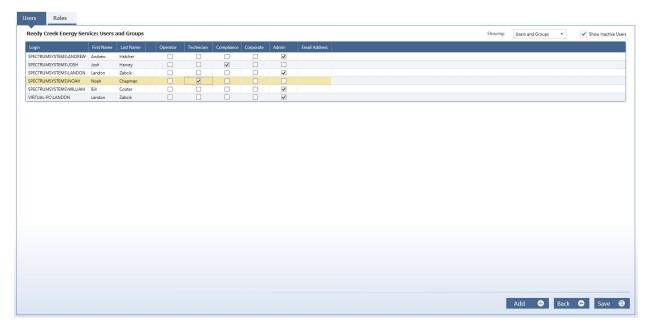


Figure **Error! No text of specified style in document.**-1 Users Sub-Tab

Normally a user is only assigned one role. However, a user may have several roles, but Prism will assign the most intrusive permissions, first. For example, if a user is assigned *Operator* and *Admin*, if either option has the rights to a particular function, then, the user will be granted access. Deselect all roles for a user and that user will become unable to access any functionality.

When a user first attempts to gain access to a new system, the account will be created, but no roles will be assigned, effectively disabling the account. An administrator must assign rights so the user will have access.