

CONTENTS


1. INTRODUCTION	4
1.1. About PJP	4
1.2. In Case of Using PJP with a Non-PJP Printer	5
1.2.1. PCL jobs.....	5
1.2.2. Postscript jobs.....	5
1.2.3. Other printer languages	5
1.3. PJP Syntax and Format	6
1.4. Variables.....	7
1.4.1. Alphanumeric variables.....	7
1.4.2. Numeric variables	7
1.4.3. Strings.....	7
1.5. Invalid Commands	7
1.5.1. Syntax errors.....	7
1.5.2. Syntax warning and semantic warning	7
2. HOW TO USE PJP	8
2.1. Overview	8
2.2. PJP Job Requirement	8
3. COMMAND GROUP.....	9
4. KERNEL COMMANDS.....	10
4.1. Introduction	10
4.2. UEL Command	10
4.3. EXECUTE Command	10
4.4. ENTER Command	11
4.5. COMMENT Command.....	11
4.6. Printer Language Switching.....	12
4.6.1. Explicit switching.....	12
4.6.2. Implicit switching	12
4.6.3. Context switching.....	12
5. JOB SEPARATION COMMANDS.....	13
5.1. Introduction	13
5.2. JOB Command	13
5.3. EOJ Command	14
6. ENVIRONMENT COMMANDS	15
6.1. Introduction	15
6.1.1. Print environment.....	15
6.1.2. PJP reset conditions.....	16
6.1.3. Remember these points about environments.....	16
6.1.4. PJP environment variables.....	17

6.2.	Variables	18
6.2.1.	Variables for HL-1050/1070/1250/1270N/1450/1470N/P2500/1650/1670N/3260N/2460/ 7050/1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/6050D/6050DN/8050N/ 2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2 250DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/ 3150CDW/3150CDN/3170CDW/1110/HL1111/1112/1118/L8250CDN/L8350CDW(T)/L9200CDW(T)/ L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/ 2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/ 1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/ L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/ L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375 DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312 D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2 352DW/L2351DW /L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDW/L3230CDN/L3210CW	18
6.2.2.	Variables for HL- 1660e/2060/2400C/2400Ce/3400CN/2600CN/3450CN/2700CN/4040CN/4050CDN/4070CDW/3040CN/ 3045CN/3070CW/3075CW	53
6.3.	Default Command	58
6.4.	Initialize Command	58
6.5.	Reset Command	59
6.6.	Set Command	59
7.	STATUS READBACK COMMANDS.....	61
7.1.	Introduction	61
7.1.1.	Synchronization with the printer.....	61
7.1.2.	Basic format of status readback responses.....	61
7.2.	Inquire Command	62
7.3.	DINQUIRE Command.....	63
7.4.	ECHO Command	64
7.5.	INFO Command.....	65
7.5.1.	ID category	67
7.5.2.	CONFIG category	67
7.5.3.	MEMORY category	69
7.5.4.	STATUS category	70
7.5.5.	VARIABLES category	70
7.5.6.	USTATUS category	72
7.6.	USTATUS Command.....	73
7.6.1.	Device variable	74
7.6.2.	JOB variables.....	75
7.6.3.	PAGE variable.....	76
7.6.4.	TIMED variable	76
7.7.	USTATUSOFF Command	77
7.8.	JOB Recovery.....	77
8.	DEVICE ATTENDANCE COMMANDS	78
8.1.	Introduction	78
8.2.	RDYMSG Command.....	78
8.3.	OPMSG Command	79
8.4.	STMSG Command.....	79
9.	INDEX.....	81

1. INTRODUCTION

1.1. About PJJ

Printer Job Language(PJJ) provides job status control by sending the printer status information to the application. PJJ can be a valuable tool for the single-user environment, but is a much more useful tool for the networking / sharing environment.

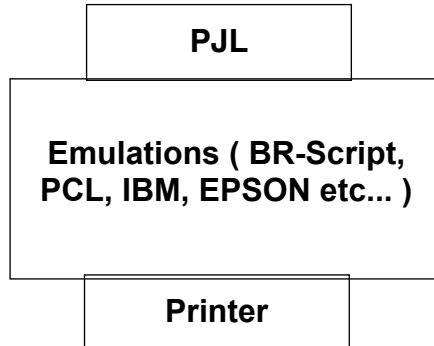

PJJ allows job-level control that cannot be accomplished with PCL, Postscript or other emulations. PJJ includes five major features.

(1) Printer language switching

With PJJ, it is possible to switch positively between the printer languages such as PCL, Postscript, Epson, IBM and Diablo directly from applications.

(2) Printer status readback

PJJ can provide information such as printer model, configuration, printer feature setting, error information and other status information to the application.

(3) Front panel control

PJJ can remotely control the printer's control panel settings and messages.

(4) Easy of utilization

All PJJ commands except the **UEL** command have a user-friendly construction using printable characters and English words.

(5) Spooler control

PJJ provides an improved spooler which can manage the printer better, particularly in a network environment.

Note :

The commands for Printer status readback or Front panel control can be invoked in modes other than PCL or BR-Script. However, the commands for printer status readback get the information from PCL or BR-Script and the commands for front panel control perform the settings for PCL or BR-Script.

1.2. In Case of Using PjL with a Non-PjL Printer

Our recent printer models support PjL, however, earlier models do not . If the PjL commands are sent to a non-PjL printer, the printer acts as follows;

1.2.1. PCL jobs

For a PCL printer which does not support the PjL language, the PjL command is printed as ASCII text until initial PCL printer reset command (<ESC>E) is received. After receiving the PCL reset command, the printer ejects the page and proceeds with the PCL print job on a new page.

The print job is possibly followed by more printed PjL commands.

Without the PCL reset command, the PjL commands are printed as ASCII text on the same page as the PCL print job.

1.2.2. Postscript jobs

For Postscript printers, when the printer receives a PjL command, a Postscript error is reported. The Postscript job is discarded.

1.2.3. Other printer languages

According to the active emulation, the PjL command is understood differently. To avoid the problem, you should not use PjL commands on any non-PjL printer.

1.3. PJP Syntax and Format

Syntax

<For Example>

@PJP ENTER LANGUAGE = emulation [<CR>] <LF>

@PJP PJP Prefix

ENTER Command name

LANGUAGE Option name

@PJP ENTER LANGUAGE Enter this portion verbatim

[] The words in brackets [...] indicates optional parameters. You should not type the brackets themselves in the command.

< .. > The words in < .. > indicates a control code character

<LF> Required line feed

< HT >	Horizontal tab character (ASCII 9)
< LF >	Line feed character (ASCII 10)
< CR >	Carriage Return (ASCII 13)
< SP >	Space (ASCII 32)
< ESC >	Escape (ASCII 27)
< FF >	Form Feed (ASCII 12)
< WS >	White space which consists of some < SP > and < HT >
< words >	Printable characters

Format

PJP commands have 4 types of formats as shown below.

Format 1 <ESC>%-12345X

This format is only used for the Universal Exit Language(UEL) command.

Format 2 @PJP [<CR>] <LF>

This format allows a PJP line without a command, and is used to break several PJP command lines visually, to make it easier to see the PJP command lines.

Format 3 @PJP command [<words>] [<CR>] <LF>

This format is used only for the COMMENT and ECHO commands.

**Format 4 @PJP command [command modifier : value]
option=value [<CR>] <LF>**

This format is used for all other PJP commands.

PJP Syntax Rules:

PJP Syntax should be written according to the following rules.

- "**@PJP**" must be uppercase. The other words of a PJP command are not case-sensitive.
- Spacing between characters consists of one or more of either the space character (ASCII 32) or the horizontal tab character(ASCII 9).
- White space should be placed as follows, depending on the location within the command.
 - ♦ White space must be placed between **@PJP** and the PJP command name and between the PJP command and command modifiers.
 - ♦ If a white space is placed in any other place in a command, it is optional.
 - ♦ If a white space is not placed between two portions of a command, the command is not valid.

1.4. Variables

PJL can use alphanumeric variables, numeric variables and strings.

1.4.1. Alphanumeric variables

The first character must always be a character in the allowable range of letters and digits. Letters consists of the uppercase characters (ASCII 65-90) and lowercase characters (ASCII 97-122). Digits consists of the numbers 0-9 (ASCII 48-57).

<Example>

Brother2245

1.4.2. Numeric variables

The number consists of digits with one optional decimal point and an optional + or - sign preceding the first digit.

<Example>

0.1234

-123.4

+123.0

<Wrong>

+.05

-.05

1.4.3. Strings

Strings consist of any combination of characters from ASCII 32 to 255, plus ASCII 9, except ASCII 34 (quotation marks), which are used to define the start and end of a string.

<Example>

"Print Job KKK"

"This is a sample string"

1.5. Invalid Commands

There are two general types of invalid commands. Each type operates differently.

Syntax errors include :

- unrecognized command and command modifier
- strings which are missing quotation marks
- numeric values which are missing digits before the decimal point

1.5.1. Syntax errors

Commands received with Syntax errors cause the printer to ignore the entire PJL command.

1.5.2. Syntax warning and semantic warning

Syntax warnings and semantic warnings are issued for commands which include unsupported options, values which are out of range, or wrong or missing commands, etc. When the printer receives commands which would create a syntax warning or semantic warning, it operates the command as long as possible, however, the portion of the command which would create a warning is ignored.

2. HOW TO USE PJJ

2.1. Overview

PJJ resides "above" printer languages such as Postscript and PCL. Each job can be distinguished from the other jobs by PJJ, and it can switch between PJJ commands and printer language commands for each job.

PJJ Code	PCL Job	PJJ Code	Postscript Job	PJJ Code
----------	---------	----------	----------------	----------

2.2. PJJ Job Requirement

Some conditions are required in order for PJJ commands to work correctly. Jobs which follow these conditions will work correctly with a PJJ printer in both single user and network environments.

- All PJJ jobs must begin and end with a **UEL** command.
- The **@PJJ** prefix must be placed immediately after the **UEL** command which starts PJJ jobs, and can be followed by **<CR>** and **<LF>**. Characters, including control characters, must not be placed between the **UEL** command and the **@PJJ** prefix.
- Nothing must be placed after the **UEL** command which ends a PJJ job.
- **<LF>** is required to terminate all PJJ commands. **<CR>** can be placed before **<LF>**, however, **<CR>** is optional and is ignored.
- Blank lines must not exist. If a blank line is required, the **@PJJ <CR><LF>** line can be used.

3. COMMAND GROUP

Command Group	Command	Command Description
Kernel Commands	UEL	Exits current printer language and returns control to PJI.
	EXECUTE	Orders the printer to execute the specified operation.
	COMMENT	Comments can be placed in the command line
	ENTER	Selects a printer language
Job Separation Commands	JOB	Informs printer of job start
	EOJ	Informs printer of job end
Environment Commands	DEFAULT	Sets default value
	SET	Sets an environment value which is available during a PJI job
	INITIALIZE	Resets the current and default PJI variables to factory values
	RESET	Resets current PJI variables to default values
Status Readback Commands	INQUIRE	Requests the current value for a specified environment
	DINQUIRE	Requests the default value for a specified environment
	ECHO	Returns the <words> to the host computer
	INFO	Requests a specified category.
	USTATUS	Allows the printer to send unsolicited status information
	USTATUSOFF	Stops the printer sending all unsolicited status information
Device Attendance Commands	RDYMSG	Replaces the READY message on the control panel
	OPMSG	Displays altered message on the control panel and takes the printer off-line
	STMSG	Displays altered message on the control panel and takes the printer off-line. If status readback is enabled, returns name of the key.

4. KERNEL COMMANDS

4.1. Introduction

This section explains three PjL command, **UEL**, **ENTER** and **COMMENT**. These commands provide the minimum set of tools to operate job control.

UEL command (Universal Exit Command)
ENTER command
COMMENT command

4.2. UEL Command

The Universal Exit Command causes the printer to exit the current printer language and sets the printer into PjL mode.

Syntax

<ESC>%-12345X

- The **UEL** command is a data stream sequence.
- The **UEL** command indicates to the current printer language to finish a job. If PjL is available, PjL commands which have not yet been executed are cancelled and the printer is ready to accept the next PjL command.
- The **UEL** command must be placed in the first and last position of all PjL job command sequences.
- Printers which have an Automatic I/O switching feature can use the **UEL** command in order to set job boundaries.
- The **@PjL** prefix which is placed at the beginning of a PjL job must follow immediately after the **UEL** command.
- If the printer receives codes other than the PjL prefix, it enables the default printer language and prints the job.
- **ENTER** command should be used in order to specify the printer language.

Example

```
<ESC>%-12345X@PjL<CR><LF>
@PjL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E.....PCL JOB.....<ESC>E
<ESC>%-12345X
```

4.3. EXECUTE Command

The **EXECUTE** command orders the printer to execute the specified operation.

This command is supported only by HL-1050/1070/1250/1270N/1450/1470N/P2500/2400C/2400Ce/3400CN/1650/1670N/3260N/2460/7050/1850/1870N/5040/5050/5070N/5140/5150D/5170DN/2600CN/3450CN/6050/6050D/6050DN/8050N/2700CN/2070N/5240/5250DN/5270DN/5280DW/4040CN/4050CDN/4070CDW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/3040CN/3045CN/3070CW/3075CW/2130/2240D/2250DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/1118/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDW/L3230CDN/L3210CW printers.

Syntax

@PjL EXECUTE operation [<CR>]<LF>

Parameters

- *operation*
 - SHUTDOWN : The printer goes into sleep mode.
 - DEMOPAGE : The printer prints the demo page.
 - RESIFONT : The printer prints the list of resident fonts.
 - PERMFONT: The printer prints the list of permanent download fonts.
 - PRTCONFIG: The printer prints the list of printer settings.

- If the printer receives this command, it immediately executes the specified operation.
- If this command specifies an operation which is not supported, this command is ignored.

Example

```
<ESC>%-12345X@PJL<CR><LF>
@PJL EXECUTE DEMOPAGE <CR><LF>
<ESC>%-12345X
```

4.4. ENTER Command

The **ENTER** command specifies which emulation the printer uses to print data.

Syntax

```
@PJL ENTER LANGUAGE = emulation [<CR>] <LF>
```

Parameters

- *emulation*
The variables depend on the printer model.
- The **ENTER** command must be placed immediately before print data.
- The specified emulation will be used immediately after the terminating <LF> of the **ENTER** command.
- If the printer does not receive the **ENTER** command, it uses the default printer language which is set by the control panel or the printer language which is set by the **SET PERSONALITY** command.
- When a printer emulation is selected by the **ENTER** command, the printer must switch to the defined printer language.
- If this command specifies an emulation which is not supported, data after this command is ignored until the next UEL command.

Example

```
<ESC>%-12345X@PJL<CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E.....PCL JOB.....<ESC>E
<ESC>%-12345X
@PJL COMMENT Start of Postscript job <CR><LF>
@PJL ENTER LANGUAGE = POSTSCRIPT <CR><LF>
%!PS-ADOBE.....Postscript JOB.....^D
<ESC>%-12345X
@PJL COMMENT End of Postscript job <CR><LF>
<ESC>%-12345X
```

4.5. COMMENT Command

The **COMMENT** command is used to add an information line, such as an explanation for the PJJ command.

Syntax

```
@PJL COMMENT remarks [<CR>] <LF>
```

Parameters

- *remarks*
Printable characters (ASCII 33-255) and White space which contains <HT> and <SP>)
- The **COMMENT** command is helpful for placing an explanation of a PJJ command.
- The **COMMENT** command can be placed on the PJJ line anywhere between the UEL command and the **ENTER** command.
- The **COMMENT** command is terminated by <LF>.
- Comments can only be one line long. If you wish to add more text, start a new comment line.

Example

```
<ESC>%-12345X@PJL<CR><LF>
@PJL COMMENT -----<CR><LF>
@PJL COMMENT --      PCL & PS JOB      --<CR><LF>
@PJL COMMENT -----<CR><LF>
@PJL <CR><LF>
@PJL SET RET = ON <CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E.....PCL JOB.....<ESC>E
<ESC>%-12345X@PJL<CR><LF>
@PJL COMMENT Start of Postscript job <CR><LF>
@PJL ENTER LANGUAGE = POSTSCRIPT <CR><LF>
%!PS-ADOBE.....Postscript JOB.....^D
<ESC>%-12345X@PJL<CR><LF>
@PJL COMMENT End of Postscript job <CR><LF>
<ESC>%-12345X
```

4.6. Printer Language Switching

There are three methods of switching printer languages.

4.6.1. Explicit switching

Explicit switching means the method which uses the PJL ENTER LANGUAGE command to switch to the desired emulation. As the desired emulation is explicitly specified, this method is the most reliable.

4.6.2. Implicit switching

If a default printer language is configured, and the PJL ENTER command is not described on a PJL line, the printer uses the default printer emulation. This may not always select your desired emulation.

4.6.3. Context switching

If the printer is set to 'automatic emulation selection' and the PJL ENTER command is not described in the PJL command, the printer investigates the incoming data and decides the required printer emulation. The printer can select the printer language by this switching, however, the PJL ENTER command is recommended to select the printer language accurately.

5. JOB SEPARATION COMMANDS

5.1. Introduction

This section explains two PJI command, **JOB** and **EOJ**. These commands are used to determine the boundaries of a job. When these commands are used with status readback, the printer also can send status information at the beginning and end of each job.

5.2. JOB Command

The **JOB** Command sends information at the start of a PJI job to the printer and aligns the job with the page status information. It also specifies which pages of a job are to be printed.

Note:

JOB and EOJ command are always used in pairs. You must not use one without the other.

Syntax

```
@PJI JOB [NAME = "job name"] [START = first page] [END = last page]
[PASSWORD = "password"] [<CR>] <LF>
```

- NAME = "job name"
This option NAME describes the print job as a job name. Printable characters (ASCII 33-255) and spaces or horizontal tab characters can be used for the job name. It can contain 80 characters max. and must be enclosed in double quotes. If the NAME option is set, the job name is included in the unsolicited job.
- START = first page
This option START is used to provide a non-printing mode. You can specify from which page printing is to start. If the START option is not set, the printer starts printing at the beginning of the job.
first page = 1 to 2,147,483,647 Default value = 1
- END = last page
The END option indicates the page number of the last page to be printed. If the END option is not set, the printer prints to the end of the job. If the end of job is encountered before the START page, no pages are printed. If the end of job is encountered before the END page, printing terminates.
last page = 1 to 2,147,483,647 Default value = prints entire job
- PASSWORD = password (HL-1660e/2060/2400C/2400Ce/3400CN/1650/1670N/3260N/2460/7050/1850/1870N/5040/5050/5070N/5140/5150D/5170DN/2600CN/2700CN/3450CN/6050/6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/4040CN/4050CDN/4070CDW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/3040CN/3045CN/3070CW/3075CW/2130/2240D/2250DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/ HL-1212W, 1210W, 1210WR, 1212WR, 1210WE, 1211W, 1218W/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDW/L3230CDN/L3210CWonly)
When the password is set by the DEFAULT command, modifying the NVRAM by using the DEFAULT or INITIALIZE commands is locked with the password. Sending the correct password with this command can unlock this until the EOJ command is executed.
password = 0 to 65,535 Default value = 0
When the printer receives the **JOB** command, the **UEL** command is not recognized as a job boundary until an **EOJ** command is received.
- If the **UEL** command is placed between the **PJI JOB** and **EOJ** commands, it is handled as a printer language reset. In this case, UEL resets the printer environment to the PJI Current environment, not to the User Default Environment.
- If your application supports status readback capabilities, you can monitor the job status by the **USTATUS** command with the **JOB** option.
- If job status is available and a **JOB** command is received, the printer returns a job status message.

Note:

Resetting the page count according to unsolicited page status information does not affect the current page.

Example

```
<ESC>%-12345X@PJL<CR><LF>
@PJL JOB NAME = "KKK data from spooler" <CR><LF>

<ESC>%-12345X@PJL<CR><LF>
@PJL COMMENT Postscript Job <CR><LF>
@PJL JOB NAME = "YYY data from spooler 2" <CR><LF>
@PJL ENTER LANGUAGE = POSTSCRIPT <CR><LF>
%!PS.....PS JOB.....^D
<ESC>%-12345X@PJL<CR><LF>
@PJL EOJ NAME = "End of YYY data" <CR><LF>

<ESC>%-12345X@PJL <CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E.....PCL JOB.....<ESC>E
<ESC>%-12345X@PJL <CR><LF>
@PJL EOJ NAME = "End of KKK" <CR><LF>
<ESC>%-12345X@PJL <CR><LF>
```

5.3. EOJ Command

The **EOJ** command indicates to the printer that the job is completed. You must use this command whenever you use the **JOB** command.

Note:

JOB and EOJ command always are used in pairs. You must not use one without the other.

Syntax

```
@PJL EOJ [NAME = "job name"] [<CR>] <LF>
```

- NAME = "job name"
The **EOJ** command can name the print job. The job name is a string and must be enclosed in double quotes in the command syntax. The job name need not be same as the "job name" of the **JOB** command. If the NAME option is described, the unsolicited end-of-job status includes the job name. Job names can use printable characters (ASCII 33-255) and spaces or horizontal tab characters up to a maximum of 80 characters.
- The **EOJ** command indicates the end of a job.
- Resets the PJL Current Environment variables to the default values.
- Terminates the non-printing mode.
- When the **EOJ** command is received, the printer returns unsolicited job status information.
- The **EOJ** command resets the page number associated with unsolicited page status.

Example

```
<ESC>%-12345X@PJL<CR><LF>
@PJL JOB NAME = "KKK data from spooler" <CR><LF>
<ESC>%-12345X@PJL<CR><LF>
@PJL COMMENT Postscript Job <CR><LF>
@PJL JOB NAME = "YYY data from spooler 2" <CR><LF>
@PJL ENTER LANGUAGE = POSTSCRIPT <CR><LF>
%!PS.....PS JOB.....^D
<ESC>%-12345X@PJL<CR><LF>
@PJL EOJ NAME = "End of YYY data" <CR><LF>
<ESC>%-12345X@PJL<CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E.....PCL JOB.....<ESC>E
<ESC>%-12345X@PJL<CR><LF>
@PJL EOJ NAME = "End of KKK" <CR><LF>
<ESC>%-12345X
```

6. ENVIRONMENT COMMANDS

6.1. Introduction

Our recent printers have many features which you are able to set using printer commands, through the printer control panel or by using the remote printer console program. A combination of PJJL commands and printer emulation commands allows you to set printer features to the desired state.

This chapter describes the setting of printer features known as printer environments, PJJL commands you are able to use to set printer features to a desired state are as follows;

- **DEFAULT**
Set the default value for environment variables. (storing them in non volatile RAM , so called NV-RAM)
- **INITIALIZE**
Reset the current and default PJJL variables to the factory default values
- **RESET**
Reset the current PJJL values to the default values
- **SET**
Set an environment variable to a specified value until the next PJJL reset condition.

6.1.1. Print environment

The printer constantly maintains four environments, which are listed below in priority order

1. Factory Default Environment

These environment setting values are permanently stored in the printer. The printer uses these settings when it is powered on for the first time after shipping from the factory, and after the @PJJL INITIALIZE command is performed.

2. User Default Environment

These environment setting values are stored in the printer's NV-RAM and can be altered through the printer's control panel or by using the Remote Printer Console software or the @PJJL DEFAULT command. These values are placed into the PJJL Current Environment following any PJJL reset condition.


3. PJJL Current Environment

These environment setting values contain the current PJJL feature settings. Current settings are based on the User Default values and include any settings modified by the @PJJL SET command. These settings are changed to the User Default values when a PJJL reset occurs.

4. Modified Print Environment

These environment settings become active just after a printer language is entered. At that time, the PJJL Current environment values are loaded into the Modified Print Environment and act as a base set of features. Then, Printer language commands are used to change or modify feature settings to the desired state. Whenever an emulation is activated or a reset command is received (a reset command includes any printer language reset or PJJL reset), the PJJL Current environment settings are loaded into the Modified Print environment.

The diagram below illustrates how the environments interact and how the modified print environment is affected.

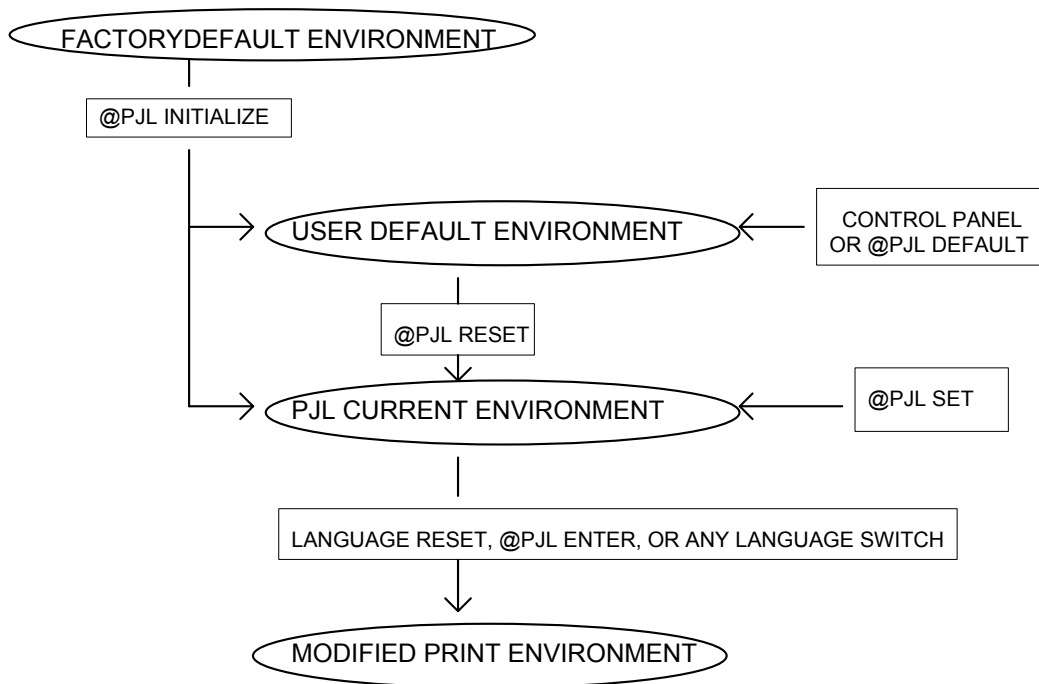

6.1.2. PDL reset conditions

The result of PDL reset condition is different from that of a printer language reset (for example, **ESC E**). Printer language reset loads the PDL Current Environment values into the Modified Print Environment. PDL reset conditions load the User Default values into the PDL Current Environment, which are then loaded into the Modified Print Environment.

PDL reset occurs on the following events.

1. Power on
2. **UEL** command (when not between a **JOB** and **EOJ** command pair)
3. **@ PDL INITIALIZE** command
4. **@ PDL RESET** command
5. **@ PDL JOB** or **EOJ** command
6. Other printer-specific events
7. Reset from Control Panel
8. Language specific exit command
9. Emulation switching command

6.1.3. Remember these points about environments

Remember the following points when you use PDL to set the printer to a desired state.

1. The current feature settings are the same as the control panel values (or values in the remote printer console program) when beginning a PDL job.
2. The current feature settings (Modified Print Environment) become the same as the PDL Current Environment when the printer enters a printer language. The feature settings are modified by the printer language command once a printer language is started. All other settings are overridden by printer language commands.
3. The **SET** command changes the PDL Current Environment settings. These settings are effective until the next PDL reset condition.
4. Control Panel settings, the remote printer console program settings or the **DEFAULT** command changes the User Default Environment.
5. Printer language commands change the Modified Print Environment. These settings are effective during a printer language job. The PDL Current Environment settings are loaded into the Modified Print Environment by a printer language specific reset, for example, **ESC E** for PCL.

6. Always use the **PJL RESET** command after a job is completed if the **SET** command is used in the PJL job.

6.1.4. PJL environment variables

This section lists the PJL environment variables. There are two kinds of PJL environment variables, General PJL environment variables and Printer language -specific variables. For all variables, except the read-only variables, value settings can be modified using **@PJL SET**, **@PJL RESET**, **@PJL DEFAULT**, and **@PJL INITIALIZE**.

By using the **@ PJL INQUIRE** and **@ PJL DINQUIRE**, you can request value settings for the printer features. For the details of these commands, see the next section.

Note:

1. *Use PJL commands only when no printer language commands are available for a desired feature.*
2. *When setting printer features with PJL, use the SET and RESET commands when you want to affect the current PJL job only.*

If you want to affect more than the current job, use the DEFAULT and INITIALIZE commands.

3. *Supported variables depend on your printer model.*

6.2. Variables

6.2.1. Variables for HL-1050/1070/1250/1270N/1450/1470N/P2500/1650/1670N/3260N/2460/7050/1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/HL1111/1112/1118/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW /L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDW/L3230CDN/L3210CW

1. General PJJ Environment Variables

The PJJ environment variables which are not printer language-specific are listed in the following table. When using these variables, do not use LPARM.

Variables	Description	Sample Value Range
COPIES	Number of uncollated copies for each page of the job.	1 to 200 (HL-1050/1070) 1 to 99 (HL-1250/1270N/1450/1470N/P2500) 1 to 999 (HL-1650/1670N/3260N/ 2460/7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/6050/6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/ 5370DW/5380DN/2130/2240D/2250DN/2270DW/4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/1118/L82 50CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321 D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212 WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L520 2DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L237 0DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312 D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW/L3270 CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
MANUALFEED	Feeds the paper from manual feed slot.	ON or OFF
ECONOMODE	Turn the economy mode (toner saving mode) ON or OFF.	ON or OFF
ECONOLEVEL	Selects the toner saving level from 1 (high) to 3 (low).	1 to 3 0 to 3 (HL-1650/1670N/3260N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N)
PERSONALITY	Sets the emulation mode.	AUTO, PCL, IBM, EPSON, POSTSCRIPT (HL- 1050/1070/1250/1270N/1450/1470N/P2500/1650/1670N/1850/1870N/5050/5070N/5150D/5170DN/6050/6050D/6050DN/8050N/5240/5 250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/5440D/5450DN/5470DW/6180DW) AUTO, PCL, IBM, EPSON, POSTSCRIPT, HPGL (HL-3260N/2460/7050) AUTO, PCL, IBM, EPSON (HL-2070N) AUTO,PCL,POSTSCRIPT(HL- S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ PCL(HL-5040/5140/2150N/2170W/2130/2240D/2250DN/2270DW/ L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW) AUTO, PCL, POSTSCRIPT(HL-4140CN/ 4150CDN/4570CDW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L23 70DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW) AUTO, PCL, PCLXL, IBM, EPSON, POSTSCRIPT (HL- L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L 6300DW(T)/L6400DW(T)/L6402DW)
INPUTBUF	Sets the receiving buffer size value.	1 to 15 (HL-1650/1670N/2460/ 7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240 D/2250DN/2270DW) 1 to 7 (HL-4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T) /L9200CDW(T)/L9300CDW(T))L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305 W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/ /1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L 6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWX L/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L231 0DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW/L3270CDW/3 190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)

Variables	Description	Sample Value Range
XOFFSET	Sets the X offset (horizontal offset) value.	-500 to 500 dots (HL-1050/1070/1250/1270N/1450/1470N/P2500/ 1650/1670N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2 270DW /4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/1118/L82 50CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321 D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212 WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L520 2DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402D/L2385DW/L2386DW/2595DW/L2370DW/L2370 DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D /L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW/L3270C DW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
YOFFSET	Sets the Y offset (vertical offset) value.	-104 to 500 dots (HL-3260N)
AUTOCONT	Auto Continue Mode	-500 to 500 dots
TIMEOUTEMU	Sets the time-out value for automatic emulation switching.	ON or OFF
PRIORITY	Sets the priority between EPSON or IBM for automatic emulation	1 to 99 seconds
HPFSEL		EPSON or IBM
		ALL, LJ4 (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW /4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T) /L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305 W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W /1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L62 50DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B 2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335 D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L32 30CDN/L3210CW)
AUTOFF	Sets the auto FF setting to ON or OFF.	ON or OFF
TIMEOUTFF	Sets the timeout value for auto FF.	1 to 99 seconds
TIMEOUT	Sets the timeout value for Automatic interface switching	1 to 99 seconds
CDCCHIGH	Sets the high-speed transfer mode of the Centronics interface to ON or	ON or OFF (HL-1050/1070/1250/1270N/1450/1470N/P2500)
DTRCTRL	Selects when DTR becomes low. 0 = the printer is turned off-line by the SEL switch, the input buffer is full, or when a printer error occurs. 1 = the printer is turned off-line by the SEL switch or when a printer error 2 = the printer is turned off-line by the SEL switch. 3 = the printer is never turned off-line.	0 to 2(HL-1050/1070/1250/1270N/1450/1470N/P2500) 0 to 3(HL-1650/1670N/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN)
AUTOSLEEP	Sets the automatic sleep mode ON or OFF.	ON or OFF
TIMEOUTSLEEP	Sets the timeout value for automatic sleep mode.	1 to 00 minutes 1 to 99 minutes (HL-1650/1670N/ 2460/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/2140/2150N/2170W) 1 to 240 minutes (HL-3260N/ 7050/6050/6050D/6050DN/8050N/ 2070N/5240/5250DN/5270DN/5280DW) 1 to 210 minutes (HL-5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2270DW /4140CN/ 4150CDN/4570CDW) 1 to 90 minutes (HL-5440D/5450DN/5470DW/6180DW) 0 to 90 minutes (HL- S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L 8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L23 65DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100 DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
		0 to 50 minutes (HL- L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L23 72DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L235 0DWR//L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
IBMCHARE1		BETA or ESSZET
REPRINT	Sets the reprint function ON or OFF.	ON or OFF (HL-1050/1070/1250/1270N/1450/1470N/P2500)

Variables	Description	Sample Value Range
		ON, OFF or JOB (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN)
DEMOPRINT	Enables the Demo page printing.	OFF or JOB(HL-4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/3140CW/3150CDW/3150CDN/3170CDW) ON or OFF (HL-1050/1070/1250/ 1270N/1450/1470N/P2500/1650/ 1670N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2270DW /4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CD W(T)/L9300CDW(T)/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365D W/L2366DW/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW /L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
PAGEPROTECT	Configuration of the Page protection mode. This mode reserves a block of printer memory to avoid 31 PRINT OVERRUN errors.	AUTO, OFF, LETTER, LEGAL, A4
RESOLUTION	Printer resolution setting. If the printer can not print a large file at 600 dpi because of insufficient memory, the printer decreases the resolution to 300 dpi automatically	600(HL-S7000DN/HL-3140CW/HL-3150CDW/HL-3150CDN/HL-3170CDW) 1200 (HL-1650/1670N/2460/ 7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240 D/2250DN/2270DW/5440D/5450DN/5470DW/6180DW/ L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW /1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370D W/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310 D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351D W/L3270CDW/3190CDW/3160CDW/L3230CDW/L3230CDN/L3210CW) 300, 600 (Except the above model)
LANG	Selects the language for the RPC program.	ENGLISH, FRENCH, GERMAN, DUTCH, NORWEGIAN (HL-1050/1070/1250/1270N/1450/1470N/P2500) ENGLISH, FRENCH, GERMAN, DUTCH, NORWEGIAN, SPANISH, ITALIAN, SWEDISH, DANISH, JAPANESE (HL- 1650/1670N/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN) ENGLISH, FRENCH, GERMAN, DUTCH, SPANISH, ITALIAN, DANISH (HL-3260N) ENGLISH, FRENCH, GERMAN, DUTCH, SPANISH, ITALIAN, NORWEGIAN, DANISH, SWEDISH (HL-2460/7050) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN, NORWEGIAN,DANISH, PORTUGUESE (HL-6050/ 6050D/6050DN) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN, PORTUGUESE(HL-8050N) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN, NORWEGIAN,FINNISH, PORTUGUESE,DANISH, SWEDISH (HL-2070N) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN, PORTUGUESE(HL-8050N) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN, NORWEGIAN,FINNISH, PORTUGUESE,DANISH, HUNGARIAN,RUSSIA,BULGARIAN,ROMANIAN (HL-5240/5250DN/5270DN/5280DW) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN, NORWEGIAN,FINNISH, PORTUGUESE,DANISH, SWEDISH,CZECH,POLISH,HUNGARIAN,RUSSIA,BULGARIAN,ROMANIAN,SLOVAKIAN,BRAZILIAN (HL-2140/2150N/2170W) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN, NORWEGIAN,FINNISH, PORTUGUESE,DANISH, SWEDISH,CZECH,POLISH,HUNGARIAN,RUSSIA,BULGARIAN,ROMANIAN,SLOVAKIAN,BRAZILIAN,TURKISH, JAPANESE (HL- 5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2270DW /4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW) ENGLISH,FRENCH,GERMAN, DUTCH,SPANISH,ITALIAN,DANISH,BRAZILIAN, JAPANESE (HL-S7000DN) ENGLISH,FRENCH,GERMAN,DUTCH,SPANISH,ITALIAN,NORWEGIAN,PORTUGUESE,DANISH,SWEDISH,FINNISH,CZECH,POLIS H,HUNGARIAN, RUSSIAN,BULGARIAN,ROMANIAN,SLOVAKIAN,BRAZILIAN,TURKISH,CROATIAN,SLOVENE(HL-3140CW/HL- 3150CDW/HL-3150CDN/HL-3170CDW)

Variables	Description	Sample Value Range
		ENGLISH, FRENCH, GERMAN, DUTCH, SPANISH, ITALIAN, NORWEGIAN, PORTUGUESE, DANISH, SWEDISH, FINNISH, CZECH, POLISH, HUNGARIAN, RUSSIAN, BULGARIAN, ROMANIAN, SLOVAKIAN, BRAZILIAN, TURKISH, CROATIAN, SLOVENE, JAPANESE(HL- L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
		ENGLISH, FRENCH, GERMAN, DUTCH, SPANISH, ITALIAN, NORWEGIAN, PORTUGUESE, DANISH, SWEDISH, FINNISH, CZECH, POLISH, HUNGARIAN, RUSSIAN, BULGARIAN, ROMANIAN, SLOVAKIAN, BRAZILIAN, TURKISH, CROATIAN, SLOVENE, JAPANESE, CHILI, INDONESIAN, SIMPLIFIEDCHINESE, TRADITIONALCHINESE, KOREAN(HL- L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
KEEPPCL	If set to ON, the printer keeps the permanent fonts and macros of PCL when the emulation is changed to another mode.	ON or OFF (Except for HL-2070N)
CONTEXTSWITCH	Auto emulation mode	ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
DOUBLESTRIKE	Enables bold printing in IBM or EPSON mode	ON or OFF
CPLOCK	Returns the lock status of the control panel. If OFF, the control panel is unlocked. If ON, the control panel is locked.	OFF, ON (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN2130/2240D/2250DN/2270DW/4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
PASSWORD	Password for panel lock to write to the NVRAM with the DEFAULT/INITIALIZE command.	0 to 65535 (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN2130/2240D/2250DN/2270DW/4140CN/ 4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
BIDI		ON or OFF (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)

Variables	Description	Sample Value Range
POWERSAVE	Sets the power save mode ON or OFF.	ON or OFF (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2270DW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/ L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW) HL-1212W, 1210W, 1210WR, 1212WR, 1210WE, 1211W, 1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B 2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335 D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L32 30CDN/L3210CW)
POWERSAVETIM E	Sets the time saving value for power save mode.	1 to 99 (HL-1650/1670N/2460/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/2070N/2140/2150N/2170W) 1 to 240 (HL-3260N/7050/6050/ 6050D/6050DN/8050N/5240/5250DN/5270DN/5280DW) 1 to 210 (HL-5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2270DW /4140CN/ 4150CDN/4570CDW) 1 to 90 (HL- 5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L930 0CDW(T)/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366D W/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN /L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595 DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/ 2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352 DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
MEDIATYPE	Media Type. The temperature of fixing unit is adjusted depending on this setting.	REGULAR, THICK, THICK2, THIN, BOND, TRANSPARENCY (HL-1650/1670N) REGULAR, THICK, TRANSPARENCY (HL-3260N) REGULAR, THICK, THICK2, TRANSPARENCY, BOND, ENVELOPES (HL-2460) REGULAR, THICK, THICK2, TRANSPARENCY, BOND, ENVELOPES, THIN (HL-7050) REGULAR, THICK, THICK2, TRANSPARENCY, THIN, BOND, ENVELOPES, ENVTHICK, ENVTHIN (HL-1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN) REGULAR, THICK, THICK2, TRANSPARENCY, THIN, BOND, ENVELOPES, ENVTHIN, RECYCLED (HL-6050/6050D/6050DN) REGULAR, THICK, THICK2, TRANSPARENCY (HL-8050N) REGULAR, THICK, THICK2, TRANSPARENCY, THIN, BOND, ENVELOPES, ENVTHICK, ENVTHIN, RECYCLED (HL- 2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN) REGULAR, THICK, THICK2, ENVELOPES, BOND, THIN, RECYCLED, ENVTHICK, ENVTHIN, POSTCARD, LABEL (HL- 2130/2240D/2250DN/2270DW/5440D/5450DN/5470DW/6180DW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L23 60DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2 375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L 2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW) REGULAR, THICK, THICK2, ENVELOPES, BOND, THIN, RECYCLED, ENVTHICK, ENVTHIN, POSTCARD, LABEL, GLOSSY (HL- 4140CN/4150CDN/4570CDW) REGULAR, THICK, THIN, RECYCLED, BOND, POSTCARD (HL-S7000DN) REGULAR, THIN, RECYCLED (HL-3140CW/HL-3150CDW/HL-3150CDN/HL-3170CDW) REGULAR, RECYCLED (HL-1110/HL-1111/HL-1112/HL-1118/HL- 1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208) REGULAR, THICK, THICK2, THIN, RECYCLED, BOND, ENVELOPES, ENVTHICK, ENVTHIN, POSTCARD, LABEL, GLOSSY (HL- L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ REGULAR, THICK, THICK2, THIN, BOND, ENVELOPES, ENVTHICK, ENVTHIN, RECYCLED, POSTCARD, LABEL, COLOR, HOLEPUNCHED (HL- L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L 6300DW(T)/L6400DW(T)/L6402DW)

Variables	Description	Sample Value Range
		REGULAR,THICK,THICK2,ENVELOPES,BOND,THIN, RECYCLED,ENVTHICK, ENVTHIN,POSTCARD,LABEL,GLOSSY (L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
RET	Configuration of the High Resolution Control hardware.	LIGHT, MEDIUM, DARK, OFF (HL-1650/1670N/3260N/2460/ 7050/1850/1870N/5040/5050/ 5070N/ 5140/5150D/5170DN/ 6050/6050D/6050DN/8050N)
IMAGEADAPT		OFF, ON AUTO (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2 270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/ L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2 321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW) HL-1212W, 1210W, 1210WR, 1212WR, 1210WE, 1211W, 1218W/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
INTRAY 1 (Read Only)	Returns the auto-selection lock status for the MP tray. Returns the auto-selection lock status for the Tray1 (HL-8050N)	LOCKED, UNLOCKED (HL-1650/1670N/3260N/2460/ 7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5 450DN/5470DW/6180DW/S7000DN/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L 9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L 6250DW/L6300DW(T)/L6400DW(T)/L6402DW/2595DW/L2386DW/L2385DW)
INTRAY 2 (Read Only)	Returns the auto-selection lock status for the upper paper tray. Returns the auto-selection lock status for the Tray2 (HL-8050N)	LOCKED, UNLOCKED (HL-1650/1670N/3260N/2460/ 7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/8050N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240 D/2250DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CD W/1110/1111/1112/1118/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L23 66DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L510 2DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/ L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L23 72DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L235 0DWR/L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
INTRAY 3 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette. Returns the auto-selection lock status for the Tray3 (HL-8050N)	LOCKED, UNLOCKED (HL-1650/1670N/3260N/2460/ 7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180 DW/S7000DN/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/55 80D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
INTRAY 4 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette. Returns the auto-selection lock status for the Tray4 (HL-8050N)	LOCKED, UNLOCKED (HL- 3260N/2460/7050/8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/S7000DN/L9300CDW(T)/L8260CDN/L826 0CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
INTRAY 5 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette.	LOCKED, UNLOCKED (HL- 3260N/2460/7050/S7000DN/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T) /5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
INTRAY 6 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette.	LOCKED, UNLOCKED (HL- L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L520 2DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)

Variables	Description	Sample Value Range
INTRAY1SIZE	Selects the paper size in Tray1.	LETTER, LEGAL, EXECUTIVE, A3, A4, B5, A5, A6, COM10, C5, DL, MONARCH, LEDGER, JISB4, LTRS, A4S, EXECUTIVES, B5S (HL-3260N)
	Selects the paper size in MP Tray (HL-7050/6050/6050D/6050DN/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN).	LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, COM10, DL, MONARC, C5, A4LONG, CUSTOM (HL-2460)
		LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, COM10, DL, MONARC, C5, A4LONG, ANY (HL-7050)
		LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, COM10, DL, MONARC, C5, A4LONG, ANY, FOLIO, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERM, ORGANIZERL, USERDEFINED, DLL (HL-6050/6050D/6050DN/5240/5250DN/5270DN/5280DW)
		LETTER, LEGAL, EXECUTIVE, A4, B5, A5, A6, JISB5, B6, COM10, C5, DL, MONARCH (HL-8050N)
		LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, COM10, DL, MONARC, C5, A4LONG, ANY, FOLIO, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERM, ORGANIZERL, USERDEFINED, DLL, A5L, ENVYOU4, ENVCHOU3, P3X5 (HL-5340D/5350DN/5370DW/5380DN)
		ANY,LETTER,LEGAL,A4,EXECUTIVE,COM10,DL,JISB5,B5,A5,A5L,B6,A6,MONARCH,C5,FOLIO,DLL,POSTCARD,USERDEFINED,ENVYOU4,ENVCHOU3,P3X5,ROC16K,SIXTEENK195X270,SIXTEENK184X260 (HL-4140CN/4150CDN/4570CDW)
		ANY,LETTER,LEGAL,A4,EXECUTIVE,COM10,DL,JISB5,B5,A5,A5L,B6,A6,MONARCH,C5,FOLIO,DLL,POSTCARD,USERDEFINED,ENVYOU4,ENVCHOU3,P3X5,ROC16K,SIXTEENK195X270,SIXTEENK184X260(HL-5440D/5450DN/5470DW/6180DW)
		ANY,LETTER,LEGAL,A4,EXECUTIVE,JISB5,B5,JISB6,A5,A5L,A6,FOLIO,P3X5,POSTCARD (HL-S7000DN)
		LETTER, LEGAL, A4, EXECUTIVE, COM10, DL, JISB5, B5, A5, A6, MONARCH, C5, FOLIO, P3X5, POSTCARD, ENVYOU4, ENVCHOU3, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260(HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))
INTRAY2SIZE	Selects the paper size in Tray2.	LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, JIS B6, A6, POSTCARD, FOLIO, P3X5, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
	Selects the paper size in Tray1 (HL-7050/6050/6050D/6050DN/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN).	LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, JISB5, A5, POSTCARD, FOLIO, A5L, SIXTEENK195X270 (HL-2595DW/L2386DW/L2385DW)
		LETTER, LEGAL, EXECUTIVE, A3, A4, B5, A5, A6, COM10, C5, DL, MONARCH, LEDGER, JISB4, LTRS, A4S, EXECUTIVES, B5S (HL-3260N)
		A4, LETTER, B5, EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NO CASSETTE (HL-2460)
		A4LETTER, B5EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NOCASSETTE (HL-7050)
		A4LETTER, B5EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4, LETTER, JISB5, B5, EXECUTIVE, FOLIO, POSTCARD, NOCASSETTE (HL-6050/6050D/6050DN)
		LETTER, LEGAL, EXECUTIVE, A4, B5, A5, A6, JISB5, B6, COM10, C5, DL, MONARCH (HL-8050N)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO(HL-5240/5250DN/5270DN/5280DW)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD, A5L(HL-5340D/5350DN/5370DW/5380DN)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD, A5L, JISB6 (HL-4140CN/4150CDN/4570CDW)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-5440D/5450DN/5470DW/6180DW)

Variables	Description	Sample Value Range
		ANY,LETTER,LEGAL,A4,EXECUTIVE,JISB5,A5,A5L,FOLIO(HL-S7000DN) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, A6, FOLIO, POSTCARD, A5L, JISB6 (HL-3140CW/HL-3150CDW/HL-3150CDN/HL-3170CDW) LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, A6, FOLIO, POSTCARD, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260(HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW) LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, FOLIO, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, JISB5, A5, POSTCARD, FOLIO, A5L, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, JISB5, A5, POSTCARD, FOLIO, A5L, SIXTEENK195X270 (HL-L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, JISB5, A5, A6, POSTCARD, FOLIO, A5L, SIXTEENK195X270(HL-L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
INTRAY3SIZE	Selects the paper size in Tray3.	LETTER, LEGAL, EXECUTIVE, A3, A4, B5, A5, A6, COM10, C5, DL, MONARCH, LEDGER, JISB4, LTRS, A4S, EXECUTIVES, B5S (HL-3260N)
	Selects the paper size in Tray2 (HL-7050/6050/6050D/6050DN/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/S7000DN).	A4, LETTER, B5, EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NO CASSETTE (HL-2460) A4LETTER, B5EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NOCASSETTE (HL-7050) A4LETTER, B5EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4, LETTER, JISB5, B5, EXECUTIVE, FOLIO, POSTCARD, NOCASSETTE (HL-6050/6050D/6050DN) LETTER, LEGAL, EXECUTIVE, A4, B5, A5, A6, JISB5, B6, COM10, C5, DL, MONARCH (HL-8050N) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, FOLIO(HL-5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, FOLIO, JISB6 (HL-4140CN/4150CDN/4570CDW) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-5440D/5450DN/5470DW/6180DW) ANY,LETTER,LEGAL,A4,EXECUTIVE,JISB5,A5,FOLIO(HL-S7000DN) LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260(HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
INTRAY4SIZE	Selects the paper size in Tray4.	LETTER, LEGAL, EXECUTIVE, A3, A4, B5, A5, A6, COM10, C5, DL, MONARCH, LEDGER, JISB4, LTRS, A4S, XECUTIVES, B5S

Variables	Description	Sample Value Range
	Selects the paper size in Tray3 (HL-7050/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/57000DN).	A4, LETTER, B5, EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NO CASSETTE (HL-2460) A4LETTER, B5EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NOCASSETTE (HL-7050) LETTER, LEGAL, EXECUTIVE, A4, B5, A5, A6, JISB5, B6, COM10, C5, DL, MONARCH (HL-8050N) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, FOLIO(HL-5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) ANY,LETTER,LEGAL,A4,EXECUTIVE, JISB5,A5,FOLIO(HL-S7000DN) LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260/(L9300CDW(T)) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
INTRAY5SIZE	Selects the paper size in Tray5.	LETTER, LEGAL, EXECUTIVE, A3, A4, B5, A5, A6, COM10, C5, DL, MONARCH, LEDGER, JISB4, LTRS, A4S, XECUTIVES, B5S (HL-3260N)
	Selects the paper size in Tray4 (HL-7050/S7000DN).	A4, LETTER, B5, EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NO CASSETTE (HL-2460) A4LETTER, B5EXECUTIVE, ENVELOPES, LEGAL, A5, B6, A6, A4LONG, NOCASSETTE (HL-7050) ANY,A4,LETTER,JISB5,A5,EXECUTIVE,LEGAL,FOLIO(HL-S7000DN) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
INTRAY6SIZE	Selects the paper size in Tray6.	LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
SOURCETRAY	Selects the paper source tray.	AUTO, MPTRAY, TRAY1, TRAY2 (HL-1650/1670N/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/6050DN/4140CN/4150CDN/4570CDW /5440D/5450DN/5470DW/6180DW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ AUTO, MPTRAY, TRAY1, TRAY2, TRAY3 (HL-5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) AUTO, TRAY1, TRAY2, TRAY3, TRAY4, MPTRAY (HL-3260N/2460/7050/S7000DN) TRAYID1, TRAYID2, TRAYID3, TRAYID4 (HL-2460/ 7050/S7000DN) AUTO, TRAY1, TRAY2, TRAY3, TRAY4 (HL-8050N) AUTO, TRAY1 (HL-2070N/2140/2150N/2170W/HL-3140CW/HL-3150CDW/HL-3150CDN/HL-3170CDW/HL-1110/HL-1111/HL-1112/HL-1118/ HL-1212W, 1210W, 1210WR, 1212WR, 1210WE, 1211W, 1218W L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW /1200/1201/1202/1208/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)

Variables	Description	Sample Value Range
MPTRAYSIZE		AUTO, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL-L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
		AUTO, MPTRAY, TRAY1 (HL-2595DW/L2386DW/L2385DW)
		LETTER, LEGAL, EXECUTIVE, A3, A4, B5, A5, A6, COM10, C5, DL, MONARCH, LEDGER, JISB4, LTRS, A4S, EXECUTIVE, B5S (HL-3260N)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, COM10, MONARCH, C5, DL, DLL, B5, A5, A6, B6, JISB5, A4LONG, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERL, ORGANIZERM, FOLIO, USERDEF(HL-1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/5240/5250DN/5270DN/5280DW)
		LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, COM10, DL, MONARC, C5, A4LONG, ANY, FOLIO, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERM, ORGANIZERL, USERDEFINED, DLL, A5L, ENVYOU4, ENVCHOU3, P3X5 (HL-5340D/5350DN/5370DW/5380DN)
MPTRAY	MP tray priority for AUTO feeder selection mode.	ANY, LETTER, LEGAL, A4, EXECUTIVE, COM10, DL, JISB5, B5, A5, A5L, B6, A6, MONARCH, C5, FOLIO, DLL, POSTCARD, USERDEFINED, P3X5, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-4140CN/4150CDN/4570CDW)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, COM10, DL, JISB5, B5, A5, A5L, B6, A6, MONARCH, C5, FOLIO, POSTCARD, USERDEFINED, ENVYOU4, ENVCHOU3, P3X5, ROC16K, SIXTEENK195X270, SIXTEENK184X260, JISB6 (HL-5440D/5450DN/5470DW/6180DW)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, JISB6, A5, A5L, A6, FOLIO, P3X5, POSTCARD (HL-S7000DN)
		LETTER, LEGAL, A4, EXECUTIVE, COM10, DL, JISB5, B5, A5, A6, MONARCH, C5, FOLIO, P3X5, POSTCARD, ENVYOU4, ENVCHOU3, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/
		LETTER, LEGAL, A4, EXECUTIVE, COM10, DL, JISB5, B5, A5, A6, MONARCH, C5, FOLIO, P3X5, POSTCARD, ENVYOU4, ENVCHOU3, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260, JENVCHOU3, JENVCHOU4, MEXICANLEGAL, INDIALEGAL (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
MPPAPERIN	Continues printing by holding down Go switch for manual feeding.	LETTER, LEGAL, A4, EXECUTIVE, COM10, DL, JISB5, B5, A5, A6, MONARCH, C5, FOLIO, P3X5, POSTCARD, ENVYOU4, ENVCHOU3, A5L, JISB6, SIXTEENK195X270, JENVCHOU3, JENVCHOU4, MEXICANLEGAL, INDIALEGAL (HL-2595DW/L2386DW/L2385DW)
		CASSETTE, FIRST (HL-1650/ 1670/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/5240/5250DN/5270DN/5280DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L 5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/2595D W/L2386DW/L2385DW)
TRAY1SIZE		STOP, CONTINUE (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/5240/5250DN/5270DN/5280DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))
		A3, JISB4, LEDGER, A4, A4S, A5, B5, B5S, LEGAL, LETTER, LTRS, EXECUTIVE, EXECUTIVES (HL-3260N)
		ANY, LETTER, LEGAL, A4, EXECUTIVE, B5, A5, A6, B6, JISB5, A4LONG, POSTCARD, FOLIO (HL-1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN)
		DETECTSENSOR, LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD (HL-6050/6050D/ 6050DN)

Variables	Description	Sample Value Range
		DETECTSENSOR, B5, B6, A6, COM10, DL, MONARCH, C5, USERDEFINED (HL-8050N) ANY, LETTER, LEGAL, A4, EXECUTIVE, B5, A5, A6, B6, JISB5, FOLIO (HL-5240/5250DN/5270DN/5280DW) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD, A5L (HL-5340D/5350DN/5370DW/5380DN) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD, A5L, JISB6 (HL-4140CN/4150CDN/4570CDW) ANY, LETTER, LEGAL, A4, EXECUTIVE, COM10, DL, JISB5, B5, A5, A5L, B6, A6, MONARCH, C5, FOLIO, POSTCARD, USERDEFINED, ENVYOU4, ENVCHOU3, P3X5, ROC16K, SIXTEENK195X270, SIXTEENK184X260, JISB6 (HL-5440D/5450DN/5470DW/6180DW) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, A5L, FOLIO (HL-S7000DN) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, A6, FOLIO, POSTCARD, A5L, JISB6 (HL-3140CW/HL-3150CDW/HL-3150CDN/HL-3170CDW) LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, A6, FOLIO, POSTCARD, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW) LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROC16K, A6, A5L, SIXTEENK195X270, SIXTEENK184X260 (HL-1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, JISB5, A5, POSTCARD, FOLIO, A5L, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, JISB5, A5, POSTCARD, FOLIO, A5L, SIXTEENK195X270 (HL-L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, JISB5, A5, A6, POSTCARD, FOLIO, A5L, SIXTEENK195X270 (HL-L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
TRAY2SIZE		A3, JISB4, LEDGER, A4, A4S, A5, B5, B5S, A6, LEGAL LETTER, LTRS, EXECUTIVE, EXECUTIVES, COM10, C5, DL MONARCH (HL-3260N) ANY, LETTER, LEGAL, A4, EXECUTIVE, B5, A5, JISB5, A4LONG, FOLIO (HL-1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN) DETECTSENSOR, LETTER, LEGA>, EXECUTIVE, A4, JISB5, B5, A5, B6, FOLIO (HL-6050/6050D/6050DN) DETECTSENSOR, B5, B6, A6, COM10, DL, MONARCH, C5, USERDEFINED (HL-8050N) ANY, LETTER, LEGAL, A4, EXECUTIVE, B5, A5, B6, JISB5, FOLIO (HL-5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, FOLIO, JISB6 (HL-4140CN/4150CDN/4570CDW) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, B5, A5, B6, A6, FOLIO, POSTCARD, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-5440D/5450DN/5470DW/6180DW/HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO (HL-S7000DN) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
TRAY3SIZE		<PS400 installed>

Variables	Description	Sample Value Range
		A3, JISB4, LEDGER, A4, A4S, A5, B5S, LEGAL, LETTER, LTRS, EXECUTIVE, EXECUTIVES <PS420 installed> A4, LETTER <PS440 installed> A3, JISB4, LEDGER, A4, A4S, A5, B5, B5S, LEGAL, LETTER, LTRS, EXECUTIVE, EXECUTIVE (HL-3260N) DETECTSENSOR, B5, B6, A6, COM10, DL, MONARCH, C5, USERDEFINED (HL-8050N) ANY, LETTER, LEGAL, A4, EXECUTIVE, B5, A5, B6, JISB5, FOLIO (HL-5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO (HL-S7000DN) LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L9300CDW(T)) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
TRAY4SIZE		A3, JISB4, LEDGER, A4, A4S, A5, B5, B5S, LEGAL, LETTER, LTRS, EXECUTIVE, EXECUTIVE (HL-3260N) DETECTSENSOR, B5, B6, A6, COM10, DL, MONARCH, C5, USERDEFINED (HL-8050N) ANY, LETTER, LEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO (HL-S7000DN) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
TRAY5SIZE		LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, EXECUTIVE, JISB5, A5, FOLIO, ROCK16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
APT		ON or OFF (HL-1650/1670N/ 3260N/2460/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/4140CN/4150CDN/4570CDW/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
DENSITY	Returns the printing density level setting from 1 to 15. The default value is 8.	-6, -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5, 6 (HL-1650/1670N/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN /2130/2240D/2250DN/2270DW/5440D/5450DN/5470DW/6180DW/S7000DN/1110/1111/1112/1118/ L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW /1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386 DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B 2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357D W/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
LOWTONER	Continues printing when the toner is low.	-2, -1, 0, 1, 2 (HL-3260N/2460/ 7050/8050N) STOP, CONTINUE (HL-3260N/2460/7050/8050N/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN /L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/ L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW)

Variables	Description	Sample Value Range
RAS1200MODE		OFF, ON, TRUE (HL-1650/ 1670N/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/2070N/2130/2240D/2250DN/2270DW/5440D/5450DN/5470DW/6180DW/ L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/)/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/ L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080D W/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/229 5D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW)
PSBINARY		OFF, TRUE (HL-5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN) OFF, ON(HL-1110/HL-1111/HL-1112/HL-1118/HL-1200/HL-1201/HL-1202/HL-1208) ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180 DW/S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L23 72DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
PSQUOTEBIN		ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN /4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L930 0CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375D WR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L 3230CDN/L3210CW)
DOWNFPROD	Creates bold and italic fonts from download fonts.	ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/ 4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CD W(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2 569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L62 50DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B 2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210 CW)
BITMAPFPROD	Creates bold and italic fonts from bitmap fonts.	ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/ 4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CD W(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2 569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L62 50DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B 2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210 CW)
OEMFONT	Enables EC font	ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/ 4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CD W(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ /L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN /L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595 DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/ L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)

Variables	Description	Sample Value Range
COMPABITMAP		ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/ 4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CD W(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ /L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L50 00D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L630 0DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2 370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
FSEL300DPI		LOW or HIGH (HL-1650/1670N/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/6050/ 6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW /4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L835 0CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2360DN/L2361DN/2560DN/L2360DW/L23 65DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100 DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L 2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590 DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
DEFPAPER		A4, LETTER, DEFAULT (HL-1650/1670N/2460/7050/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/6050/ 6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/225 0DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN /3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/1118/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L 8260CDW/L8360CDW(T)/L9310CDW/L2300D/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2 360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580 D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L 6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2 370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L23 25DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
PSIMAGEMASK		ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/6180 DW/S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L23 72DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L235 0DWR//L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
HPESCE		RESET, FF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/ 4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L2300/L2 00D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW) HL- 1212W, 1210W, 1210WR, 1212WR, 1210WE, 1211W, 1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L62 50DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B 2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335 D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L32 30CDN/L3210CW)
PROTECTOFF		AUTO, NORMAL (HL-1650/ 1670N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2270DW)

Variables	Description	Sample Value Range
ISRFONT	Sets the Israeli font ON or OFF.	ON or OFF (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/ 4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CD W(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2 569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5 200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/ L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L327 0CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
TRANSFER	Selects the transfer current.	AUTO, LOW, HIGH (HL-1650/ 1670N/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN2130/2240D/2250DN/2270DW)
PARALLEL		FAST, SLOW (HL-1650/1670N/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/6050/ 6050D/6050DN/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)
ERRORPRINT		OFF, ON, EXCEPTCDDC (HL-1650/1670N/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN2130/2240D/2250DN/2270DW/4140CN/ 4150CDN/4570CDW/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375 DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/ 3160CDW/L3230CDN/L3210CW)
BOISEIDMODE CONDENCESIZE		WIN95, IEEE (HL-1650/1670N/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN) P1666, P1714 (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)
FXLFSETMODE		NORMAL, ALL (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/5150D/5170DN/6050/6050D/ 6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)
FXLFITAMODE		OBLIQUE, ITALIC (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)
ENVINTERVAL PSCEILMODE		0 to 255 (HL-1650/1670N/1850/ 1870N/5040/5050/5070N/5140/5150D/5170DN/6050/6050D/ 6050DN) FLOOR, CEIL (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180 DW/S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/ L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
PS300RESO		NO, IF2M, FORCE (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/8050N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)
DUPLEX	Duplex mode	ON or OFF (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/2240D/2250DN/2270DW /4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200C DW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340 DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW)/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/559 0DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2 595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050 DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L23 52DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN)
BINDING	Returns the setting of binding edge selection for duplex printing.	LONGEDGE, SHORTEGE

Variables	Description	Sample Value Range
		(HL-1650/1670N/3260N/2460/ 7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/8050N/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/2240D/2250DN/2270DW/4150CDN/4570CD W/5440D/5450DN/5470DW/6180DW/S7000DN/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L236 1DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW)/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L 5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L 2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2 312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351DW/L3 270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN)
TRAYPRIORITY		MPT1T2T3T4, MPT4T3T2T1, T1T2T3T4 MP, T4T3T2T1MP (HL-2460/7050/S7000DN) MPT1T2T3T4, MPT4T3T2T1, T1T2T3T4 MP, T4T3T2T1MP, T1T2T3T4, T4T3T2T1 (HL-3260N) MPT1T2, T1T2MP (HL-1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN) MPT1T2, T1T2MP, T1T2, T1MPT2 (HL-6050/6050D/ 6050DN/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) T1T2T3T4, T4T3T2T1 (HL-8050N) MPT1T2,MPT2T1,T1T2MP,T2T1MP,T1T2,T2T1,T1MPT2,T2MPT1 (HL- 4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L8260CDN/L8260CDW/L83 60CDW(T)/L9310CDW/)
		MPT1T2T3,MPT3T2T1,T1T2T3MP,T3T2T1MP (L9300CDW(T)) MPT1T2,MPT2T1,T1T2MP,T2T1MP (HL- L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L 6300DW(T)/L6400DW(T)/L6402DW)
FFSUPPRESS		ON or OFF (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D//2250DN/2270DW/ 4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/ 1118/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L232 0D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/121 0WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200D W(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L237 0DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L23 10D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR/L2357DW/L2352DW/L2351 DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CV)
LCDDENSITY	Sets the LCD angle value.	0 to 2 (HL-1650/1670N/2460/ 7050/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/5270DN/5280DW/5380DN)
FAXRINGDELAY		0 to 4 (HL-3260N/2460/7050)
FAXREDUCTION		AUTO, OFF, FIX90 (HL-3260N/2460/7050)
FAXRAMSIZE		1 to 16 (HL-3260N/2460/7050)
RECEIVEMODE		ON or OFF (HL-3260N/2460/ 7050)
FAXINTERVAL		OFF, ON6H, ON12H, ON24H, ON2D, ON4D, ON7D (HL-3260N/2460/7050)
GLPENSIZE1		1 to 16 (HL-3260N/2460/7050) 1 to 10 (HL-8050N)
GLPENSIZE2		1 to 16 (HL-3260N/2460/7050) 1 to 10 (HL-8050N)
GLPENSIZE3		1 to 16 (HL-3260N/2460/7050) 1 to 10 (HL-8050N)
GLPENSIZE4		1 to 16 (HL-3260N/2460/7050) 1 to 10 (HL-8050N)
GLPENSIZE5		1 to 16 (HL-3260N/2460/7050) 1 to 10 (HL-8050N)
GLPENSIZE6		1 to 16 (HL-3260N/2460/7050) 1 to 10 (HL-8050N)
GLPENGRAY1		G15, G30, G45, G75, G90, G100 (%) (HL-3260N/2460/7050/ 8050N)

Variables	Description	Sample Value Range
GLPENGRAY2		G15, G30, G45, G75, G90, G100 (%) (HL-3260N/2460/7050/ 8050N)
GLPENGRAY3		G15, G30, G45, G75, G90, G100 (%) (HL-3260N/2460/7050/ 8050N)
GLPENGRAY4		G15, G30, G45, G75, G90, G100 (%) (HL-3260N/2460/7050/ 8050N)
GLPENGRAY5		G15, G30, G45, G75, G90, G100 (%) (HL-3260N/2460/7050/ 8050N)
GLPENGRAY6		G15, G30, G45, G75, G90, G100 (%) (HL-3260N/2460/7050/ 8050N)
STBBUSY		RISE, FALL (HL-1650/1670N/ 3260N/2460/7050/1850/1870N/ 5040/5050/5070N/8050N/5140/ 5150D/5170DN/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)
ACKBUSY		RISE, FALL (HL-1650/1670N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN)
PICKUPRETRY		0 to 7 (HL-2460/7050/6050/ 6050D/6050DN/5240/5250DN/5270DN/5280DW/2070N/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2130/2240D/2250DN/2 270DW/5440D/5450DN/5470DW/6180DW/57000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/1118/18250CDN/L835 0CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260 D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210W E/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200 DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L23 75DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/ L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW/L3270CDW/3190C DW/L3230CDW/3160CDW/L3230CDN/L3210CW)
COLLATE	Sets the collate printing.	0 to 63 (HL-1650/1670N/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/2070N) ON or OFF (HL-2460/7050/6050/ 6050D/6050DN/8050N/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202D W/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2385DW/L2386DW/2 595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050 DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L23 52DW/L2351DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
TIMESETYEAR		1998 to 2039 (HL-3260N/2460/ 7050/8050N)
TIMESETMONTH		1 to 12 (HL-3260N/2460/7050/ 8050N)
TIMESETDAY		1 to 31 (HL-3260N/2460/7050/ 8050N)
TIMESETHOUR		0 to 23 (HL-3260N/2460/7050/ 8050N)
TIMESETMIN		0 to 59 (HL-3260N/2460/7050/ 8050N)
TIMESETSEC		0 to 59 (HL-3260N/2460/7050/ 8050N)
TIMESTYLE		UMD, MDY, DMY (HL-3260N/ 2460/7050/8050N)
SUMMERTIME		ON or OFF (HL-3260N/2460/ 7050/8050N)
ZONESET		ON or OFF (HL-3260N/2460/ 7050/8050N)
TIMEZONE		-24 to 24 (HL-3260N/2460/7050/ 8050N)
OUTBIN		ALLSTACKER, ALLSORTER, UPPER, OPTIONALOUTPUTBIN1, OPTIONALOUTPUTBIN2, OPTIONALOUTPUTBIN3, OPTIONALOUTPUTBIN4, OPTIONALOUTPUTBIN5, OPTIONALOUTPUTBIN6, OPTIONALOUTPUTBIN7, OPTIONALOUTPUTBIN8, OPTIONALOUTPUTBIN9, OPTIONALOUTPUTBIN10
		(HL-2460/7050) ALLSTACKER, ALLSORTER, UPPER, FINISHER, OPTIONALOUTPUTBIN1, OPTIONALOUTPUTBIN2, OPTIONALOUTPUTBIN3, OPTIONALOUTPUTBIN4,
		(HL-3260N) ALLSTACKER, UPPER (HL-8050N) AUTO,STANDARD,OPTIONAL(HL-S7000DN) AUTO,STANDARD,OPTIONALOUTPUTBIN1,OPTIONALOUTPUTBIN2,OPTIONALOUTPUTBIN3,OPTIONALOUTPUTBIN4,ALLSORT ER,ALLSTACKER,SFL,FINISHER (HL-L6300DW(T)/L6400DW(T)/L6402DW)
MAILBOXPROTE		0-4 (HL-3260N)
CT		0-10 (HL-2460/7050)
AVOIDMAILBOXF		ON or OFF (HL-3260N2460/ 7050/8050N/L6300DW(T)/L6400DW(T)/L6402DW)
ULL		

Variables	Description	Sample Value Range
TOWERFEED		ON or OFF (HL-2460/7050)
RAMDISKSIZE		0 to XX Mbyte(s) (Except for HL-2070N/5270DN/5280DW/5380DN)
TRANSFERVOLT		MODE1, MODE2, MODE3, MODE4 MODE1: Normal, MODE2: Low, MODE3: Middle, MODE4: High (HL-2460/7050)
COLDSTARTMOD	Sets the cold start mode.	OFF, MODE1, MODE2
E		MODE1: MODE2 (HL-2460/7050)
TNCHARGETIME		O9FF, SHORT, NORMAL, LONG (HL-2460/7050)
TNCHARGEMODE		OFF, MODE1, MODE2, MODE3, MDE4, MRDE5, MODE6, MODE7 (HL-2460/7050)
FUSERSLEEPCT		ON or OFF (HL-2460/7050)
THICKPRDLY		OFF, SHORT, NORMAL, LONG (HL-2460/7050)
BONDPRDLY		OFF, SHORT, NORMAL, LONG (HL-2460/7050)
FLICKER MODE		0 to 63 (HL-2460/7050)
APPLEUSBPS	Sets Postscript Pure Binary Printing from Macintosh via USB.	ON, OFF (HL-1850/1870N/5040/ 5050/5070N/5140/5150D/ 5170DN/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/61 80DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260 CDW/L8360CDW(T)/L9310CDW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2 370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
DX1JOB1PAGE	Sets 1JOB1PAGE Printing mode.	SIMPLEX, DUPLEX (HL-1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/8050N/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/2240D/2250DN/2270DW/4140CN/4150CDN/4570CDW/5 440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300 CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN /L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN)
AUTOONLINE	As for HL-6050 series, supported ROM version is 1.18 or later. Sets auto return function from setting Panel mode to Ready mode.	ON, OFF (HL-7050/6050/6050D/ 6050DN/5270DN/5280DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/31 50CDN/3170CDW/L8250CDN/L8350CDW(T) /L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569D W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250D W)
BUTTONREPEAT	Sets key repeating speed in Panel mode.	BUTTON100MSEC, BUTTON200MSEC, BUTTON300MSEC, BUTTON400MSEC, BUTTON500MSEC, BUTTON1000MSEC, BUTTON1500MSEC, BUTTON2000MSEC (HL-7050/ 6050/6050D/6050DN/5270DN/5280DW/5380DN) BUTTON100MSEC,BUTTON200MSEC,BUTTON300MSEC,BUTTON400MSEC,BUTTON500MSEC,BUTTON600MSEC,BUTTON800M SEC,BUTTON1000MSEC,BUTTON1400MSEC,BUTTON1500MSEC,BUTTON1800MSEC,BUTTON2000MSEC (HL- 4140CN/4150CDN/4570CDW)

Variables	Description	Sample Value Range
		BUTTON100MSEC,BUTTON400MSEC,BUTTON600MSEC,BUTTON800MSEC,BUTTON1000MSEC,BUTTON1400MSEC,BUTTON1800MSEC,BUTTON2000MSEC(HL-5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L8260CDN/L8260CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L2325DW/L2350DW/L2370DN/B2050DN/2590DN/L2370DW/L2375DW/B2080DW/L2385DW/2595DW/L3210CDW/3160CDW/L3230CDW/L3230CDN)
MESSAGESCROLL	Sets scrolling time at Scroll message.	1-10 (HL-7050/6050/6050D/6050DN/5270DN/5280DW/5380DN/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L8260CDN/L8260CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L2325DW/L2350DW/L2370DN/B2050DN/2590DN/L2370DW/L2375DW/B2080DW/L2385DW/2595DW/L3210CDW/3160CDW/L3230CDW/L3230CDN)
ERRORBUZZER	Sets Buzzer mode at Error condition.	OFF, ON (HL-7050/6050/6050D/ 6050DN)
PANELBUZZER	Sets Buzzer mode for Panel Operation.	OFF, ON (HL-7050/6050/6050D/ 6050DN)
BUZZERVOLUME	Sets Buzzer volume.	LOW, HIGH (HL-7050/6050/ 6050D/6050DN)
CARBONMODE	Sets Carbon mode	OFF, ON, AUTO, PARALLEL (HL-6050/6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBONCOPIES	Set the number of Carbon copies.	1-8 (HL-6050/6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON1TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN) MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL-6050/6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON2TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN) MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL-6050/6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON3TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN) MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL-6050/6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON4TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN) MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL-6050/6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON5TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN) MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL-6050/6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON6TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN)

Variables	Description	Sample Value Range
		MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL- L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L 6300DW(T)/L6400DW(T)/L6402DW)
CARBON7TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN) MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL- L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L 6300DW(T)/L6400DW(T)/L6402DW)
CARBON8TRAY	Select input tray for the first page.	REMAINING, MP, TRAY1, TRAY2 (If available) (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN) MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5 (HL- L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L 6300DW(T)/L6400DW(T)/L6402DW)
CARBON1MACRO	Sets if a Macro is added to first page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON2MACRO	Sets if a Macro is added to second page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON3MACRO	Sets if a Macro is added to third page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON4MACRO	Sets if a Macro is added to fourth page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON5MACRO	Sets if a Macro is added to fifth page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON6MACRO	Sets if a Macro is added to sixth page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON7MACRO	Sets if a Macro is added to seventh page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON8MACRO	Sets if a Macro is added to eighth page or not.	OFF, ON (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON1MACRO ID	Sets Macro ID to added to first page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON2MACRO ID	Sets Macro ID to added to second page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)

Variables	Description	Sample Value Range
CARBON3MACRO ID	Sets Macro ID to added to third page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON4MACRO ID	Sets Macro ID to added to fourth page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON5MACRO ID	Sets Macro ID to added to fifth page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON6MACRO ID	Sets Macro ID to added to sixth page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON7MACRO ID	Sets Macro ID to added to seventh page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBON8MACRO ID	Sets Macro ID to added to eighth page.	(ID Number) (HL-6050/6050D/ 6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
CARBONMACRO	Sets the order of Macro addition.	BEHIND, FRONT (HL-6050/ 6050D/6050DN/5270DN/5280DW/5380DN/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)

2. PCL-Specific Variables

The following values are PCL (HP LaserJet emulation) specific and can be set and requested using PJJL. These variables must be set using the LPARM : PCL option.

Variables	Description	Sample Value Range
PAPER	Sets the paper size.	LETTER, A4, LEGAL, A5, A6, B5, EXECUTIVE, JISB5 (All models except for HL-1110/HL-1111/HL-1112/HL-1118) B6, COM10, MONARCH, C5, DL (HL-8050N) B6, COM10, MONARCH, C5, DL, A4LONG (HL-1650/1670N/2460/7050) A3, LEDGER, JISB4, LTRS, EXECUTIVES, B5S, COM10, MONARCH, C5, DL, A4LONG(HL-3260N) B6, COM10, MONARCH, C5, DL, DLL, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERL, ORGANIZERM, FOLIO, USERDEF, A4LONG(HL-1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/6050D/6050DN/2070N/5240/5250DN/5270DN/5280DW) B6, COM10, MONARCH, C5, DL, DLL, POSTCARD, FOLIO, A4LONG(HL-2150N/2170W) B6, COM10, MONARCH, C5, DL, DLL, POSTCARD, FOLIO, A4LONG, A5L, P3X5, ENVYOU4, ENVCHOU3(HL-5340D/5350DN/5370DW/5380DN) B6, COM10, MONARCH, C5, DL, FOLIO, DLL, POSTCARD, A5L, JISB6, P3X5, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-2250DN/2270DW/ 4140CN/4150CDN/4570CDW) B6, COM10, MONARCH, C5, DL, POSTCARD, FOLIO, P3X5, ENVYOU4, ENVCHOU3, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-5440D/5450DN/5470DW/6180DW /HL-3170CDW) POSTCARD, FOLIO, P3X5, A5L, JISB6, B6, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-S7000DN) LETTER, A4, LEGAL, FOLIO (HL-1110/HL-1111/HL-1112/HL-1118) LETTER, LEGAL, A4, EXECUTIVE, COM10, MONARCH, C5, DL, B5, A5, A6, JISB5, POSTCARD, FOLIO, P3X5, ENVYOU4, ENVCHOU3, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW)) LETTER, LEGAL, A4, EXECUTIVE, B5, A5, JISB5, FOLIO, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-1200/1201/1202/1208) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, JISB6, A6, POSTCARD, FOLIO, P3X5, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, JISB6, A6, POSTCARD, FOLIO, P3X5, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, SIXTEENK195X270(HL-L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, A6, POSTCARD, FOLIO, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, SIXTEENK195X270 (HL-L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW) PORTRAIT or LANDSCAPE 0 to 126 columns (HL-1050/1070/1250/1270N/1450/1470N/P2500/3260N/2460/7050/6050/6050D/6050DN/8050N/5440D/5450DN/5470DW/6180DW/S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN) 0 to 145 columns (HL-1650/ 1670N/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/2070N/2150N/2170W/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/4570CDW/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW) RIGHTMARGIN Sets the right margin
		0 to 136 columns (HL-1050/1070/1250/1270N/1450/1470N/P2500)

Variables	Description	Sample Value Range
		10 to 155 columns (HL-1650/ 1670N/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 2070N/2150N/2170W/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/4570CD W/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
		10 to 136 columns (HL-3260N/ 2460/7050/6050/6050D/6050DN/ 8050N/5440D/5450DN/5470DW/6180DW/S7000DN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L2360DN/L23 61DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/ L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/ L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN)
TOPMARGIN	Sets the top margin	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
BOTMARGIN	Sets the bottom margin.	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
FORMLINES	Sets the number of lines.	5 to 128 lines
FONTSOURCE	Sets the font source to Internal fonts or Permanent Soft Fonts	I or S (HL-1050/1070/1250/1270N/1450/1470N/P2500/1650/1670N/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/2070N/5240/5250DN/2150N/2170W/5340D/5350DN/5370DW/2250DN/2270DW /4140CN/4150CDN/4570CDW/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L5000D/5580D/5585D/5595DN/L51 02DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW /L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2 372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
FONTNUMBER	Sets the font number	I, C1, C2, S (HL-3260N/2460/ 7050) I, C, S (HL-6050/6050D/6050DN/ 8050N/5270DN/5280DW/5380DN) I,C1,S(HL-5440D/5450DN/5470DW/6180DW/S7000DN/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW) 0 to n (HL-1050/1070/1250/1270N/1450/1470N/P2500) 0 to 0x7FFFFFFF (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/41 50CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN /3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569 DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250D W/L6300DW(T)/L6400DW(T)/L6402DW/L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B208 0DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
PITCH	Pitch of the default font in units of characters per inch. The pitch value can be specified to two decimal places	0.44, 0.45,.....99.99
PTSIZE	Height of the default font in units of points. The point size can be specified to a quarter of a point	4.00, 4.25,999.75
SYMSET	Sets the symbol set.	ROMAN8, ISOL1, ISOL2, ISOL5, PC8, PC8DN, PC850, PC852, PC8TK, WINL1, WINL2, WINL5, DESKTOP, PSTEXT, VNINTL, VNUS, MSPUBL, MATH8, PSMATH, VNMATH, PIFONT, LEGAL, ISO2, ISO4, ISO6, ISO10, ISO11, ISO 14, ISO15, ISO16, ISO17, ISO21, ISO 25, ISO 57, ISO60, ISO61, ISO69, ISO84, ISO85, WIN30, HPGERM, HPSPAN, MCTEXT (All models) OCRA, OCRB, SYMBOL, WDINGS (HL-1050/1070/1250/1270N/1450/1470N/P2500/1650/ 1670N/1850/1870N/5040/5050/ 5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/8050N/ 2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/4570CD W/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)) PC1004, WINBALT, ISOL6, PC775 (HL-1650/1670N/3260N/ 2460/7050/1850/1870N/5040/ 5050/5070N/5140/5150D/5170DN/ 6050/6050D/6050DN/8050N/ 2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/4150CDN/4570CD W/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T))

Variables	Description	Sample Value Range
		HERBREW7 (HL-1650/1670N/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/6050/6050D/ 6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/41 50CDN/4570CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)) ABIBP, ABIINTL, RUSSIAN, UKRAINIAN, PC866, PC8LG, PC851, WINGREEK, ISOLC, ISOGREEK, PC853, PC855, PC857, PC858, PC860, PC861, PC863, PC865, PC869, ISOL9, PC8B, PC8G, PC8PC, GREEK8, TURKISH8, ROMAN9, ROMANEXT, WINC (HL- 1850/ 1870N/5040/5050/5070N/5140/ 5150D/5170DN/6050/6050D/ 6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/2150N/2170W/5340D/5350DN/5370DW/5380DN/2250DN/2270DW/4140CN/41 50CDN/4570CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366D W/2569DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/ L6250DW/L6300DW(T)/L6400DW(T)/L6402DW) PC1004,WINBALT,SYMBOL,OCRA,OCRB,WDINGS,HEBREW7, ,ISOL6,PC775,ABIBP,ABIINTL,RUSSIAN,UKRAINIAN,PC866,PC8LG,PC851,WINGREEK,ISOLC,ISOGREEK,PC853,PC855,PC857,P C858,PC860,PC861,PC863,PC865,PC869,ISOL9,PC8B,PC8G,PC8PC,GREEK8,TURKISH8,ROMAN9,ROMANEXT,WINC(HL- 5440D/5450DN/5470DW/6180DW/S7000DN/HL-3170CDW) PC8, PC8DN, PC850, PC852, PC8TK, PC1004, WINL1, WINL2, WINL5, WINBALT, DESKTOP, PSTEXT, VNINTL, VNUS, MSPUBL, MATH8, PSMATH, VNMATH, PIFONT, LEGAL, ISO2, ISO4, ISO6, ISO10, ISO11, ISO14, ISO15, ISO16, ISO17, ISO21, ISO25, ISO57, ISO60, ISO61, ISO69, ISO84, ISO85, WIN30, HPGERM, HPSPAN, MCTEXT, SYMBOL, OCRA, OCRB, WDINGS, HEBREW7, ROMAN8, ISOL1, ISOL2, ISOL5, ISOL6, PC775, ABIBP, ABIINTL, RUSSIAN, UKRAINIAN, PC866, PC8LG, PC851, WINGREEK, ISOLC, ISOGREEK, PC853, PC855, PC857, PC858, PC860, PC861, PC863, PC865, PC869, ISOL9, PC8B, PC8G, PC8PC, GREEK8, TURKISH8, ROMAN9, ROMANEXT, WINC, HEBREW8(HL- L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L23 72DN/2590DN/B2050DN/L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
AUTOLF	Sets AUTO LF	ON or OFF
AUTO CR	Sets AUTO CR	ON or OFF
AUTOWRAP	Sets AUTO WRAP	ON or OFF
AUTOSKIP	Sets AUTO SKIP	ON or OFF

3. EPSON-Specific Variables

The following values are EPSON (EPSON FX-850 emulation) specific and can be set and requested using PJJ. These variables must be set using the LPARM : EPSON option.

Variables	Description	Sample Value Range
PAPER	Sets the paper size.	LETTER, A4, LEGAL, A5, A6, B5, EXECUTIVE, COM10, MONARCH, C5, DL, JISB5 (All models) B6 (HL-8050N) B6, A4LONG (HL-1650/1670N/2460/7050) A3, LEDGER, JISB4, LTRS, EXECUTIVES, B5S, A4LONG(HL-3260N) B6, DLL, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERL, ORGANIZERM, FOLIO, USERDEF, A4LONG(HL-1850/1870N/5050/5070N/5150D/5170DN/6050/6050D/ 6050DN/2070N/5240/5250DN/5270DN/5280DW) B6, DLL, POSTCARD, FOLIO, A4LONG, A5L, P3X5, ENVYOU4, ENVCHOU3(HL-5340D/5350DN/5370DW/5380DN) B6,POSTCARD,FOLIO,P3X5,ENVYOU4,ENVCHOU3,A5L,JISB6,ROC16K,SIXTEENK195X270,SIXTEENK184X260(HL-5440D/5450DN/5470DW/6180DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, JISB6, A6, POSTCARD, FOLIO, P3X5, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
ORIENTATION	Sets the orientation.	PORTRAIT, LANDSCAPE 0 to 126 (HL-1050/1070/1250/1270N/1450/1470N/P2500/3260N/2460/7050/6050/6050D/6050DN/ 8050N/5440D/5450DN/5470DW/6180DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
LEFTMARGIN	Sets the left margin	
RIGHTMARGIN	Sets the right margin	
N		0 to 145 (HL-1650/1670N/1850/ 1870N/5050/5070N/5150D/ 5170DN/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) 0 to 136 (HL-1050/1070/1250/1270N/1450/1470N/P2500) 10 to 155 (HL-1650/1670N/1850/ 1870N/5050/5070N/5150D/5170DN/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) 10 to 136 (HL-3260N/2460/7050/ 6050/6050D/6050DN/8050N/5440D/5450DN/5470DW/6180DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
TOPMARGIN	Sets the top margin	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
BOTMARGIN	Sets the bottom margin.	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
FORMLINES	Sets the number of lines.	5 to 128 lines
FONTSOURCE	Sets the font source to Internal fonts or Permanent Soft Fonts	I or S (HL-1050/1070/1250/1270N/1450/1470N/P2500/1650/1670N/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/2070N/5240/5250DN/5340D/5350DN/5370DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
E		
FONTNUMBER	Sets the font number	I C1, C2, S (HL-3260N/2460/7050) I, C, S (HL-6050/6050D/6050DN/ 8050N/5270DN/5280DW/5380DN) I,C1,S(HL-5440D/5450DN/5470DW/6180DW) 0 to n (HL-1050/1070/1250/1270N/ 1450/1470N/P2500) 0 to 0x7FFFFFFF (HL-1650/ 1670N/3260N/2460/7050/1850/ 1870N/5050/5070N/5150D/ 5170DN/6050/6050D/6050DN/ 8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/5440D/5450DN/5470DW/6180DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
R		
PITCH	Pitch of the default font in units of characters per inch. The pitch value can be specified to two decimal places	0.44, 0.45,99.99

Variables	Description	Sample Value Range
PTSIZE	Height of the default font in units of points. The point size can be specified to a quarter of a point	4.00, 4.25,999.75
SYMSET	Sets the symbol set.	USASCII, GERMAN, UKASCII1, FRENCH1, DANISH1, ITALY, SPANISH, SWEDISH, JAPAN, NORWEG, DANISH2, UKASCII2, FRENCH2, DUTCH, SAFRICA, PC8, PC8DN, PC850, PC852, PC860, PC863, PC865, PC8TK, SYMBOL, WDINGS, OCRA, OCRB (HL-1050/1070/1250/1270N/1450/1470N/P2500)
		USASCII, GERMAN, UKASCII1, FRENCH1, DANISH1, ITALY SPANISH, SWEDISH, JAPANESE, NORWEGIAN, DANISH2, UKASCII2, FRENCH2, DUTCH, SOUTHAFRICAN, PC8, PC8DN, PC850, PC852, PC860, PC863, PC865, PC8TK (HL-1650/1670N/3260N/2460/7050/1850/1870N/5050/5070N/5150D/5170DN/6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/5440D/5450DN/5470DW/6180DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
AUTOLF	Sets AUTO LF	ON or OFF
AUTOMASK	Sets AUTO MASK	ON or OFF
SELREADOU		ON or OFF

4. IBM-Specific Variables

The following values are IBM (IBM Proprinter XL emulation) specific and can be set and requested using PJJL. These variables must be set using the LPARM : IBM option.

Variables	Description	Sample Value Range
PAPER	Sets the paper size.	LETTER, A4, LEGAL, A5, A6, B5, EXECUTIVE, COM10, MONARCH, C5, DL, JISB5 (All models) B6 (HL-8050N) B6, A4LONG (HL-1650/1670N/2460/7050) A3, LEDGER, JISB4, LTRS, EXECUTIVES, B5S, A4LONG(HL-3260N) B6, DLL, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERL, ORGANIZERM, FOLIO, USERDEF, A4LONG(HL-1850/1870N/5050/5070N/5150D/5170DN/6050/6050D/ 6050DN/2070N/5240/5250DN/5270DN/5280DW) B6, DLL, POSTCARD, FOLIO, A4LONG, A5L, P3X5, ENVYOU4, ENVCHOU3(HL-5340D/5350DN/5370DW/5380DN) B6,POSTCARD,FOLIO,P3X5,ENVYOU4,ENVCHOU3,A5L,JISB6,ROC16K,SIXTEENK195X270,SIXTEENK184X260 (HL-5440D/5450DN/5470DW/6180DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, JISB6, A6, POSTCARD, FOLIO, P3X5, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
ORIENTATION	Sets the orientation.	PORTRAIT, LANDSCAPE
LEFTMARGIN	Sets the left margin	0 to 126 (HL-1050/1070/1250/1270N/1450/1470N/P2500/3260N/2460/7050/6050/6050D/6050DN/ 8050N/5440D/5450DN/5470DW/6180DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
RIGHTMARGIN	Sets the right margin	0 to 145 (HL-1650/1670N/1850/ 1870N/5050/5070N/5150D/ 5170DN/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) 0 to 136 (HL-1050/1070/1250/1270N/1450/1470N/P2500)
N		10 to 155 (HL-1650/1670N/1850/ 1870N/5050/5070N/5150D/ 5170DN/2070N/5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN) 10 to 136 (HL-3260N/2460/7050/6050/6050D/6050DN/8050N/5440D/5450DN/5470DW/6180DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
TOPMARGIN	Sets the top margin	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
BOTMARGIN	Sets the bottom margin.	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
FORMLINES	Sets the number of lines.	5 to 128 lines
FONTSOURCE	Sets the font source to Internal fonts or Permanent Soft Fonts	I or S (HL-1050/1070/1250/1270N/1450/1470N/P2500/1650/1670N/ 1850/1870N/5040/5050/5070N/ 5140/5150D/5170DN/2070N/5240/5250DN/5340D/5350DN/5370DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
FONTNUMBER	Sets the font number	I, C1, C2, S (HL-3260N) I, C, S (HL-6050/6050D/6050DN/ 8050N/5270DN/5280DW/5380DN) I,C1,S(HL-5440D/5450DN/5470DW/6180DW) 0 to n (HL-1050/1070/1250/1270N/1450/1470N/P2500) 0 to 0x7FFFFFFF (HL-1650/ 1670N/3260N/1850/1870N/5050/ 5070N/5150D/5170DN/6050/6050D/6050DN/ 8050N/2070N5240/5250DN/5270DN/5280DW/5340D/5350DN/5370DW/5380DN/5440D/5450DN/5470DW/6180DW/L5000D/5580D/5585D/5595DN/ /L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW)
PITCH	Pitch of the default font in units of characters per inch. The pitch value can be specified to two decimal places	0.44, 0.45,99.99
PTSIZE	Height of the default font in units of points. The point size can be specified to a quarter of a point	4.00, 4.25,999.75
SYMSET	Sets the symbol set.	PC8, PC8DN, PC850, PC852, PC860, PC863, PC865, PC8TK (All models) OCRA, OCRB, SYMBOL, WDINGS (HL-1050/1070/1250/1270N/1450/1470N/P2500)

Variables	Description	Sample Value Range
AUTOLF	Sets AUTO LF	ON or OFF
AUTO CR	Sets AUTO CR	ON or OFF
AUTOMASK	Sets AUTO MASK	ON or OFF

5. PostScript-Specific Variables

The following values are PostScript (BR-Script) specific and can be set and requested using PJI. The BR-Script mode is standard in some models but may be available only when the optional BR-Script 2 ROM board is installed into the printer. These variables must be set using the LPARM : IBM option.

Variables	Description	Sample Value Range
PAPER	Sets the paper size.	LETTER, A4, LEGAL, A5, A6, B5, EXECUTIVE, JISB5 (All models) B6, COM10, MONARCH, C5, DL (HL-8050N) B6, COM10, MONARCH, C5, DL, A4LONG (HL-1650/1670N/2460/7050) A3, LEDGER, JISB4, LTRS, EXECUTIVES, B5S, COM10, MONARCH, C5, DL, A4LONG(HL-3260N) B6, COM10, MONARCH, C5, DL, DLL, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERL, FOLIO, USERDEF, A4LONG(HL-1850/1870N/5050/5070N/5150D/5170DN/6050/6050D/ 6050DN/5240/5250DN/5270DN/5280DW) B6, COM10, MONARCH, C5, DL, DLL, POSTCARD, FOLIO, A4LONG, A5L, P3X5, ENVYOU4, ENVCHOU3(HL-5340D/5350DN/5370DW/5380DN) FOLIO,DLL,POSTCARD,A5L,JISB6, COM10, MONARCH, C5, DL,ORGANIZERJ,P3X5,ENVYOU4,ENVCHOU3,ROC16K,SIXTEENK195X270,SIXTEENK184X260 (HL-4140CN/4150CDN/4570CDW) B6, COM10, MONARCH, C5, DL,POSTCARD,FOLIO,P3X5,ENVYOU4,ENVCHOU3,A5L,JISB6,ROC16K,SIXTEENK195X270,SIXTEENK184X260 (HL-5440D/5450DN/5470DW/6180DW /HL-3170CDW) POSTCARD,FOLIO,P3X5,A5L,JISB6,ROC16K,SIXTEENK195X270,SIXTEENK184X260 (HL-S7000DN) LETTER, LEGAL, A4, EXECUTIVE, COM10, MONARCH, C5, DL, B5, A5, A6, JISB5, POSTCARD, FOLIO, P3X5, ENVYOU4, ENVCHOU3, A5L, JISB6, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, JISB6, A6, POSTCARD, FOLIO, P3X5, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, ROC16K, SIXTEENK195X270, SIXTEENK184X260 (HL-L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, JISB6, A6, POSTCARD, FOLIO, P3X5, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, SIXTEENK195X270(HL-L2385DW/L2386DW/2595DW/L2370DW/L2370DWXL/L2375DW/L2375DWR/L2376DW/B2080DW/L2370DN/L2370DNR/L2371DN/L2372DN/2590DN/B2050DN/2290/L2310D/L2312D/L2310DR/L2330D/L2331D/L2336D/L2335D/2295D/B2000D/L2325DW/L2350DW/L2350DWR//L2357DW/L2352DW/L2351DW) LETTER, LEGAL, MEXICANLEGAL, INDIALEGAL, A4, B5, EXECUTIVE, DL, COM10, MONARCH, C5, JISB5, A5, A6, POSTCARD, FOLIO, ENVYOU4, JENVCHOU4, JENVCHOU3, A5L, SIXTEENK195X270 (HL-L3270CDW/3190CDW/L3230CDW/3160CDW/L3230CDN/L3210CW)
ORIENTATION PRTPSERRS	Sets the orientation. The printing of a PostScript error page is enabled or disabled by this variable	PORTRAIT, LANDSCAPE ON or OFF
CRLFCONV (HL-1050/1070/1250/1270N/1450/1470N/P2500)	When set to ON, CR codes in the PostScript data are converted to LF codes.	ON or OFF
APPLETALKPS	When set to ON, the printer fixes the emulation to BR-Script 2 mode for accepting data from AppleTalk. When set to OFF, the printer's auto emulation switching function judges the emulation.	ON or OFF

6. HPGL-Specific Variables

The following values are HPGL (HP LaserJet emulation) specific and can be set and requested using PJL. These variables must be set using the LPARM: HPGL option.

Variables	Description	Sample Value Range
PAPER	Sets the paper size.	LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, COM10, DL, MONARCH, C5, A4LONG (HL-3260N/2460/7050) A3, LEGER, JISB4, LTRS, A4S, EXECUTIVES, B5S (HL-3260N) LETTER, LEGAL, EXECUTIVE, A4, JISB5, B5, A5, B6, A6, COM10, DL, MONARC, C5 (HL-8050N)
ORIENTATION	Sets the	PORTRAIT or LANDSCAPE (HL-3260N/2460/7050)
SYMSET	Sets the symbol set.	ANSIASCII, CHRSET9825, FRENCHGERMAN, SCANDINAVIAN, SPANISHLATIN, JISASCII, ROMAN8EXT, ISOIRV, ISOSWEDISH, ISOSWEDISHN, ISONORWAY1, ISOGERMAN, ISOFRENCH, ISOUK, ISOITALIAN, ISOSPANISH, ISOPORTUGUESE, ISONORWAY2 (HL-3260N/2460/7050)

6.2.2. Variables for HL-

**1660e/2060/2400C/2400Ce/3400CN/2600CN/3450CN/2700CN/4040CN/4050CDN/4070C
DW/3040CN/3045CN/3070CW/3075CW**

1. General PJJ Environment Variables

The PJJ environment variables which are not printer language-specific are listed in the following table.
When using these valuables, do not use the LPARM command.

Variables	Description	Sample Value Range
COPIES	Number of uncollated copies for each page of the job.	1 to 999
PAPER	Paper size.	LETTER, A4, LEGAL, MEXICANLEGAL, INDIALEGAL, EXECUTIVE, COM10, MONARCH, C5, DL, JISB5, A4LONG, B5, A5, A6, B6, DLL, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERL, ORGANIZERM, FOLIO, P3X5, ENVYOU4, ENVCHOU3, JENVCHOU3, JENVCHOU4, A3, LEDGER, JISB4, LTRS, EXECUTIVES, B5S, USERDEF
ORIENTATION	Page orientation.	PORTRAIT, LANDSCAPE
MANUALFEED	Manual feed mode.	ON, OFF
RET	Configuration of the High Resolution Control hardware.	LIGHT, MEDIUM, DARK, OFF
PAGEPROTECT	Configuration of the Page protection mode. This mode reserves a block of printer memory to avoid 31 PRINT OVERRUN errors.	AUTO, OFF, LETTER, LEGAL, A4
RESOLUTION	Printer resolution setting. If the printer cannot print a large file at 600 dpi because of insufficient memory, the printer decreases the resolution to 300 dpi automatically	300, 600
PERSONALITY	Personality (emulation) can be switched with the @ PJL ENTER command or ESC CR ## command. If the AUTO option is selected (factory default), the printer senses the data from the computer and switches the emulation automatically.	AUTO, PCL, POSTSCRIPT, IBM, EPSON, HPGL
TIMEOUTEMU	The time out is the duration during which another automatic emulation change is not allowed. Duration of the timeout is set in seconds.	1 to 99
AUTOCONT	Returns the configuration of the Continue mode.	ON, OFF
LOWTONER	Returns the configuration for TONER EMPTY message action. If STOP, the printer stops printing. If CONTINUE, the printer continues printing.	CONTINUE, STOP
INTRAY 1 (Read Only)	Returns the auto-selection lock status for the MP tray.	LOCKED, UNLOCKED
INTRAY 2 (Read Only)	Returns the auto-selection lock status for the upper paper tray.	LOCKED, UNLOCKED
INTRAY 3 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette.	LOCKED, UNLOCKED
INTRAY 4 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette.	LOCKED, UNLOCKED
INTRAY 5 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette.	LOCKED, UNLOCKED
INTRAY 6 (Read Only)	Returns the auto-selection lock status for the optional lower paper cassette.	LOCKED, UNLOCKED
INTRAY1SIZE	Returns the size of the paper currently installed in the standard paper tray.	LETTER, A4, LEGAL, MEXICANLEGAL, INDIALEGAL, EXECUTIVE, COM10, MONARCH, C5, DL, JISB5, A4LONG, B5, A5, A6, B6, DLL, POSTCARD, ORGANIZERJ, ORGANIZERK, ORGANIZERL, ORGANIZERM, FOLIO, P3X5, ENVYOU4, ENVCHOU3, JENVCHOU3, JENVCHOU4, A3, LEDGER, JISB4, LTRS, EXECUTIVES, B5S, USERDEF, ANY
INTRAY2SIZE	Returns the size of the paper currently installed in the lower paper	(same as INTRAY1SIZE)
INTRAY3SIZE	Returns the size information for the optional lower paper cassette.	(same as INTRAY1SIZE)
INTRAY4SIZE	Returns the size information for the optional lower paper cassette.	(same as INTRAY1SIZE)

Variables	Description	Sample Value Range
INTRAY5SIZE	Returns the size information for the optional lower paper cassette.	(same as INTRAY1SIZE)
INTRAY6SIZE	Returns the size information for the optional lower paper cassette.	(same as INTRAY1SIZE)
SOURCETRAY	Selects the paper source tray.	AUTO, MPTRAY, TRAY1, TRAY2, TRAY3, TRAY4, TRAY5
XOFFSET	Sets the X offset (horizontal offset) value.	-500 to 500 dots
YOFFSET	Sets the Y offset (vertical offset) value.	-500 to 500 dots
DUPLEX	Duplex mode	ON, OFF
BINDING	Returns the setting of binding edge selection for duplex printing.	LONGEDGE, SHORTEGE
FIRSTPRINT	First print mode. This makes the first print speed faster by starting the polygon mirror motor at Power On. Setting to MIDDLE is effective only for the first page after Power ON. Setting to HIGH makes the scanner motor rotate continuously.	NORMAL, MIDDLE, HIGH
DENSITY	Returns the printing density level setting from 1 to 15. The default value is 8.	1 (lighter) to 15 (darker)
LANG	Returns the language for control panel and status readback information.	ENGLISH, FRENCH, GERMAN, DUTCH, SPANISH, ITALIAN, NORWEGIAN, FINNISH, PORTUGUESE, DANISH, SWEDISH, CZECH, POLISH, HUNGARIAN, RUSSIA, BULGARIAN, ROMANIAN, SLOVAKIAN, JAPANESE
CPLOCK	Returns the lock status of the control panel. If OFF, the control panel is unlocked. If ON, the control panel is locked.	OFF, ON
PASSWORD	Password for panel lock to write to the NVRAM with the DEFAULT/INITIALIZE command.	0 to 65535
ECONOMODE	Toner Saving Mode	OFF, ON
ECONOLEVEL	Level for Toner saving mode. If set to 1, approx. 50 % toner is saved. If set to 2, approx. 25% toner is saved.	1, 2
MPTRAY	MP Tray Priority For AUTO feeder selection mode.	CASSETTE, FIRST
TIMEOUT	Sets the timeout value for Automatic interface switching (seconds)	1 to 99
AUTOFF	Sets the auto FF setting to ON or OFF.	ON or OFF
TIMEOUTFF	Sets the timeout value for auto FF. (seconds)	1 to 99
AUTOSLEEP	Power Save Mode	ON, OFF
TIMEOUTSLEEP	Timeout for Power Save mode. The printer goes into the power save mode after this time-out period (minutes).	1 to 99
MEDIATYPE	Media Type. The temperature of fixing unit is adjusted depending on this setting.	REGULAR, THICK, THICK2, TRANSPARENCY, THIN, BOND, ENVELOPES, ENVTHICK, ENVTHIN, RECYCLED, POSTCARD, LABEL
REPRINT	Sets the reprint function.	OFF, ON, JOB
COLLATE	Sets the collate printing.	ON, OFF
HOLD	Specifies whether the received data is stored in the hard disk or	OFF, STORE, PROOF
HOLDTYPE	Specifies the document type of the received data which has been stored in the optional hard disk. If PRIVATE is selected, a password is required for the data to be printed or deleted.	PUBLIC, PRIVATE
HOLDKEY	Specifies the password when the document type is set to PRIVATE.	0 to 9 (4 digits to be selected)
TIMESETYEAR	Clock: year setting	1998 to 2039
TIMESETMONTH*	Clock: month setting	1 to 12
TIMESETDAY	Clock: date setting	1 to 31

Variables	Description	Sample Value Range
TIMESETHOUR	Clock: hour setting	0 to 23
TIMESETMIN	Clock: minute setting	0 to 59
TIMESETSEC	Clock: second setting	0 to 59
TIMESTYLE	Sets the display style of the clock.	YMD (YYYY/MM/DD hh/mm), MDY (MM/DD/YYYY hh/mm), DMY (DD/MM/YYYY hh/mm)
SUMMERTIME	Clock: summer time setting	OFF, ON
ZONESET	Clock: time zone setting	OFF, ON
TIMEZONE	Clock: time setting of time zone	-24 to +24
RENDERMODE	Color printing or monochrome printing is specified . Selecting grayscale mode prints the document in 256 levels of grayscale.	COLOR, GRAYSCALE, AUTOCOLOR
APTMODE	Print quality in color printing is specified	OFF, ON, ON4, B8, B8H
COLORADAPT	The printer checks the content of the documents for color. If color is detected, it will print in color. If no color content is detected, it will print in monochrome.	OFF, ON
STRINGCODESET	Character code set of the information (ex. JOB NAME) is specified.	HPROMAN8, ISO88592, ISO88595, JISX02011976, ISO88599, UTF8

2. PCL-Specific Variables

The following values are PCL (HP LaserJet emulation) specific and can be set and requested using PJJ. These variables must be set using the LPARM : PCL option.

Variables	Description	Sample Value Range
FONTSOURCE	The valid values for FONTSOURCE are I (Internal Fonts) C (Cartridge Fonts) C1 (Card Fonts) S (Permanent Soft Fonts) If the specified value becomes invalid, it is automatically changed to the default value.	I, C, C1, S,
FONTNUMBER	Font number. This value can be seen on the Print Font Test selected from the Control Panel. This value is automatically changed to the lowest value whenever the FONTSOURCE setting is changed.	0, 1, 2, ...n
PITCH	Pitch of the default font in units of characters per inch. The pitch value can be specified to two decimal places	0.44, 0.45, 99.99
PTSIZE	Height of the default font in units of points. The point size can be specified to a quarter of a point	4.00, 4.25,999.75
SYMSET	Symbol set	ROMAN8, ISOL1, ISOL2, ISOL5, PC8, PC8DN, PC850, PC852, PC8TK, WINL1, WINL2, WINL5, DESKTOP, PSTEXT, VNINTL, VNUS, MSPUBL, MATH8, PSMATH, VNMATH, PIFONT, LEGAL, ISO2, ISO4, ISO6, ISO10, ISO11, ISO 14, ISO15, ISO16, ISO17, ISO21, ISO 25, ISO 57, ISO60, ISO61, ISO69, ISO84, ISO85, WIN30, HPGERM, HPSPAN, MCTEXT
LEFTMARGIN	Sets the left margin.	0 to 145 columns
RIGHTMARGIN	Sets the right margin	10 to 155 columns
TOPMARGIN	Sets the top margin	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
BOTMARGIN	Sets the bottom margin.	0, 0.33, 0.5, 1.0, 1.5, 2.0 inch
FORMLINES	Sets the number of lines per page.	5 to 128 lines
AUTOLF	Sets AUTO LF	ON or OFF
AUTO CR	Sets AUTO CR	ON or OFF
AUTOWRAP	Sets AUTO WRAP	ON or OFF
AUTOSKIP	Sets AUTO SKIP	ON or OFF

3. PostScript-Specific Variable

The currently defined PostScript specific variable is listed as follows. This variable can be set using the LPARM : POSTSCRIPT option.

Variable	Description	Sample Value Range
PRTPSERRS	The printing of a PostScript error page is enabled or disabled by this variable	OFF, ON

6.3. Default Command

The **DEFAULT** command changes the User-Default environment which is stored in NV-RAM and it is activated following a PJL reset condition. The current print environment is not affected by the **DEFAULT** command, but when a PJL reset condition happens, this command takes effect. This doesn't change the current print environment, but is activated when a PJL reset condition happens.

It is recommended to restrict the use of the **DEFAULT** command when the printer is shared by several users such as in a network environment. This allows use of the standard print environment and avoids changing default features for each print job. If you have to change the default for a particular print job, use the **SET** command.

Syntax

@PJL DEFAULT [LPARM : *personality*] variable = value [<CR>]<LF>

- **LPARM : *Personality***
This optional parameter is used to set personality-specific (emulation) environment variables.
- **variable = *Value***
This parameter is used to set one of the environment variables to the specified value. For example, the **@PJL DEFAULT RESOLUTION = 300** command sets the user-default resolution to 300 dpi. Use the **@PJL INFO VARIABLES** command to obtain valid variables and the range of values for each variable. This command can request the information directly from the printer.

Example

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT Control Panel Defaults <CR><LF>
@PJL DEFAULT PAGEPROTECT = LEGAL <CR><LF>
@PJL DEFAULT LPARM : PCL SYMSET = PC850 <CR><LF>
@PJL RESET <CR><LF>
<ESC>%-12345X
```

6.4. Initialize Command

The **INITIALIZE** command resets the PJL Current Environment and User Default Environment variables to the Factory Default values. I/O configuration values and the unsolicited status settings are not affected by this command.

It is recommended to restrict the use of the **INITIALIZE** command when the printer is shared by several users such as in a networking environment in order to use a standard environment and avoid having default features changed by different print jobs.

Syntax :

@PJL INITIALIZE [<CR>]<LF>

Parameters :

- The **INITIALIZE** command has no parameters.
- The **INITIALIZE** command resets the following environment variables to the Factory Default values.
- If any additional personality (emulation) is added to the printer, the printer may support more personality-specific variables than the variables listed. In any case, the **INITIALIZE** command resets the PJL Current and User Default environment values for all personalities to their factory default.

Example :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT setting to <CR><LF>
@PJL COMMENT factory defaults <CR><LF>
@PJL INITIALIZE <CR><LF>
<ESC>%-12345X
```

6.5. Reset Command

The **PJL RESET** command resets the PJL Current Environment variables to the User Default values.

Use this command at the end of any PJL jobs in which the **PJL SET** command was used.

Syntax

```
@PJL RESET [<CR>] <LF>
```

Parameters

- The **RESET** command has no parameters
- When an application such as a Spooler or Print Data Generator uses the **SET** command to set PJL variables, the application has to conclude with the **RESET** command (before the **UEL** command) to return the variables to the previous state.
- The **RESET** command resets the environment variables to their user default values.
In any case, the **RESET** command resets the PJL Current settings for all personalities to the User Default values.
- Use the **@PJL INFO VARIABLES** command to obtain valid variables and the range of values for each variable. This command requests this information directly from the printer.

Examples

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT Reset variables to <CR><LF>
@PJL COMMENT control panel settings <CR><LF>
@PJL SET RESOLUTION = 300 <CR><LF>
@PJL SET RET = DARK <CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E ....PCL job ...<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT Reset to return to <CR><LF>
@PJL COMMENT control panel settings <CR><LF>
@PJL RESET <CR><LF>
<ESC>%-12345X
```

6.6. Set Command

The **SET** command enables you to change the value of PJL Current Environment variables during a PJL job until a PJL reset condition resets the default values.

Use this command to make a job-specific environment.

Syntax

```
@PJL SET [LPARM : personality] variable = value
[<CR>] <LF>
```

- **LPARM : *Personality***
This optional parameter is used to set personality(emulation) -specific environment variables.
- **variable = *value***
This parameter sets one of the environment variables to the specified value.
For example, **@ PJL SET RESOLUTION = 300** command sets the current resolution to 300 dpi. For a list of variables and values, see the following table.
- Use the **@PJL INFO VARIABLES** to obtain valid variables and the range of values for each variable. This command can request this information directly from the printer.

Parameters

- The printer control panel setting values and the feature settings stored in NV-RAM are not affected by the values modified with the **SET** command.
- The setting values selected with the **SET** command are valid until the next PJL reset condition occurs.
- If the SET command is used in a job, use the **RESET** command after the job to reset the printer to User default settings.

Examples:

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT Setting PCL job <CR><LF>
@PJL COMMENT to desired state <CR><LF>
@PJL SET RET = DARK <CR><LF>
@PJL SET PAGEPROTECT = OFF <CR><LF>
@PJL SET RESOLUTION = 600 <CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC> E....PCL job .... <ESC>E
<ESC>%-12345X@PJL <CR><LF>
@PJL RESET <CR><LF>
<ESC>%-12345X
```

7. STATUS READBACK COMMANDS

7.1. Introduction

Applications can request, by sending a PJJL command to the printer, information such as the configuration and status of the printer. The printer can be programmed to send back this information when requested and also can send back voluntarily unsolicited information of its status such as cover open, off-line state, toner empty, displayed prompt message on the LCD and other necessary information.

PJJL Status Readback will help you to program the application to appropriately set the printer settings.

In this chapter, you can learn how to use PJJL Status Readback in programming an application. The following Status Readback Commands are described :

- **INQUIRE** ... requests the information of the specified PJJL Default setting (PJJL Current Environment) set by **@PJJL SET** or **@PJJL RESET** command
- **DINQUIRE** ... requests the information of the specified User Default setting (User Default Environment) set by **@PJJL DEFAULT** or **@PJJL INITIALIZE** command or control panel
- **ECHO** ... request the printer to send back to the host computer a comment for the purpose of synchronization with each other in order to start communication
- **INFO** ... requests a specified category of information from the printer
- **USTATUS** ... gives the printer permission to send back unsolicited information.
- **USTATUSOFF** ... turns off all unsolicited status information set by **USTATUS**

Job Recovery is also described in this chapter.

7.1.1. Synchronization with the printer

The printer sends the status responses to the same I/O port as it received the request from. Therefore, in a shared or network environment, if the I/O port was used by another user and the printer is still processing the previous job, the printer may send a response of the status of the previous user's job against the request from the current application. In order to make sure that an application can receive correct responses for its request, it must synchronize itself with the printer by sending the **ECHO** command so as to be assured that the printer is ready for communication to you.

7.1.2. Basic format of status readback responses

The printer sends its status information to the host computer in the following format :

- starts with the **@PJJL** prefix
- ends with a **<FF>** character
- All the data is in a readable ASCII format.

Each line in the PJJL status responses is in the following format :

- starts with a specific keyword
- ends with **<CR><LF>**

For example, the readback response against the **@PJJL DINQUIRE** is :

```
@PJJL DINQUIRE [LPARM : personality] variable<CR><LF>
value<CR><LF>
<FF>
```

The application must read all the data between the **@PJJL** and **<CR><LF>** codes. If the application can not understand the meaning of the lines, it must ignore them. Future printers may send currently unused keywords.

Refer to each command description to learn about the format of responses from the printer.

7.2. Inquire Command

The **INQUIRE** command is used in order to get the information of the current value of a specified variable in the PJI DEFAULT setting. (PJI environment). It is possible to get the information for variables the value of which PJI cannot change (Read-only).

This **INQUIRE** command can request only one variable at a time. If you would like to get the information from multiple variables, send multiple **INQUIRE** commands or the **PJI INFO VARIABLES** command which responds with all the variables in the PJI Default settings (PJI Default Environment).

Syntax

```
@PJI INQUIRE [LPARM : personality] variable [<CR>]<LF>
```

Response Syntax

```
@PJI INQUIRE [LPARM : personality] variable <CR><LF>  
value <CR><LF>  
<FF>
```

If the variable is not supported by the printer, it returns the response in the following syntax :

```
@PJI INQUIRE [LPARM : personality] variable <CR><LF>  
"?" <CR><LF>  
<FF>
```

- **LPARM : *personality***
This optional parameter must be used when requesting the information of printer language-specific variables, such as the font number in the PJI DEFAULT setting.
- ***variable* : variable**
This is a parameter which specifies which variable you would like to get the information about among the PJI Default settings (PJI Current Environment). The variables which can be used in this command are listed in Appendix A. You can also check by sending the @PJI INFO VARIABLES command to the printer.
- **value**
This is the value of the parameter requested by the variable parameter.

Examples

Example 1 :

This example requests the current print environment settings for RET, PAPER, and ORIENTATION :

```
<ESC>%-12345X@PJI <CR><LF>  
@PJI COMMENT ***Requesting*** <CR><LF>  
@PJI COMMENT about PJI Default Settings** <CR><LF>  
@PJI ECHO 19:15:00 02-20-1993 <CR><LF>  
@PJI INQUIRE RET <CR><LF>  
@PJI INQUIRE PAPER <CR><LF>  
@PJI INQUIRE ORIENTATION <CR><LF>  
<ESC>%-12345X
```

The printer may return, for example, the following response against the above **INQUIRE** commands :

```
@PJI ECHO 19:15:00 02-20-1993 <CR><LF>  
<FF>  
@PJI INQUIRE RET<CR><LF>  
LIGHT<CR><LF>  
<FF>  
@PJI INQUIRE PAPER<CR><LF>  
LETTER<CR><LF>  
<FF>  
@PJI INQUIRE ORIENTATION<CR><LF>  
PORTRAIT<CR><LF>  
<FF>
```

Example 2 :

This example requests the PCL-specific settings.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT ***Inquiring PCL settings*** <CR><LF>
@PJL ECHO 19:20:05 02-20-1993 <CR><LF>
@PJL INQUIRE LPARM:PCL FONTSOURCE<CR><LF>
@PJL INQUIRE LPARM:PCL FONTNUMBER<CR><LF>
<ESC>%-12345X
```

The printer may return the following response for the above **INQUIRE** commands :

```
@PJL ECHO 19:20:05 02-20-1993 <CR><LF>
<FF>
@PJL INQUIRE LPARM:PCL FONTSOURCE <CR><LF>
I<CR><LF>
<FF>
@PJL INQUIRE LPARM:PCL FONTNUMBER <CR><LF>
13<CR><LF>
<FF>
```

7.3. DINQUIRE Command

The **DINQUIRE** command is used to get the information of the default value of a specific variable in the PJL Environment. (User Default Settings). It is also possible to get the value for variables which PJL cannot change (Read-only).

The returned value of User Default Settings is identical to the Control Panel Setting.

This **DINQUIRE** command can request only one variable at a time. If you would like to get information from more variables, send multiple **DINQUIRE** commands.

Syntax:

```
@PJL DINQUIRE [LPARM : personality] variable [<CR>]<LF>
```

Response Syntax:

```
@PJL DINQUIRE [LPARM : personality] variable <CR><LF>
value <CR><LF>
<FF>
```

If the variable is not supported by the printer, it returns the response in the following syntax :

```
@PJL DINQUIRE [LPARM : personality] variable <CR><LF>
"? " <CR><LF>
<FF>
```

- **LPARM : *personality***
This optional parameter must be used when requesting information about printer language-specific variables such as the font number in the User Default setting.
- ***variable***
Variable is a parameter which specifies what you would like to get the information about among the User Default settings (User Default Environment). The valid variables are listed in the following tables.
- ***value***
Value is the returned value for the requested variable. See the following tables to learn about values for specific variables.

Examples

Example 1 :

This example requests the current print environment settings for RET, PAPER, and ORIENTATION :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT ***Requesting*** <CR><LF>
@PJL COMMENT about User Default Settings** <CR><LF>
@PJL ECHO 20:30:00 02-20-1993<CR><LF>
@PJL DINQUIRE RET<CR><LF>
@PJL DINQUIRE PAPER<CR><LF>
@PJL DINQUIRE ORIENTATION<CR><LF>
<ESC>%-12345X
```

The printer may return, for example, the following response against the above **DINQUIRE** commands:

```
@PJL ECHO 20:30:00 02-20-1993 <CR><LF>
<FF>
@PJL DINQUIRE RET<CR><LF>
LIGHT<CR><LF>
<FF>
@PJL DINQUIRE PAPER<CR><LF>
LETTER<CR><LF>
<FF>
@PJL DINQUIRE ORIENTATION<CR><LF>
LANDSCAPE<CR><LF>
<FF>
```

Example 2 :

This example requests the PCL-specific settings.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT ***Inquiring PCL settings*** <CR><LF>
@PJL ECHO 20:33:05 02-20-1993 <CR><LF>
@PJL DINQUIRE LPARM:PCL FONTSOURCE <CR><LF>
@PJL DINQUIRE LPARM:PCL FONTNUMBER <CR><LF>
<ESC>%-12345X
```

The printer may return the following response for the above **DINQUIRE** commands :

```
@PJL ECHO 20:33:05 02-20-1993 <CR><LF>
<FF>
@PJL DINQUIRE LPARM : PCL FONTSOURCE <CR><LF>
I<CR><LF>
<FF>
@PJL DINQUIRE LPARM : PCL FONTNUMBER <CR><LF>
15<CR><LF>
<FF>
```

7.4. ECHO Command

The **ECHO** command requests the printer to send back a specified message, in order to ensure that the printer is ready for communication with the application and that the received answer from the printer is what the application requested. The application must send this command before starting PJL communication.

After sending the **ECHO** command, the application must ignore any status information from the printer before it receives the response from this command, because not receiving the response from this command means that the printer is still processing the previous job and its status information is for the previous job environment. When the application receives the correct response for the requested **ECHO** command, the printer is now ready for the application and you can be sure that the status information following is for the requested command by the application.

Syntax

```
@PJL ECHO [< words >] [<CR>]<LF>
```

Response Syntax

```
@PJL ECHO [< words >] <CR><LF>
<FF>
```

- *< words >*

The beginning of this parameter must be a printable character. Then this parameter consists of characters from ASCII 33 to 255, space characters and horizontal tab characters.

This *< words >* parameter can be written without quotation marks as this is not a string of variables.

The parameter is recommended to be unique, distinguishable words from other print jobs, such as the time determined by the real time clock and user name, so as to confirm the received message from the printer is definitely the answer for the **ECHO** command which the application sent.

The length of the *< word >* must be within 80 characters.

Parameters

Parameter	Valid characters
<i>< words ></i>	ASCII 33 to 255, <SP> , <HT>

Example

The application sends the following example to the printer :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT the ECHO command follows <CR><LF>
@PJL ECHO This is a sample 22:03:00 <CR><LF>
<ESC>%-12345X
```

The printer sends back the answer for the above **ECHO** command :

```
@PJL ECHO This is a sample 22:03:00 <CR><LF>
<FF>
```

After receiving the above answer, all the messages from the printer are the requested information from the application, except for unsolicited status information.

7.5. INFO Command

The **INFO** command requests the printer to send back information on a specific category of the printer such as 'ID' (model name), 'CONFIG' (printer configuration), 'MEMORY' (available printer memory), 'STATUS' (current printer status), 'VARIABLES' (list of setting variables), 'USTATUS' (list of unsolicited status variables), 'PAGECOUNT' (total printing page number of the printer), 'PHYSICALMEMORY' (Physical memory size of printer) as shown in the following table.

This **INFO** command can request the information from only one category at a time. If you would like to get the information from more categories, send multiple **INFO** commands.

Syntax

```
@PJL INFO category [<CR>] <LF>
```

Response Syntax

```
@PJL INFO category <CR><LF>
[lines of printable characters or <WS> with <CR><LF> at the end of
each line]
<FF>
```

If the variable is not supported by the printer, it returns the response in the following syntax :

```
@PJL INFO category <CR><LF>
"? " <CR><LF>
<FF>
```

Parameters

Category	Information requesting
ID	The printer model number. For example the HL-1660e will return 'Brother HL-1660e'.
CONFIG	A list of the printer configuration information (available options) within the format of the number of types and/or the description of each available type of; paper sources paper sizes languages USTATUS (unsolicited status) commands font sources RAM number of lines and characters on the LCD
MEMORY	The total number of bytes of free memory space (user memory) and the largest free memory block.
STATUS	The printer status of the current message displayed on the LCD, on-line/off-line status and the status code.
VARIABLES	A list of the current settings of all the environmental & language-specific variables and the selectable values for each variable
USTATUS	A list of the current settings of all the unsolicited status variables and selectable values for each variable
PAGECOUNT	Total number of pages the printer has printed.
PHYSICALMEMORY	Physical printer memory. This value is the same as the response for INFO CONFIG.
FEATURES	The list of the printer features.
OPTIONS	The information of the options (HL-2460/3260N/1650/1670N/7050/ 1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/6050D/ 6050DN/8050N/5240/5250DN/5270DN/5280DW/4040CN/4050CDN/ 4070CDW/2070N/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/3040CN/3045CN/3070CW/3075CW/ 2130/2240D/2250DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/31 40CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L 8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360 DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1 211W/1218W/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200 DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L3270CDW/3190CDW/L3230CD W/3160CDW/L3230CDN/L3210CW)
INTRAYCONFIG	The information of the paper cassette (HL-2460/3260N/1650/1670N/ 7050/1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/ 6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/4040CN/4050CDN/4070CDW/2140/2150N/21 70W/5340D/5350DN/5370DW/5380DN/3040CN/3045CN/3070CW/3075CW/2130/2240D/2250DN/2270DW/41 40CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170 CDW/1110/1111/1112/1118/L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/ L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361 DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/121 8W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L520 2DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L3270CDW/3190CD W/L3230CDW/3160CDW/L3230CDN/L3210CW)
OUTTRAYCONFIG	The information of the paper output tray (HL-2460/3260N/1650/1670N/ 7050/1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/ 6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/ 4040CN/4050CDN/4070CDW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/3040CN/3045CN/3070C W/3075CW/2130/2240D/2250DN/2270DW/4140CN/4150CDN/4570CDW/5440D/5450DN/5470DW/6180DW/S 7000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/1118/L8250CDN/L8350CDW(T)/L9200CD W(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L2300/L2300D/L2320D/L2321D/2260 /2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569DW/1212W/121 0W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L5000D/5580D/5585D/5595DN/L5102 W/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6 400DW(T)/L6402DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW /L6200DW(T)/L6202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L3270CDW/3190CDW/L3 230CDW/3160CDW/L3230CDN/L3210CW)
DXCONFIG	The information of the Duplex unit (HL-2460/3260N/1650/1670N/7050 /1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/6050D/ 6050DN/8050N/5240/5250DN/5270DN/5280DW/4040CN/4050CDN/ 4070CDW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/2240D/2250DN/2270DW/4150CDN/4570C DW/ 5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/L8250CDN/L8260CD N/L8260CDW/L8350CDW(T)/L8360CDW(T)/L9200CDW(T)/L9300CDW(T)/L9310CDW/L2300/L2300D/L2320 D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365DW/L2366DW/2569 DW/L5000D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6 202DW/L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L3270CDW/3190CDW/L3230CDW/3160C DW/L3230CDN/L3210CW)
STORAGECONFIG	The information of the memory device (HL-2460/3260N/1650/1670N/ 7050/1850/1870N/5040/5050/5070N/5140/5150D/5170DN/6050/ 6050D/6050DN/8050N/2070N/5240/5250DN/5270DN/5280DW/ 4040CN/4050CDN/4070CDW/2140/2150N/2170W/5340D/5350DN/5370DW/5380DN/3040CN/3045CN/3070C W/3075CW/2130/2240D/2250DN/2270DW/4140CN/4150CDN/4570CDW/ 5440D/5450DN/5470DW/6180DW/S7000DN/3140CW/3150CDW/3150CDN/3170CDW/1110/1111/1112/1118/ L8250CDN/L8350CDW(T)/L9200CDW(T)/L9300CDW(T)/L8260CDN/L8260CDW/L8360CDW(T)/L9310CDW/L 2300/L2300D/L2320D/L2321D/2260/2260D/L2305W/L2340DW/L2360DN/L2361DN/2560DN/L2360DW/L2365 DW/L2366DW/2569DW/1212W/1210W/1210WR/1212WR/1210WE/1211W/1218W/1200/1201/1202/1208/L50 00D/5580D/5585D/5595DN/L5102DW/L5100DN(T)/5590DN/L5200DW(T)/L5202DW/L6200DW(T)/L6202DW/ L6250DN/L6250DW/L6300DW(T)/L6400DW(T)/L6402DW/L3270CDW/3190CDW/L3230CDW/3160CDW/L323 0CDN/L3210CW)

7.5.1. ID category

The application can use **@PJL INFO ID** command to find out the printer model name. As the features of the printer may be changed by future revisions, the application should check them by using the **@PJL INFO CONFIG** command.

Example

The application sends the following command to the printer :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL INFO ID <CR><LF>
<ESC>%-12345X
```

The printer sends back the answer for the above **INFO** command if the printer name is HL-1660e:

```
@PJL INFO ID<CR><LF>
"Brother HL-1660e"<CR><LF>
<FF>
```

7.5.2. CONFIG category

The application can use **@PJL INFO CONFIG** command to have the printer return a list of printer configuration information. The list consists of the information on paper sources, paper sizes, languages, **USTATUS** (unsolicited status) commands, font sources, RAM size, number of lines and characters on the LCD supported by the printer, with the format of the number of available types and/or the description of each type. The printer sends back a list of multiple information for one **@PJL INFO CONFIG** command.

Syntax:

```
@PJL INFO CONFIG <CR><LF>
```

Response Syntax:

```
@PJL INFO CONFIG <CR><LF>
feature[=value] [value feature information] <CR><LF>
[<HT>returned option[ attribute] <CR><LF>]
...
...
...
...
feature[=value] [value feature information] <CR><LF>
[<HT>returned option[ attribute] <CR><LF>]
<FF>
```

Parameters

Parameter	Range of Characters	Description
<i>feature</i>	alphabetical letters (ASCII 65-90 or 97-122), numbers (ASCII 48-57)	Name of an item of the printer configuration :
	* Beginning with a letter	for example) IN TRAYS (paper sources) OUT TRAYS (output trays) PAPER (paper sizes) LANGUAGES (printer languages) USTATUS (unsolicited status) FONT CARTRIDGE SLOTS MEMORY (RAM size) DISPLAY LINES (number of lines available on the LCD) DISPLAY CHARACTER SIZE (number of characters available on the LCD) etc.
<i>value</i>	numbers	Value for the <i>feature</i> , or value which shows a number or range of options
<i>feature information</i>	alphabetical letters (ASCII 65-90 or 97-122), numbers (ASCII 48-57)	Type of the following information:
	* separated from others by spaces	ENUMERATED RANGE READONLY etc.
<i>returned option</i>	alphabetical letters (ASCII 65-90 or 97-122), numbers (ASCII 48-57)	An option of the item, such as PCL of the item of LANGUAGES
<i>attribute</i>	alphabetical letters (ASCII 65-90 or 97-122), numbers (ASCII 48-57)	Further information for a <i>returned option</i> . For example, a PC <i>attribute</i> following an INTRAY2 <i>returned option</i> indicates INTRAY2 means LC (optional tray2)

Example

The application sends the following command to the printer :

```
<ESC>%-12345X@PJL<CR><LF>
@PJL INFO CONFIG<CR><LF>
<ESC>%-12345X
```

The printer may send back the answer for the above INFO command :

```
@PJL INFO CONFIG<CR><LF>
IN TRAYS [1 ENUMERATED] <CR><LF>
    INTRAY1 PC<CR><LF>
    INTRAY2 LC<CR><LF>
OUT TRAYS [2 ENUMERATED] <CR><LF>
    NORMAL FACEDOWN<CR><LF>
PAPER [9 ENUMERATED] <CR><LF>
    LETTER<CR><LF>
    LEGAL<CR><LF>
    A4<CR><LF>
    EXECUTIVE<CR><LF>
    MONARCH<CR><LF>
    COM10<CR><LF>
    DL<CR><LF>
    C5<CR><LF>
    B5<CR><LF>
LANGUAGES [5 EMULATED] <CR><LF>
    PCL<CR><LF>
    POSTSCRIPT<CR><LF>
    IBM<CR><LF>
    EPSON<CR><LF>
    HPGL<CR><LF>
USTATUS [4 ENUMERATED]
    DEVICE<CR><LF>
    JOB<CR><LF>
    PAGE<CR><LF>
    TIMED<CR><LF>
FONT CARTRIDGE SLOTS [2 ENUMERATED] <CR><LF>
    CARTRIDGE<CR><LF>
    CARTRIDGE1<CR><LF>
MEMORY=2097152<CR><LF>
DISPLAY LINES=1<CR><LF>
DISPLAY CHARACTER SIZE=16<CR><LF>
<FF>
```

In this example, IN TRAYS [2 ENUMERATED] indicates that there are two options in IN TRAYS (paper sources) and MEMORY=2097152 indicates the RAM size in the printer is 2097152 bytes.

7.5.3. MEMORY category

The application can use the **@PJL INFO MEMORY** command to check the size of total free memory and the largest free memory block in the printer.

The free memory size may vary according to the personality (printer language). In order to know the free memory size in PCL, use the **<ESC>*s1M** (Free Space command) in the PCL status readback commands.

Example

The application sends the following command to the printer :

```
<ESC>%-12345X@PJL<CR><LF>
@PJL COMMENT the INFO MEMORY command follows<CR><LF>
@PJL ECHO This is a sample 2-28-1993 19:03:00<CR><LF>
@PJL INFO MEMORY<CR><LF>
<ESC>%-12345X
```

The printer sends back the answer for the above command :

```
@PJL ECHO This is a sample 2-28-1993 19:03:00<CR><LF>
<FF>
@PJL INFO MEMORY<CR><LF>
TOTAL=159984<CR><LF>
LARGEST=53322<CR><LF>
<FF>
```

7.5.4. STATUS category

The application can use the **@PJL INFO STATUS** command to check the printer on-line/off-line status, the current message on the LCD and a status code. The ONLINE=TRUE indicates the printer is online, while the ONLINE=FALSE shows it is off-line. Refer to the list of the PJL Status Codes in the Appendix for the meanings of the returned status codes.

Example

The application sends the following command to the printer :

```
<ESC>%-12345X@PJL<CR><LF>
@PJL COMMENT the INFO STATUS command follows<CR><LF>
@PJL ECHO This is a sample 2-28-1993 19:10:00<CR><LF>
@PJL INFO STATUS<CR><LF>
<ESC>%-12345X
```

The printer sends back the answer for the above command when BR-Script mode and letter sized paper are selected and it is in idle status:

```
@PJL ECHO This is a sample 2-28-1993 19:10:00<CR><LF>
<FF>
@PJL INFO STATUS<CR><LF>
CODE=10001<CR><LF>
DISPLAY="00 IDLE 001P LT"<CR><LF>
ONLINE=TRUE<CR><LF>
<FF>
```

7.5.5. VARIABLES category

The application can send the **@PJL INFO VARIABLES** command to get a list of possible variables for printer environment settings, possible language-specific variables, the current settings for both and the possible values or range for those variables. Refer to the "Environment Variables" in Chapter 6 for more information about the variables for the environment settings.

The language-specific variables returned from the printer depend on the current environment and are indicated with LPARM: *personality*.

The value and options for the FONTSOURCE variable depend on the installed font sources such as cartridge, downloaded permanent soft fonts.

The range of fonts listed for FONTNUMBER variable is only for the current font source. The upper limit value of the range varies according to the number of fonts in the current font source.

Example

The application sends the following command to the printer :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT the INFO VARIABLES command <CR><LF>
@PJL ECHO This is a sample 2-28-1993 19:35:00 <CR><LF>
@PJL INFO VARIABLES <CR><LF>
<ESC>%-12345X
```

The printer may send back the answer for the above command :

```
@PJL ECHO This is a sample 2-28-1993 19:35:00 <CR><LF>
<FF>
@PJL INFO VARIABLES<CR><LF>
COPIES=3 [2 RANGE] <CR><LF>
1<CR><LF>
999<CR><LF>
PAPER=LETTER [9 ENUMERATED] <CR><LF>
LETTER<CR><LF>
LEGAL<CR><LF>
A4<CR><LF>
EXECUTIVE<CR><LF>
MONARCH<CR><LF>
COM10<CR><LF>
```

```

C5<CR><LF>
DL<CR><LF>
B5<CR><LF>
ORIENTATION=PORTRAIT [2 ENUMERATED] <CR><LF>
PORTRAIT<CR><LF>
LANDSCAPE<CR><LF>
FORMLINES=60 [2 RANGE]
5<CR><LF>
128<CR><LF>
MANUALFEED=OFF [2 ENUMERATED] <CR><LF>
OFF<CR><LF>
ON<CR><LF>
RET=MEDIUM [4 ENUMERATED] <CR><LF>
OFF<CR><LF>
LIGHT<CR><LF>
MEDIUM<CR><LF>
DARK<CR><LF>
PAGEPROTECT=OFF [4 ENUMERATED] <CR><LF>
OFF<CR><LF>
LETTER<CR><LF>
LEGAL<CR><LF>
A4<CR><LF>
RESOLUTION=600 [2 ENUMERATED] <CR><LF>
300<CR><LF>
600<CR><LF>

PERSONALITY=AUTO EPSON [8 ENUMERATED] <CR><LF>
AUTO<CR><LF>
PCL<CR><LF>
POSTSCRIPT<CR><LF>
Interactive<CR><LF>
IBMProprinterXL<CR><LF>
EPSONFX850<CR><LF>
HPGL<CR><LF>
TIMEOUT=10 [2 RANGE] <CR><LF>
1
99
INTRAY1=UNLOCKED [2 ENUMERATED] <CR><LF>
UNLOCKED<CR><LF>
LOCKED<CR><LF>
INTRAY2=UNLOCKED [2 ENUMERATED] <CR><LF>
UNLOCKED<CR><LF>
LOCKED<CR><LF>
AUTOCONT=ON [2 ENUMERATED] <CR><LF>
OFF<CR><LF>
ON<CR><LF>
LOWTONER=OFF [2 ENUMERATED] <CR><LF>
OFF<CR><LF>
ON<CR><LF>
INTRAY1SIZE=LETTER [9 ENUMERATED] <CR><LF>
LETTER<CR><LF>
LEGAL<CR><LF>
A4<CR><LF>
EXECUTIVE<CR><LF>
MONARCH<CR><LF>
COM10<CR><LF>
C5<CR><LF>
DL<CR><LF>
B5<CR><LF>
INTRAY2SIZE=LEGAL [9 ENUMERATED] <CR><LF>
LETTER<CR><LF>
LEGAL<CR><LF>

```

```

A4<CR><LF>
EXECUTIVE<CR><LF>
MONARCH<CR><LF>
COM10<CR><LF>
C5<CR><LF>
DL<CR><LF>
B5<CR><LF>
LPARM:PCL FONTSOURCE=I [4 EMULATED] <CR><LF>
I<CR><LF>
C<CR><LF>
C1<CR><LF>
S<CR><LF>
LPARM:PCL FONTNUMBER=0 [2 RANGE] <CR><LF>
0<CR><LF>
70<CR><LF>
LPARM:PCL PITCH=10.00 [2 RANGE] <CR><LF>
0.44<CR><LF>
99.99<CR><LF>
LPARM:PCL PITCH=12.00 [2 RANGE] <CR><LF>
4.00<CR><LF>
999.75<CR><LF>
LPARM:PCL SYMSET=ROMAN8 [43 ENUMERATED] <CR><LF>
ROMAN8<CR><LF>
ISOL1<CR><LF>
ISOL2<CR><LF>
....
....
WIN30<CR><LF>
HPGERM<CR><LF>
HPSPAN<CR><LF>
MCTEXT<CR><LF>
LPARM:POSTSCRIPT PRTPSERRS=OFF [2 ENUMERATED] <CR><LF>
OFF<CR><LF>
ON<CR><LF>
<FF>

```

7.5.6. USTATUS category

The application can send the **@PJL INFO USTATUS** command to check the possible unsolicited status types of the printer and the current setting value and possible values for them.

Syntax

```
@PJL INFO USTATUS [<CR>] <LF>
```

Response Syntax

```

@PJL INFO USTATUS <CR><LF>
variable=value [value feature information] <CR><FF>
[<HT>returned option <CR><LF>]
...
...
...
...
variable=value [value feature information] <CR><FF>
[<HT>returned option <CR><LF>]
<FF>

```

Parameters

Variable	Value	Description
DEVICE	ON	Makes unsolicited device status valid for any status change
	VERBOSE	Makes unsolicited device status valid for any of PjL parser warning, error and status change
JOB	OFF	Makes unsolicited device status invalid for any status change
	ON	Makes unsolicited job status (reporting job start/job end) valid
	OFF	Makes unsolicited job status invalid
PAGE	ON	Makes unsolicited page status (reporting respective page printed and
	OFF	Makes unsolicited page status invalid
TIMED	5 to 300	Makes timed unsolicited status (allowing the printer to send back unsolicited status after an interval specified in seconds) valid
	0	Turns TIMED USTATUS off (Makes timed unsolicited status invalid)

Example

The application sends the following command to the printer :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT the INFO USTATUS command <CR><LF>
@PJL ECHO This is a sample 2-28-1993 21:15:00 <CR><LF>
@PJL INFO USTATUS <CR><LF>
<ESC>%-12345X
```

The printer may send back the following answer for the above command :

```
@PJL ECHO This is a sample 2-28-1993 21:15:00 <CR><LF>
<FF>
@PJL INFO STATUS<CR><LF>
DEVICE=VERBOSE [3 ENUMERATED] <CR><LF>
OFF<CR><LF>
ON<CR><LF>
VERBOSE<CR><LF>
JOB=ON [2 ENUMERATED] <CR><LF>
OFF<CR><LF>
ON<CR><LF>
PAGE=ON [2 ENUMERATED] <CR><LF>
OFF<CR><LF>
ON<CR><LF>
TIMED=0 [2 RANGE] <CR><LF>
5<CR><LF>
300<CR><LF>
<FF>
```

7.6. USTATUS Command

Sending the **USTATUS** command makes unsolicited printer status (sending the printer status information to the host computer automatically without being requested for it) valid or invalid. If the unsolicited status is set to ON with the **USTATUS** command, the printer sends unsolicited status information to the host computer at the time interval set by **USTATUS TIMED** command from when the status changes. On the other hand, the **DINQUIRE**, **INQUIRE** and **INFO** commands make the printer send a response only once, just after they are received.

The printer status to be sent to the host computer are ;

- Device status changes - printer cover open, paper jams, paper out, etc
- Job status changes - completion of the printing of a job, receiving a **JOB** command
- Page status changes - ejecting a printed page

All the unsolicited status information (USTATUS DEVICE, JOB, PAGE and TIMED) is turned off at once by the USTATUSOFF command. Each status can be turned off individually by the corresponding USTATUS command.

The USTATUS TIMED command specifies after which time period the printer sends the unsolicited status information and is turned off by setting the time increment to zero with this command.

To get information about the current settings or possible settings for unsolicited status, use the INFO USTATUS command.

Syntax

```
@PJL USTATUS variable = value [<CR>]<LF>
```

Response Syntax

```
@PJL USTATUS variable <CR><LF>
returned option [printable characters or <WS>] <CR><LF>
...
...
...
...
returned option <CR><LF>
<FF>
```

Parameters

Variable	Value	Description
DEVICE	ON	Makes unsolicited device status valid for any status change (printer errors)
	VERBOSE	Makes unsolicited device status valid for any PjL parser warning, error and status changes
JOB	OFF	Makes unsolicited device status invalid for any status change
	ON	Makes unsolicited job status (reporting job start/job end) valid
	OFF	Makes unsolicited job status invalid
PAGE	ON	Makes unsolicited page status (reporting respective page printed and
	OFF	Makes unsolicited page status invalid
TIMED	5 to 300	Makes timed unsolicited status (allowing the printer to send back unsolicited status after an interval specified in seconds) valid
	0	Turn TIMED USTATUS off (Makes timed unsolicited status invalid)

7.6.1. Device variable

The **@PJL USTATUS DEVICE** command allows the printer to send status messages when the printer status changes. The printer will send the status by the status code shown in the table below.

Status code	Status
10000 - 10999	Status information such as printer on-line or off-line.
11000 - 11999	Status of available paper in paper input sources, such as paper empty and auto-switching to another paper source.
20000 - 20999	PJL parser errors. The entire command line of a PJL command is ignored when an error (except for code 20004) occurs.
25000 - 25999	PJL parser errors. Part of a PJL command is ignored when the error occurs.
27000 - 27999	PJL semantic errors, which means that they are grammatically acceptable but cannot be executed. For example, attempting to lock the only unlocked paper tray causes this error.
30000 - 30999	Errors which do not stop the printing procedure if the CONTINUE is set to AUTO (auto continue mode). If the CONTINUE mode is set to STOP, the printer stops printing and goes to off-line status and only resumes when the CONTINUE or SEL key are pressed.
Status code	Status
35000 - 25999	Errors which may cause incorrect printing results, such as loss of some print data on a page. The operator's intervention may be required.
40000 - 40999	Errors such as paper empty, cover open or paper jams which suspend printing until the operator takes the corresponding corrective action.
41000 - 41999	Errors in the paper source such as running out of paper in the current paper tray and none available from any other paper sources.

Example

Example 1 :

The application sends the following command to the printer :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL USTATUS DEVICE = VERBOSE <CR><LF>
<ESC>%-12345X
```

The printer may send back the answer for the above command :

```
@PJL USTATUS DEVICE<CR><LF>
CODE=40021<CR><LF>
DISPLAY=' 12 COVER OPEN ' <CR><LF>
ONLINE=FALSE<CR><LF>
<FF>
```

Example 2 :

When the following wrong PJL command is sent :

```
<ESC>%-12345X@PJL <CR><LF>
@PJL USTATUS DEVICE = VERBOSE <CR><LF>
@PJL ECO wrong sample 3-6-1993 23:12:00 <CR><LF>
<ESC>%-12345X
```

The printer may send back the answer for the above command :

```
@PJL USTATUS DEVICE<CR><LF>
CODE=20002<CR><LF>
<FF>
```

7.6.2. JOB variables

The **@PJL USTATUS JOB = ON** command allows the printer to send the job processing status. This is sent to the application whenever a **JOB** and **EOJ** command is issued so that the application knows when a job starts and ends.

Example

The application sends the following commands to the printer.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL USTATUS JOB = ON <CR> <LF>
@PJL JOB NAME = "JOB 88554" <CR> <LF>
<ESC>%-12345X@PJL <CR> <LF>
@PJL ENTER LANGUAGE = PCL <CR> <LF>
<ESC>E . . . PCL Job . . . <ESC>E <ESC>%-12345X
<ESC>%-12345X@PJL <CR><LF>
@PJL EOJ NAME = "JOB 88554" <CR> <LF>
<ESC>%-12345X
```

The printer may send back the answer for the above command.

```
@PJL USTATUS JOB<CR><LF>
START<CR><LF>
NAME="JOB 88554"<CR><LF>
<FF>
[ . . time period while job is printing . . . ]
@PJL USTATUS JOB<CR><LF>
END<CR><LF>
NAME = "JOB 88554"<CR><LF>
PAGES=5<CR><LF>
<FF>
```

7.6.3. PAGE variable

The **@PJL USTATUS PAGE = ON** command allows the printer to send the information about the print completion of a particular page. Using this command, you can monitor the job process on a page-by-page basis.

Example

The application sends the following commands to the printer.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL USTATUS PAGE = ON <CR> <LF>
@PJL JOB <CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E . . . Four-page PCL Job . . . <ESC>E
<ESC>%-12345X@PJL <CR><LF>
@PJL EOJ <CR><LF>
<ESC>%-12345X
```

The printer may send back the answer for the above command.

```
@PJL USTATUS PAGE<CR><LF>
1<CR><LF>
<FF>
@PJL USTATUS PAGE<CR><LF>
2<CR><LF>
<FF>
@PJL USTATUS PAGE<CR><LF>
3<CR><LF>
<FF>
@PJL USTATUS PAGE<CR><LF>
4<CR><LF>
<FF>
```

7.6.4. TIMED variable

The **@PJL USTATUS TIMED = XXX** command enables the printer to send printer status information to the application at the specified time period.

This time interval can be set to 0 and from 5 to 300 seconds. If set to 0, this function is turned off. If set to any value between 5 and 300, the printer automatically sends to the application "CODE = XXXXX" (a status code number), "DISPLAY = XXXXXXXXXXXX" (the message currently displayed on the printer's control panel), and "ON LINE = XXXXXXXX" (printer's on-line/off-line status) at the specified time interval.

Example

The application sends the following commands to the printer.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL USTATUS TIMED = 30 <CR><LF>
<ESC>%-12345X
```

The printer may send back the answer for the above command.

```
@PJL USTATUS TIMED<CR><LF>
CODE=10001<CR><LF>
DISPLAY="00 READY 001P LT"<CR><LF>
ONLINE=TRUE<CR><LF>
<FF>
```

7.7. USTATUSOFF Command

The **@PJL USTATUSOFF** command makes all unsolicited status reporting inactive.

Syntax

```
@PJL USTATUSOFF [<CR>] <LF>
```

Parameters

There are no parameters for this command.

Example

```
<ESC>%-12345X@PJL <CR><LF>  
@PJL USTATUSOFF <CR><LF>  
@PJL USTATUS DEVICE = ON <CR><LF>  
<ESC>%-12345X
```

7.8. JOB Recovery

You can recover a failed job with the combination of **JOB** and **EOJ** commands and the **USTATUS PAGE** command. **JOB/EOJ** commands inform the printer of the beginning and ending of each job and the **USTATUS PAGE** command informs the application of completion of printing of each page of a job.

When the spooler finds a job failure, it can recover the failed job. It can send the **JOB** command with the **START** option. The **START** page should be set to the last printed page, which can be found by the **USTATUS PAGE** command.

8. DEVICE ATTENDANCE COMMANDS

8.1. Introduction

You can change display messages on the printer control panel by using PjL. The Operator can be alerted by this feature to what specific actions should be taken. This chapter shows you three device attendance commands.

RDYMSG

By using this command, you can change the message "00 READY" on the printer control panel into whatever message you like. This command does not change the printer's online/offline state.

OPMSG

By using this command, the printer can display a message you specify on the printer switch panel LCD and set the printer to off-line (non-ready state for printing).

STMSG

By using this command, the printer can display a message you specify on the printer control panel LCD and the printer will go off-line. After the operator puts the printer back on-line by the on-line / off-line key, the printer name is returned by the printer to the application.

8.2. RDYMSG Command

With the **RDYMSG** command, you can change the message "00 READY" on the printer control panel into a specified message. The printer will be kept online.

Syntax

```
@PJL RDYMSG DISPLAY = "message" [<CR>] <LF>
```

Parameters

Parameter	Functional Range	Default
DISPLAY = "message"	ASCII 33 and ASCII 35 through 255, <SP>, <HT>	N/A

DISPLAY = "message"

You can use any combination of characters available on the printer except for the quotation marks (ASCII 34) up to 16 characters total including spaces or horizontal tab. Characters must be enclosed in double quotes.

Comments :

- This RDYMSG command keeps the printer online. You can display whatever message you like, for example, job name, person name etc..
- @PJL RDYMSG DISPLAY = ""
This command returns the display to "00 READY".

Example :

The following example shows how to display the name of person who is printing the job.

```
<ESC>%-12345X@PJL <CR><LF>  
@PJL JOB NAME = "Tom's job" <CR><LF>  
@PJL RDYMSG DISPLAY = "TOM'S JOB" <CR><LF>
```

The following is an example of how to restore the display to the normal ready message.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL COMMENT Normal READY message <CR><LF>
@PJL RDYMSG DISPLAY = "" <CR><LF>
@PJL EOJ NAME = "End of Tom's Job" <CR><LF>
<ESC>%-12345X
```

8.3. OPMSG Command

With the **OPMSG** command, you can display any message you like on the printer switch panel LCD. The printer will go off-line and stop printing until the operator presses the ON LINE key or resets the printer (Press SHIFT key and RESET key, then press SET key.)

Syntax

```
@PJL OPMSG DISPLAY = "message" [<CR>] <LF>
```

Parameters

Parameter	Functional Range	Default
DISPLAY = " <i>message</i> "	ASCII 33 and ASCII 35 through 255, <SP>, <HT>	N/A

DISPLAY = "*message*"

You can use any combination of characters available on the printer except for the quotation marks (ASCII 34) up to 16 characters in total including spaces or horizontal tab. Characters must be enclosed in double quotes.

Example

The following example shows how to display "LOAD C5 ENVELOPE" on the printer switch panel.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL JOB NAME = "JOB C5 envelope" <CR><LF>
@PJL OPMSG DISPLAY = "LOAD C5 ENVELOPE" <CR><LF>
@PJL <CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E This is C5 Envelope<ESC>E
```

8.4. STMSG Command

With the **STMSG** command, you can display any message you like on the printer switch panel LCD. The printer will go off-line and stop printing until the operator presses the ON LINE key or resets the printer (Press SHIFT key and RESET key, then press SET key.) When the printer is put back to on-line by the operator, the printer returns a status message giving the name of the key.

Syntax

```
@PJL STMSG DISPLAY = "message" [<CR>] <LF>
```

Return Syntax

```
@PJL STMSG DISPLAY = "message" <CR><LF>
key <CR><LF>
<FF>
```

Parameters

Parameter	Functional Range	Default
DISPLAY = " <i>message</i> "	ASCII 33 and ASCII 35 through 255, <SP>, <HT>	N/A
<i>key</i>	ONLINE, RESET	N/A

DISPLAY = "*message*"

You can use any combination of characters available on the printer except for the quotation marks (ASCII 34) up to 16 characters total including spaces or horizontal tab. Characters must be enclosed in double quotes.

key

After the operator presses the key in order to put the printer back to on-line, this variable will be returned with the status response.

Example

Following example shows how to display "LOAD LETTER SIZE" on the printer switch panel LCD.

```
<ESC>%-12345X@PJL <CR><LF>
@PJL <CR><LF>
@PJL STMSG DISPLAY = "LOAD LETTER SIZE" <CR><LF>
@PJL <CR><LF>
@PJL ENTER LANGUAGE = PCL <CR><LF>
<ESC>E... PCL job ...<ESC>E<ESC>%-12345X
```

If the operator press the ONLINE key,

```
@PJL STMSG DISPLAY = "LOAD LETTER SIZE"<CR><LF>
ONLINE<CR><LF>
<FF>
```

9. INDEX

C

COMMENT command.....	11
conditions	8
context switching	12

D

DEFAULT command.....	58
DEMOPAGE.....	10
Device Attendance command.....	78
DINQUIRE command.....	63

E

ECHO command	64
emulation switching	11
end of Job	14
ENTER command	11
Environment commands.....	15
EOJ command	14
EPSON-specific variables.....	44
EXECUTE command.....	10
explicit switching	12

F

format	6
--------------	---

I

IBM-specific variables	47
implicit switching.....	12
INFO command.....	65
CONFIG category	67
ID category	67
MEMORY category	69
STATUS category	70
USTATUS category	72
VARIABLES category	70
information line	11
INITIALIZE command	58
INQUIRE command.....	62
invalid command.....	7

J

JOB Command	13
job name.....	13
JOB recovery.....	77

K

Kernel command.....	10
---------------------	----

O

OPMSG command.....	79
--------------------	----

P

PCL-specific variables.....	40, 52, 57
PERMFONT	11
PJL RESET command	59
PostScript-specific variable	57
print environment.....	15
PRTCONFIG	11

R

RDYMSG command.....	78
reset conditions	16
RESIFONT	10

S

SET command.....	59
SHUTDOWN	10
start of job	13
Status Readback commands.....	61
STMSG command	79
syntax.....	6
rules.....	6

U

UEL command.....	10
Universal Exit Command.....	10
USTATUS command.....	73
Device variable	74
JOB variables	75
PAGE variables.....	76
TIMED variable	76
USTATUSOFF command	77

V

variable	7
variables	18

CHAPTER 6

EPSON FX-850