Loop rotator angle dial

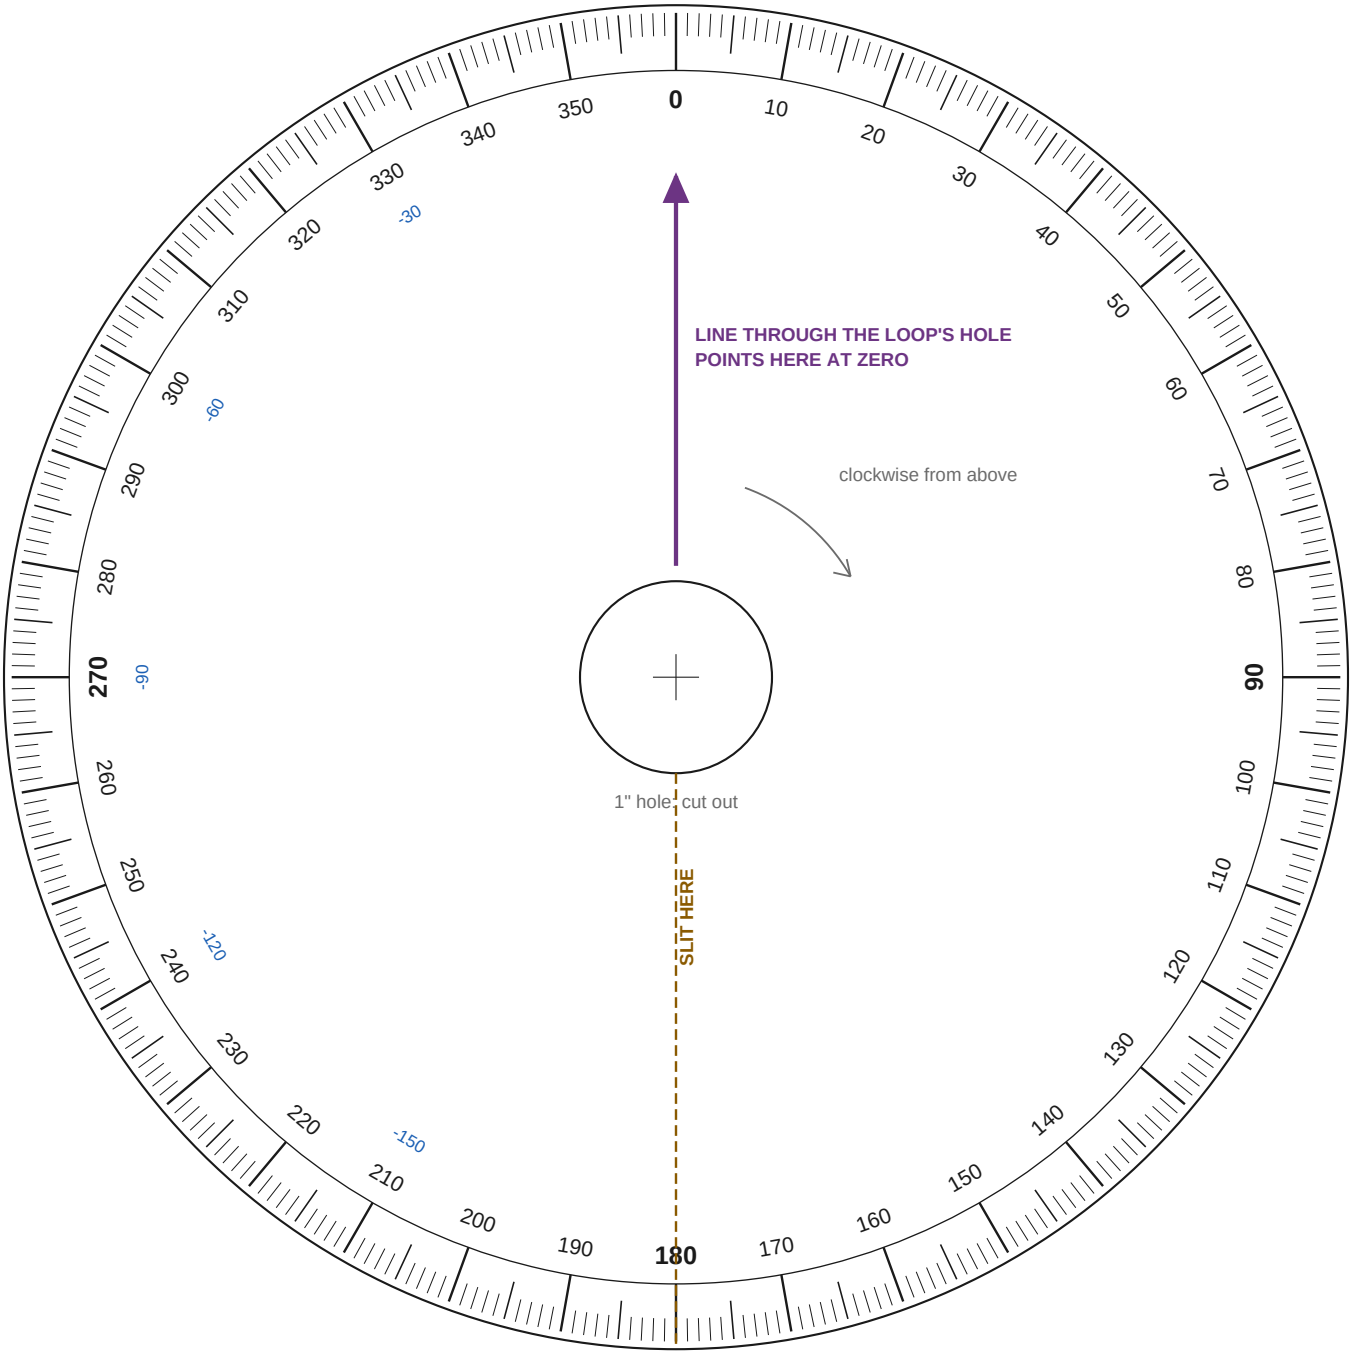

3 in

5 cm

1. Print at 100% / actual size. Check both bars above before cutting; the dial is 7" across.
2. Cut the outer circle and the 1" hole. Slit along the dashed line at 180.
3. Slip it round the mast under the shaft collar's bearing and tape it to the plate.
4. The dial stays still and the mast turns, so add a pointer that turns with the mast: a straw or stiff wire taped to the collar, reaching over the graduations, aligned with the line through the loop's hole. Turn the loop to set 0 when you tape the dial down.
5. Blue figures are loop-rotator's negative angles: goto -30 reads 330 on the dial.