

2. Replacing a Fuse (contd)

3. Refer to Table B 2-1 and see Figures B 2-1 and B 2-2 to locate the fuse to be replaced.

Table B 2-1 Board Fuses

Board	Fuse for	Fuse Numbers
Power board	Hose 1, gun 1	F1, F5
	Hose 2, gun 2	F2, F6
	Hose 3, gun 3	F3, F7
	Hose 4, gun 4	F4, F8
	Tank	F11, F12
	Control power	F9, F10
5/6 hose/gun board (5/6 hose/gun units only)	Hose 5, gun 5	F1, F3
	Hose 6, gun 6	F2, F4
Contactor board (200-240 Vac 3Ø units)	Hoses 5-6, guns 5-6	F1, F2
	Grid	F1, F3
Contactor board [400 Vac/230 Vac (with neutral) 3Ø units]	Hoses 5-6, guns 5-6	F1
	Grid	F3
Motor control fuses	Motor control	F30, F31
24V power supply	Gas control board Pump speed/system pressure board Gas circuit Optional level control	F32

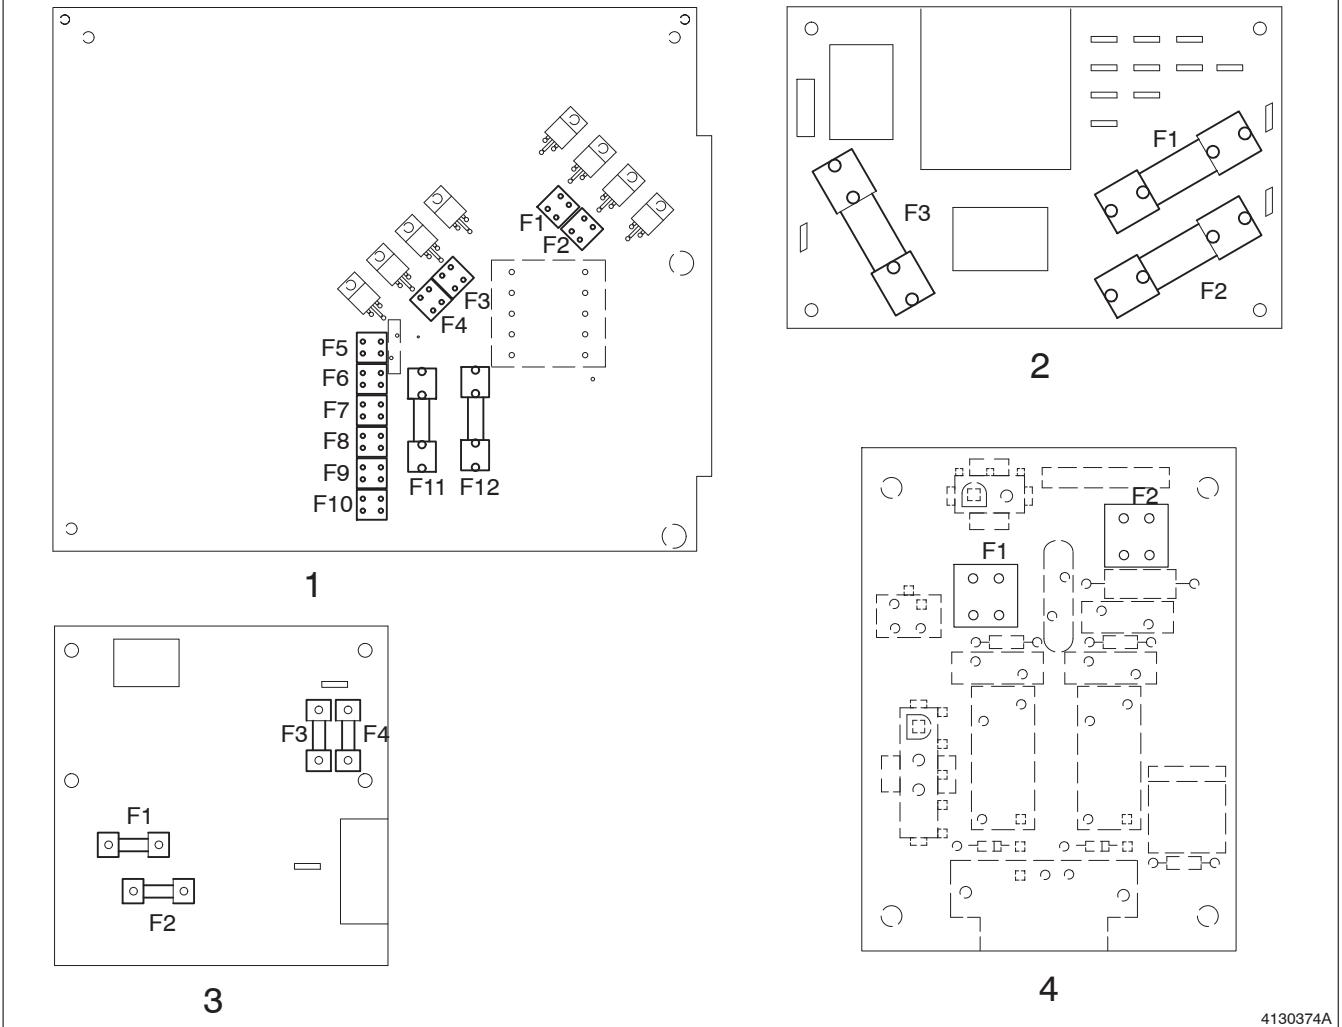


Fig. B 2-1 Location of Fuses on Boards

1. Power board
2. Contactor board

3. 5/6 hose/gun board

4. FM-200 electrical panel