



UMS
Utho Marking Solutions

Serialine.

Unique serial numbers on every product – straight
from your file to your line.

USER MANUAL

SN 000124 > 000125 > 000126



For Leibinger JET2neo printers
Version 1.0 · October 2026

USER MANUAL

Contents

01	Welcome to Serialine	What it does for you
02	How it works	From file to product
03	What you need	Equipment and settings
04	Preparing your serial file	Format rules
05	Printing a batch	Daily procedure
06	Stops, restarts and reprints	When things change
07	Your print log	Records and traceability
08	Troubleshooting	Messages and fixes
09	Support	Contact details

Quick start

- 1 Printer ready, printing **stopped**.
- 2 Double-click **Serialine** and type the number of your batch file.
- 3 Check the serial count, press **ENTER** and run the line.

01 INTRODUCTION

Welcome to Serialine

Serialine prints a unique serial number on every product on your line, straight from your Excel or CSV file. Each product that passes the sensor gets the next serial, in order, and every print is recorded.

One serial per product

Printing is triggered by your line sensor, so a serial only goes on a product that is actually there.

No duplicates

The printer checks the serial sequence itself and never prints the same serial twice.

Works from your own files

Use the Excel or CSV list you already have. No database or special software needed.

Full traceability

A print log records every serial with its date and time, ready for your batch records.

Safe restarts

After a stop, a power cut or a closed window, Serialine continues from the first unprinted serial.

Controlled reprints

A batch is printed again only after explicit confirmation, and the original log is kept.

Any batch size

Print 5,000, 50,000 or more unique serials in one continuous run – no splitting files.

Keeps up with your line

Serialine feeds the printer ahead of production, so the line never waits for data.


SIMPLE

Double-click, choose the file, press ENTER. No installation and no technical knowledge needed – your UMS technician sets everything up.

02 OVERVIEW

How it works

Serialine sends your serials to the printer; your line sensor decides when each one is printed.

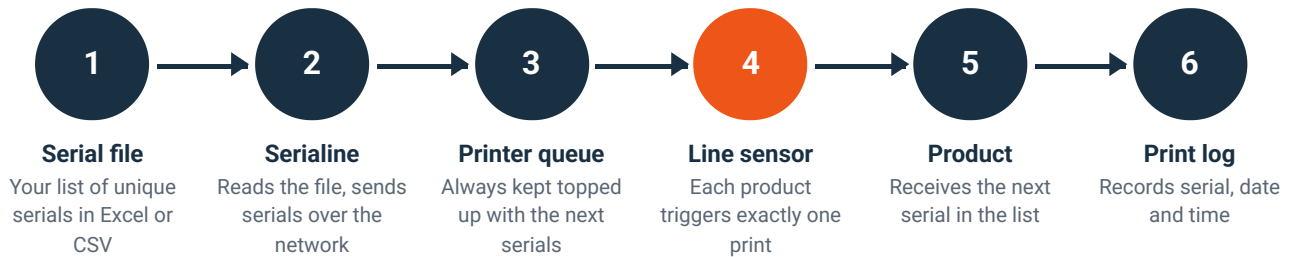

The printer queue is a rolling buffer: it holds the next 255 serials, and Serialine refills it continuously as products are printed. **A batch can contain any number of serials** – 5,000, 50,000 or more – in one production run. When the last serial is printed, Serialine stops the printer automatically.

03 REQUIREMENTS

What you need

Your UMS technician sets up and tests all of this at installation.

Item	Requirement
Computer	Windows 10 or 11 laptop or PC, on the same network as the printer
Printer	Leibinger JET2neo, configured by UMS for Serialine
Line sensor	Photo-eye connected to the printer's print trigger input
Network	Ethernet connection between the computer and the printer
Serialine folder	<code>Serialine.exe</code> and <code>printer_settings.txt</code> , installed by UMS
Serial file	Excel (<code>.xlsx</code>) or CSV (<code>.csv</code>) file – see chapter 04

IMPORTANT

Keep the computer plugged in and set to **never sleep** while plugged in. A computer that goes to sleep stops the batch.

04 DATA Preparing your serial file

One file = one batch. Save it in the Serialine folder with a name that identifies the batch, e.g.

Batch2026-041.xlsx .

- 1 Serials in **column A** of the **first sheet**, starting in cell **A1**.
- 2 **No heading row.** Anything in A1 is printed as the first serial.
- 3 One serial per row, printed top to bottom. Empty rows are skipped. There is no limit on the number of rows.
- 4 Every serial must be **unique**. Serialine refuses a file that contains a serial twice.
- 5 Serials must fit the print field on your printer – ask UMS for the maximum length.

Example – first sheet

	A
1	AV2026000001
2	AV2026000002
3	AV2026000003
4	AV2026000004

Leading zeros are kept: 000123 prints as 000123 .

05

DAILY PROCEDURE

Printing a batch

Starting a batch takes under a minute.

Before you start

- ☐ Printer on, correct job loaded, jet running
- ☐ Printer printing **stopped** ("Ready for print start")
- ☐ Serial file saved in the Serialine folder

Start the batch

- 1 Double-click **Serialine** (`Serialine.exe`) in the Serialine folder.
- 2 Serialine lists the files in the folder. Type the **number** of your batch file and press **ENTER**.
- 3 Check the line `Printing records 1..N`. **N must match the number of serials in your batch.**
- 4 Serialine loads the first serials into the printer and shows `Press ENTER to start printing`. Press **ENTER**.
- 5 Run the line. Each product gets the next serial; the screen shows `[PRINTED]` with the serial.
- 6 After the last serial the printer stops automatically and the screen shows `[SUCCESS]`. Press **ENTER** to close.

```

Serialine

UMS Serialine - unique serial printing

Data files in this folder:
  1. Batch2026-041.xlsx
  T. Test printer connection

Type the number of the file to print (or T): 1
Found 5000 records. Printing records 1..5000 (5000).
  255 serial(s) queued in the printer (records 1..255).
Press ENTER to start printing...
[PRINTED] 1/5000: AV2026000001
[PRINTED] 2/5000: AV2026000002
[SUCCESS] Records 1..5000 printed - printing stopped.
  
```

DURING PRINTING

Leave the Serialine window open and the computer on. Do not change the job on the printer while a batch is running.

06 WHEN THINGS CHANGE

Stops, restarts and reprints

Serialine always continues from the first unprinted serial. No serial is skipped or printed twice.

The printer stops during a batch

An error, or someone presses Stop.

- 1 The screen shows `[STOPPED] Printing stopped after record X`.
- 2 Fix the cause and acknowledge any message on the printer.
- 3 Check the last product: it should carry serial number X in your list.
- 4 When Serialine shows `Press ENTER to start printing`, press **ENTER**. Printing continues from serial X+1.

Serialine was closed, or the computer restarted

- 1 Stop printing on the printer.
- 2 Start Serialine and choose the **same file**.
- 3 Serialine reads the print log and continues from the first unprinted serial.

Printing a completed batch again

FIRST

Remove the products from the first print that carry these serials, so no serial exists twice.

- 1 Start Serialine and choose the same file.
- 2 At `Print it again? (y/N)` type **y** and press ENTER.
- 3 Type **YES** in capitals and press ENTER to confirm. The original log is kept and a new log is started.

GOOD TO KNOW

A product that reaches the sensor right after the last serial, before the printer has stopped, receives a blank print. Remove it from the line.

07 TRACEABILITY Your print log

For every batch, Serialine writes a log in the Serialine folder named after the batch file:

Batch2026-041.xlsx → Batch2026-041_log.csv . It opens in Excel.

timestamp	record	serial
2026-10-06T08:14:02	1	AV2026000001
2026-10-06T08:14:03	2	AV2026000002
2026-10-06T08:14:03	3	AV2026000003

- **Keep every log** with the batch records. Serialine also uses it to continue after a stop.
- **Do not edit, rename or delete a log** while its batch is not finished.
- After a reprint, the earlier log is kept as `<batch>_log_before_reprint_<date>_<time>.csv`.
- Back up the Serialine folder regularly, for example to a network drive.

08 HELP Troubleshooting

Most messages are solved on the printer screen. If a problem remains, contact UMS support with a photo of the Serialine window.

Message or symptom	What it means	What to do
Printer is PRINTING - stop printing	Printing was already running	Stop printing on the printer. Serialine continues by itself
Printer reports error/message NNNN	A message is waiting on the printer	Read and acknowledge it on the printer screen
Printer state: ... - start the jet	The jet is not ready	Start the jet and wait until the printer is ready
[STOPPED] ... after record X	Printing stopped partway	See chapter 06
cannot connect or No reply	Computer cannot reach the printer	Check the network cable and that the printer is on. Then contact UMS
Dataset contains duplicate serials	A serial appears twice in the file	Correct the file, then start again

Message or symptom	What it means	What to do
Serial ... contains a TAB or line break	A cell has hidden characters	Retype that serial in the file
... does not match the data file	The file changed after printing started, or a log from another batch has this name	Contact UMS before printing
Nothing left to print	The batch is already complete	Nothing to do. To print it again, see chapter 06
First product shows a heading	Heading in cell A1	Delete row 1 so A1 holds the first serial
Serial cut off on the product	Serial longer than the print field	Contact UMS to adjust the print field
Serialine.exe missing or blocked	Antivirus quarantined it	Ask your IT department to allow Serialine.exe

09

WE'RE HERE TO HELP

Support

Marking Solutions installs, tests and supports Serialine on your line. When you call, have the batch file name and a photo of the Serialine window ready.

Support phone	+27 11 466 0030
Support email	Sales@markingsolutions.co.za
Address	Unit 6, Barbeque Heights, 9 Dytchley Rd, Barbeque Downs, Midrand, 1684
Website	www.markingsolutions.co.za
Your UMS technician	
Installed on (date)	
Printer serial number	
Printer IP address	



Marking Solutions

Unit 6, Barbeque Heights, 9 Dytchley Rd, Barbeque Downs, Midrand, 1684

Tel +27 11 466 0030 · Sales@markingsolutions.co.za · www.markingsolutions.co.za

UMS Serialine is a product of Utho Marking Solutions (UMS). Leibinger and JET2neo are trademarks of their respective owners.

