



EXP.NO1

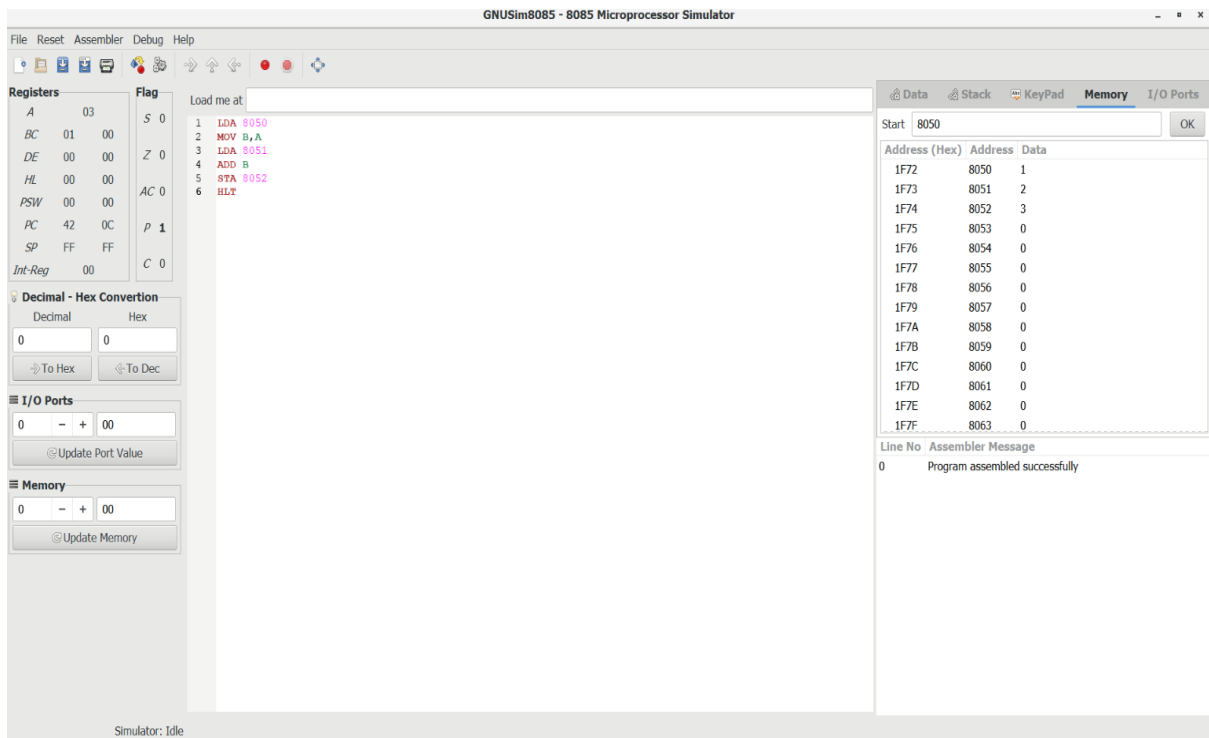

EXP.NO2

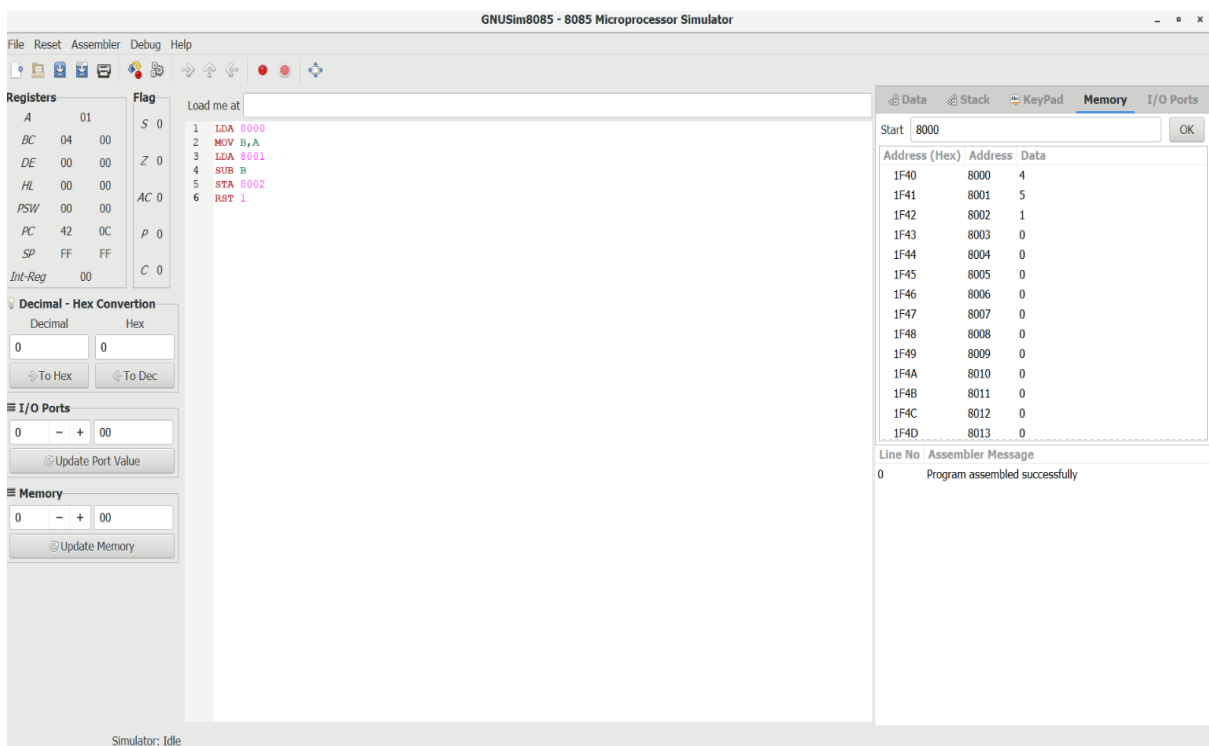

EXP.NO3

GNUSim8085 - 8085 Microprocessor Simulator

File Reset Assembler Debug Help

Registers

Register	Value
A	02
BC	00 00
DE	00 04
HL	00 08
PSW	00 00
PC	42 16
SP	FF FF
Int-Reg	00

Flag

Flag	Value
S	0
Z	1
AC	0
P	1
C	0

Load me at

```
1 LDA 2200
2 MOV B,A
3 MVI D,00
4 LDA 2201
5 MOV C,A
6 LXI H,0000
7 BACK: DAD D
8 DCR C
9 JNZ BACK
10 SHLD 2202
11 HLT
```

Decimal - Hex Conversion

Decimal: 0 Hex: 0

To Hex To Dec

I/O Ports

0 - + 00

Update Port Value

Memory

0 - + 00

Update Memory

Memory

Address (Hex)	Address	Data
0898	2200	4
0899	2201	2
089A	2202	8
089B	2203	0
089C	2204	0
089D	2205	0
089E	2206	0
089F	2207	0
08A0	2208	0
08A1	2209	0
08A2	2210	0
08A3	2211	0
08A4	2212	0
08A5	2213	0

Line No Assembler Message

0 Program assembled successfully

Simulator: Idle

EXP.NO4

GNUSim8085 - 8085 Microprocessor Simulator

File Reset Assembler Debug Help

Registers

Register	Value
A	03
BC	02 03
DE	00 00
HL	00 00
PSW	00 00
PC	42 1B
SP	FF FF
Int-Reg	00

Flag

Flag	Value
S	1
Z	0
AC	0
P	0
C	1

Load me at

```
1 START: NOP
2 LDA 8500
3 MOV B,A
4 LDA 8501
5 MVI C,00
6 LOOP: CMP B
7 JC LOOP1
8 SUB B
9 INR C
10 JMP LOOP
11 LOOP1: STA 8502
12 MOV A,C
13 STA 8503
14 RST 1
15 HLT
```

Decimal - Hex Conversion

Decimal: 0 Hex: 0

To Hex To Dec

I/O Ports

0 - + 00

Update Port Value

Memory

0 - + 00

Update Memory

Memory

Address (Hex)	Address	Data
2134	8500	2
2135	8501	6
2136	8502	0
2137	8503	3
2138	8504	0
2139	8505	0
213A	8506	0
213B	8507	0
213C	8508	0
213D	8509	0
213E	8510	0
213F	8511	0
2140	8512	0
2141	8513	0

Line No Assembler Message

0 Program assembled successfully

EXP.NO5

GNUSim8085 - 8085 Microprocessor Simulator

FileResetAssemblerDebugHelp

Registers

A0A

BC0500

DE0000

HL0000

PSW0000

PC4217

SPFFFF

Int-Reg00

Flag

S0

Z0

AC0

P1

C0

Load me at

1LDA 3050

2MOV B,A

3LDA 3051

4ADD B

5STA 3052

6LDA 3053

7MOV B,A

8LDA 3054

9ADC B

10STA 3055

11HLT

Decimal - Hex Conversion

DecimalHex

00

00

To Hex

To Dec

I/O Ports

0-+00

Update Port Value

Memory

0-+00

Update Memory

DataStackKeyPadMemoryI/O Ports

Start3050OK

Address (Hex)	Address	Data
0BEA	3050	2
0BEB	3051	3
0BEC	3052	5
0BED	3053	5
0BEE	3054	5
0BEF	3055	10
0BF0	3056	0
0BF1	3057	0
0BF2	3058	0
0BF3	3059	0
0BF4	3060	0
0BF5	3061	0
0BF6	3062	0
0BF7	3063	0

Line NoAssembler Message

0Program assembled successfully