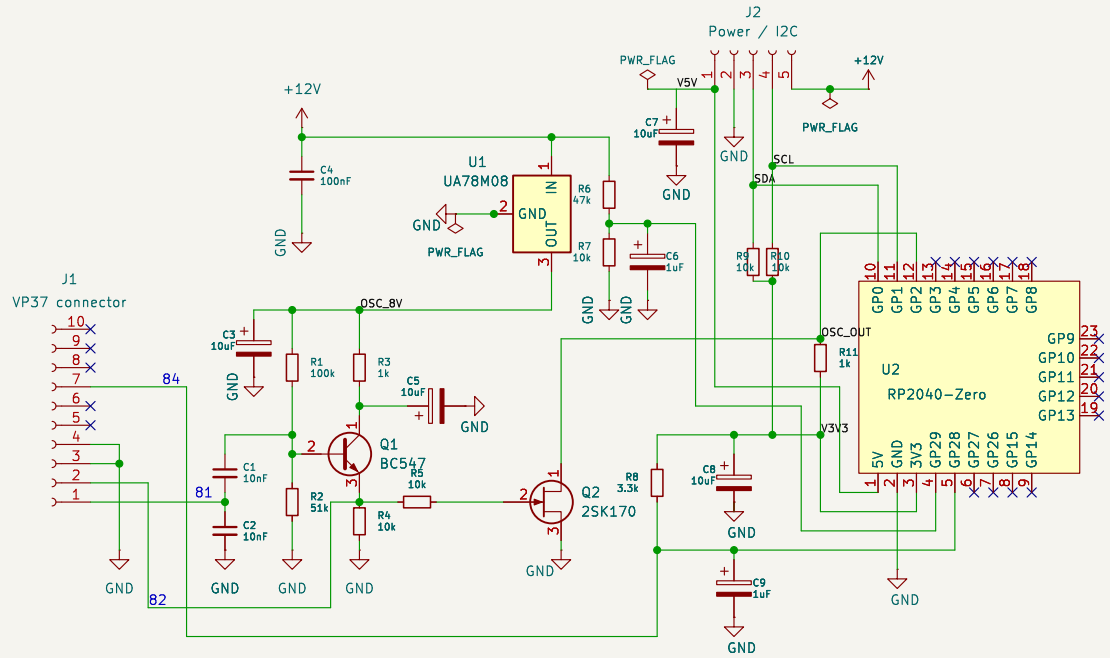


J1: 1..10 map to the VP37 harness; unused pins are NC.
J2: 1=5V input, 2=GND, 3=SDA, 4=SCL, 5=12V input.
Use a protected external 12V supply and regulated 5V.
Disconnect external 5V when powering RP2040-Zero by USB.
Q2 (Toshiba 2SK170): pins 1=D, 2=G, 3=S; TO-92.
0805 resistors/ceramics; THT electrolytics/headers; U1 SOT-223.

Marcin Kielesiński PROFI-SOFT		
Sheet: /		
File: adjustometer.kicad_sch		
Title: VP37 Adjustometer		
Size: A4	Date: 2026-11-08	**Rev: 1.1**
KiCad E.D.A. 9.0.9		Id: 1/1