Bank of Ireland AIX LPAR Build Procedure

1. **HMC Procedures – Part 1**
    - 1.1. Create LPAR profile
    - 1.2. Assign virtual network adapter to profile
2. **VIO Servers Procedures**
    - 2.1. Note the next available virtual adapter ID numbers on both VIO servers
    - 2.2. Define virtual fibre channel adapters (NPIV) in VIO Servers profiles
    - 2.3. Add the NPIV adapters to the VIO Servers dynamically using DLPAR
    - 2.4. Configure and map the NPIV adapters in VIO Server operating system
3. **HMC Procedures – Part 2**
    - 3.1. Assign virtual fibre channel adapters (NPIV) in LPAR profiles
4. **NIM Master Procedures**
    - 4.1. Add LPAR entry to the /etc/hosts file on the NIM master
    - 4.2. Define LPAR (client) on NIM master
    - 4.3. Define NIM resources required for LPAR build
    - 4.3.1. Define NIM mksysb resource
    - 4.3.2. Define NIM SPOT resource
    - 4.4. Set up LPAR on NIM master for build operation
    - 4.5. Verify correct NIM configuration for LPAR build
5. **LPAR Procedures – Part 1**
    - 5.1. Activate LPAR into SMS
    - 5.2. Configure LPAR for remote IPL
    - 5.3. Verify remote IPL configuration using ‘ping’ utility
    - 5.4. Continue the boot process to activate the NPIV adapters at the Network Switch
6. **HMC Procedures – Part 3**
    - 6.1. Identify WWN for LPAR NPIV adapters
7. **LPAR Procedures – Part 2**
    - 7.1. Shutdown LPAR prior to NIM installation
    - 7.2. Start Network boot LPAR for NIM installation
    - 7.3. Select Boot Options
    - 7.4. Verify install disk and installation settings
    - 7.5. Start installation

8. Post AIX Install – IBM Standard Tools Install and Configuration

8.1. SCM – Tivoli Security Compliance Manager
8.2. SEA – Data Transition Mechanism for SRM Capacity Management
8.3. ITM – IBM Tivoli Monitoring
8.4. TADDM – Tivoli Application Dependency Discovery Manager
8.5. TAD4D – Tivoli Asset Discovery for Distributed
8.6. LDAP – Lightweight Directory Access Protocol

9. **LPAR Build Checklist**

1. HMC Procedures – Part 1

1.1. Create LPAR profile


*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers***

*Tick the Select box against the required server in the right hand pane, click the pop-up menu button and select the **Configuration -> Create Logical Partition -> AIX or Linux** option.*

This starts up the Create LPAR Wizard

Create Partition Section


Accept the default Partition ID
Enter the Partition name
Click Next

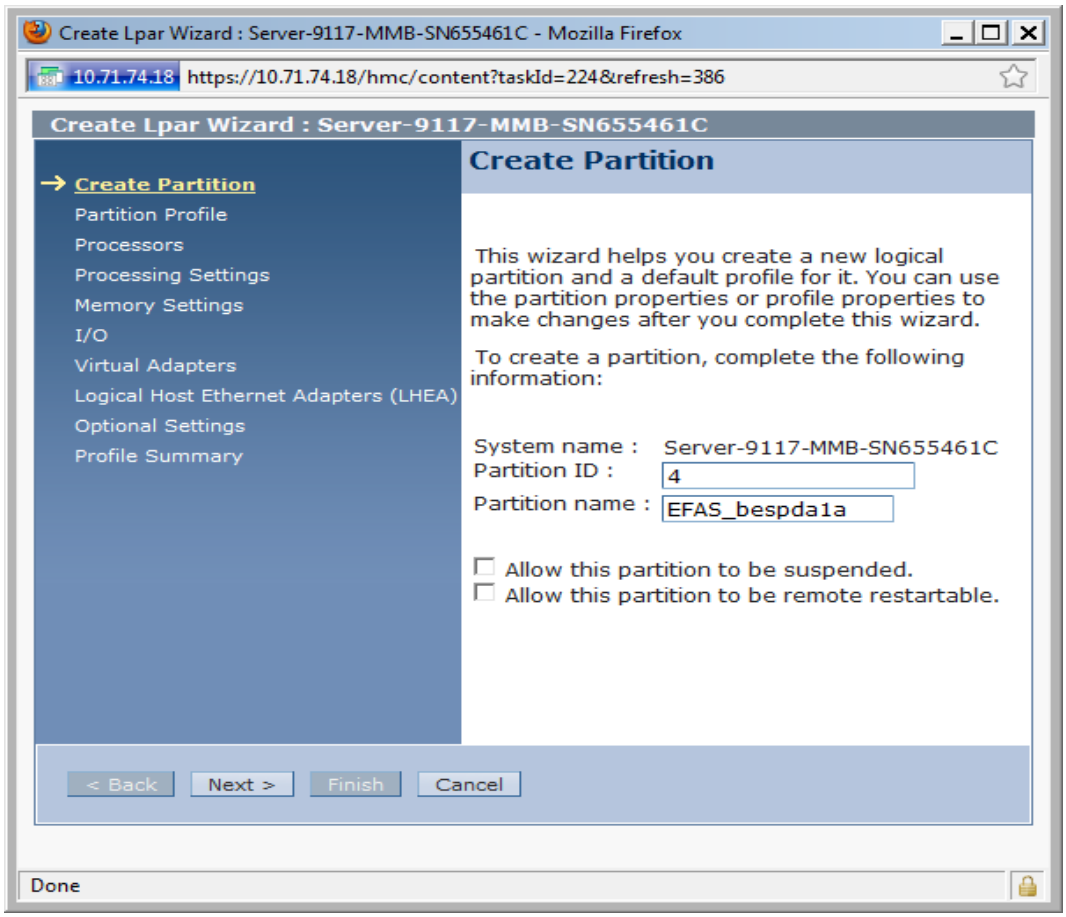

Partition Profile Section

Enter a Profile name (usually Normal)


Click Next

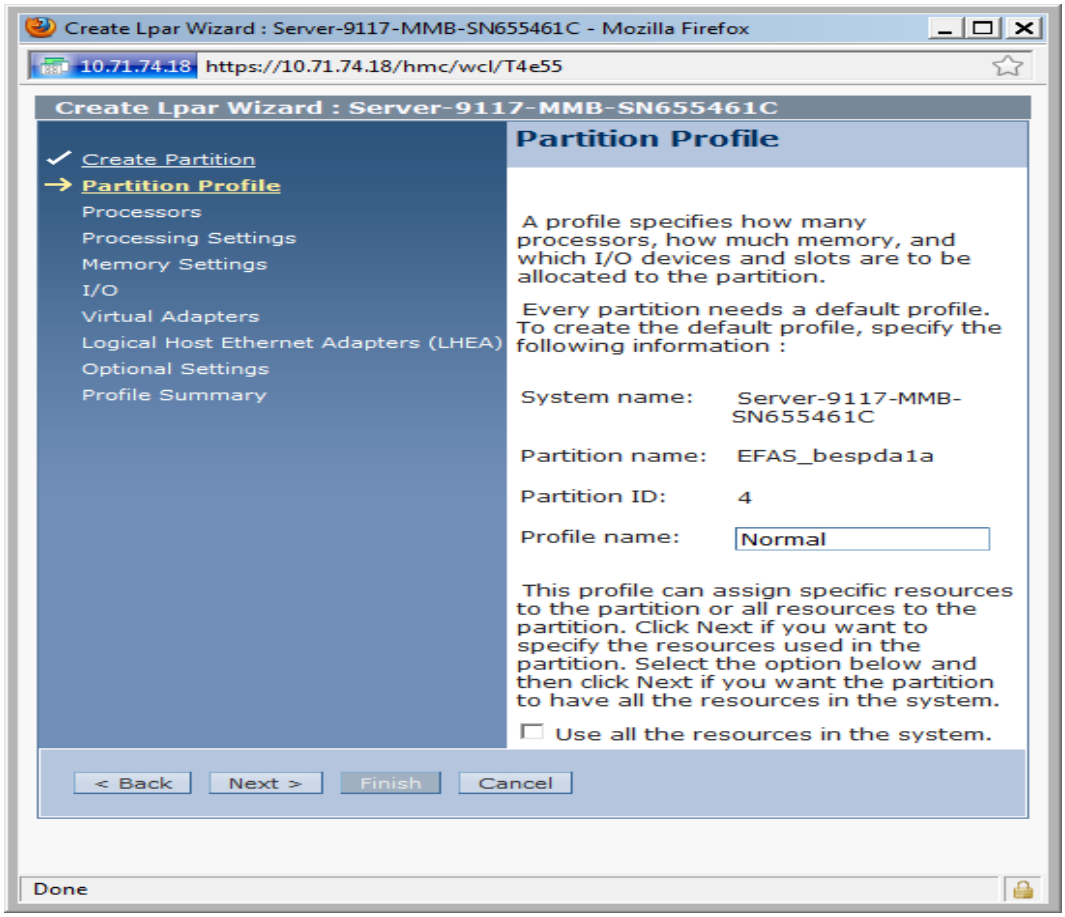

Processors Section

Click the Shared radio button (unless the LPAR requires dedicated processing units)

Click Next

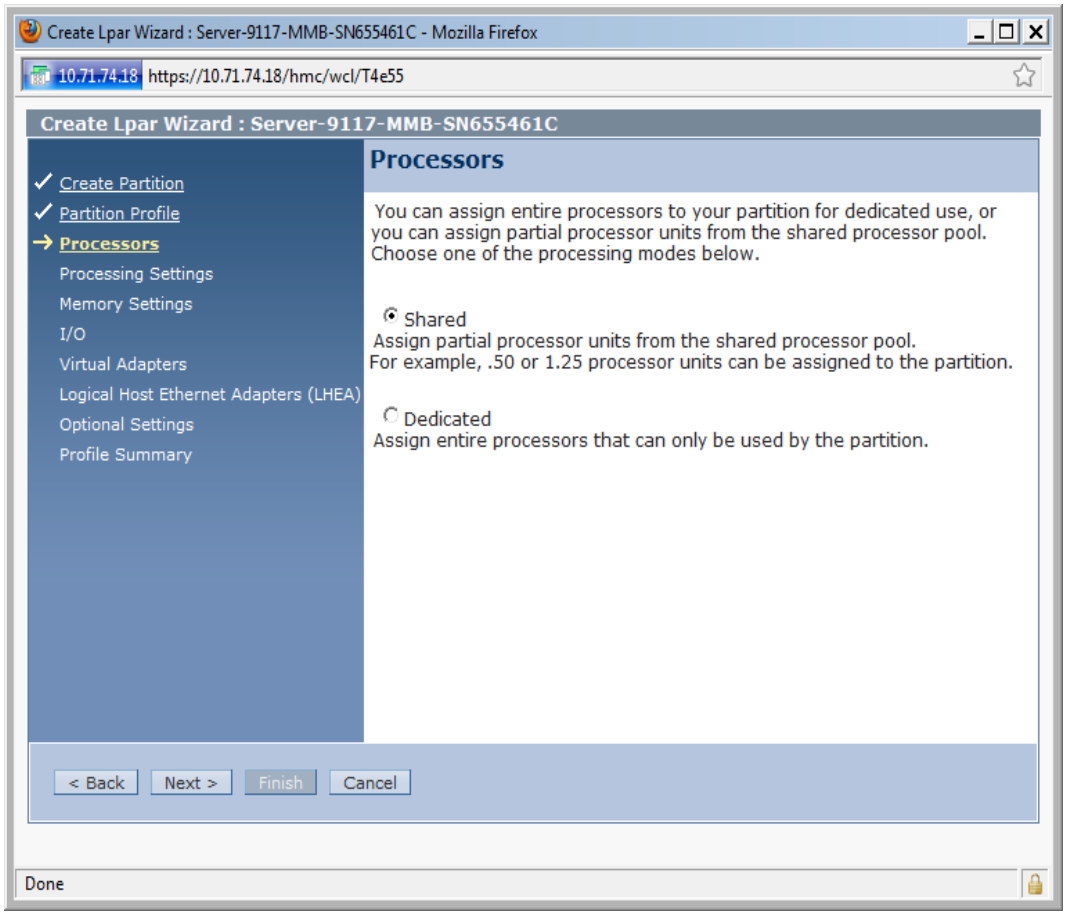

Processing Settings Section


Assign the Minimum, Desired and Maximum processing units as required
(Standard settings are minimum = 0.1, desired = 0.4, maximum = 1.0)

Select the Shared processor pool from the drop down list
(if using shared processor pools)

Assign the Minimum, Desired and Maximum virtual processors as required
(Standard settings are minimum = 1, desired = 2, maximum = 4)

Tick the Uncapped Weight box and assign a weight value (usually 128.0)

Click Next

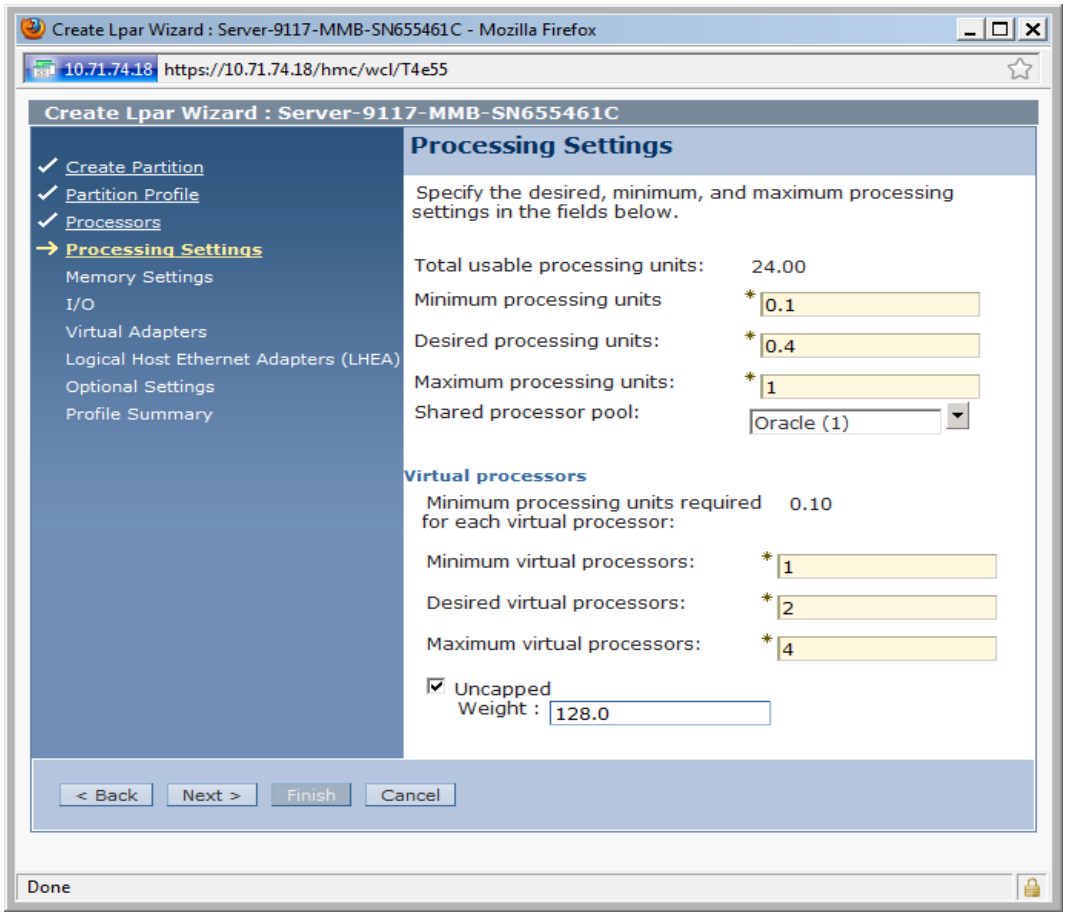


Memory Settings Section

Assign the Minimum, Desired and Maximum memory sizing's as required

Standard settings are *Minimum = 256 MB*
Desired = 8 GB
Maximum = 12 GB

Click Next

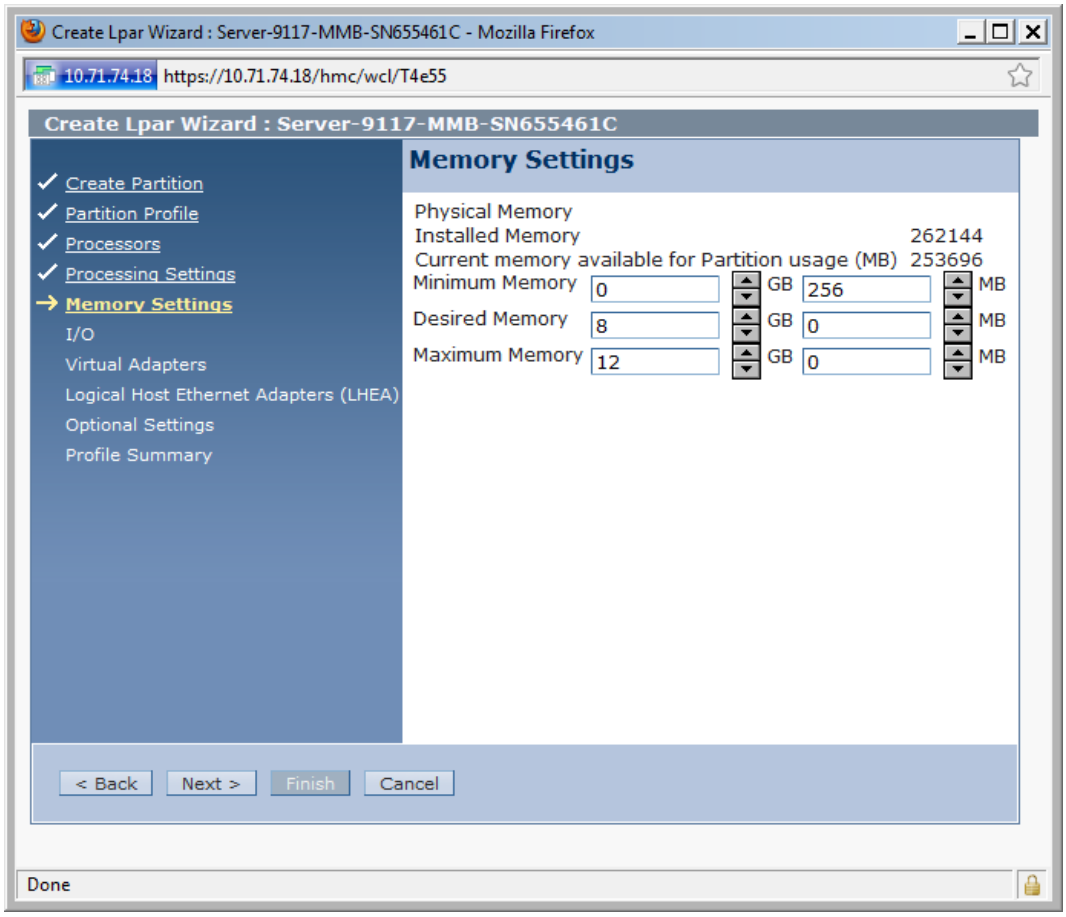

I/O Section

We do not require any physical I/O resources
Click Next

Virtual Adapters Section


We are not assigning any virtual adapters at this point
Click Next

Logical Host Ethernet Adapters (LHEA) Section

We are not assigning any LHEA at this point
Click Next

Optional Settings Section


Tick the Enable connection monitoring box
Tick the Enable redundant error path reporting box
Tick the Normal boot mode radio button
Click Next

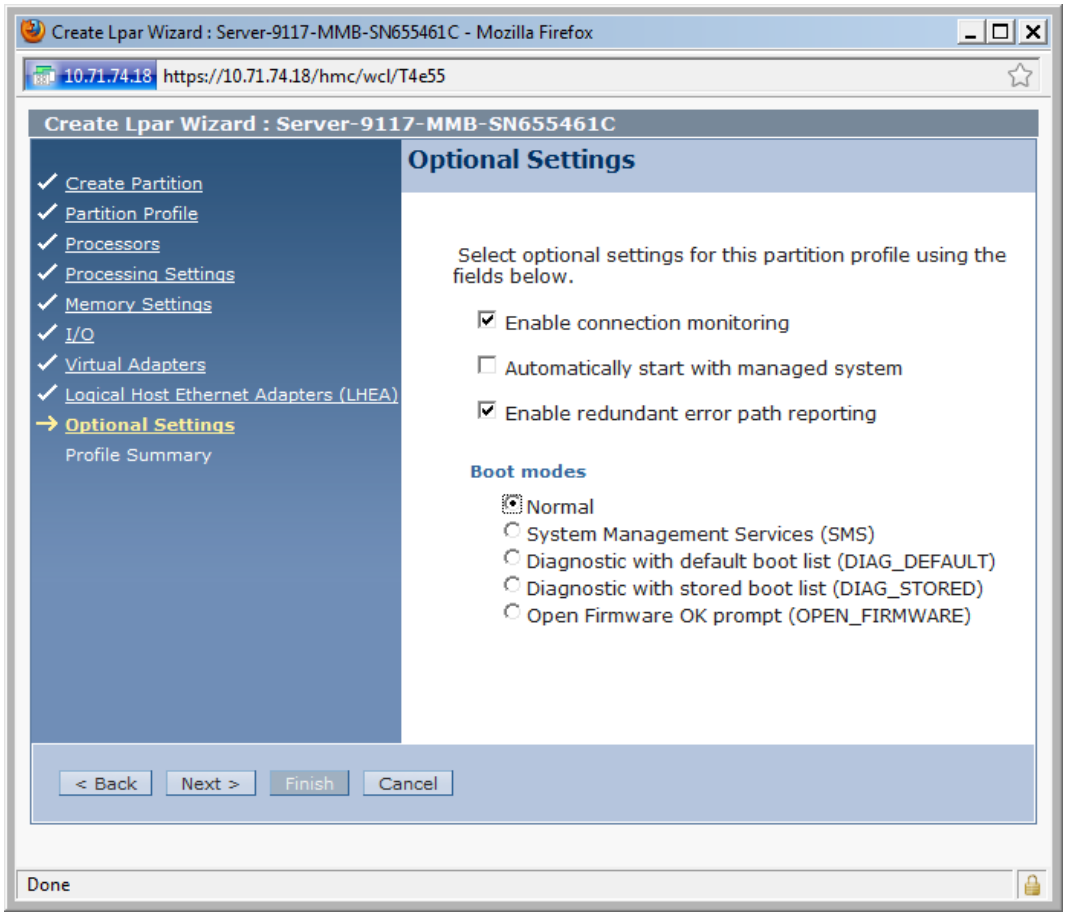
Create Lpar Wizard : Server-9117-MMB-SN655461C - Mozilla Firefox
10.71.74.18
https://10.71.74.18/hmc/wcl/T4e55
Create Lpar Wizard : Server-9117-MMB-SN655461C
Create Partition
Partition Profile
Processors
Processing Settings
Memory Settings
I/O
Virtual Adapters
Logical Host Ethernet Adapters (LHEA)
Optional Settings
Profile Summary
Optional Settings
Select optional settings for this partition profile using the fields below.
Enable connection monitoring
Automatically start with managed system
Enable redundant error path reporting
Boot modes
Normal
System Management Services (SMS)
Diagnostic with default boot list (DIAG_DEFAULT)
Diagnostic with stored boot list (DIAG_STORED)
Open Firmware OK prompt (OPEN_FIRMWARE)
< Back
Next >
Finish
Cancel
Done

Profile Summary Section

Verify the summary of the partition and profile to be created

Click Finish

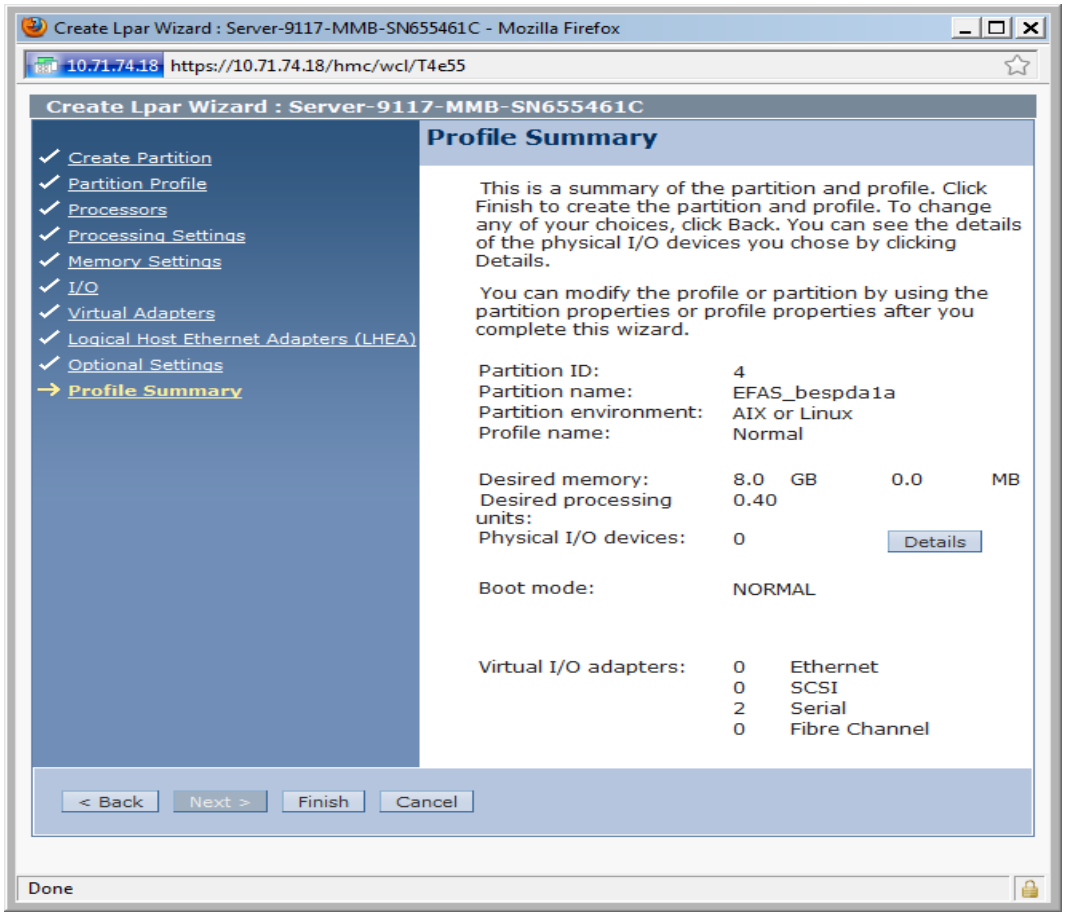


Top of Doc

1.2. **Assign virtual network adapter to profile**

*In the left hand pane, select the **Systems Management** option, then select **Servers** and then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*


*Tick the Select box against the new LPAR in the right hand pane, click the pop-up menu button and select the **Configuration -> Manage Profiles** option.*

This opens the Manage Profiles window, displaying the Normal profile we created in section 1.1.

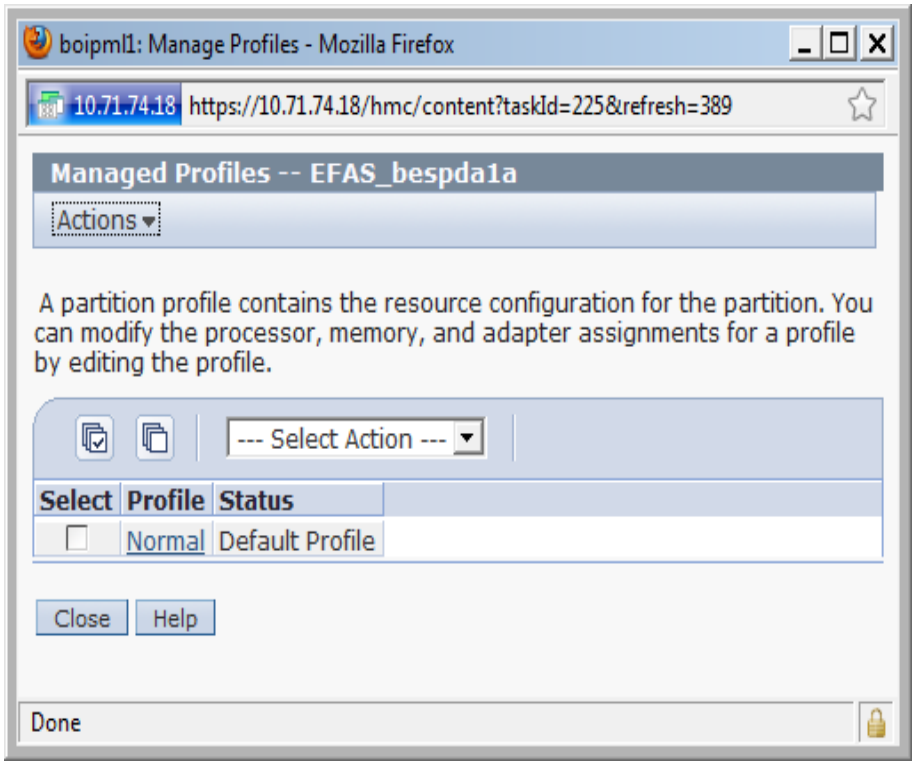


*Click on the **Normal** hyperlink or tick the **Select** box against the profile and select **Edit** from the **Actions** drop down menu.*

*This displays the LPAR Profile Properties window similar to below, click on the **Virtual Adapters** tab.*

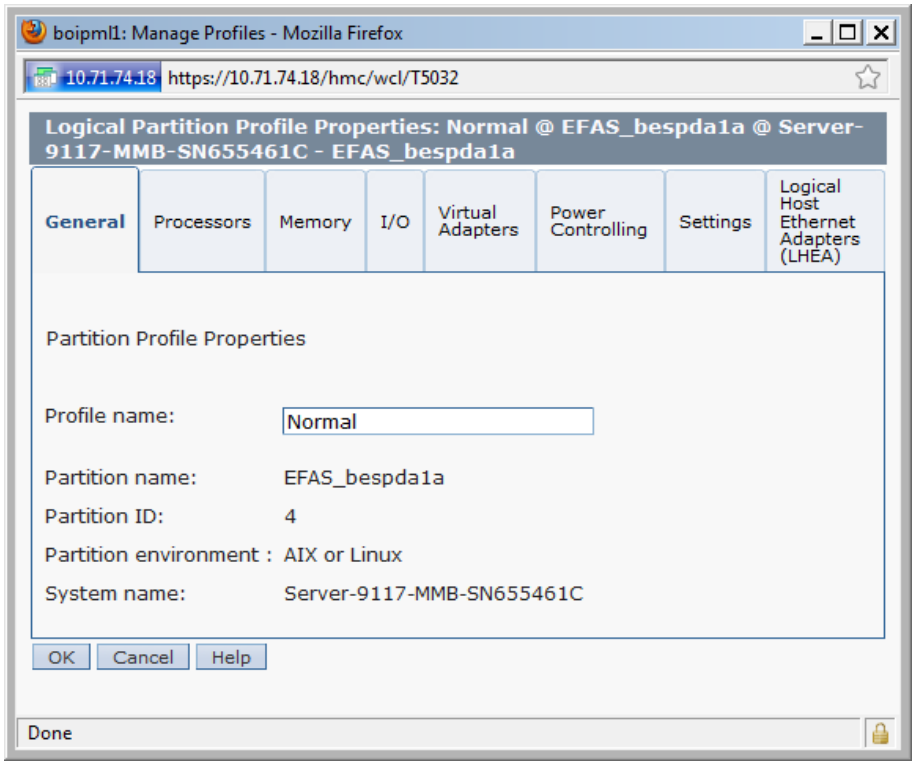

Once in the Virtual Adapters window, amend the ***Maximum virtual adapters*** *value to* ***1000*** *then drop down the* ***Actions*** *menu and select* ***Create Virtual Adapter -> Ethernet Adapter*** *to open the Create Virtual Ethernet Adapter window, as below.*

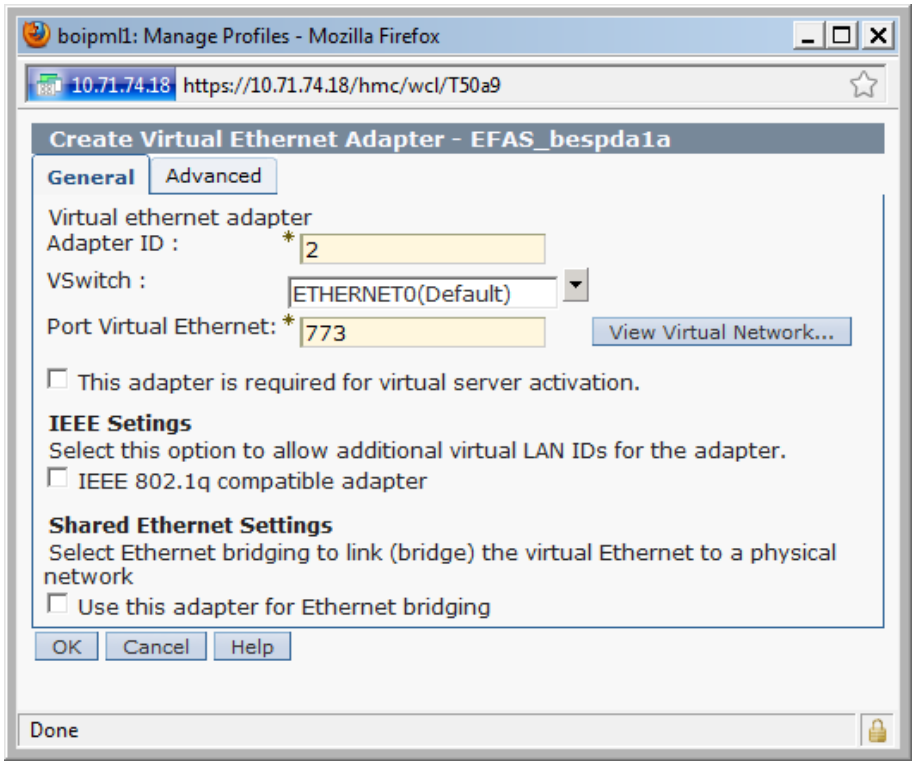

Create Virtual Ethernet Adapter

Accept the default Adapter ID
Select the relevant VSwitch from the drop down menu
Enter the relevant Port Virtual Ethernet (VLAN)
(Click on the View Virtual Networks option to verify the available VLANs for each VSwitch.
Accept the remaining defaults, leaving all the tick boxes unchecked
Click OK
Click OK back at the LPAR Profile Properties window to save the configuration
Click Close at the Managed Profiles window

Top of Doc


2. VIO Servers Procedures

This document assumes that the new LPAR created in section 1.1 will be served by 2 VIO servers to ensure redundancy and these procedures will need to be performed on both VIO servers. It also assumes that each VIO Server utilises separate physical HBAs, one for SAN storage and another for TSM.

2.1. Note the next available virtual adapter ID numbers on both VIO servers

*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers,** then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*

*Click on the first VIO server name in the list to open the Partition Properties window, click on the **Virtual Adapters** tab to display a list of the existing virtual adapters, note down the next logical adapter ID from the list (in the output below IDs 11 & 99 represent network VLANs and IDs 0 & 1 have been taken for Serial adapters, so in this example we would probably use ID 2 onwards when creating virtual Fibre Channel adapters).*

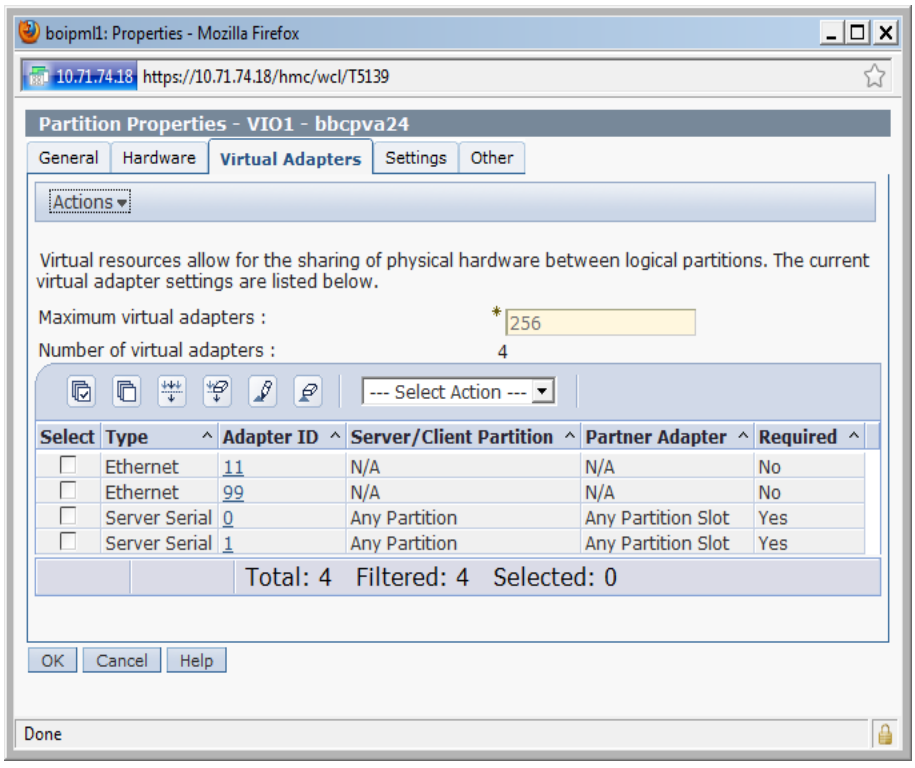

Close this window and repeat this on the second VIO server that will serve the new LPAR.


Top of Doc

2.2. Define virtual fibre channel adapters (NPIV) in VIO Server profiles

*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers,** then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*


*Tick the Select box against one of the VIO servers that will be serving the new LPAR in the right hand pane, click the pop-up menu button and select the **Configuration -> Manage Profiles** option.*

This opens the Manage Profiles window, displaying the profile(s) for the VIO server.

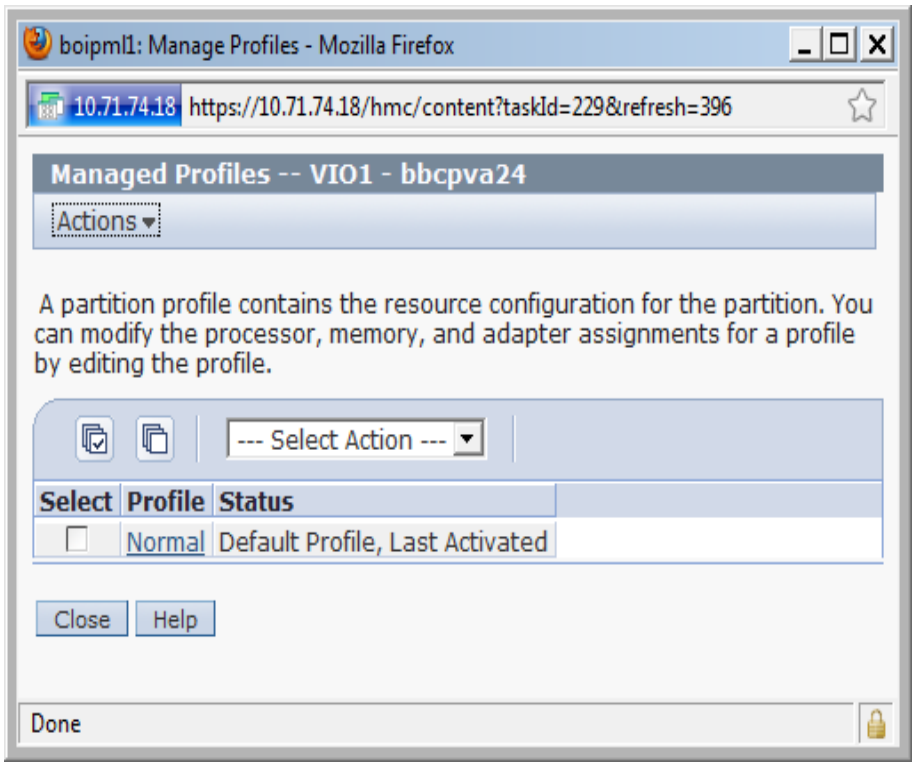


*Click on the **Normal** hyperlink or tick the **Select** box against the profile and select **Edit** from the **Actions** drop down menu.*

*This displays the LPAR Profile Properties window similar to below, click on the **Virtual Adapters** tab.*

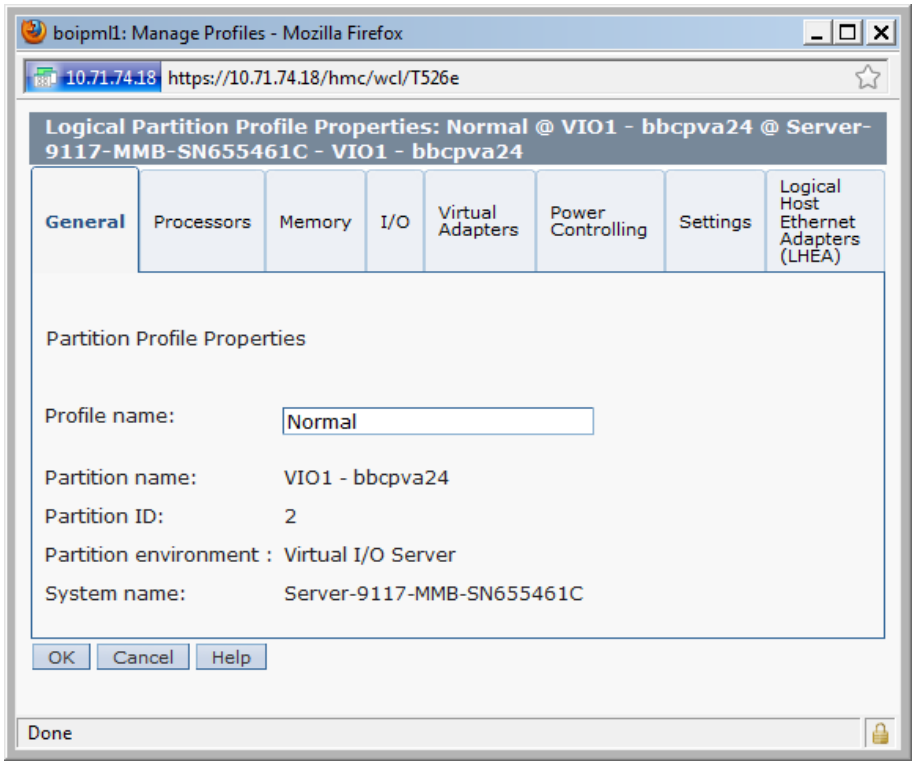

*Once in the Virtual Adapters window, drop down the **Actions** menu and select **Create Virtual Adapter -> Fibre Channel Adapter** to open the Create Virtual Fibre Channel Adapter window, as below.*

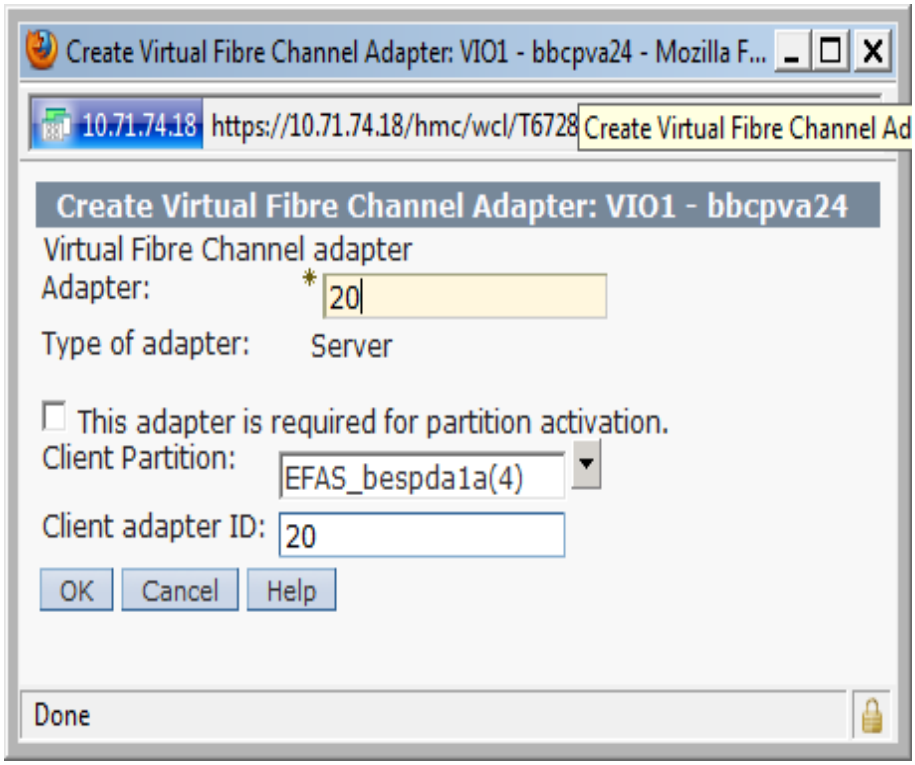


Create Virtual Fibre Channel Adapter

Enter the next available Adapter ID for this VIO server noted in section 2.1
Select the relevant Client Partition (LPAR) from the drop down menu
Enter a Client Adapter ID (usually the same ID as the VIO Server adapter ID)
Click OK to create the NPIV adapter

Repeat the above procedure to create a second NPIV adapter on the same VIO server for the same LPAR.

An additional two Fibre Channel (NPIV) adapters should be listed, as below.

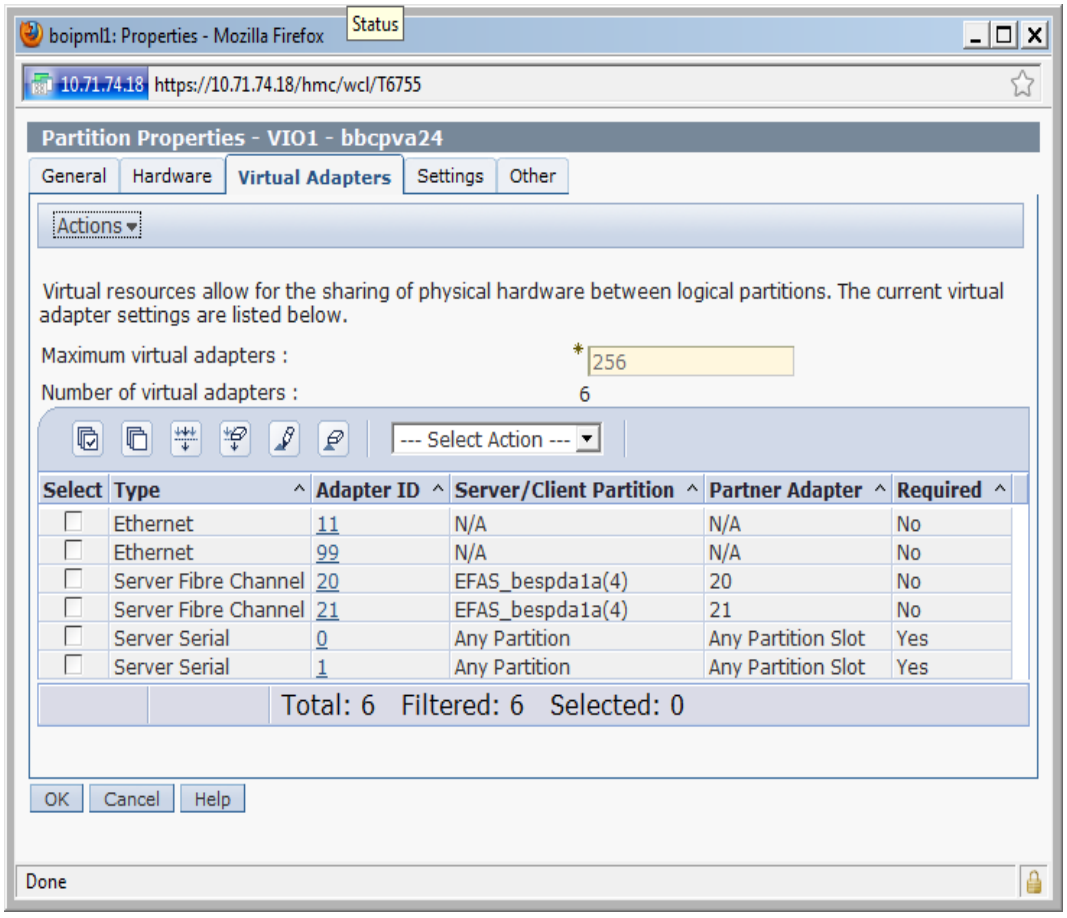

*Note the mapping relationship between each **Server Fibre Channel adapter ID** and the **Partner Adapter ID** for later use (i.e. **20 -> 20** and **21 -> 21** in this example)*

*Click **OK** back at the LPAR Profile Properties window to save the configuration*
*Click **Close** at the Managed Profiles window*

Repeat section 2.2 on the second VIO server that will serve the LPAR

Note: you will create 4 NPIV adapters for the LPAR, 2 on each VIO Server, 1 adapter on each VIO Server will provision SAN storage and the other TSM. This ensures redundancy at VIO Server level.

Top_of_Doc


2.3. **Add the NPIV adapters to the VIO Servers dynamically using DLPAR**

*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers,** then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*

*Tick the Select box against one of the VIO servers that will be serving the new LPAR in the right hand pane, click the pop-up menu button and select the **Dynamic Logical Partitioning -> Virtual Adapters** option.*

This opens the Virtual Adapters window, displaying the existing virtual adapters configured for the VIO server.

*Drop down the **Actions** menu and select **Create Virtual Adapter -> Fibre Channel Adapter** to open the Create Virtual Fibre Channel Adapter window, as below.*

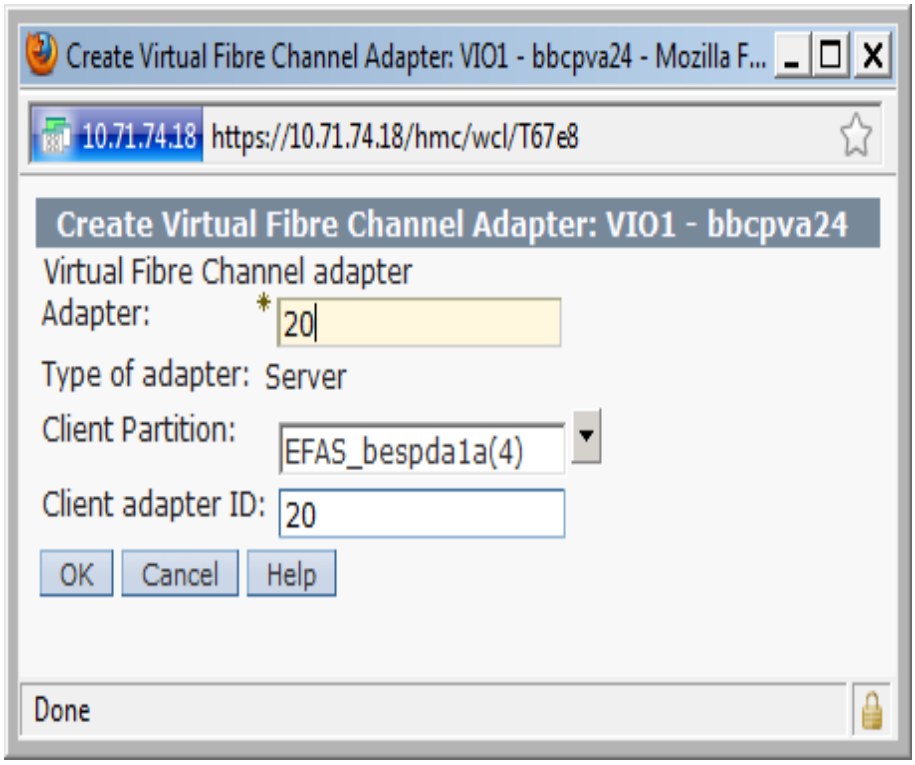

Create Virtual Fibre Channel Adapter

Enter the same Adapter ID as created within the profile in section 2.2
Select the relevant Client Partition (LPAR) from the drop down menu
Enter the same Client Adapter ID as created within the profile in section 2.2
Click OK to create the NPIV adapter

Repeat the above procedure to dynamically create a second NPIV adapter on the same VIO server for the same LPAR, using the same adapter ID's as in section 2.2.

*Click **OK** back at the Virtual Adapters window to save the configuration*

Repeat section 2.3 on the second VIO server that will serve the LPAR

Top of Doc

2.4. Configure and map the NPIV adapters in VIO Servers operating system

Log onto the HMC and open a console window for the VIO server and log in as the ***padmin*** *user.*

Run the lsmap command below and note the last vfchost ID currently configured along with the FC name the vfchost adapters are mapped to (the normal procedure is for one adapter to be mapped to the HBA providing SAN storage and the other to be mapped to the HBA for TSM).

lsmap –all –npiv

Output should be similar to below, note the latest vfchost id (red highlight) and the fact that the 2 adapters for the same LPAR client ID (blue highlight) are mapped to two different HBAs (green highlight)

```
Name          Physloc                            ClntID ClntName       ClntOS
------------- ---------------------------------- ------ -------------- -------
vfchost12     U9119.FHA.02C6055-V32-C20              40 NFT_bbcoia17b  AIX

Status:LOGGED_IN
FC name:fcs3                    FC loc code:U5803.001.99202TK-P1-C8-T2
Ports logged in:3
Flags:a<LOGGED_IN,STRIP_MERGE>
VFC client name:fcs0            VFC client DRC:U9119.FHA.02C6055-V40-C20-T1

Name          Physloc                            ClntID ClntName       ClntOS
------------- ---------------------------------- ------ -------------- -------
vfchost13     U9119.FHA.02C6055-V32-C21              40 NFT_bbcoia17b  AIX

Status:LOGGED_IN
FC name:fcs1                    FC loc code:U5803.001.99202TL-P1-C6-T2
Ports logged in:1
Flags:a<LOGGED_IN,STRIP_MERGE>
VFC client name:fcs1            VFC client DRC:U9119.FHA.02C6055-V40-C21-T1
```

From the padmin user log into the root AIX environment and discover the new NPIV adapters that were dynamically created in section 2.3, using the commands below.

oem_setup_env
cfgmgr

Rerun the lsmap command below and there should be 2 additional vfchost adapters listed (14 & 15 in this example).

exit *(exit from the root environment back to the padmin user)*
lsmap –all –npiv

Verify the new adapters are assigned to the correct LPAR client and that the adapter ID that forms part of the physical location (Physloc) value (red highlight) is the same as the Virtual Fibre Channel Adapter ID used when creating the NPIV adapters.

U9119.FHA.02C6055-V32-C**34**

Map the new NPIV adapters to the relevant physical HBAs using the command below.

vfcmap –vadapter vfchostX –fcp fcsZ

Where **X** = the number of one of the new NPIV adapters
Z = the HBA number

*Repeat the **vfcmap** command to map the second NPIV adapter to a different HBA.*

Repeat section 2.4 on the second VIO server that will serve the LPAR

Top of Doc


3. HMC Procedures – Part 2

3.1. Assign virtual fibre channel adapters (NPIV) in LPAR profiles

*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers,** then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*


*Tick the Select box against the new LPAR in the right hand pane, click the pop-up menu button and select the **Configuration -> Manage Profiles** option.*

This opens the Manage Profiles window, displaying the Normal profile we created in section 1.1.

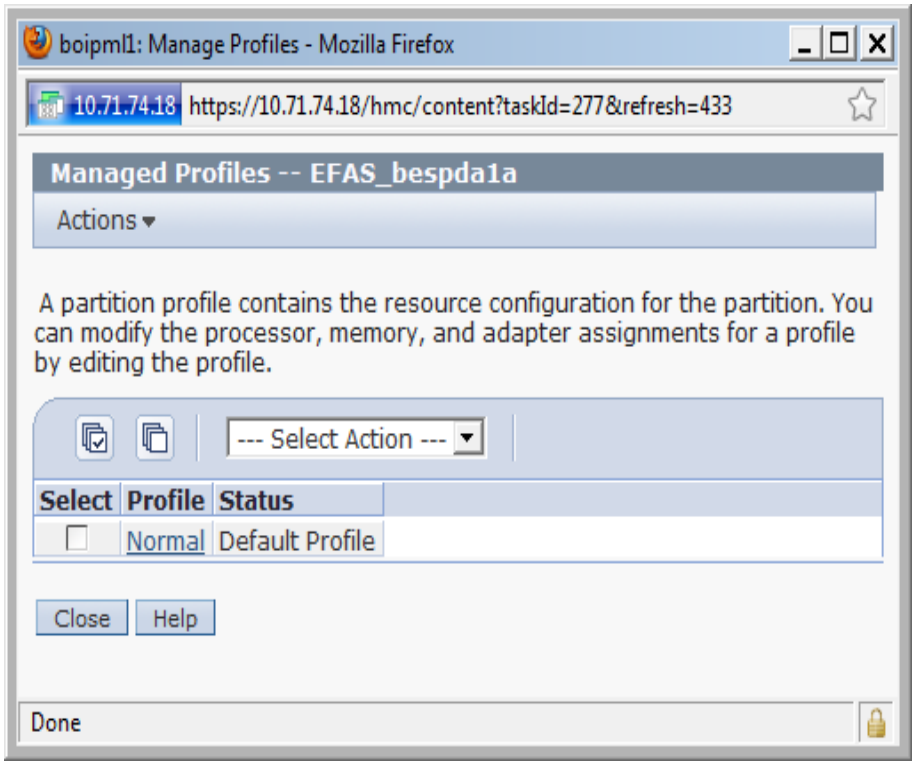


*Click on the **Normal** hyperlink or tick the **Select** box against the profile and select **Edit** from the **Actions** drop down menu.*

*This displays the LPAR Profile Properties window similar to below, click on the **Virtual Adapters** tab.*

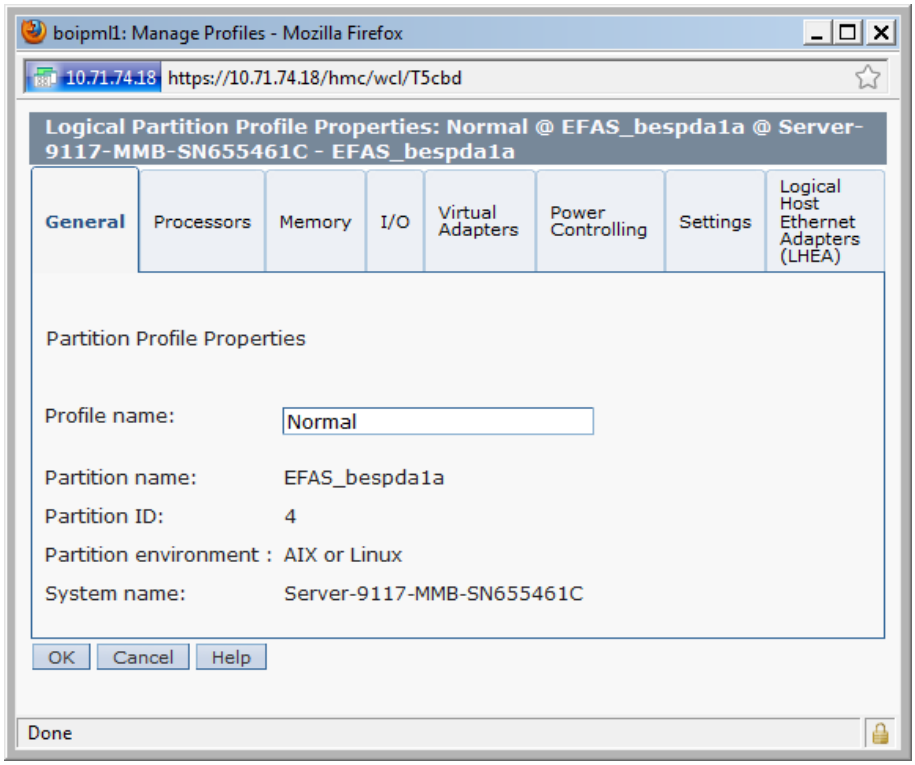

*Once in the Virtual Adapters window, drop down the **Actions** menu and select **Create Virtual Adapter -> Fibre Channel Adapter** to open the Create Virtual Fibre Channel Adapter window, as below.*

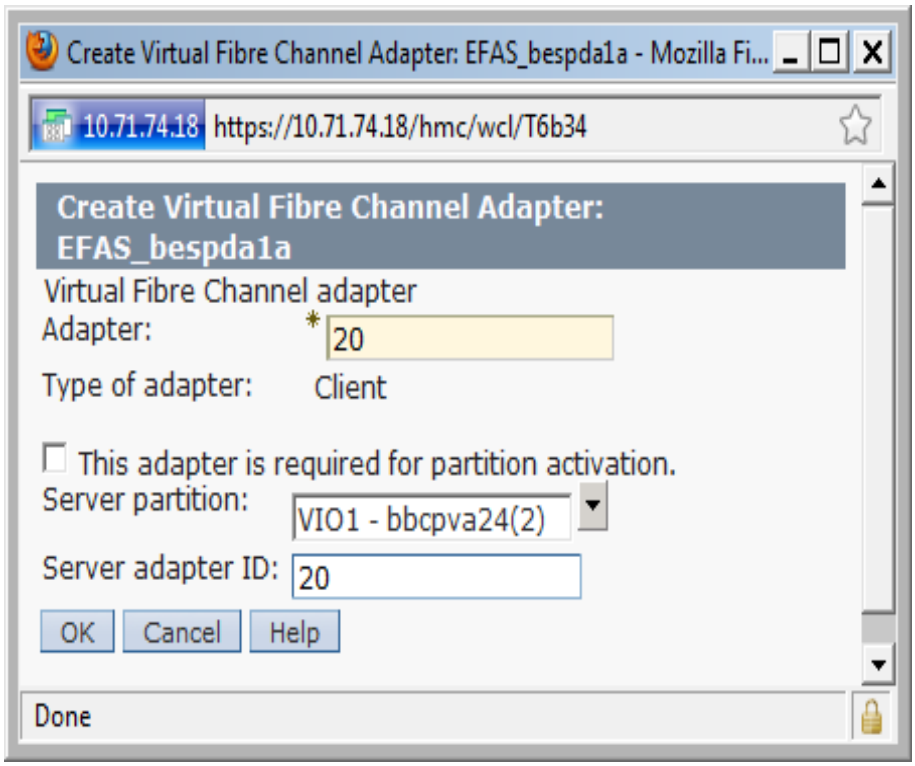


Create Virtual Fibre Channel Adapter

Enter Virtual Fibre Channel Adapter ID (as created in section 2.2)
Select the relevant VIO server from the drop down menu
Enter the relevant VLAN ID (as created in section 2.2)
Click OK

Repeat to add in all 4 NPIV adapters, two from each VIO Server.

*Click **OK** back at the LPAR Profile Properties window to save the configuration*

The final configuration should be similar to below, with 4 virtual Client Fibre Channel adapters, two from each VIO Server.

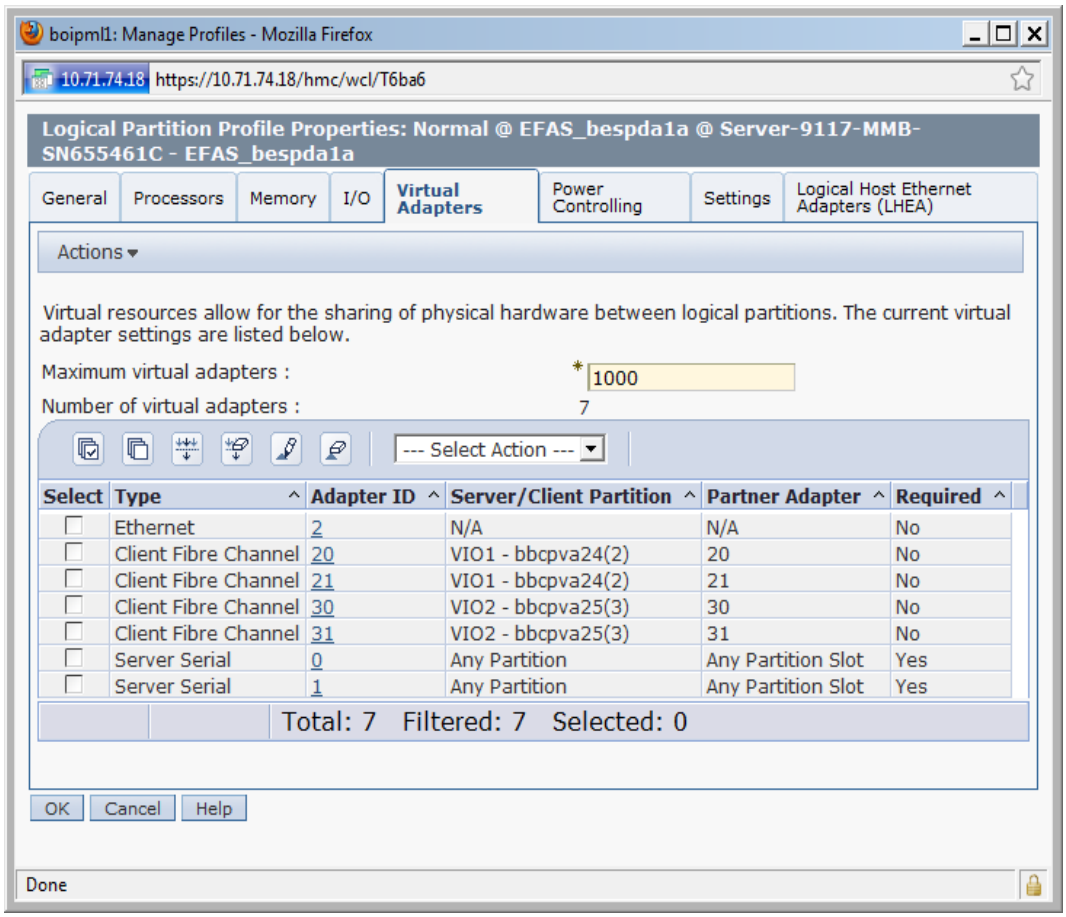

*Click **Close** at the Managed Profiles window*

Top_of_Doc

4. NIM Master Procedures

4.1. Add LPAR entry to the /etc/hosts file on the NIM master

*Edit the **/etc/hosts** file on the NIM master and add an entry for the new LPAR*

Top of Doc

4.2. Define LPAR (client) on NIM master


This procedure assumes that a relevant NIM network exists for the LPAR IP subnet so that a default NIM network will be assigned to the NIM client during creation, if a NIM network for the NIM client subnet does not exist then it will need to be defined, either during the NIM client creation or independently.

smitty nim_mkmac
enter the hostname of the LPAR

If a suitable NIM network is already defined then the relevant network information will be automatically populated

If a suitable NIM network isn't already defined then
*select **ent** for Ethernet network*
enter the relevant NIM Network values

*hit **<CR>** to create the LPAR as a NIM client* (accept other defaults)

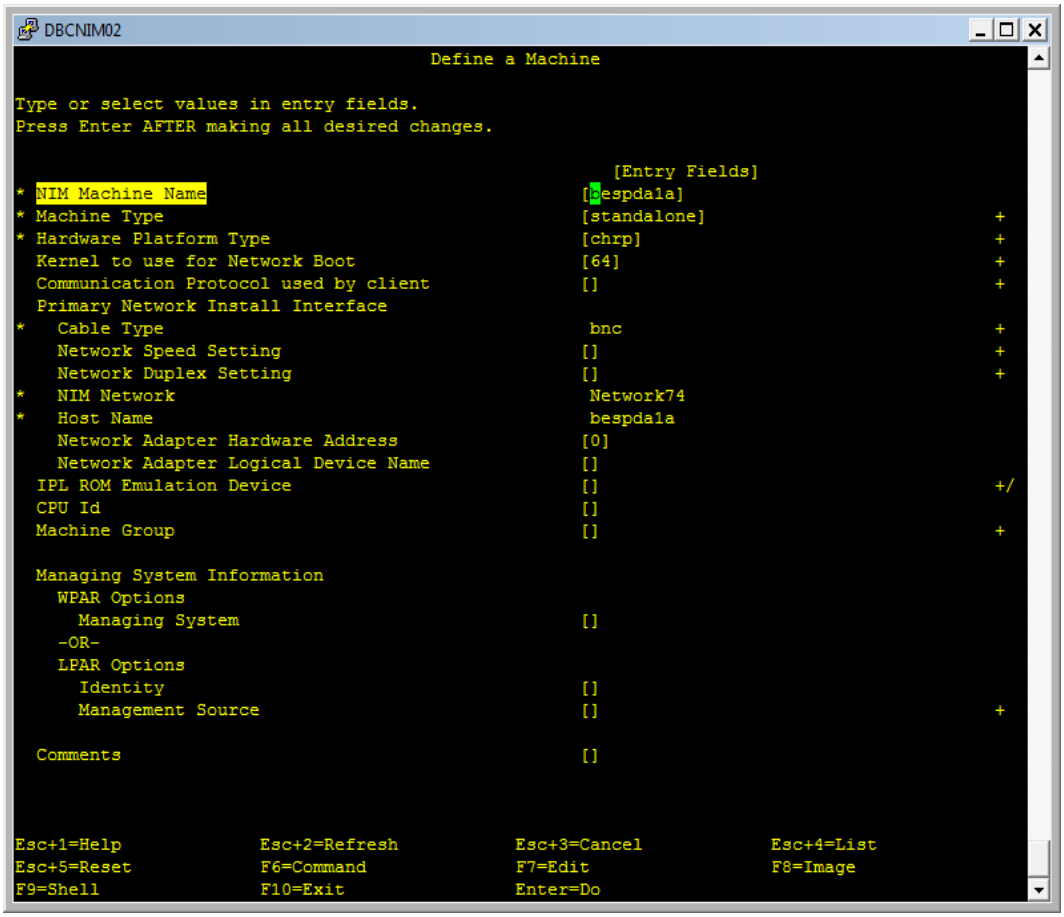

Top of Doc


4.3. Define NIM resources required for LPAR build

This procedure defines the required mksysb image and associated SPOT NIM resources in preparation for the NIM client BOSINST installation, if the relevant NIM resources are already defined then skip this section and proceed to section 4.4.

4.3.1. Define NIM mksysb resource

smitty nim_mkres
select a mksysb Resource Type
enter ***mksysb resource name***
Server of Resource (usually master)
Location of Resource (path and filename of actual mksysb image)

hit ***<CR>*** *to define the NIM mksysb resource (accept other defaults)*

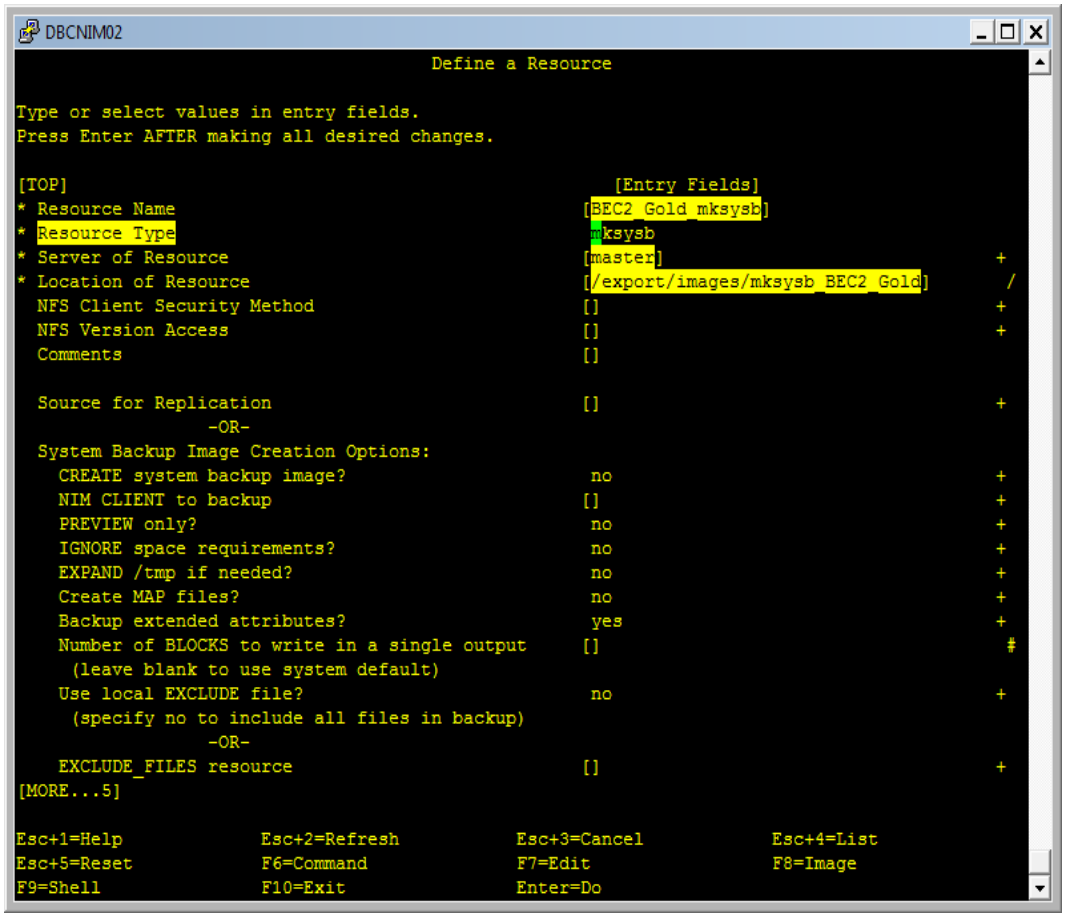

DBCNIM02
Define a Resource
Type or select values in entry fields.
Press Enter AFTER making all desired changes.
[TOP] [Entry Fields]
* Resource Name [BEC2_Gold_mksysb]
* Resource Type mksysb
* Server of Resource [master] +
* Location of Resource [/export/images/mksysb_BEC2_Gold] /
NFS Client Security Method [] +
NFS Version Access [] +
Comments []
Source for Replication [] +
-OR-
System Backup Image Creation Options:
CREATE system backup image? no +
NIM CLIENT to backup [] +
PREVIEW only? no +
IGNORE space requirements? no +
EXPAND /tmp if needed? no +
Create MAP files? no +
Backup extended attributes? yes +
Number of BLOCKS to write in a single output [] #
(leave blank to use system default)
Use local EXCLUDE file? no +
(specify no to include all files in backup)
-OR-
EXCLUDE_FILES resource [] +
[MORE...5]
Esc+1=Help Esc+2=Refresh Esc+3=Cancel Esc+4=List
Esc+5=Reset F6=Command F7=Edit F8=Image
F9=Shell F10=Exit Enter=Do

Top of Doc

4.3.2. **Define NIM SPOT resource**

smitty nim_mkres_spot_only
select the Server for the resource (usually master)
enter ***Input device for installation images***
(F4 to generate list – select relevant mksysb resource)
SPOT Name
SPOT Directory (location to create new SPOT in – accept default)
Create new filesystem for SPOT? = no

hit ***<CR>*** *to define the NIM spot resource (accept other defaults)*

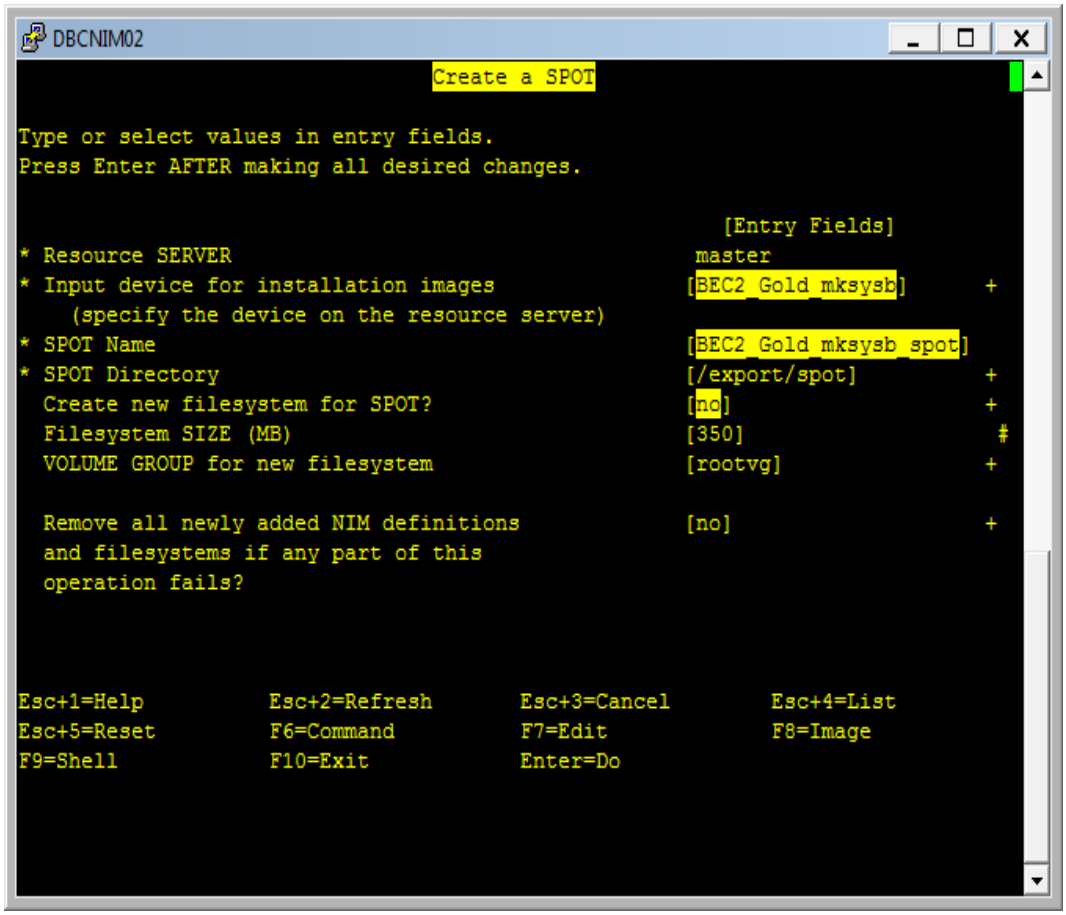


Top of Doc

4.4. **Set up LPAR on NIM master for build operation**

This procedure assumes that the relevant NIM mksysb and SPOT resources have been defined in the previous section 3.2, if they have not been configured then define them before continuing.

smitty nim_bosinst
select the relevant target LPAR
select a mksysb installation type
select the required mksysb
select the required SPOT
*Ensure that the **Accept new license agreements** option is set to **yes** and that the **Initiate reboot and installation now?** option is set to **no*** (see highlighted entries below).

*hit **<CR>** to allocate a NIM mksysb image install for the LPAR (accept other defaults)*

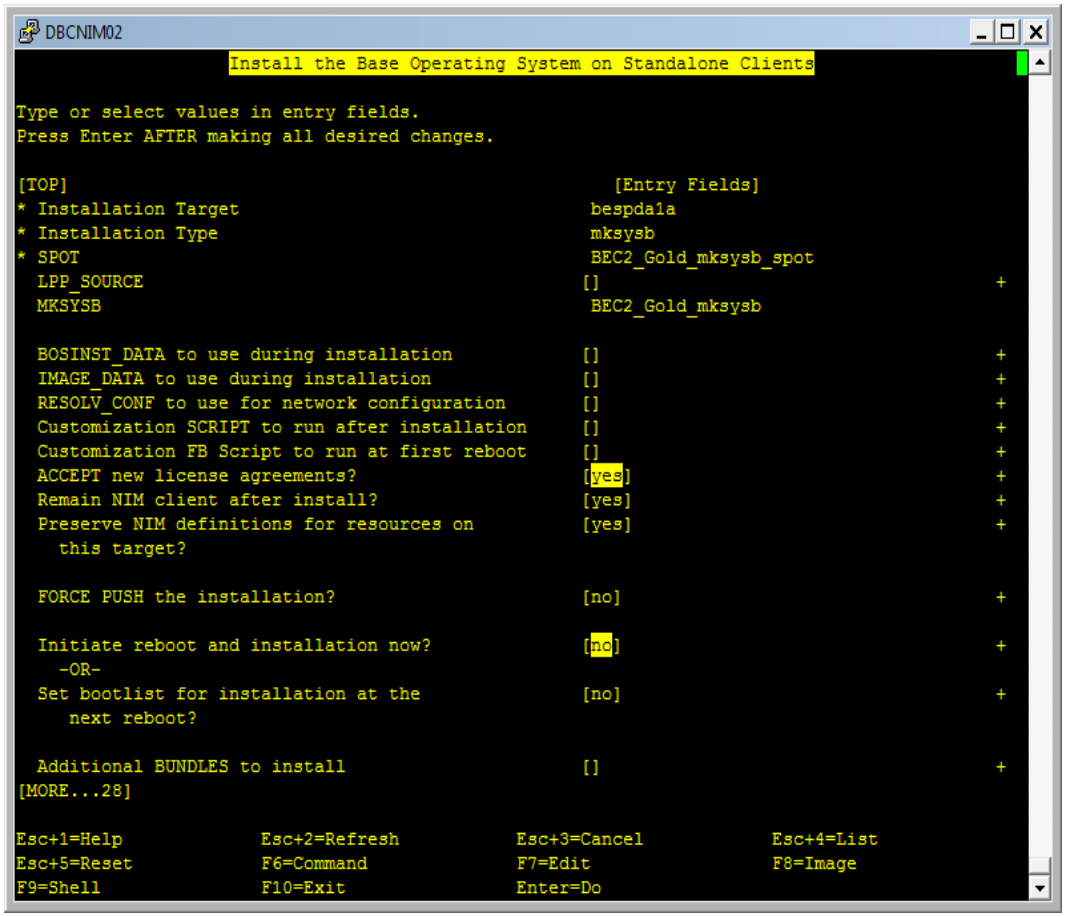

Top_of_Doc

4.5. **Verify correct NIM configuration for LPAR build**

Use the lsnim command to verify the status and installation readiness of the NIM client.

Output should be similar to below with a Cstate of BOS installation has been enabled.

```
root@dbcnim02 [/] # lsnim -l bespda1a
bespda1a:
   class          = machines
   type           = standalone
   connect        = shell
   platform       = chrp
   netboot_kernel = 64
   if1            = Network74 bespda1a 0
   cable_type1    = bnc
   Cstate         = BOS installation has been enabled
   prev_state     = ready for a NIM operation
   Mstate         = not running
   boot           = boot
   mksysb         = BEC2_Gold_mksysb
   nim_script     = nim_script
   spot           = BEC2_Gold_mksysb_spot
   control        = master
```

Top of Doc


5. LPAR Procedures – Part 1

5.1. Activate LPAR into SMS

*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers,** then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*

*Tick the Select box against the new LPAR in the right hand pane, click the pop-up menu button and select the **Operations -> Activate -> Profile** option.*


This opens the Activate Logical Partition window, displaying the Normal profile we created in section 1.1.

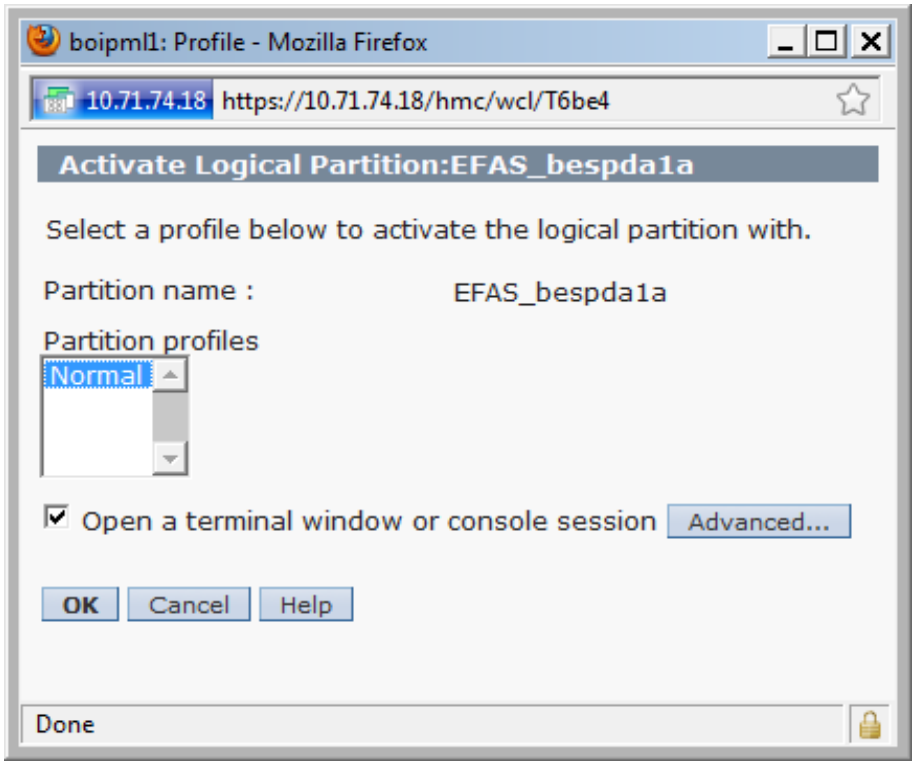

Activate Logical Partition
*Highlight the **Normal** profile*
*Tick the **Open a terminal window or console session** box*
*Click the **Advanced** button and set the **Boot mode** to **SMS** and click **OK** to return*
*Click **OK** to start activating the LPAR*

A console window will open requesting you select this console as the active console, press **0**.

The screen then displays status messages as the LPAR starts to boot and then the main SMS menu below.

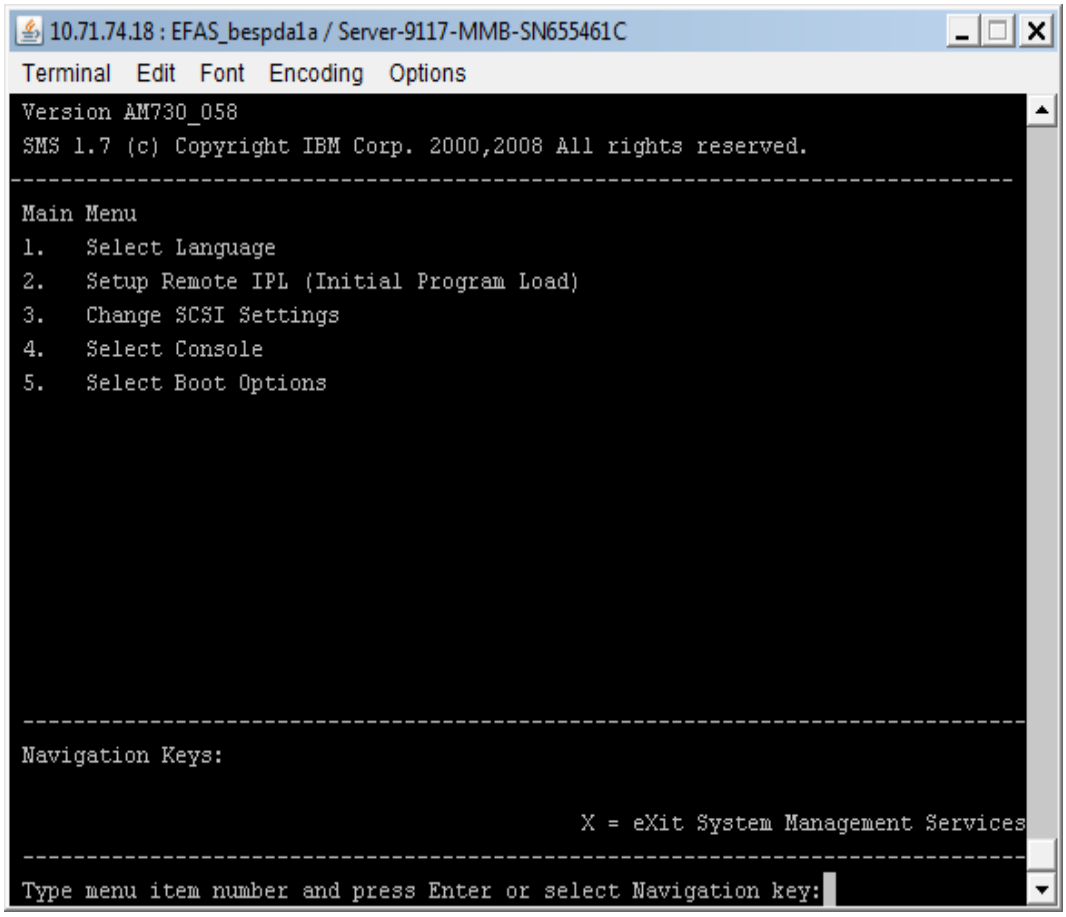


Top of Doc

5.2. Configure LPAR for remote IPL

Follow the procedure below to configure the LPAR for a remote network boot (IPL).

Select 2 for Setup Remote IPL (Initial Program Load)
Select 1 for LAN Adapter
Select 1 for IPv4
Select 1 for BOOTP
Select 1 for IP Parameters
Select 1 and enter the client (LPAR) IP address and <CR>
Select 2 and enter the server (NIM) IP address and <CR>
Select 3 and enter the gateway IP address and <CR>
Select 4 and enter the subnet mast and <CR>

Once completed, the IP entries should look similar to the screen below.

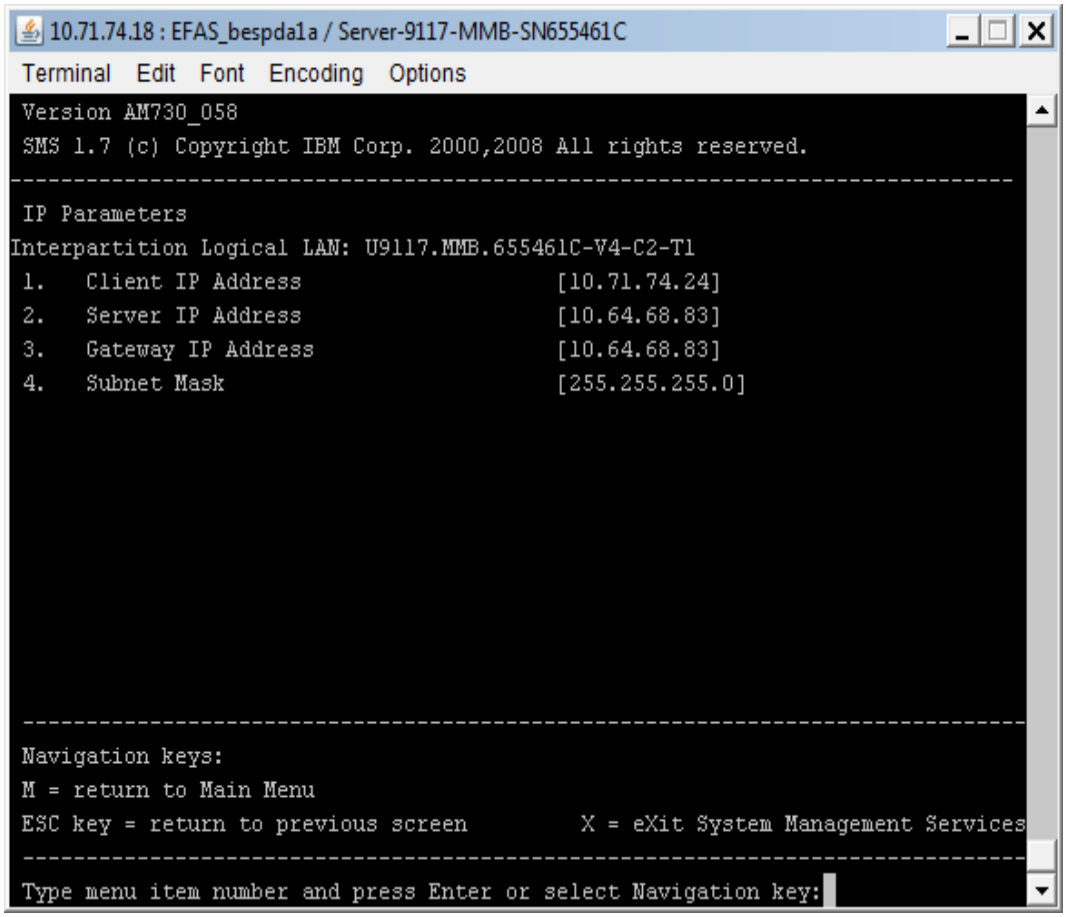


*Hit the **ESC** key to return to the previous menu*


Top of Doc

5.3. **Verify remote IPL configuration using 'ping' utility**

From the Network Parameters screen select 3 to perform a Ping Test.

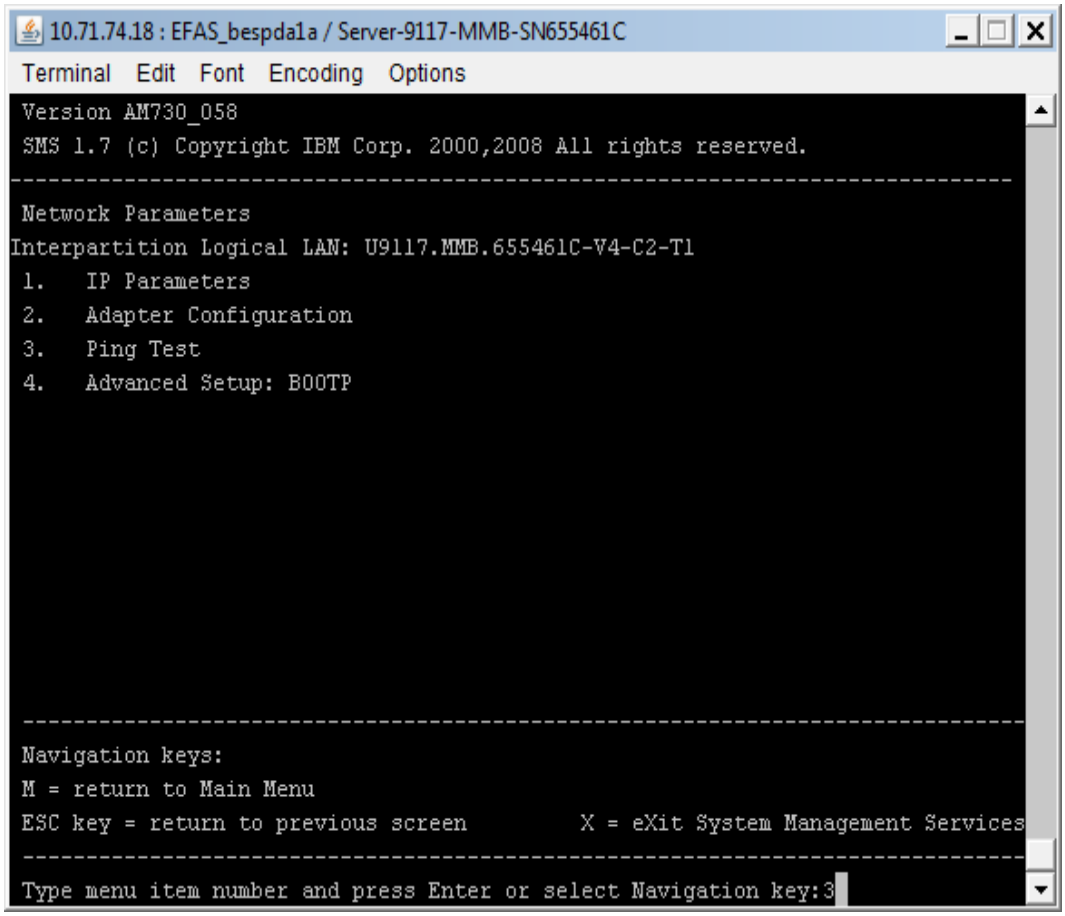


A summary of the previously entered network details will be displayed similar to below.

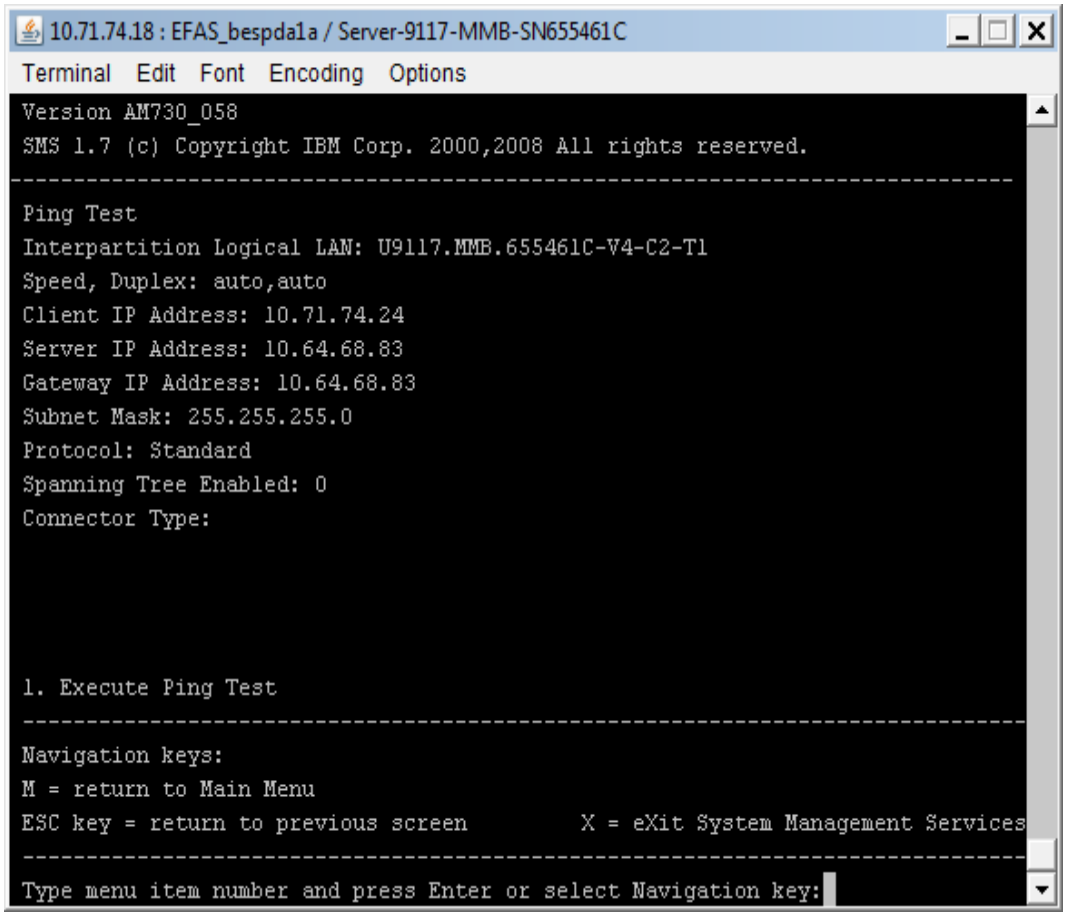

Select 1 to execute the ping test.

If it is successful then you will see the screen below, if the ping test fails then some troubleshooting is required, do not proceed until the ping test is successful.

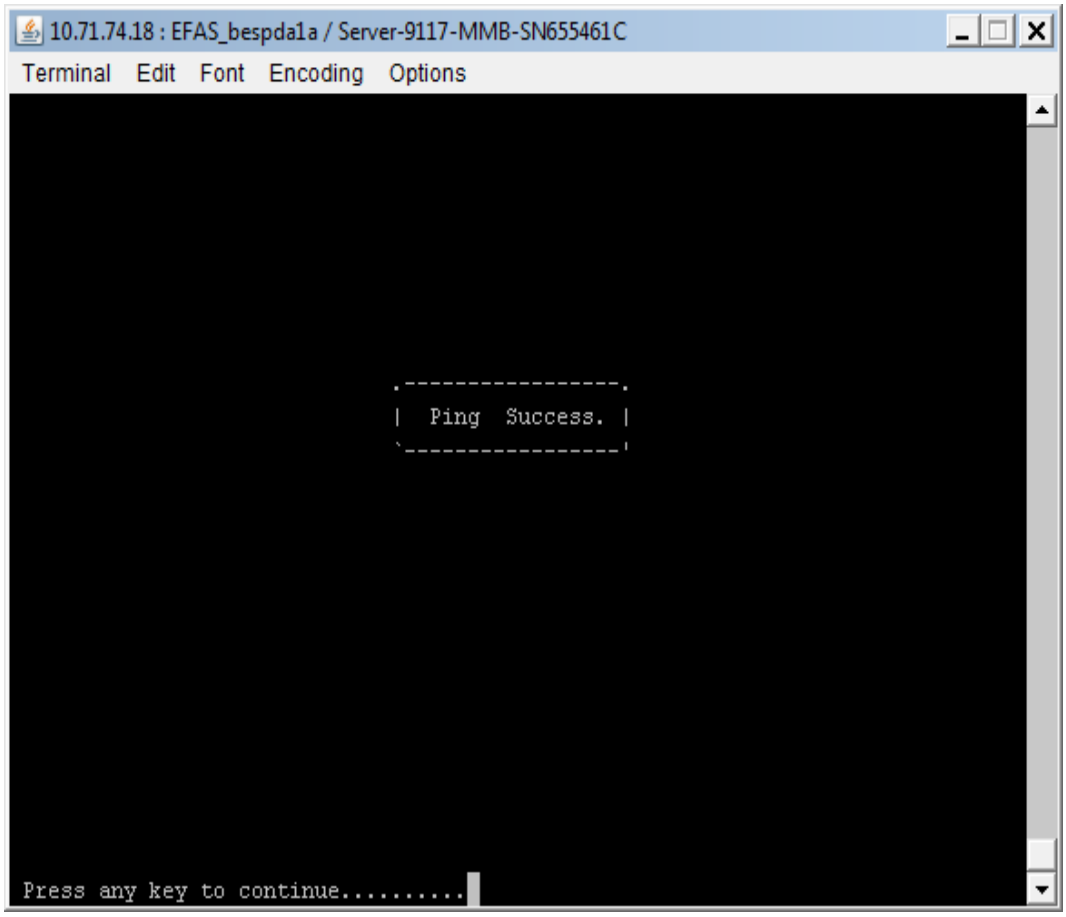

Press any key to continue
*Hit the **ESC** key 5 times to return to the SMS Main Menu*


Top of Doc

5.4. **Continue the boot process to activate the NPIV adapters at the Network Switch**

From the SMS Main Menu screen


Select 5 for Select Boot options
Select 1 for Select Install/Boot Device
Select 6 for Network
Select 1 for BOOTP
Select 1 for LAN Adapter
Select 2 for Normal Boot Mode
Select 1 to exit SMS

At this point the LPAR will attempt to start a Network boot and will display TFTP Boot statistics and then the Welcome to AIX banner.

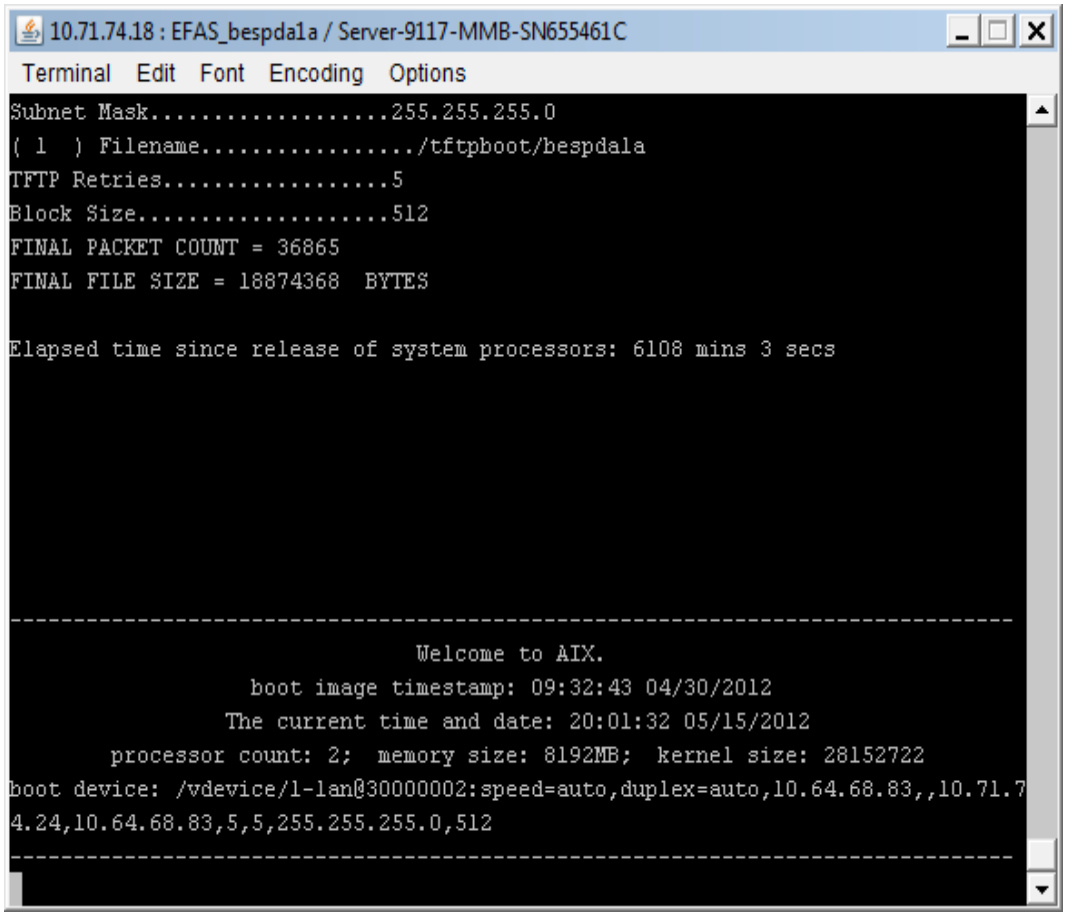

Select 1 and <CR> to use this terminal as the system console
Select 1 and <CR> to use English during the install

Eventually it will fail as there is no boot or installation device available displaying the screen below.

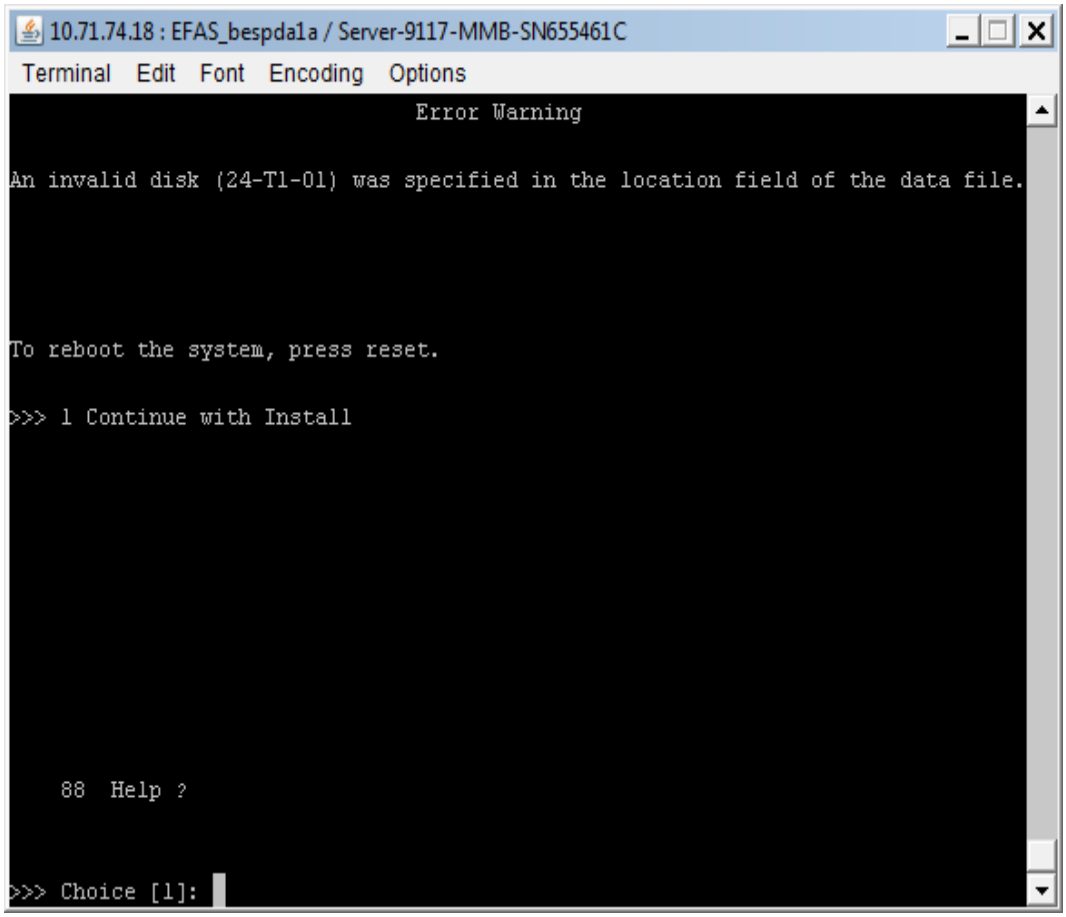

This is ok as the LPAR will have attempted to log into the SAN switch which will allow the SAN team to identify the ports the NPIV adapters are using.

We need to provide the WWPNs for the NPIV adapters to the SAN team requesting that they zone a LUN to the LPAR to allow us to install AIX.

Top of Doc


6. HMC Procedures – Part 3

6.1. Identify LPAR NPIV adapter WWNs for SAN zoning


To continue with the installation of AIX we need a LUN zoning to the NPIV adapters of the LPAR, to request this we have to provide the SAN storage team with the WWPNs for each adapter.

*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers,** then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*

*Click on the LPAR name in the list to open the Partition Properties window, click on the **Virtual Adapters** tab to display a list of the existing virtual adapters, as below.*

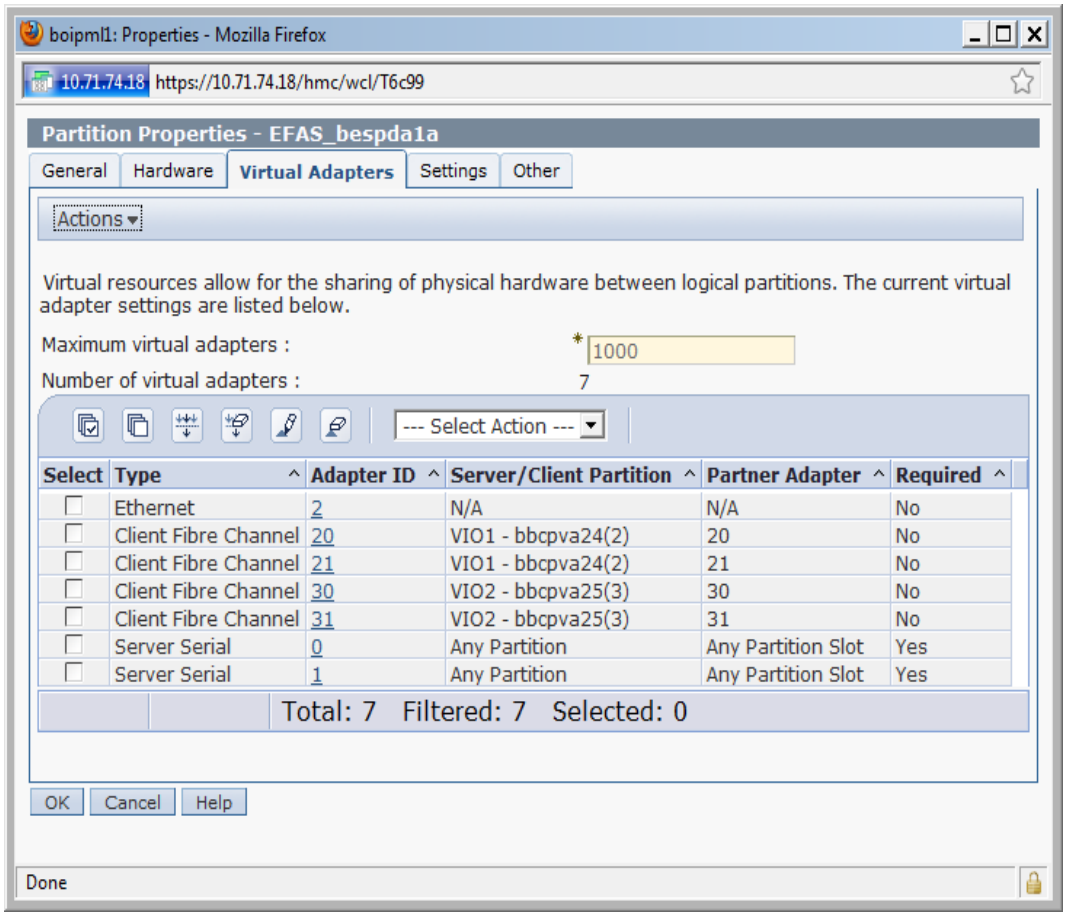

*Click on the first **Adapter ID** hyperlink for each VIO server, in this case IDs **20** and **30**, this will open the Virtual Fibre Channel Adapter Properties window and display the WWPNs associated with each adapter. Note down the WWPNs for each adapter and provide them to the SAN storage team requesting that they zone a sufficiently sized LUN to the LPAR using those NPIV adapter WWPNs.*

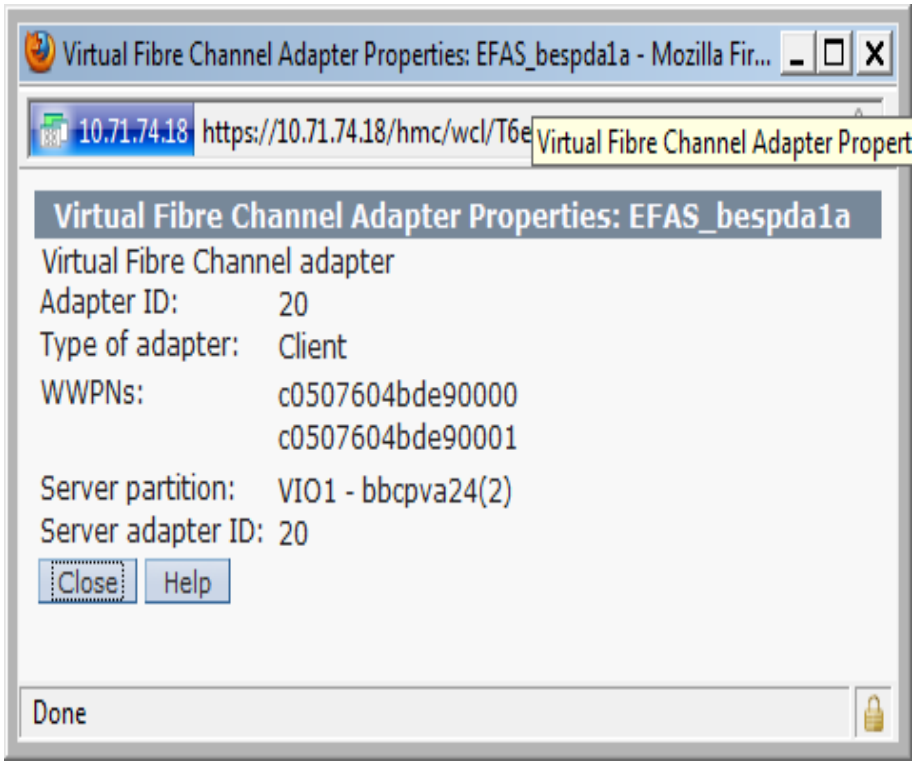

Repeat this on the first NPIV adapter from the second VIO Server to identify its WWPNs.

Top_of_Doc

7. LPAR Procedures – Part 2


Once the SAN storage team have confirmed that they have zoned a LUN to the specified NPIV adapters we can continue with the AIX install.

7.1. Shutdown LPAR prior to NIM installation


*Log onto the HMC and drill down the **Systems Management** option in the left hand pane and select **Servers,** then click on the **Server Name** for the new LPAR profile created in section 1.1. This should display a list of the LPARs that exist on the server in the right hand pane.*

*Tick the Select box against the new LPAR in the right hand pane, click the pop-up menu button and select the **Operations -> Shutdown** option to shutdown the LPAR.*

*Select the **Immediate** radio button and click **OK**.*

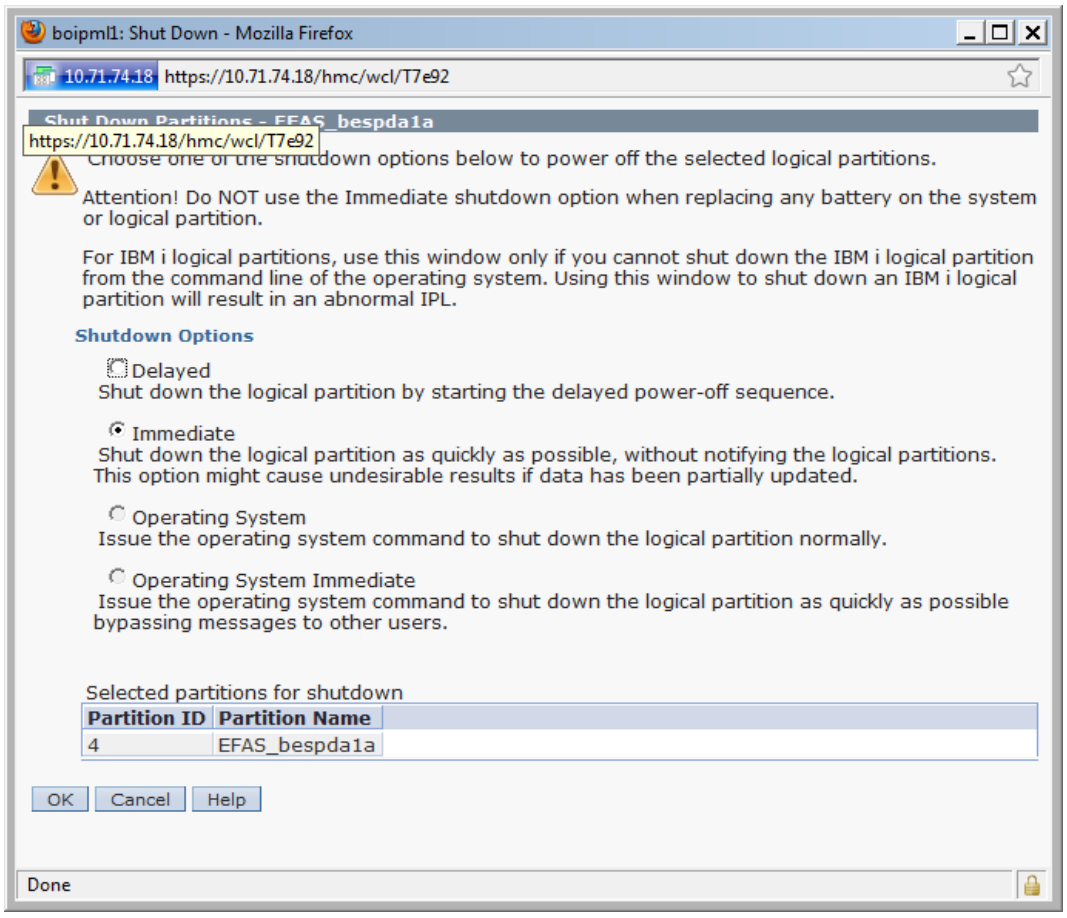

*Click **Yes** on the LPAR immediate shutdown warning.*

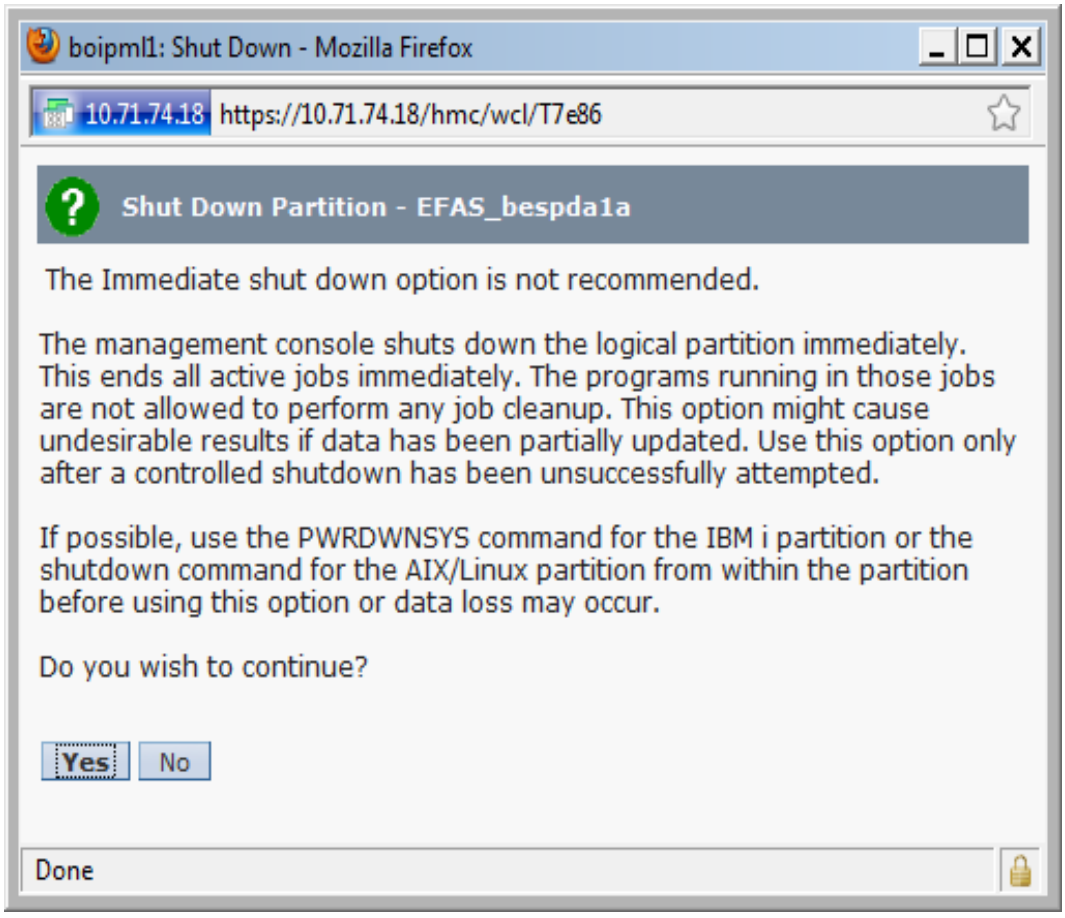

*Click **No** on the replacing a cache battery message.*




The LPAR will go to a **Not Activated** status.

Top of Doc

7.2. Start Network boot LPAR for NIM installation

*Tick the Select box against the new LPAR in the right hand pane, click the pop-up menu button and select the **Operations -> Activate -> Profile** option.*

This opens the Activate Logical Partition window, displaying the Normal profile we created in section 1.1.

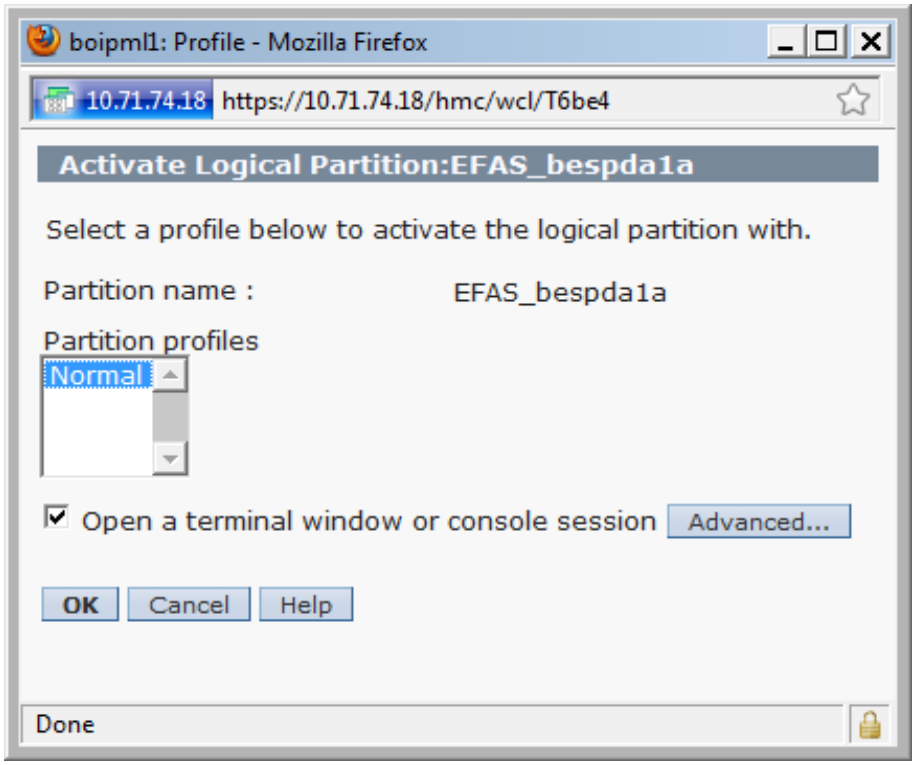


Activate Logical Partition
*Highlight the **Normal** profile*
*Tick the **Open a terminal window or console session** box*
*Click the **Advanced** button and set the **Boot mode** to **SMS** and click **OK** to return*
*Click **OK** to start activating the LPAR*

A console window will open and display status messages as the LPAR starts to boot and then display the main SMS menu below.


Top of Doc

7.3. **Select Boot Options**

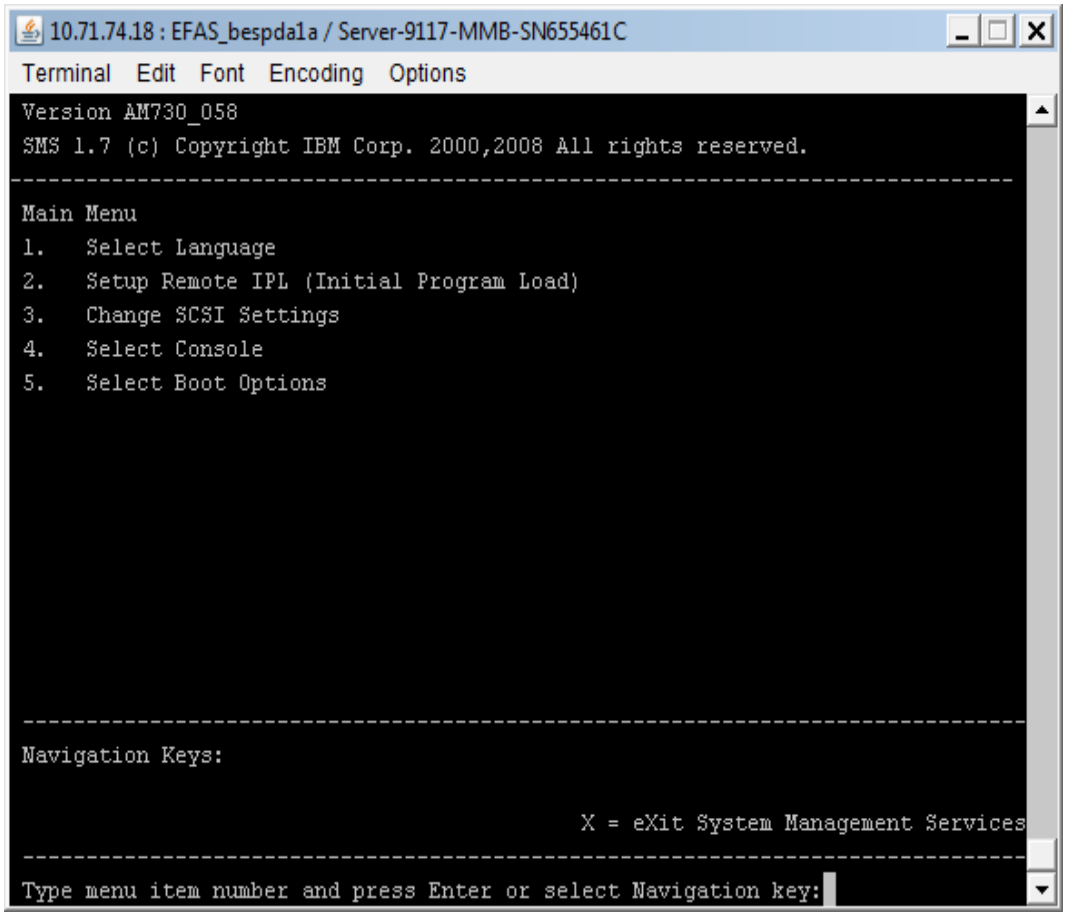


Select 5 for Select Boot options
Select 1 for Select Install/Boot Device
Select 6 for Network
Select 1 for BOOTP
Select 1 for LAN Adapter
Select 2 for Normal Mode Boot
Select 1 to exit SMS


At this point the LPAR will attempt to start a Network boot and will display TFTP Boot statistics and then the Welcome to AIX banner.

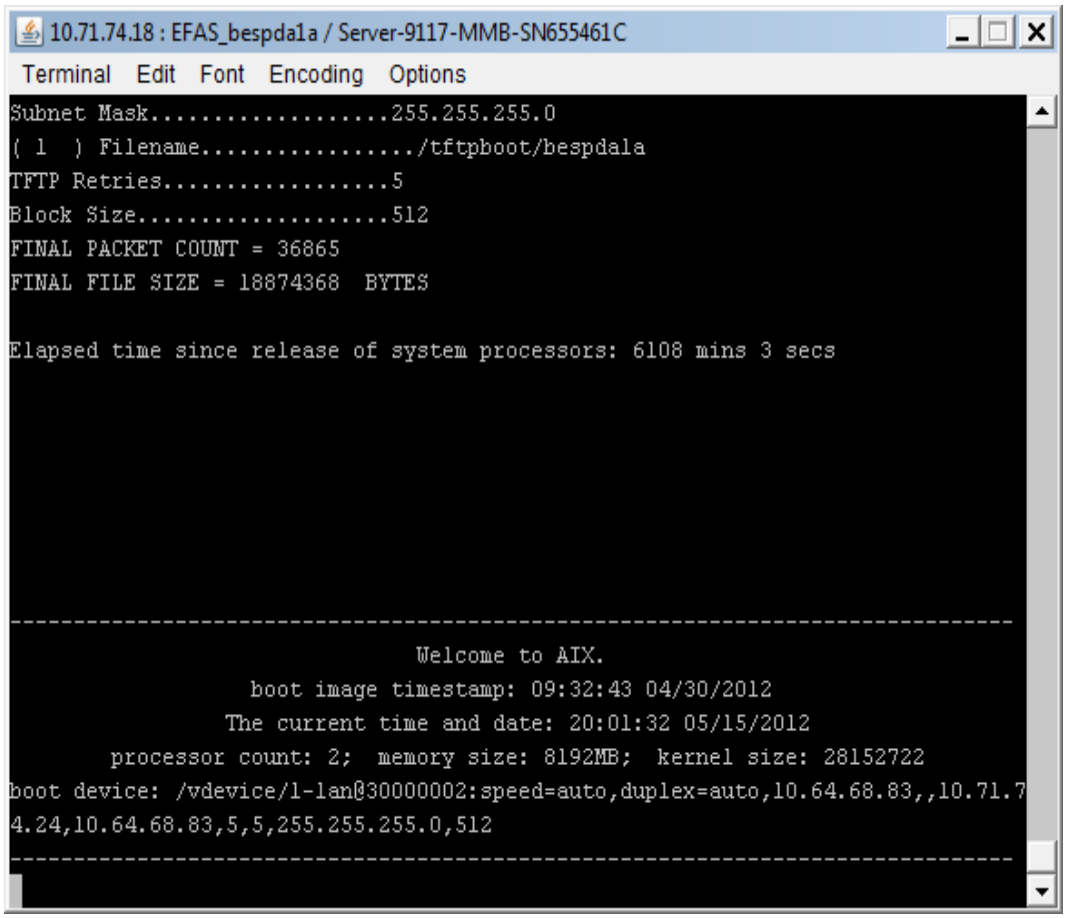

*Type **1** and **<CR>** to use this terminal as the system console*

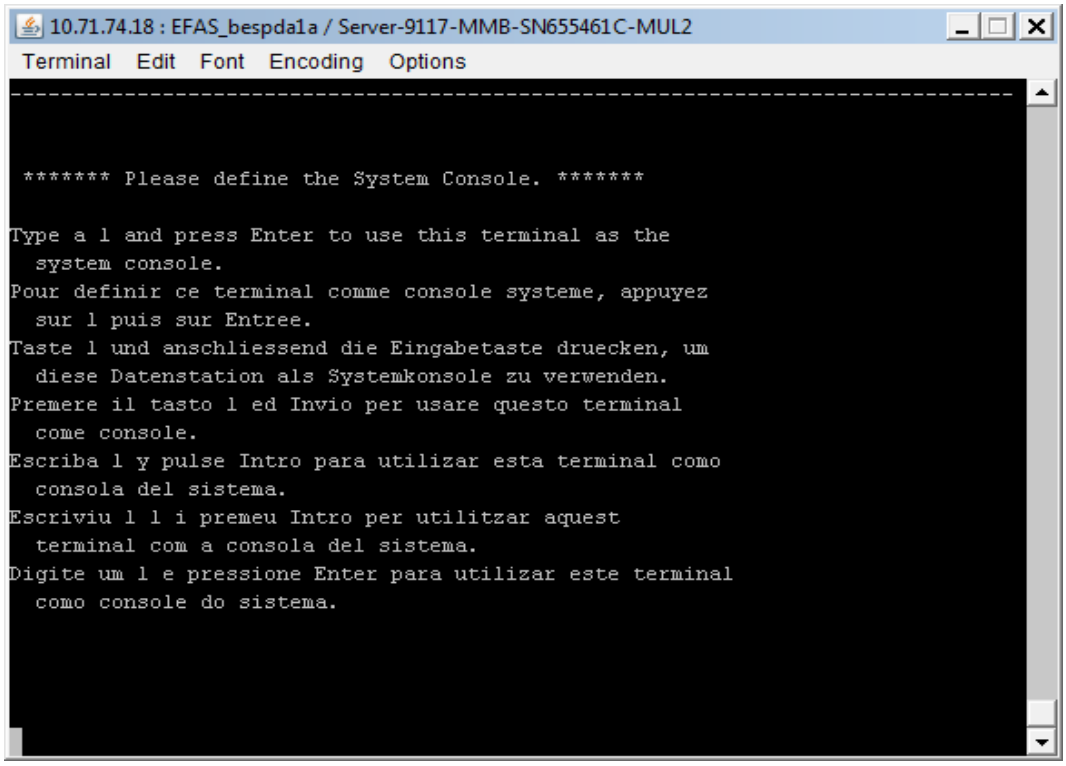


*Type **1** and **<CR>** to use English during the install*

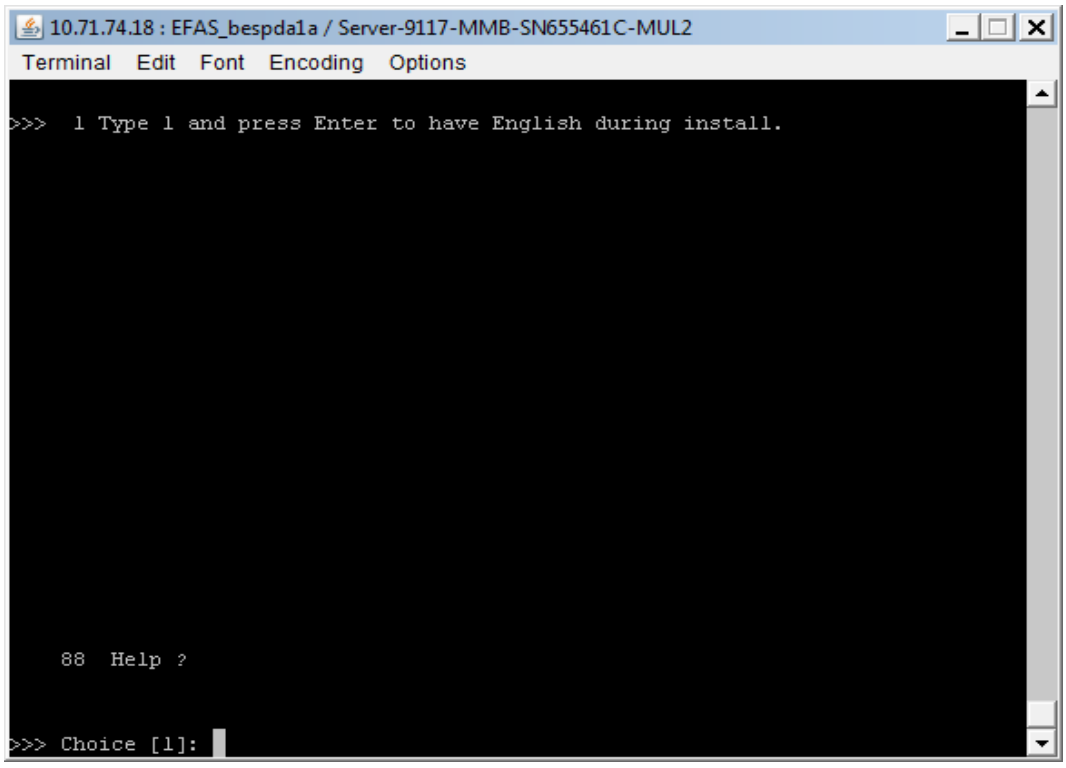


Top of Doc

7.4. **Verify install disk and installation settings**

*Select option **2** to **Change/Show Installation Settings and Install***

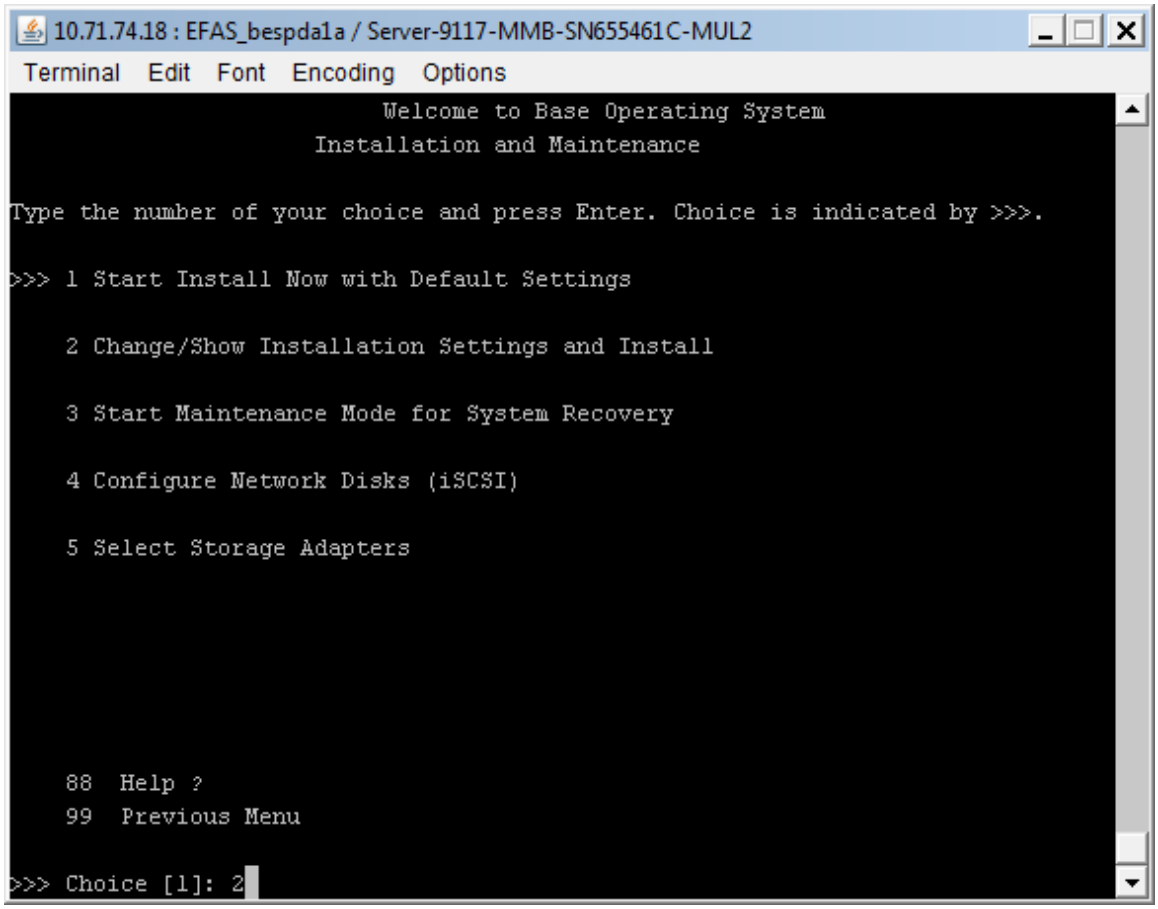

The system should have discovered a disk for the installation and populated it in as the installation disk, as the screen below.

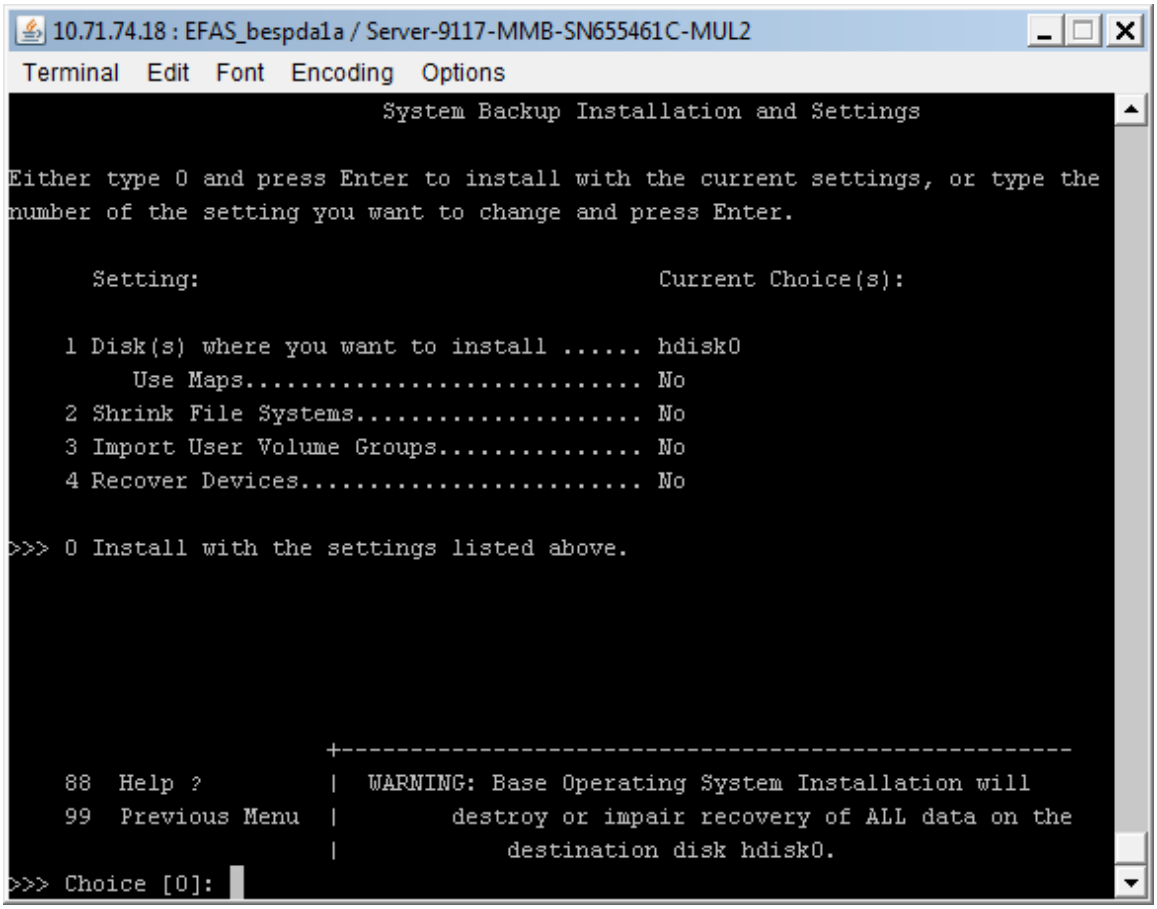

10.71.74.18 : EFAS_bespda1a / Server-9117-MMB-SN655461C-MUL2
Terminal Edit Font Encoding Options
System Backup Installation and Settings
Either type 0 and press Enter to install with the current settings, or type the number of the setting you want to change and press Enter.
Setting: Current Choice(s):
1 Disk(s) where you want to install hdisk0
Use Maps..... No
2 Shrink File Systems..... No
3 Import User Volume Groups..... No
4 Recover Devices..... No
>>> 0 Install with the settings listed above.
88 Help ?
99 Previous Menu
WARNING: Base Operating System Installation will destroy or impair recovery of ALL data on the destination disk hdisk0.
>>> Choice [0]:

Top of Doc

7.5. **Start installation**

*Type **0** and **<CR>** to start the installation.*

The AIX install will begin and display a progress status as below.

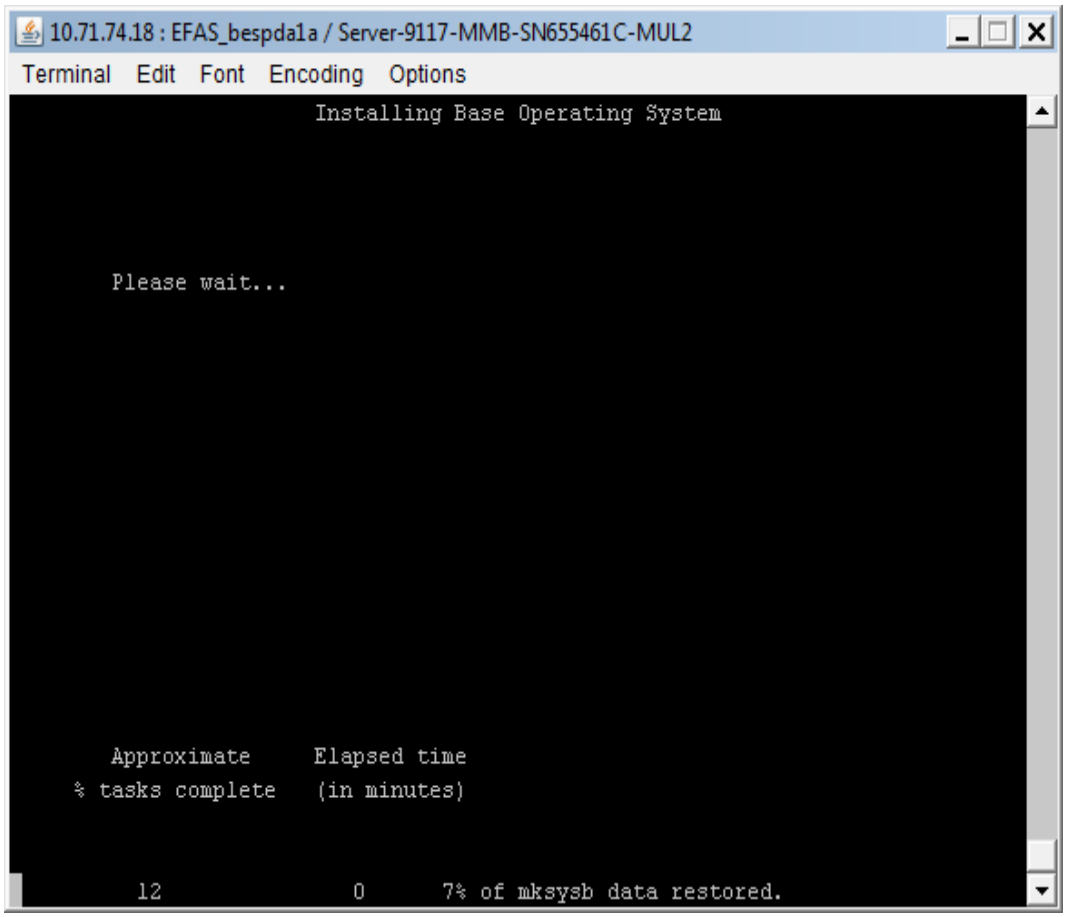

Once the installation is complete the LPAR will reboot and display the login prompt.

Top of Doc

8. Post AIX Install – IBM Standard Tools Install and Configuration

8.1. SCM – Tivoli Security Compliance Manager

The TSCM client installation and troubleshooting guides are below.



C:\Users\
IBM_ADMIN\Documer

SCM Client Installation



C:\Users\
IBM_ADMIN\Documer

SCM Client Troubleshooting

Top of Doc

8.2. SEA – Data Transition Mechanism for SRM Capacity Management

The SEA client installation steps are below.



C:\Users\
IBM_ADMIN\Documer

SEA Client Code Installation

Top of Doc

8.3. ITM – IBM Tivoli Monitoring

The ITM agent installation guide and associated notes are below.



C:\Users\
IBM_ADMIN\Documer

ITM Agent Installation



C:\Users\
IBM_ADMIN\Documer

ITM Agent Install Pre-Reqs



C:\Users\
IBM_ADMIN\Documer

ITM Agent Silent Install Config File

Top of Doc

8.4. TADDM – Tivoli Application Dependency Discovery Manager

The TADDM agent installation guide is below.



C:\Users\
IBM_ADMIN\Docume

TADDM Installation Checklist

Top of Doc

8.5. TAD4D – Tivoli Asset Discovery for Distributed

The TAD4D agent installation guide is below.



C:\Users\
IBM_ADMIN\Docume

TAD4D Agent Install Procedure

Top of Doc

8.6. LDAP – Lightweight Directory Access Protocol

The LDAP admin guide is below.



C:\Users\
IBM_ADMIN\Docume

LDAP Solution - Admin Guide

Top of Doc

9. LPAR Build Checklist

Use the attached checklist template to document the LPAR build specifications.



C:\Users\
IBM_ADMIN\Documer

LPAR Build Checklist Template

Top of Doc