
记性不好,做个帖子记录一下,免得后期固件蹦了又到处折腾。能看懂的可以依葫芦画瓢自己去折腾。光猫后台设置端口上网和 IPTV 的 vlan 绑定,插上机顶盒 openwrt 镜像抓包剥离组播链接。

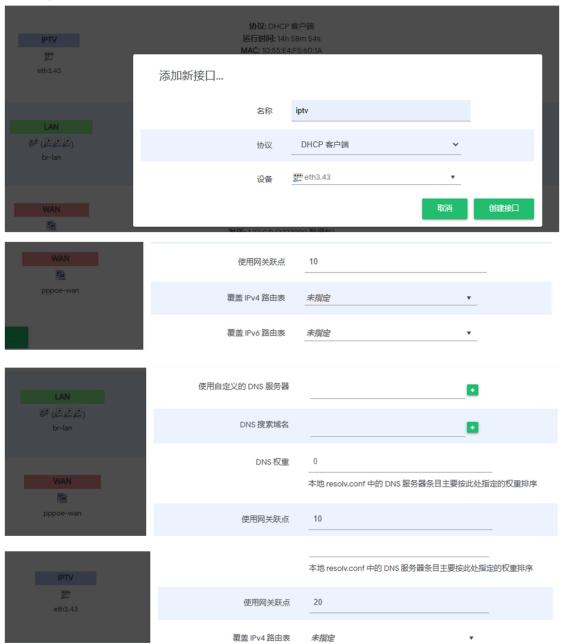



## 网桥设备: br-lan



## VLAN (802.1q): eth3.43

常规设备选项	高级设备选	项
	设备类型	VLAN (802.1q) 🗸
	基设备	eth3 ▼
	VLAN ID	43
	设备名	eth3.43
	MTU	1492
	MAC 地址	
常规设置 启用 SYN-flood 的影		
丢弃无效数据包 🔲		
入站数据接受		
出站數据 接受		
韓炭 接受区域		₽- <i>i</i> jj
	区域⇒转发	入站数据 出站款据 转旋 恋伪 荔
lan	=	West
wan		ACCEPT 担险 v 接受 v 拒险 v v E SNE
lptv		ACCEPT
新聞		保护并统用 •

### udpxy

Allow-IGMP

Allow-UDP-udpxy

udpxy 是 UDP 到 HTTP 的组播流量中继守护程序,您可以在此处配置设置。

# CFG01F55F 已启用 刷新 记录详细日志 状态 绑定 IP/接口 监听端口 8888 源 IP/接口 eth3.43 最大客户端数量 日志文件 config rule option target 'ACCEPT' option src 'wan' option name 'Allow-IGMP' option proto 'IGMP' config rule option target 'ACCEPT' option src 'wan' option proto 'udp' option name 'Allow-UDP-udpxy' '224.0.0.0/4' dest\_ip option 入站 IPv4 and IPv6. 协议 IGMP 来自 wan

到 此设备 入站 IPv4 and IPv6, 协议 UDP 来目 wan 到 此设备,IP 224.0.0.0/4 接受入站

接受入站

#### udpxy status:

Server Process ID	Accepting clients on	Multicast address	Active clients
9078	0.0.0.0:8888	10.24	0

Restart

#### Available HTTP requests:

Request template	Function			
http://address:port/udp/mcast_addr:mport/	Relay multicast traffic from mcast_addr:mport			
http://address:port/udp/source_addr@mcast_addr:mport/	Relay SSM traffic from source_addr@mcast_addr:mport			
http://address:port/status/	Display udpxy status			
http://address:port/restart/	Restart udpxy			

udpxy v. 1.0 (Build 25) standard - [Wed Dec 21 14:10:29 2022] dpxy and udpxrec are Copyright (C) 2008-2018 Pavel V. Cherenkov and licensed under GNU GPLv3



Server Process ID		Accepting clients	on Multicast add	ress	ss Active cli				
9078		0.0.0.0:8888	10.2-		1				
		Re	start						
		Active	clients:						
	Process ID	Source	Destination	Throughput					
	13118	100.115.217.16:59333	239.254.16.2:6000	1285.16 Kb/sec					
		Available H	TP requests:						
Request template		Function							
http://address:port/udp/mcast_addr:mport/		Relay multicast traffic from mcast_addr:mport							
http://address:port/udp/source_addr@mcast_addr:mport/		Relay SSM traffic from source_addr@mcast_addr:mport							
p://address:p	http://address:port/status/		Display udpxy status						
	port/status/					Restart udpxy			

打完收工,贵州联通的 IPTV 认证是盒子 mac 和 optin60 数值,只有 IPTV 网口取得内网地址,什么设备都能看。