H0b.81 **Load position within one turn in absolute position rotation mode (low 32 bits)**

Hexadecimal:	200b-52h	Effective Time:	-
Min.:	-2147483647	Unit:	Encoder unit
Max.:	2147483647	Data Type:	Int32
Default:	0	Change:	Unchangeable

Value Range:

-2147483647 to 2147483647

Description

-

H0b.83 **Load position within one turn in absolute position rotation mode (high 32 bits)**

Hexadecimal:	200b-54h	Effective Time:	-
Min.:	-2147483647	Unit:	Encoder unit
Max.:	2147483647	Data Type:	Int32
Default:	0	Change:	Unchangeable

Value Range:

-2147483647 to 2147483647

Description

-

H0b.85 **Load position within one turn in absolute position rotation mode**

Hexadecimal:	200b-56h	Effective Time:	-
Min.:	-2147483647	Unit:	Reference unit
Max.:	2147483647	Data Type:	Int32
Default:	0	Change:	Unchangeable

Value Range:

-2147483647 to 2147483647

Description

-

4.13 H0C Communication Parameters

H0C.00 **Drive axis address**

Hexadecimal:	200C-01h	Effective Time:	Real time
Min.:	0	Unit:	-

Max.:	247	Data Type:	UInt16
Default:	1	Change:	Immediately

Value Range:

0 to 247

Description

CAN Indicates the slave node address. Ensure this parameter is consistent with the configuration of the host controller.

H0C.02 **Serial baud rate**

Hexadecimal:	200C-03h	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	6	Data Type:	UInt16
Default:	5	Change:	Immediately

Value Range:

0: 2400bps
1: 4800bps
2: 9600bps
3: 19200bps
4: 38400bps
5: 57600bps
6: 115200bps

Description

Setpoint	Baud rate
0	2400bps
1	4800bps
2	9600bps
3	19200bps
4	38400bps
5	57600bps
6	115200bps

H0C.03 **Modbus data format**

Hexadecimal:	200C-04h	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	3	Data Type:	UInt16
Default:	0	Change:	Immediately

Value Range:

0: No parity, 2 stop bits
1: Even parity, 1 stop bit
2: Odd parity, 1 stop bit
3: No parity, 1 stop bit

Description

Defines the data check mode between the servo drive and the host controller during communication.

Setpoint	Data format
0	No check, 2 stop bits
1	Even parity check, 1 stop bit
2	Odd parity check, 1 stop bit
3	No check, 1 stop bits

The data format set in the servo drive must be the same as that in the host controller. Otherwise, communication will fail.

H0C.08 **CAN communication rate**

Hexadecimal:	200C-09h	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	8	Data Type:	UInt16
Default:	5	Change:	Immediately

Value Range:

0: 20K
1: 50K
2: 100K
3: 125K
4: 250K
5: 500K
6: 1M
7: 1M

Description

It sets the CAN (CANlink or CANopen) communication rate between the servo drive and the host controller. The communication rate set in the servo drive must be the same as that in the host controller. Otherwise, communication will fail. If H0C.08 is set to 6, the baud rate is 1 Mbps. 80% sampling points are used to match most PLCs with a 1M standard baud rate.
If H0C.08 is set to 7, the baud rate is 1 Mbps. 70% sampling points are used to match most PLCs with a 1M non-standard (deviated) baud rate. Reducing sampling points can also reduce error frames.

Setpoint	Baud rate
0	20K
1	50K
2	100K
3	125K
4	250K
5	500K
6	1M
7	1M

H0C.09 **Communication VDI**

Hexadecimal:	200C-0Ah	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	0	Change:	At stop

Value Range:

0: Disabled

1: Enabled

Description

To use the VDI function:

1. Set H0C.09 to enable VDI.
2. Set the default level after power-on through H0C.10.
3. Set the DI function of the VDI terminal through parameters in group H17.
4. Set VDI output through H31.00.

H0C.10 **VDI default value upon power-on**

Hexadecimal:	200C-0Bh	Effective Time:	Upon the next power-on
Min.:	0	Unit:	-
Max.:	65535	Data Type:	UInt16
Default:	0	Change:	Immediately

Value Range:

0–65535

Description

Configures the initial value of VDI upon power-on.

Bit 0 corresponds to VDI1.

Bit 1 corresponds to VDI2.

…

bit15 corresponds to VDI16.

Use the VDI according to the following procedure:

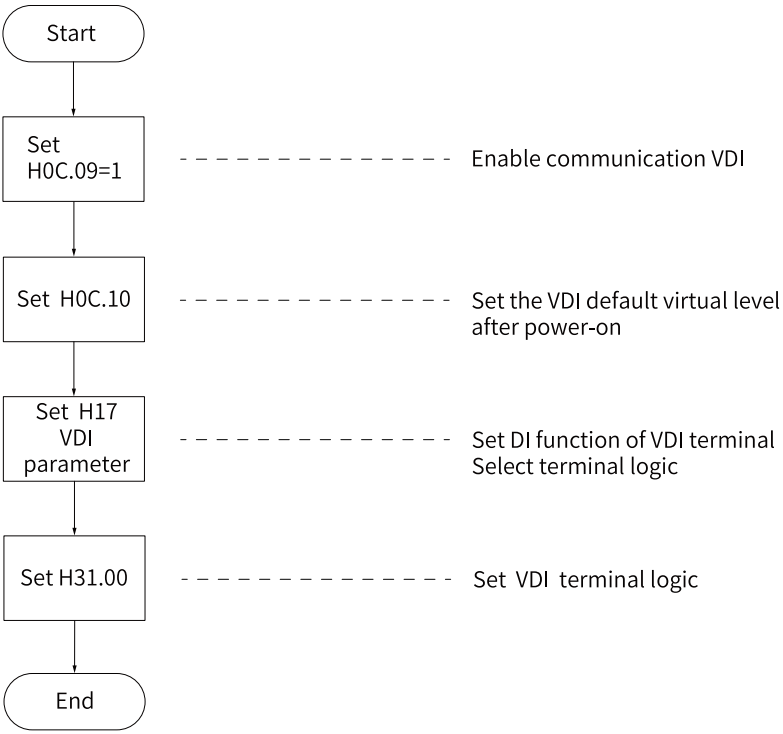

H0C.11 Communication VDO

Hexadecimal:	200C-0Ch	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	0	Change:	At stop

Value Range:

0: Disabled

1: Enabled

Description

To use the VDO function:
1. Enable VDO through H0C.11.
2. Set the default level after power-on through H0C.12.
3. Set the DO function of the VDO terminal through parameters in group H17.
4: Read the output level of the VDO terminal through H17.32.

H0C.12 Default level of the VDO allocated with function 0

Hexadecimal:	200C-0Dh	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	65535	Data Type:	UInt16
Default:	0	Change:	At stop

Value Range:

0 to 65535

Description

Used to configure the initial values of VDO upon power-on.
bit0 corresponds to VDO1.
bit1 corresponds to VDO2.

…
bit15 corresponds to VDO16.
Use the VDO according to the following procedure:

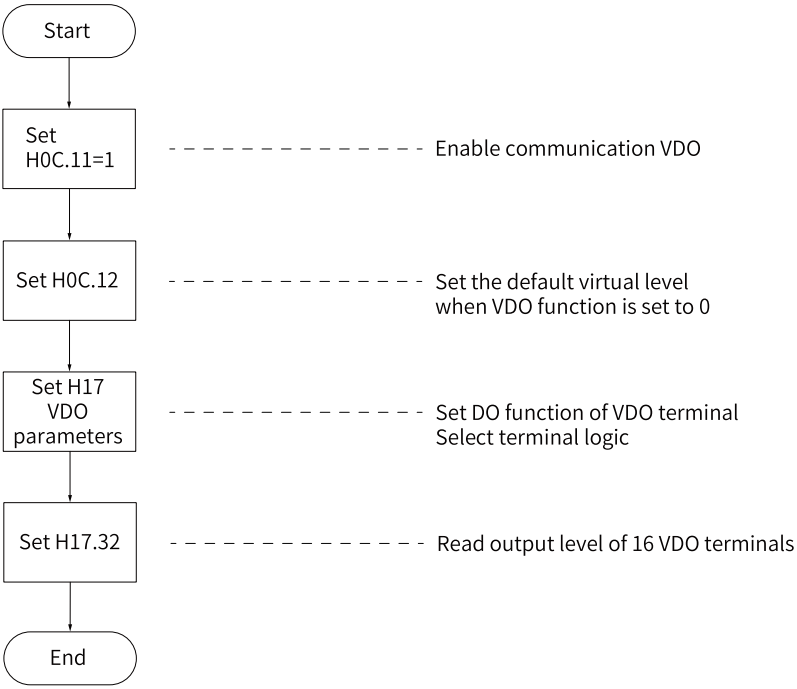

H0C.13 **Update parameter values written through communication to EEPROM**

Hexadecimal:	200C-0Eh	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	1	Change:	Immediately

Value Range:

0: Not update EEPROM

1: Update EEPROM

Description

-

H0C.14 **Modbus error code**

Hexadecimal:	200C-0Fh	Effective Time:	-
Min.:	0	Unit:	-

Max.:	4	Data Type:	UInt16
Default:	2	Change:	Unchangeable

Value Range:

0: N/A

1: Illegal parameter (command code)

2: Command code data address

3: Illegal data

4: Slave device fault

Description

-

H0C.16 Update parameter values written through CAN communication to EEPROM

Hexadecimal:	200C-11h	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	0	Change:	Immediately

Value Range:

0: Not update EEPROM

1: Update EEPROM

Description

-

H0C.25 Modbus command response delay

Hexadecimal:	200C-1Ah	Effective Time:	Real time
Min.:	0	Unit:	ms
Max.:	20	Data Type:	UInt16
Default:	0	Change:	Immediately

Value Range:

0 ms to 20 ms

Description

Defines the delay from the moment when the slave receives a command from the host controller to the moment when the slave returns a response.

H0C.26 Modbus communication data sequence

Hexadecimal:	200C-1Bh	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	1	Change:	Immediately

Value Range:
0: High 16 bits before low 16 bits
1: Low 16 bits before high 16 bits
Description
-

H0C.30 **Modbus error frame format**

Hexadecimal:	200C-1Fh	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	1	Change:	Immediately

Value Range:
0: Old protocol
1: New protocol (standard)
Description
-

H0C.31 **Modbus receiving selection**

Hexadecimal:	200C-20h	Effective Time:	Upon the next power-on
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	0	Change:	Immediately

Value Range:
0: Receiving interrupt enabled
1: Current loop interrupt inquiry
Description
-

4.14 H0d Auxiliary Parameters

H0d.00 **Software Reset**

Hexadecimal:	200d-01h	Effective Time:	Real time
Min.:	0	Unit:	-
Max.:	1	Data Type:	UInt16
Default:	0	Change:	At stop

Value Range:
0: No operation
1: Enable