

Technical Support

If you need any technical help, please visit our official support site and contact our support team before returning the products,
<https://support.reolink.com>.

REOLINK INNOVATION LIMITED

FLAT/RM 705 7/F FA YUEN COMMERCIAL BUILDING 75-77 FA YUEN STREET MONG KOK KL HONG

KONG



FR

Cet appareil,
ses accessoires,
piles et cordons
se recyclent

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !




PAP 22

Raccolta Carta

Reolink

Reolink Go PT Ultra, Reolink Go PT Plus

Operational Instructions

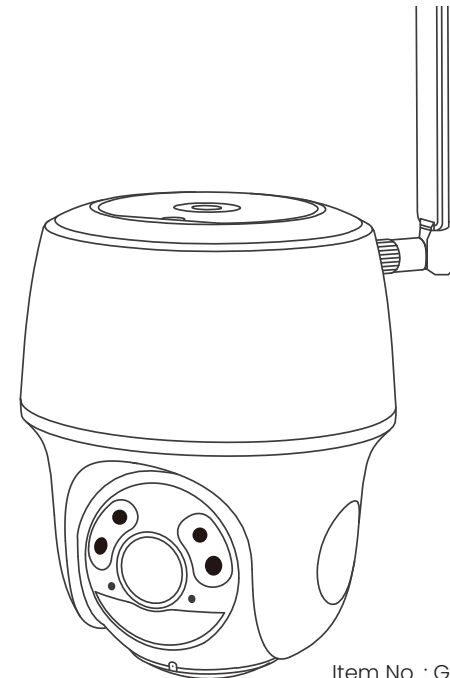

58.03.001.0983



@ReolinkTech <https://reolink.com>


EN

Item No. : G440/G430

Contents

01	What's in the Box	02
02	Device Overview	03
03	Preparation Before Setup	05
04	Initial Setup	08
05	Installation Tips	10
06	Installation Steps	11
07	Troubleshooting	17
08	Specifications	18
09	Legal Disclaimer	18
10	Important Safety Instructions	18
11	Notification of Compliance	19

01 What's in the Box

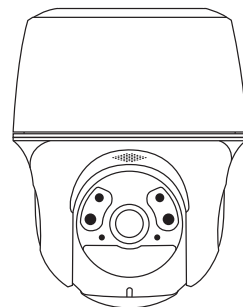


Camera

Mounting
TemplateScrew Bag with
Hex key
(for Camera)Screw Bag
(for Solar Panel
Bracket)Solar Panel
Bracket

Strap




Antenna


USB-C Charging
CableSurveillance
StickerOperational
InstructionsWall Mount
Brackets*Ceiling Mount
Bracket***NOTE:**

Wall Mount Brackets include two brackets, one L-shape bracket and one round plate (marked with an unlock icon).
Ceiling Mount Bracket includes a round bracket.

What You Also Need *Not Included



#2 Phillips Screwdriver



Drill



Ladder

02 Device Overview

- 1

Antenna
- 2

Speaker
- 3

Lens
- 4

Status Light
- 5

PIR Sensor
- 6

Microphone
- 7

Daylight Sensor
- 8

Infrared Light
- 9

Spotlight
- 10

USB-C & Power Ports Cover
- 11

USB-C Port
- 12

Power Button
- 13


microSD Card Slot Cover
- 14

microSD Card Slot
- 15

SIM Card Slot
- 16

Charging Indicator Light

*Press 3 times to restore.

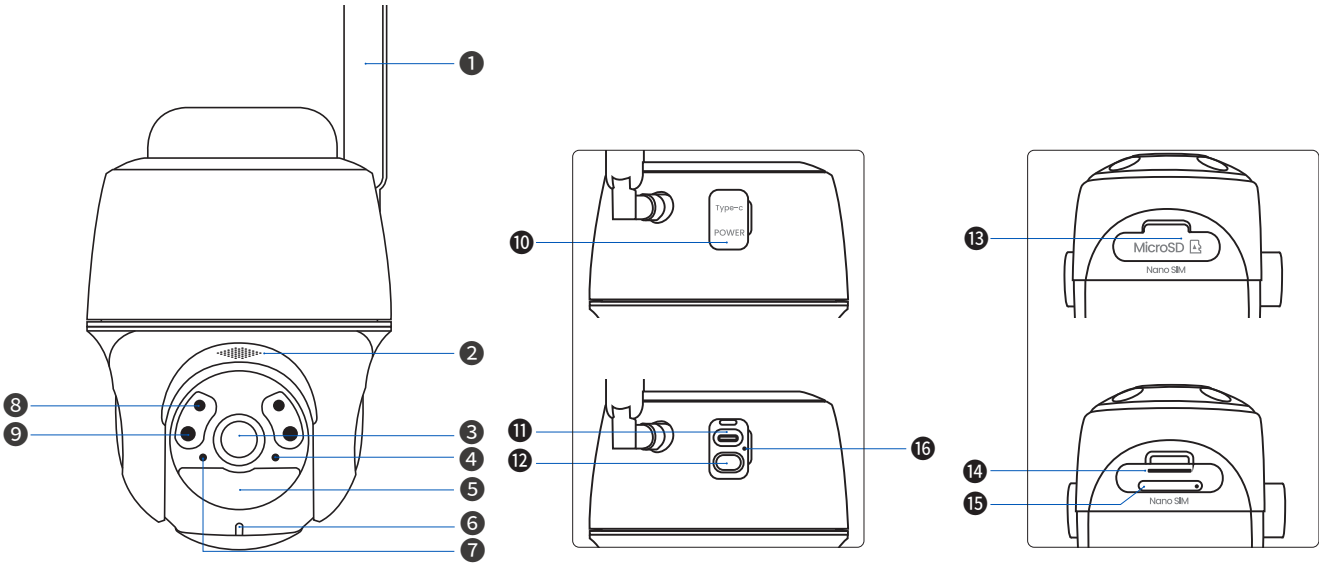

03 Preparation Before Setup

Activate SIM Card

Step 1. Prepare a Compatible SIM Card

- Use a Nano SIM card that supports WCDMA and FDD LTE networks.
- If your SIM card has a PIN code enabled, please disable it using your smartphone before inserting it into the camera.




NOTE:
DO NOT use IoT/M2M SIM cards with your smartphone.

Step 2. Remove the Cover

Rotate the camera lens, and remove the cover.


Step 3. Insert the SIM Card

Use the SIM ejector tool to open the SIM card tray. Insert the SIM card, then firmly push in the tray back until it clicks into place.

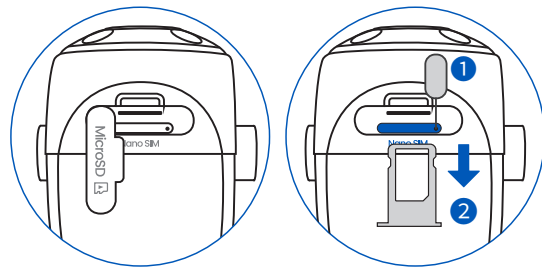


Step 4. Power on the Camera

Press and hold the power button to turn on the camera. The indicator light will turn on in red in a few seconds and stays on.

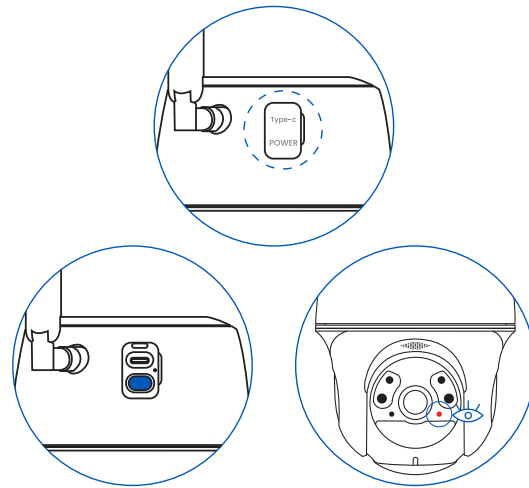

Step 5. Register the SIM Card

The indicator light will flash blue for 3 seconds, stay solid for 5 seconds, and then turn off. You will hear a voice prompt "Network connection succeeded", indicating that the camera has successfully connected to the network. After registration, securely close and lock the cover.

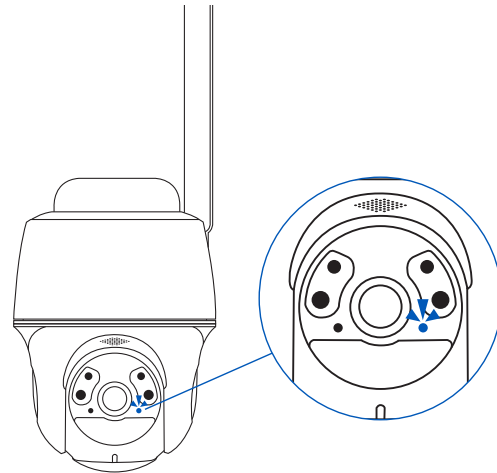

You may also run into the following situations:

	Voice Prompt	Camera Status	Solutions
1	"SIM card cannot be recognized."	The SIM card is not properly inserted.	1. Check if the SIM card is inserted in the wrong direction, and try again. 2. Check if the SIM card is not fully inserted, and try again.
2	"The SIM card is locked with a PIN. Please disable it."	PIN is enabled on your SIM card.	Insert the the SIM card into your mobile phone and disable the PIN.
3	"Not registered on network. Please activate your SIM card and check the signal strength."	The camera fails to register with the carrier network.	1. Check if your SIM card is activated. If not, contact the carrier to activate it. 2. The network signal is weak in the current location. Move the camera to a location with stronger siganls and try again. 3. Make sure you are using the correct regional version of the camera.
4	"Network connection failed."	Camera fails to connect to the server.	The camera will remain on standby and attempt to reconnect shortly.
5	"Data call failed. Please confirm your cellular data plan is available or import the APN settings."	The SIM card may have run out of data or the APN settings might be incorrect.	1. Check if the SIM card still has an active data plan. 2. Make sure the correct APN settings are imported to the camera.

04 Initial Setup

Step 1. Download the Reolink App or Client

• On Smartphone




• On PC

Download the Reolink Client: Go to <https://reolink.com> > Support > App & Client

Step 2. Initialize the Camera


Tap the "+" button in the top corner, scan the camera's QR code, and follow the on-screen instructions to complete the setup.

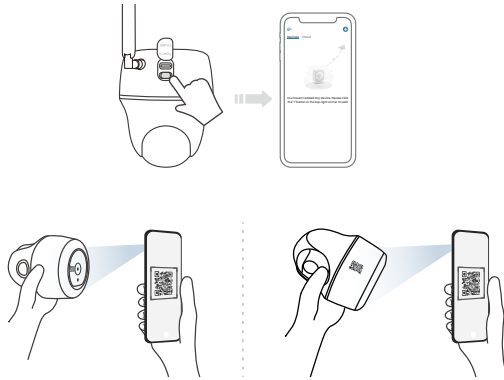

NOTE: After initialization, the indicator light will turn blue and stay on for 5 seconds.

Step 3. Charge the Camera


Fully Charge the Camera Before Use

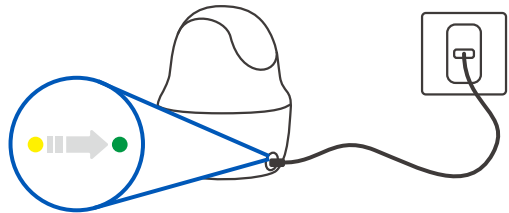

Charge the camera with a 5V power adapter (not included).

Indicator Status

- Solid Yellow: Charging
- Solid Green: Fully Charged

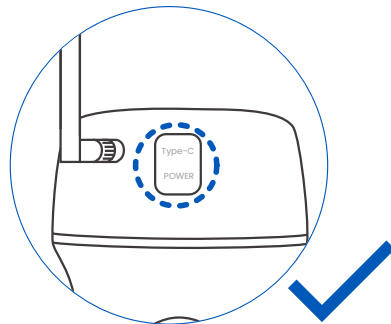


Cover the Charging Port After Use




To ensure optimal weatherproof performance, always seal the charging port with the cover after charging.

05 Installation Tips

Install the camera at a height of 2–3 meters (7–10 feet) to maximize PIR sensor performance.

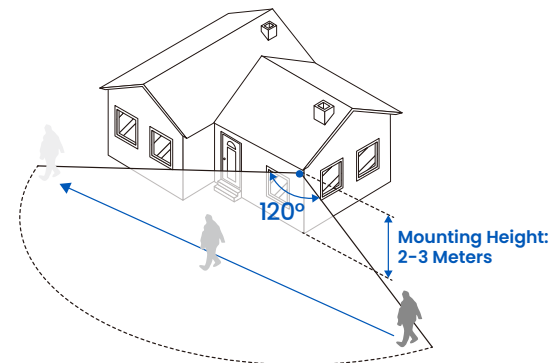


For optimal motion detection, install the camera at an angle to the expected movement path. The PIR sensor may not respond well to motion directly toward or away from it.

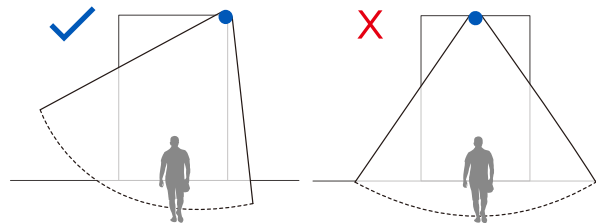

06 Installation Steps


Step 1. Install the Antenna

Screw the antenna onto the camera and adjust its direction after installation.

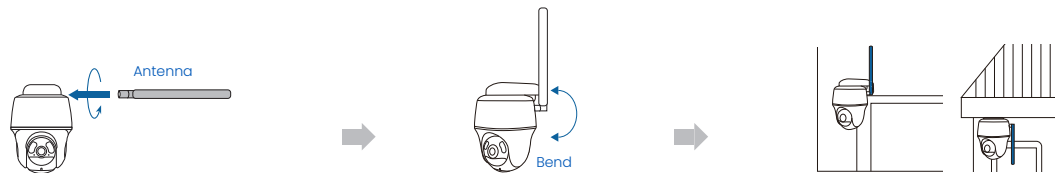


Step 2. Choose a Mounting Location


A Wall Mounting

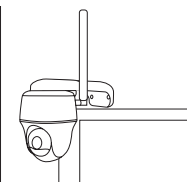

B Ceiling Mounting


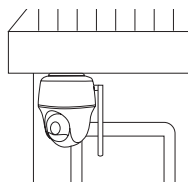


C Strap Mounting


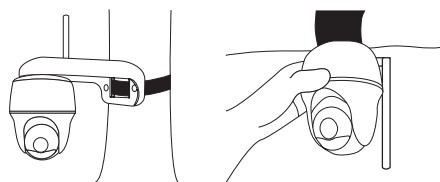


Step 3. Secure the Camera

A Wall Mounting

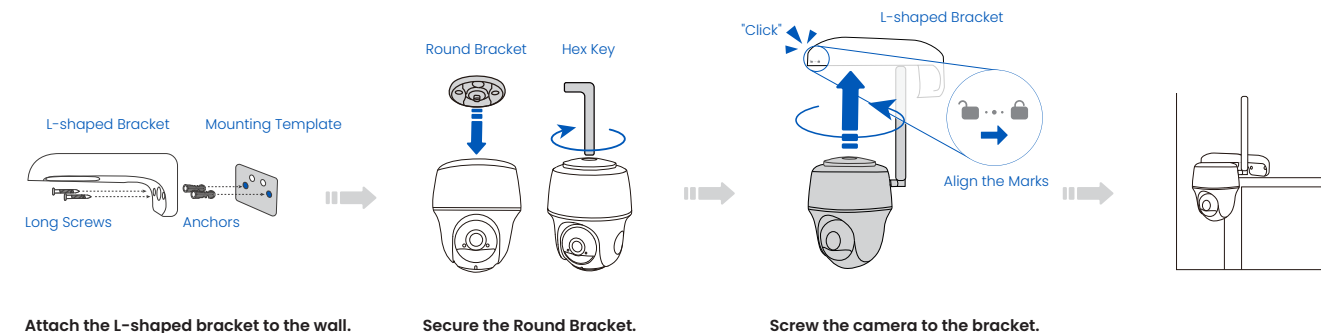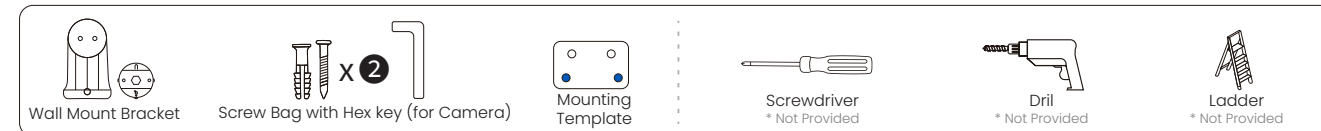


B Ceiling Mounting

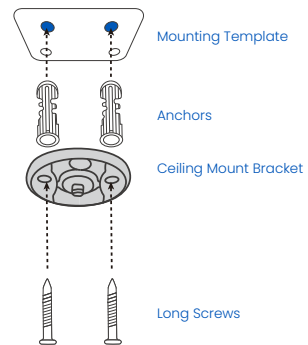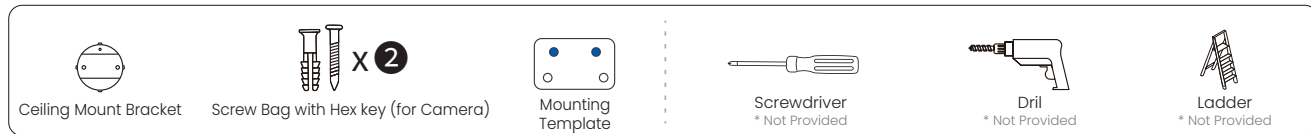

Attach the ceiling mount bracket to the wall.




Screw the camera to the bracket.

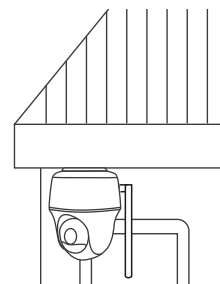


C Strap Mounting


Option 1. Secure with Wall Mount Brackets

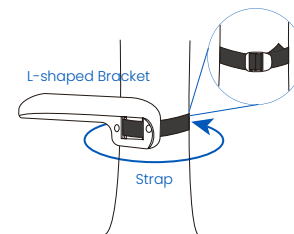


Secure the L-shaped bracket with strap.

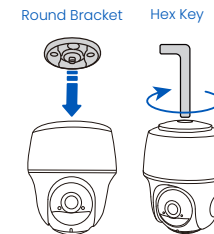


Secure the round bracket

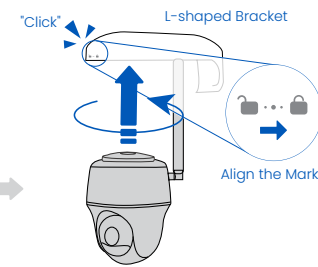

Screw the camera to the bracket.

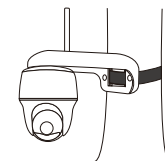



Option 2. Secure with Ceiling Mount Bracket

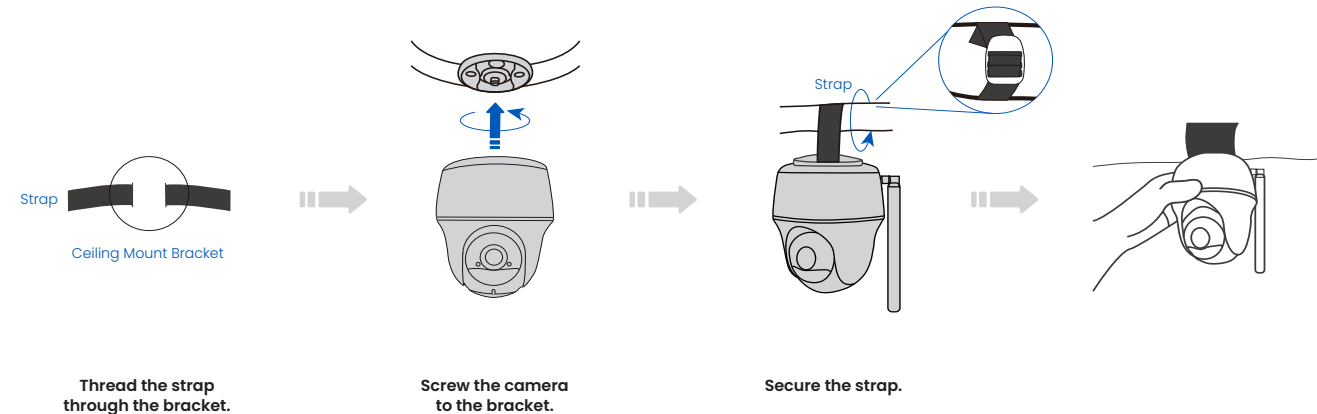

Step 4. Install Reolink Solar Panel (Optional)

You can mount the solar panel (not included) directly on the top of the L-shaped bracket.

NOTE:
Compatible with Reolink Solar Panel & Solar Panel 2

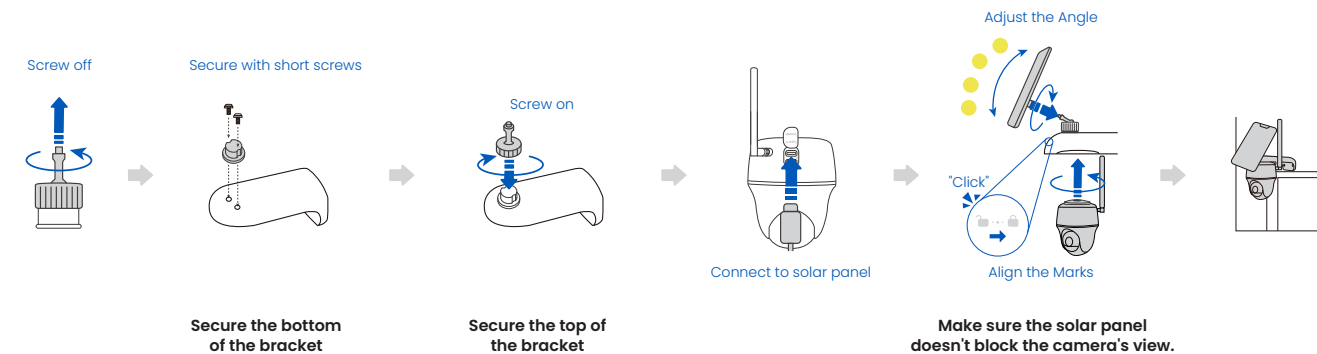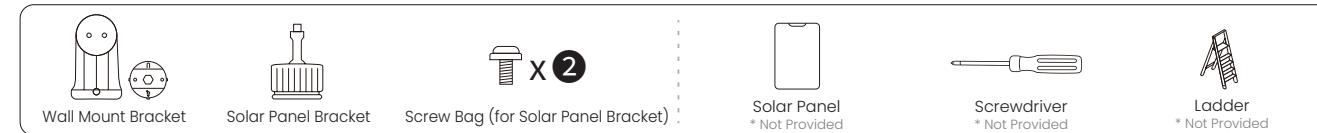

07 Troubleshooting

Camera is Not Powering On

If your camera is not turning on, please apply the following solutions:

- Make sure you've turned the power button on.
- Charge the battery with a DC 5V/2A power adapter. When the green light is on, the battery is fully charged.

If these won't work, please contact Reolink Support.

PIR Sensor Fails to Trigger Alarm

If the PIR sensor fails to trigger any kind of alarm within the covered area, try the following solutions:

- Make sure that the PIR sensor or the camera is installed in the right direction.
- Make sure the PIR sensor is enabled or the schedule is set up properly and running.
- Check the sensitivity settings and make sure it's set up properly.

- Make sure the battery is working.
- Reset the camera and try again.

If these won't work, please contact Reolink Support.

Unable to Receive Push Notifications

If you fail to receive any push notifications when motion is detected, try the following solutions:

- Make sure the push notification has been enabled.
- Make sure the PIR schedule is set up properly.
- Check the network connection on your phone and try again.
- Make sure the camera is connected to the Internet. If the LED indicator under the camera lens is solid red or flickering red, it means that your device disconnects from the Internet.
- Make sure you've enabled Allow Notifications on your phone. Go to the System Settings on your phone and allow Reolink App to send push notifications.

If these won't work, please contact Reolink Support.

08 Specifications

Operating Temperature: -10°C to 55°C (14°F to 131°F)

Size: Φ100 x 129 mm

Weight (Battery included): 500g

For more specifications, visit the Reolink official website.

09 Legal Disclaimer

To the maximum extent permitted by applicable law, this document and the product described, with its hardware, software, firmware, and services, are delivered on an "as-is" and "as-available" basis, with all faults and without warranty of any kind. Reolink disclaims all warranties, express or implied, including but not limited to, warranties of merchantability, satisfactory quality, fitness for a particular purpose, accuracy, and non-infringement of third-party rights. In no event will Reolink, its directors, officers, employees, or agents be liable to you for any special, consequential, incidental or indirect damages, including but not limited to damages for loss of business profits, business interruption, or loss of data or documentation, in connection with the use of this product, even if Reolink has been advised of the possibility of such damages.

To the extent permitted by applicable law, your use of the Reolink products and services is at your sole risk and you assume all risks associated with internet access. Reolink does not take any responsibilities for abnormal operation, privacy leakage or other damages resulting from cyber attacks, hacker attacks, virus inspections, or other internet security risks. However, Reolink will provide timely technical support if required.

The laws and regulations related to this product vary by jurisdiction. Please check all relevant laws and regulations in your jurisdiction before using this product to ensure that your use conforms to the applicable law and regulation. During the use of the product, you must comply with relevant local laws and regulations. Reolink is not responsible for any illegal or improper use and its consequences. Reolink is not liable in the event that this product is used with illegitimate purposes, such as third-party rights infringement, medical treatment, safety equipment, or other situations where the product failure could lead to death or personal injury, or for weapons of mass destruction, chemical and biological weapons, nuclear explosion, and any unsafe nuclear energy uses or anti-humanity purposes. In the event of any conflicts between this manual and the applicable law, the latter prevails.

10 Important Safety Instructions

Please read the instructions carefully before using the camera. For tips on extending battery life, visit our support post:
<https://support.reolink.com/hc/en-us/articles/360006991893>

1. Charge the battery with a standard and high-quality DC 5V battery charger or Reolink solar panel. It is not compatible with solar panels from any other brands.
2. Replace only with the same or equivalent type of equipment and accessories recommended by the manufacturer. Using an incorrect type poses an explosion risk.
3. Do not remove a built-in battery from the camera.
4. Charge the battery only in temperatures between 0°C and 45°C. And use it only in temperatures ranging from -10°C and 55°C.
5. Do not charge, use or store a battery camera near heat sources, such as space heaters, cooking surfaces, cooking appliances, irons, radiators, or fireplaces. Extreme heat may cause an explosion.

- 6. Do not expose the camera with a battery to extremely low air pressure environments, as this may cause an explosion.
- 7. Do not place the camera with a battery in hot wilderness areas or expose it to lightning, as this poses a risk of fire.
- 8. Do not hit or heavily compress the camera with a battery, as this poses a risk of fire or explosion.
- 9. Do not use the battery if it appears damaged, swollen, or compromised in any way (e.g., leaking, emitting odors, dented, corroded, rusted, cracked, swollen, melted, or scratched).
- 10. Keep the camera and battery away from children.
- 11. Do not ingest or swallow battery. If the battery is ingested or swallowed, it can cause severe internal burns and damage. Seek immediate medical attention if you suspect the battery has been ingested or placed inside any part of the body.
- 12. Do not attempt to disassemble, repair, or alter the camera or battery by yourself.
- 13. Keep the charging port dry, clean and free of any debris. Cover it with the rubber plug after the battery is fully charged.
- 14. Always follow the local safety laws and regulations when using the camera.
- 15. Always follow the local waste and recycling laws to dispose of used batteries.
- 16. The product doesn't include assistive features. Customers with disabilities can use devices with assistive features, like computers or smartphones with text-to-speech tools, for accessibility. For individuals with visual or physical impairments, professional help may be needed for installation. Once installed, the product can be controlled entirely via the app.

11

Notification of Compliance

Limited Warranty

This product comes with a 2-year limited warranty that is valid only if purchased from Reolink Official Store or a Reolink authorized reseller. Learn more: <https://reolink.com/warranty-and-return/>.

NOTE: We hope that you enjoy the new purchase. But if you are not satisfied with the product and plan to return, we strongly suggest that you reset the camera to factory default settings and take out the inserted SD card before returning.

Terms and Privacy

Use of the product is subject to your agreement to the Terms of Service and Privacy Policy at reolink.com

Technical Support

If you need any technical help, please visit our official support site and contact our support team before returning the products, <https://support.reolink.com>.

Terms of Service

By using the Product Software that is embedded on the Reolink product, you agree to the terms&conditions between you and Reolink. Learn more: <https://reolink.com/terms-conditions/>

Trademarks Acknowledgement

"Reolink" and other Reolink's trademarks and logos are the properties of Reolink. Other trademarks and logos mentioned are the properties of their respective owners.