



Part Volume

Write one solid's volume to a variable, as a plain number in mm^3 -- typically the result Iterative Solve drives.




What it does

Iterative Solve and later features read variables.
Part Volume turns one part's volume into one:
evaluated precisely, stored as a unitless number of
 mm^3 , and printed to the console.

Use it when

- Drive Iterative Solve by a part's volume
- Show a volume in a variable or table

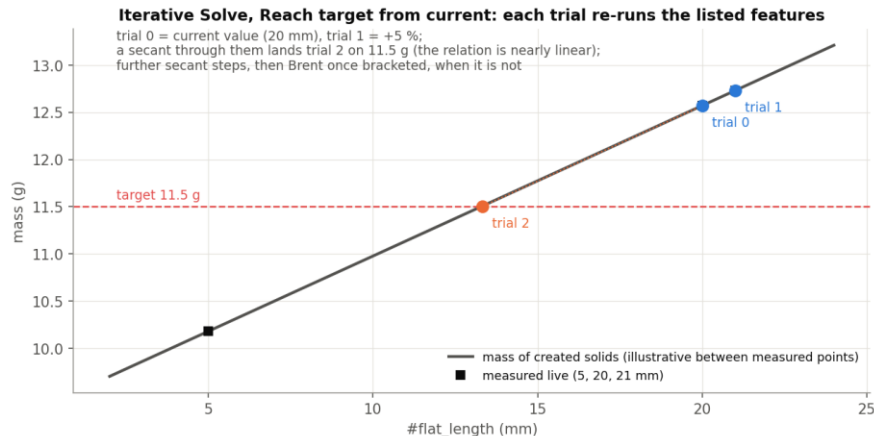

Its value can be Iterative Solve's result variable.



The dialog

Parameter	What it means
Part	One solid.
Variable Name	The name to set (not checked: an empty name is not caught).



Tips and limits



Unitless

The value is a number of mm^3 , not a volume with units.



One part

Single solid only; no description or messages.



Where it lives

Document	solvers (3cf445f157b6a28aa1d35fcf; named 'Stray_Weight_Concept_1' in Onshape)
Tab	Part_Vol
Tests	none
Explainer	docs/explainers/solvers/solvers_explained.md, section 2.2
Related	Iterative Solve