



Analyze baseline

Measure an existing side profile -- camber height, rocker contact points and lengths, tip heights -- to compare a ski with its design targets.




What it does

Generate baseline builds a profile from targets;
Analyze baseline goes the other way. Give it any
baseline -- scanned, drawn, or generated -- and it
reports the same quantities, and can draw them as
a sketch.

Use it when

- Check a scanned or supplied ski against targets
- Verify a hand-drawn baseline
- Document a profile's numbers

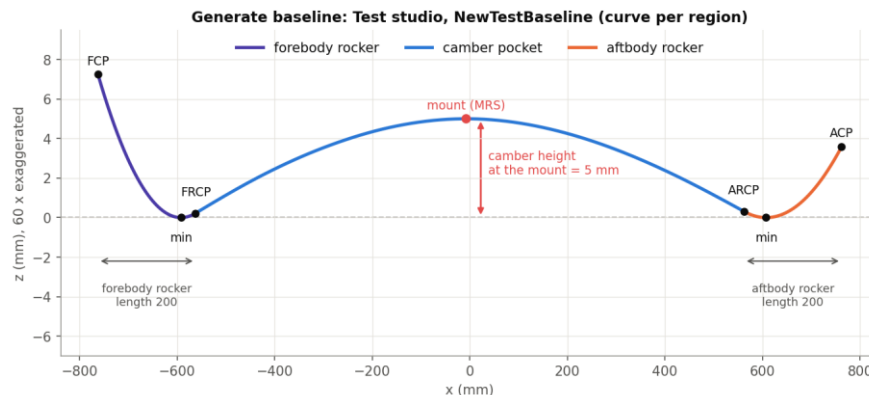

The quantities it reports: minima, camber, FRCP / ARCP, rocker lengths, tip heights.




The dialog

Parameter	What it means
Baseline edges	The side profile (a tangent chain).
FCP / ACP	Contact points (X only).
Calculated data	Read-only: FB / AB minimum, max camber point, camber height, FRCP, FRCPL, FRCP tangent, FCPH, ARCP, ARCPL, ARCP tangent, ACPH.
Output measurement sketch	Chords, tangent lines and normals on the XZ plane.
Recalculate	Button (the values are also refreshed on every dialog change).



How it measures

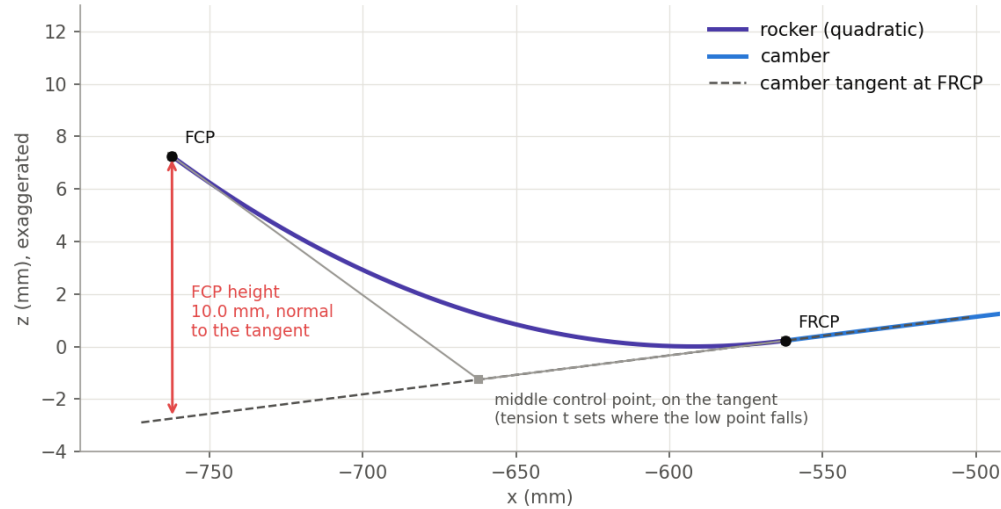

Camber

Largest perpendicular distance from the line between the two low points.

FRCP / ARCP

The lowest inflection in each half; FRCPL = its distance from FCP.

FCPH / ACPH

The tip's perpendicular distance to the tangent at FRCP / ARCP.



Tips and limits



Dialog only

Values are computed while editing and do not follow later geometry changes.



No inflection

A half with no inflection leaves its fields empty.



Name

The feature is spelled 'Analze baseline' in Onshape.



Where it lives

Document	xSection (f8deedeb1fbd819a8fa20113), 'Stiffness Tools'
Tab	analyzeBaseline (beam/analyzeBaseline.fs)
Tests	none
Examples	Test2 studio: Analze baseline 1
Explainer	docs/explainers/xsection/xsection_explained.md, section 2.6
Related	El and Cross Section, Estimate Stiffness, Estimate Deflection, Generate / Analyze baseline, Update profile