
Cleanroom Control

# Quick Start

Install the controller, pair it to your account and set up your room, step by step.

by Coll Business Solutions LLC

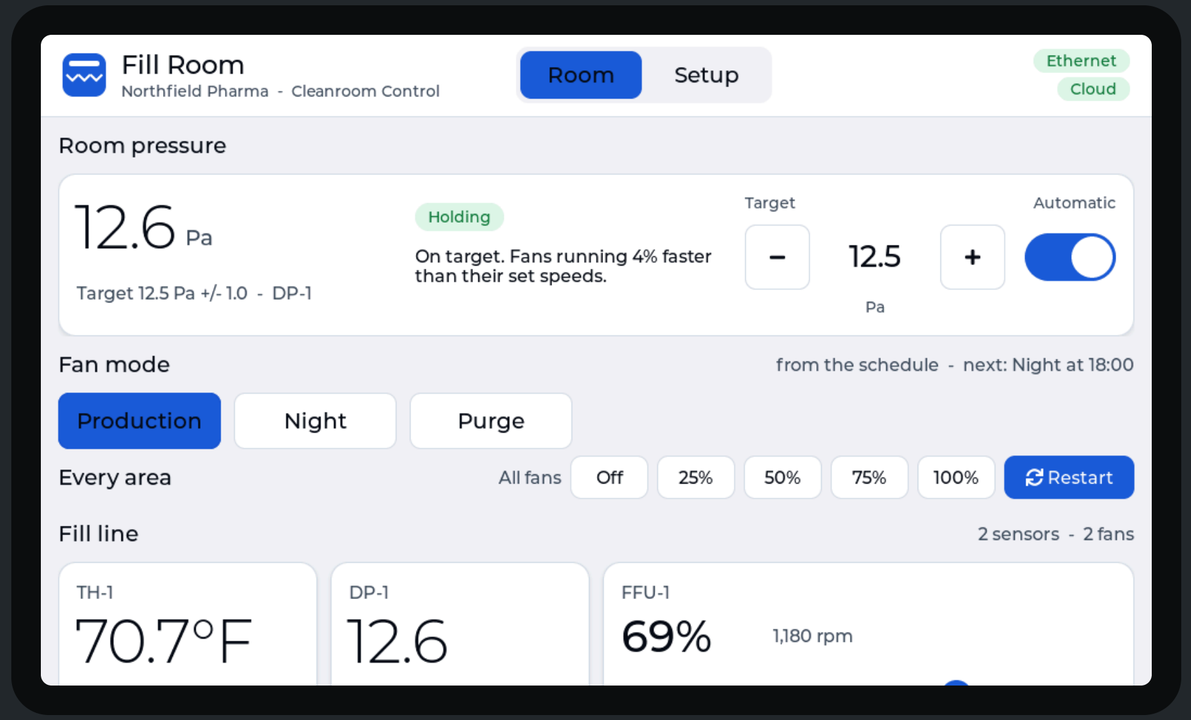

THE WHOLE JOB

# Six steps, about 30 minutes

## 1

### Mount and power

Put the touchscreen on the wall and plug it in.

## 2

### Connect equipment

Fans and sensors plug in with standard network cable.

## 3

### Get online

An Ethernet cable, or Wi-Fi from the screen.

## 4

### Create your account

On any computer or phone. You become the owner.

## 5

### Pair the controller

Type the code from its screen into the app.

## 6

### Set up the room

Areas, alarm limits and your team.

STEP 1

# Mount and power the controller

## Where it goes

- On the wall in the room, or at its entrance, at eye level.
- Where the people running the room can reach it.
- Within reach of power, a network cable (or Wi-Fi), and the fan and sensor cables.
- Optional memory card: microSD up to 32 GB (FAT32) in the slot on the back, with the power off.

## Power


- Plug in the power supplies that came with your controller. On some fan systems your installer powers it through the fan cable instead.
- The screen turns on by itself within a few seconds.
- If the power goes out, everything comes back on its own at the same settings.

**Your installer usually does steps 1 to 3. If yours did, skip to step 4: create your account.**

STEP 2

# Connect your equipment

1. Run fans and sensors in one line each: controller, first unit, next unit. No branches.
2. Put the end plug in the last sensor's OUT jack.
3. On each fan's control card, choose network mode and a different address: 1, 2, 3…
4. Never plug the fan or sensor cable into a computer, phone or network switch.

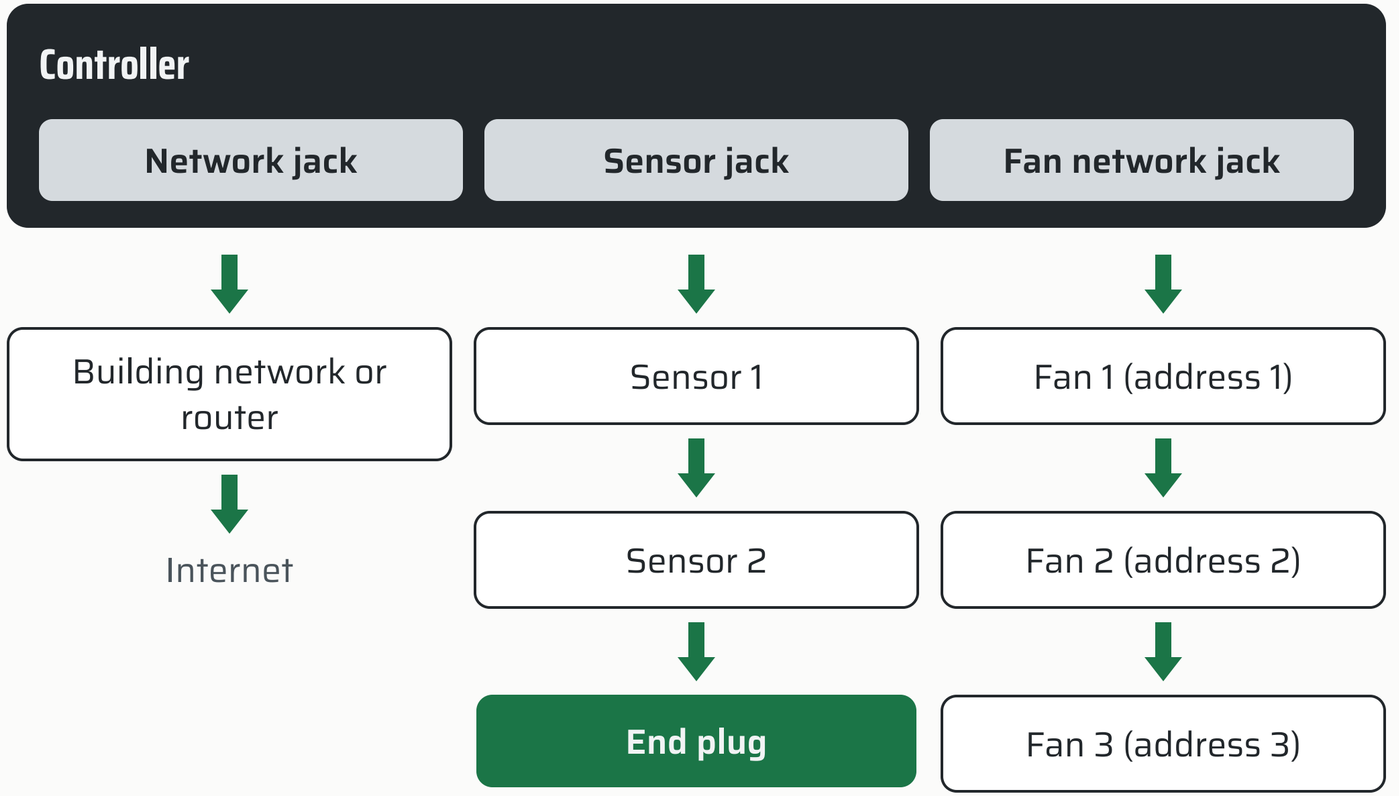

STEP 3

# Get it online


## Ethernet (best)

Plug the network jack into a network port with internet. Nothing to set up.

## Or Wi-Fi, from the screen

1. Tap **Setup** at the top.
2. Tap **Wi-Fi networks**.
3. Tap your network and type its password.

**Online? The top corner says Ready to pair.**

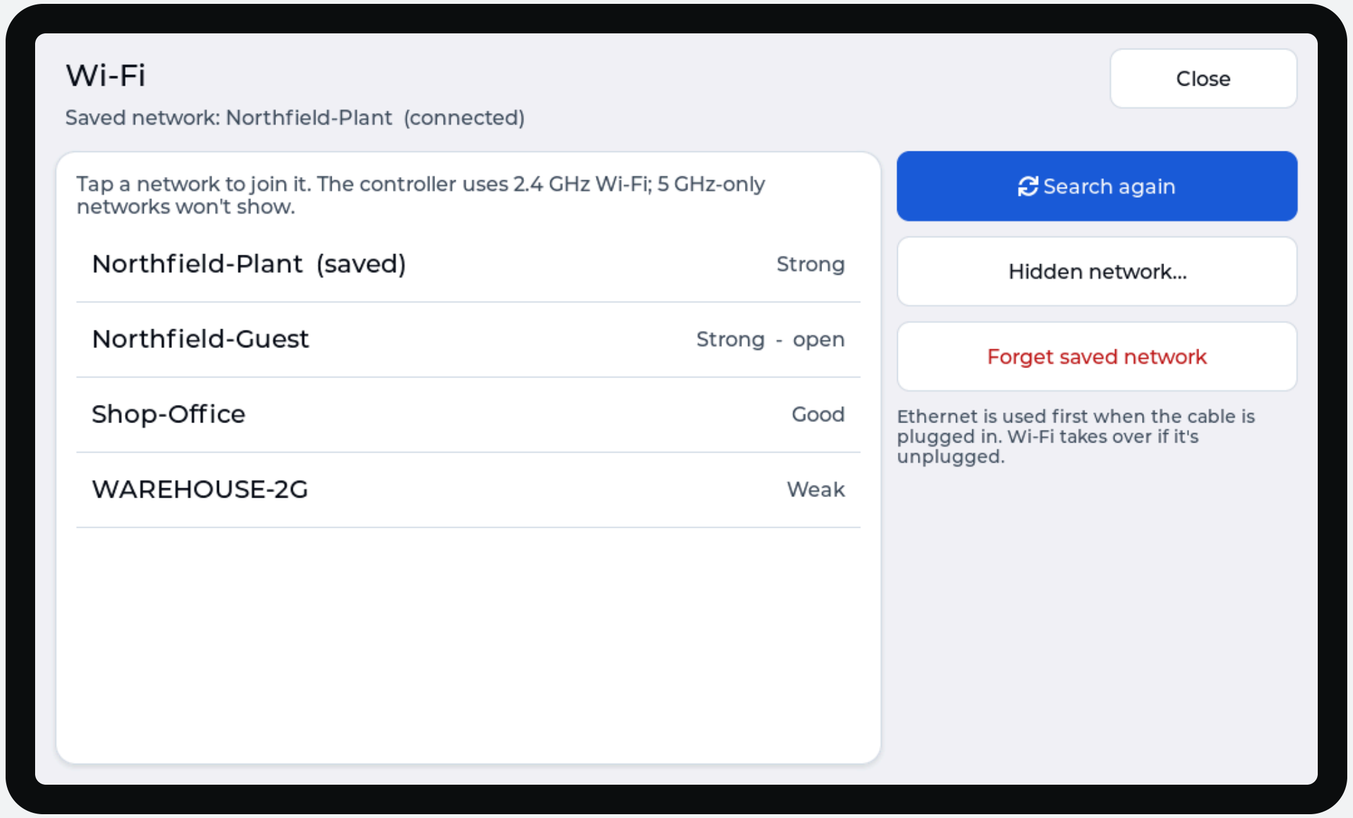


STEP 4

# Create your account


1. On any computer or phone, go to **collbusinesssolutions.com/cleanroom.html** and click **Sign in**.
2. Click **Create an account**.
3. Enter your company name, your name, your email and a password.

**You're the owner of the account. You add the rooms and invite your team.**

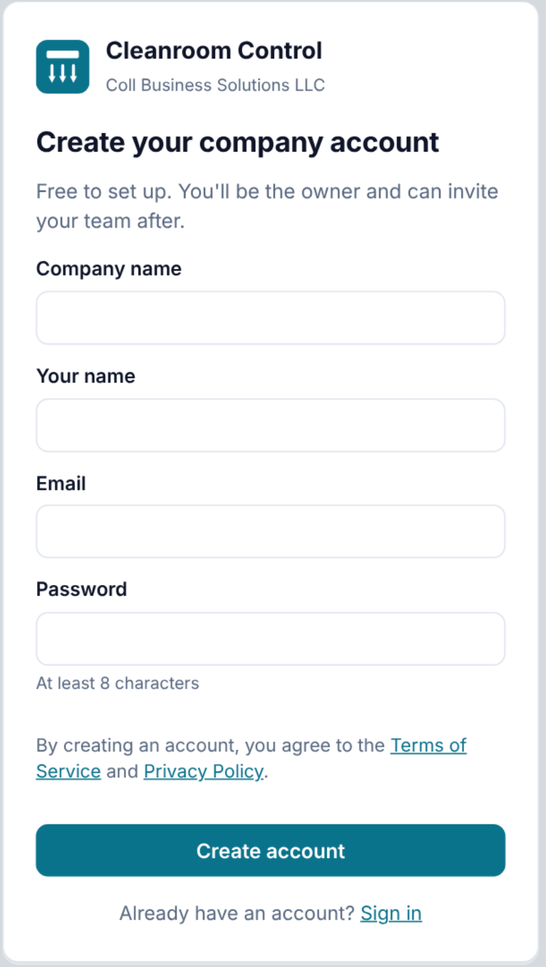


STEP 5

# Pair the controller to your account

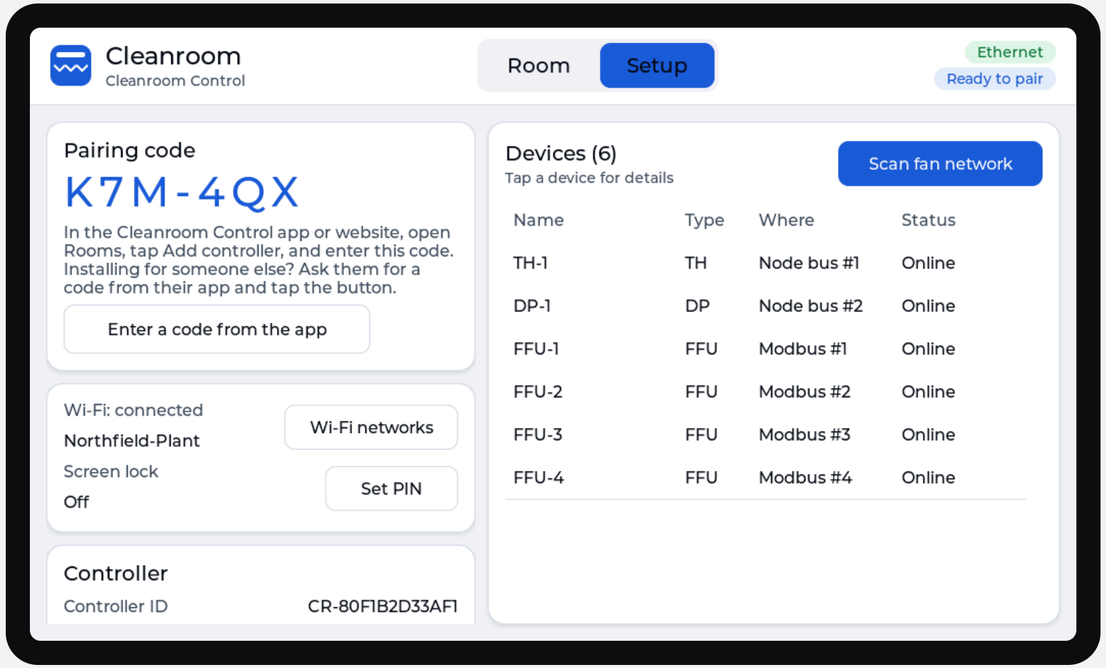


**On the controller:** tap **Setup**. The pairing code shows in large letters.

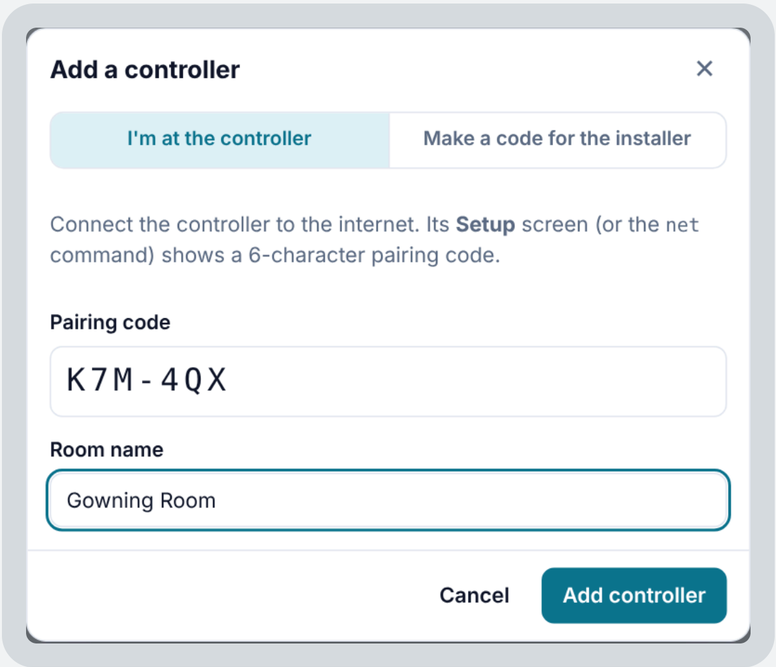



**In the app:** Rooms, **+ Add controller**. Type the code and a room name.

STEP 5, DONE

# Your equipment finds itself

Every fan and sensor gets a number, with no programming: **FFU-1** fans, **TH-1** temperature and humidity, **DP-1** room pressure, **PC-1** particles.

- A fan missing? Tap **Scan fan network**.
- Which one is it? Tap a sensor, then **Blink its light**.
- Give any device a name in the app, from its ⋯ menu.

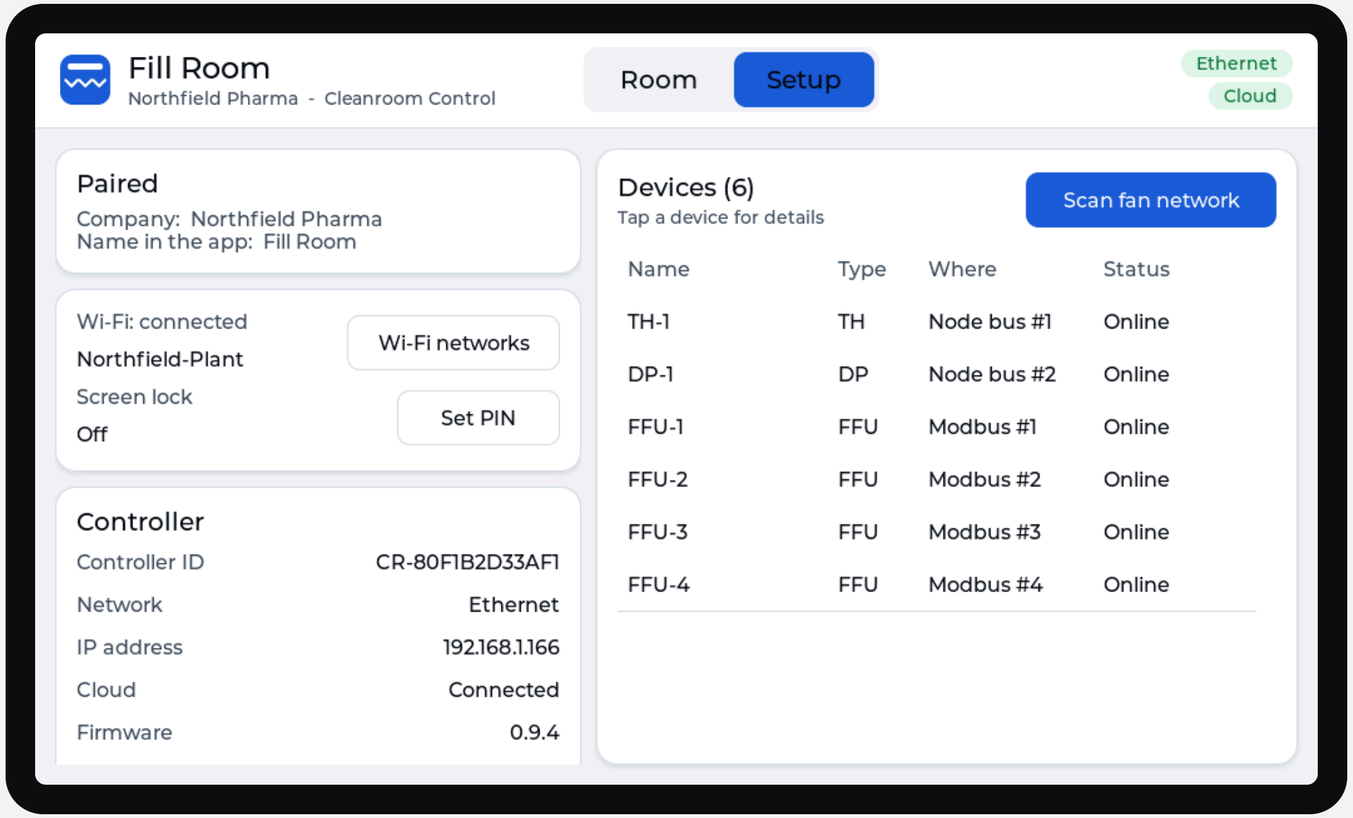


STEP 6 · OPTIONAL

# Name the areas in the room


One controller can run several spaces. Name them so readings and alarms say exactly where.

1. Open the room and click **Areas**.
2. Add each space: **Fill line**, **Gowning**, **Airlock**…
3. Pick the area for each device, then **Save areas**.

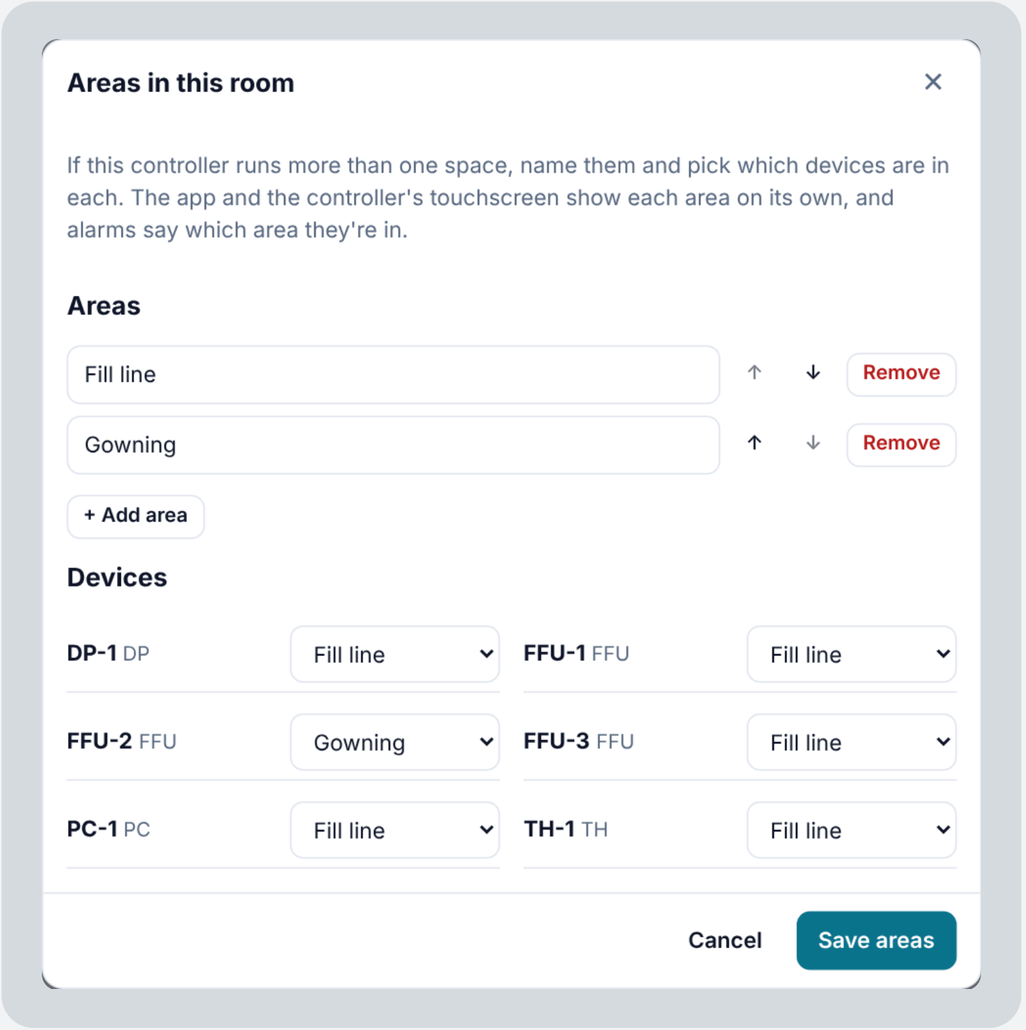

STEP 6

# Set your alarm limits

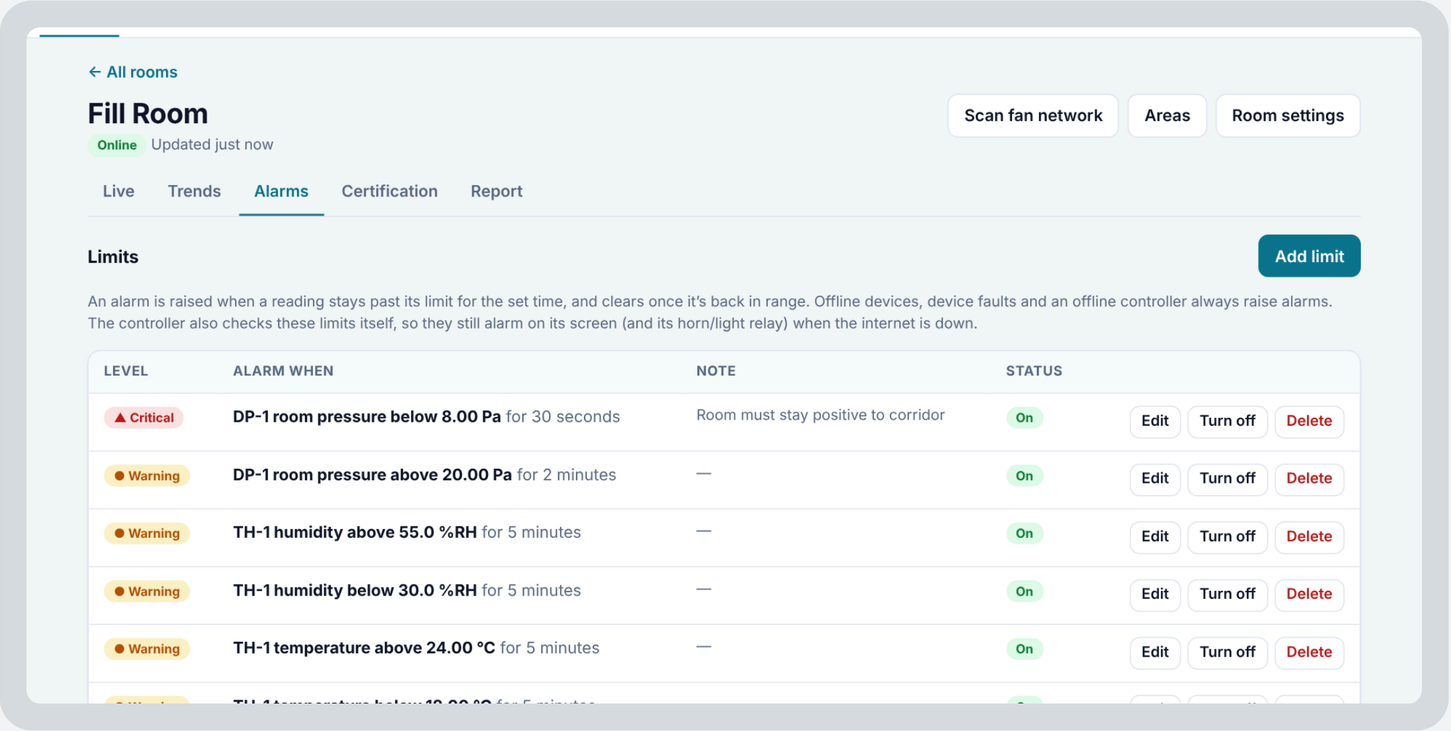



1. Open the room, then the **Alarms** tab.
2. Click **Add limit**: the reading, the limit, and how long before it alarms.
3. Get the emails: **Account**, then **Alarm emails**.
4. Nobody answering? **Account**, then **Alarm escalation** tells more people if an alarm isn't acknowledged in time.

**Offline equipment raises an alarm on its own.**

STEP 6

# Invite your team

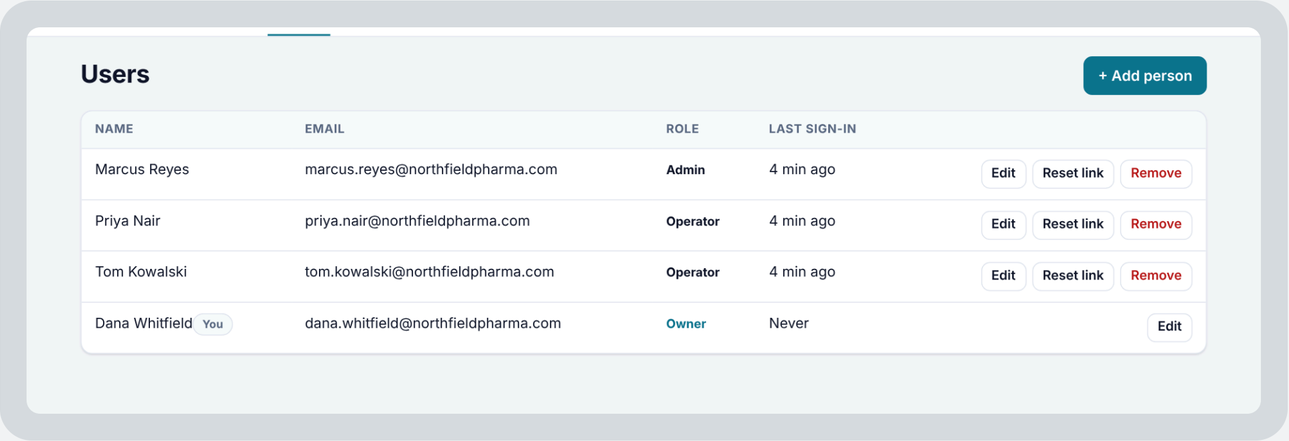



1. Open **Users** and click **+ Add person**.
2. Enter their name and email, and pick a role.
3. Give them the temporary password. They change it on their Account page.
4. Owners: to make everyone sign in with a code from their phone too, go to **Account** and tick **Require two-factor sign-in**.

| Role | Can |
|---|---|
| Owner | Everything, including other owners |
| Admin | Add rooms, manage users, run the rooms |
| Operator | Run the fans and the room |
| Viewer | Look only |

EVERY DAY

# Your room, from anywhere

- **Any computer or phone.** Sign in at collbusinesssolutions.com/cleanroom.html.
- **Change it, not just watch it.** Fan speeds, pressure target, schedules and limits.
- **Nothing to set up on your network.** No VPN, no router settings.
- **Keeps working offline.** The wall screen runs the room and checks limits on its own.
- **Maintenance tab.** Sensor calibration and service reminders, and a record of each one done.

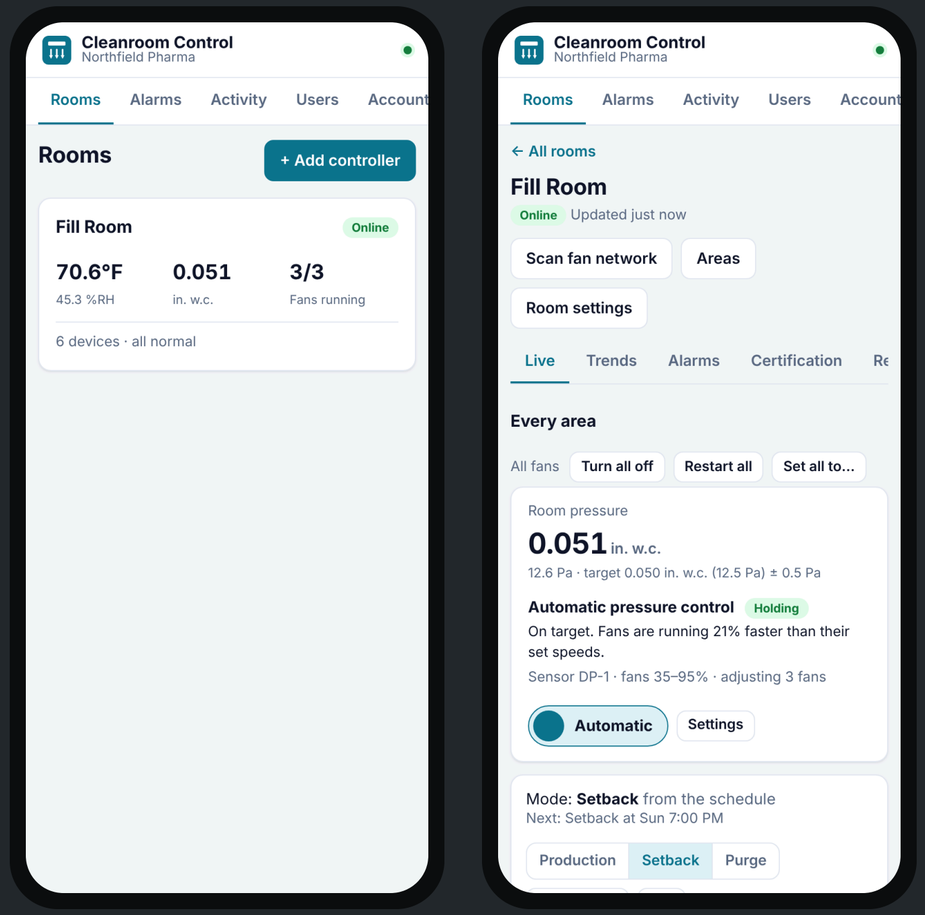



HELP WHEN YOU NEED IT

# Add your Service Provider

Your installer or service company can look after your rooms. Add them on the **Account** page.

- **Have one?** Enter the support code they gave you.
- **Need one?** Click **Find a Service Provider** and call one.
- **Need help?** Click **Request help**. They can open your rooms for 24 hours, then access closes by itself.

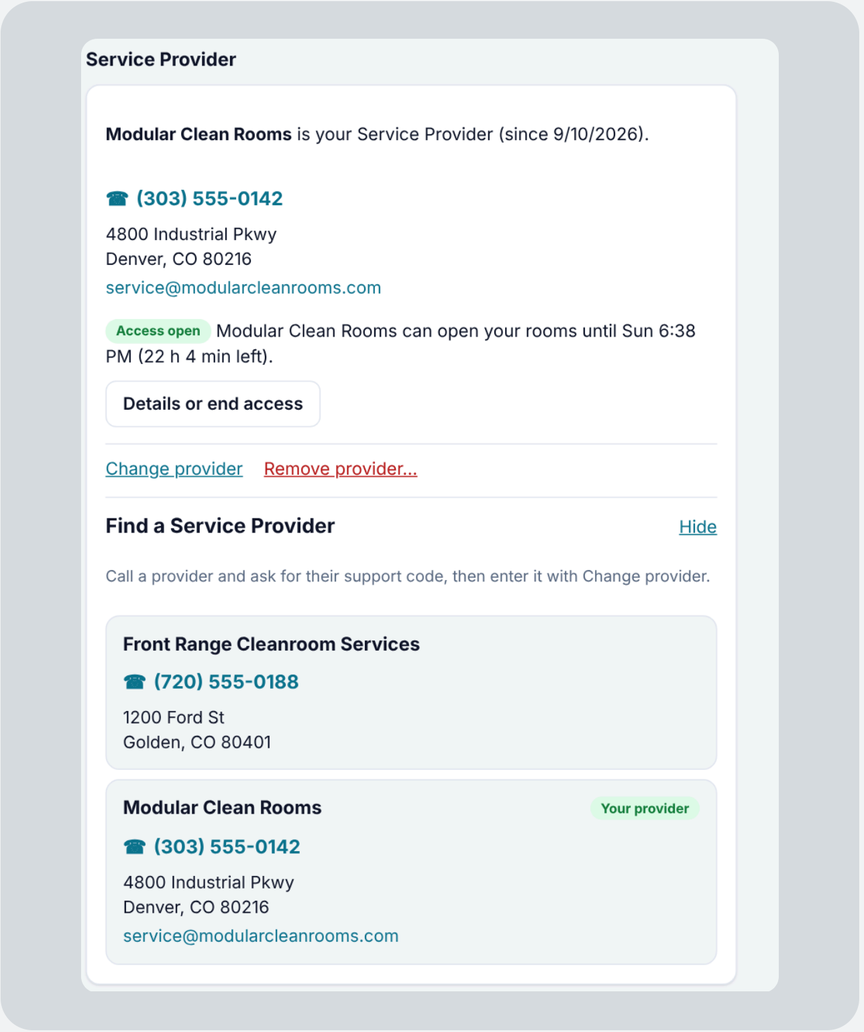

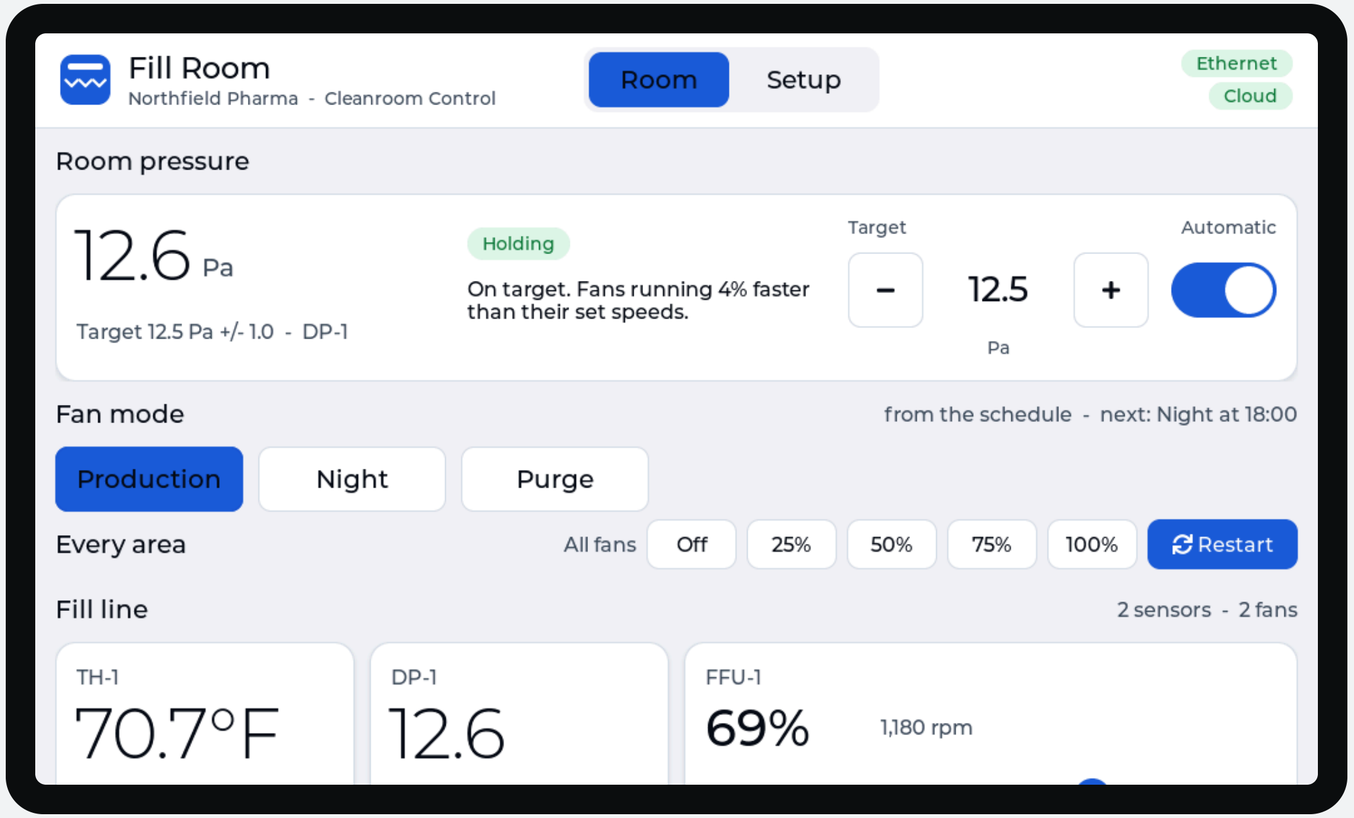


ON THE WALL

# Running the room

- **Room pressure:** set the target with – and +. Automatic adjusts the fans to hold it.
- **Fan mode:** your modes, like Production, Night and Purge, switch on a weekly schedule.
- **All fans:** off, one speed for all, or **Restart** at their old speeds.

**Idle for 2 minutes? It shows a clock. The first tap only wakes it.**

IF SOMETHING'S NOT RIGHT

# Quick fixes

| If… | Try this |
|---|---|
| Screen never says Ready to pair | Check the network cable, or Setup, then Wi-Fi networks. |
| A fan doesn't show up | Check its cable and address, then tap Scan fan network. |
| A device says Offline | Check its cable. It keeps its number and name. |
| The app won't take the code | Type the 6 characters exactly as the Setup screen shows. |
| Forgot your password | Click Forgot password? on the sign-in page. |
| Lost your phone (two-factor) | Sign in with a backup code, or ask your owner to reset it. |
| The controller has failed | Card into the new one, Setup, Restore. App: Replace controller. |

Still stuck? Ask your Service Provider, or email **collbusinesssolutions@gmail.com**