

Switch & harness


1) The product is composed of the switch and harness, the switch shape is the completely same as it of the ISUZU vehicle and is installed into the switch hole of the instrument panel and so on. The switch type is push-lock.

Appearance of the whole product

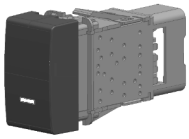

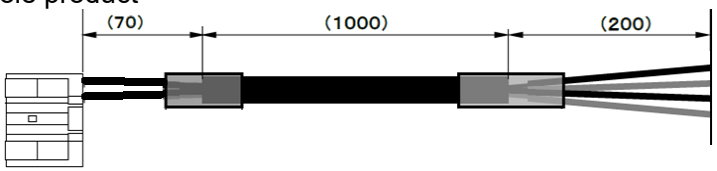

Circuit

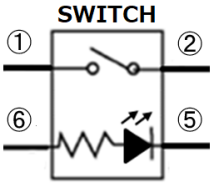

Terminal Arrangement from the view of the mating face

The connector of the switch
10 ways male connector

4	3			2	1
–	–	8	7	6	5

The connector of the harness
10 ways female connector


1	2			–	–
5	6	–	–	–	–

Electrical Connection Description


The connector of the switch

Terminal Number	Circuit OFF	Circuit ON	Signal Name		The connector of the harness: Terminal Number	Wire Specification: Color	Wire Specification: Type/Size	Connection destination
1		○	SWITCH (+)	⇔	1	RED	CAVS0.5	Relay or Load
2		○	SWITCH (–)	⇔	2	WHITE	CAVS0.5	GND
3			–		–	–	–	–
4			–		–	–	–	–
5			INDICATOR (–)	⇔	5	BLACK	CAVS0.5	GND
6			INDICATOR (+)	⇔	6	GREEN	CAVS0.5	Power via the relay
7			–		–	–	–	–
8			–		–	–	–	–
–			–		–	–	–	–
–			–		–	–	–	–

Cab type: Semi Wide

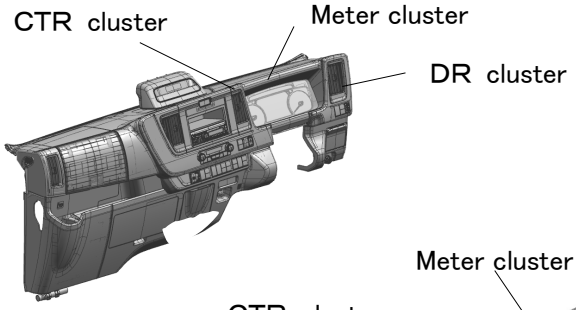


Cab type: Wide

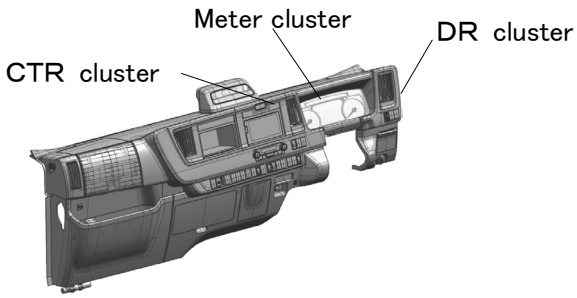

Note



1. Refer to Body builder's Guide <16-5-2> for Meter cluster removal and installation.
2. Diagram is for reference only. Equipment and switches may vary by vehicle.

2） Sample circuit diagram


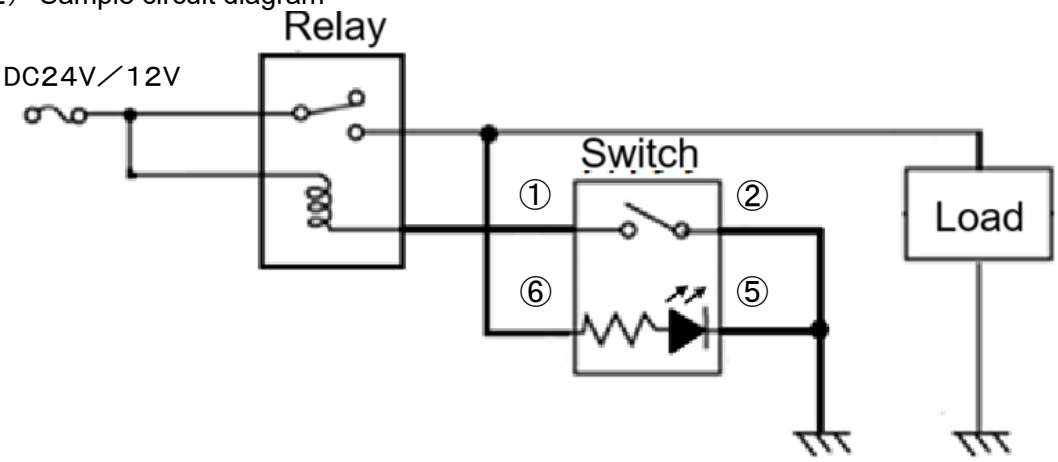


3） Switch & harness, Relay and Relay Harness setting

For 24V

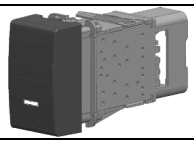Switch	Part Name	Part Number (IAS made)	Operating conditions
	SWITCH&HARN;PUSH,24V	1867240510	Operating Voltage：DC24V±4V Rated current：up to 0.5A
Relay Shape	Part Name	Part Number (ISZ made)	Operating conditions
	Relay Relay Harness	8972629330 1826254050	Motor Load Up to 10A Resistor Load Up to 10A Lamp Load Up to 150W

For 12V

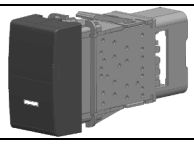Switch	Part Name	Part Number (IAS made)	Operating conditions
	SWITCH&HARN;PUSH,12V	5867141220	Operating Voltage：DC24V±4V Rated current：up to 0.5A
Relay Shape	Part Name	Part Number (ISZ made)	Operating conditions
	Relay Relay Harness	8972109721 1826254050	Motor Load Up to 10A Resistor Load Up to 10A

Caution:

- In order to avoid the overload of the switch, be sure to connect the electrical load to the switch via the relay. It’s not allowed that the large current over the rating directly flows into the switch.
- In order to interlocking the indicator LED lighting and the switch operation, for instance, it needs to operate the indicator LED by using something like the sample circuit diagram.
- The switch can be set into the reserved switch hole of the instrument panel and so on after dislodging the hole cover. Please check the reserved switch hole on the vehicle you own beforehand.
- If required, put the seal or the tape with the functional name/pictogram on the knob of the switch, except from on the indicator lens of the knob and around that.