

GRANT SECURITY SYSTEM MODEL 2001

INSTALLATION/OPERATION INSTRUCTIONS

UNIT IDENTIFICATION NO.

022 002537 R4


LOCATED ON BOTTOM OF BASE UNIT

NOTES


1. Before starting installation, read through all the cautions, notes, definitions and supplements, including those of the installation kit, steering wheel and this "Security System." Due to the variety of vehicles and type of Grant wheel being used, it is necessary to go from one instruction sheet to another. By reading through the literature first, you can become more familiar with the steps and terminology.
2. **IMPORTANT** Enclosed you will find an owner registration/service reply form. Please take the time to fill out and return it to us in the self-addressed envelope provided. Since this is a security item, **we must have this form on file should you ever need replacement keys or parts. The unit identification number contains the key code for your specific unit.**

DEFINITIONS

- **Grant Classic and Challenger Steering Wheels** are the traditional Grant line including wood, vinyl, and foam rims with the standard three (3) hole mounting pattern and 3" diameter metal horn button.

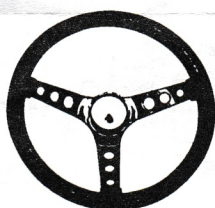

CLASSICTYPE

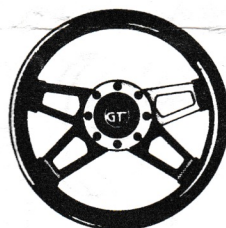

CHALLENGER TYPE



SIGNATURE TYPE

- **Grant Signature Steering Wheels** are of the European design, having wood, stitched vinyl, or leather rims and five (5) bolt mounting adapter collar and plastic horn button.
- **Installation Kit** — This is the Grant Kit specifically designed to adapt the Grant Anti-theft device and Grant Steering Wheel to your vehicle. Each kit includes: an adapter hub, column (post) cover, horn connections, turn signal canceling provision and necessary hardware.

CAUTIONS

- This unit must be installed only in conjunction with a Grant Installation Kit specifically designed for your vehicle and the Grant Steering Wheel of your choice: **Classic, Challenger or Signature.**
- Always have key in unlocked position before attempting to release the anti-theft unit.
- When Steering Wheel is removed from column, *we do not recommend leaving wheel in view inside the car.* A would-be thief may just decide to steal your wheel out of spite. *We do recommend that you (1) slide wheel under your seat; (2) lock it in the trunk; or (3) take it with you.*
- Always lock unit and remove key after installing the Steering Wheel or lock-out cap. (The key can only be removed in the locked position and will not lock unless the mechanism is fully engaged.)
- **IMPORTANT** This Security Device has been partially assembled at the factory prior to shipping. To install, it is necessary to remove some hardware and partially disassemble the unit as instructed. **Do not remove any hardware or parts unless indicated to do so in this instruction sheet.**