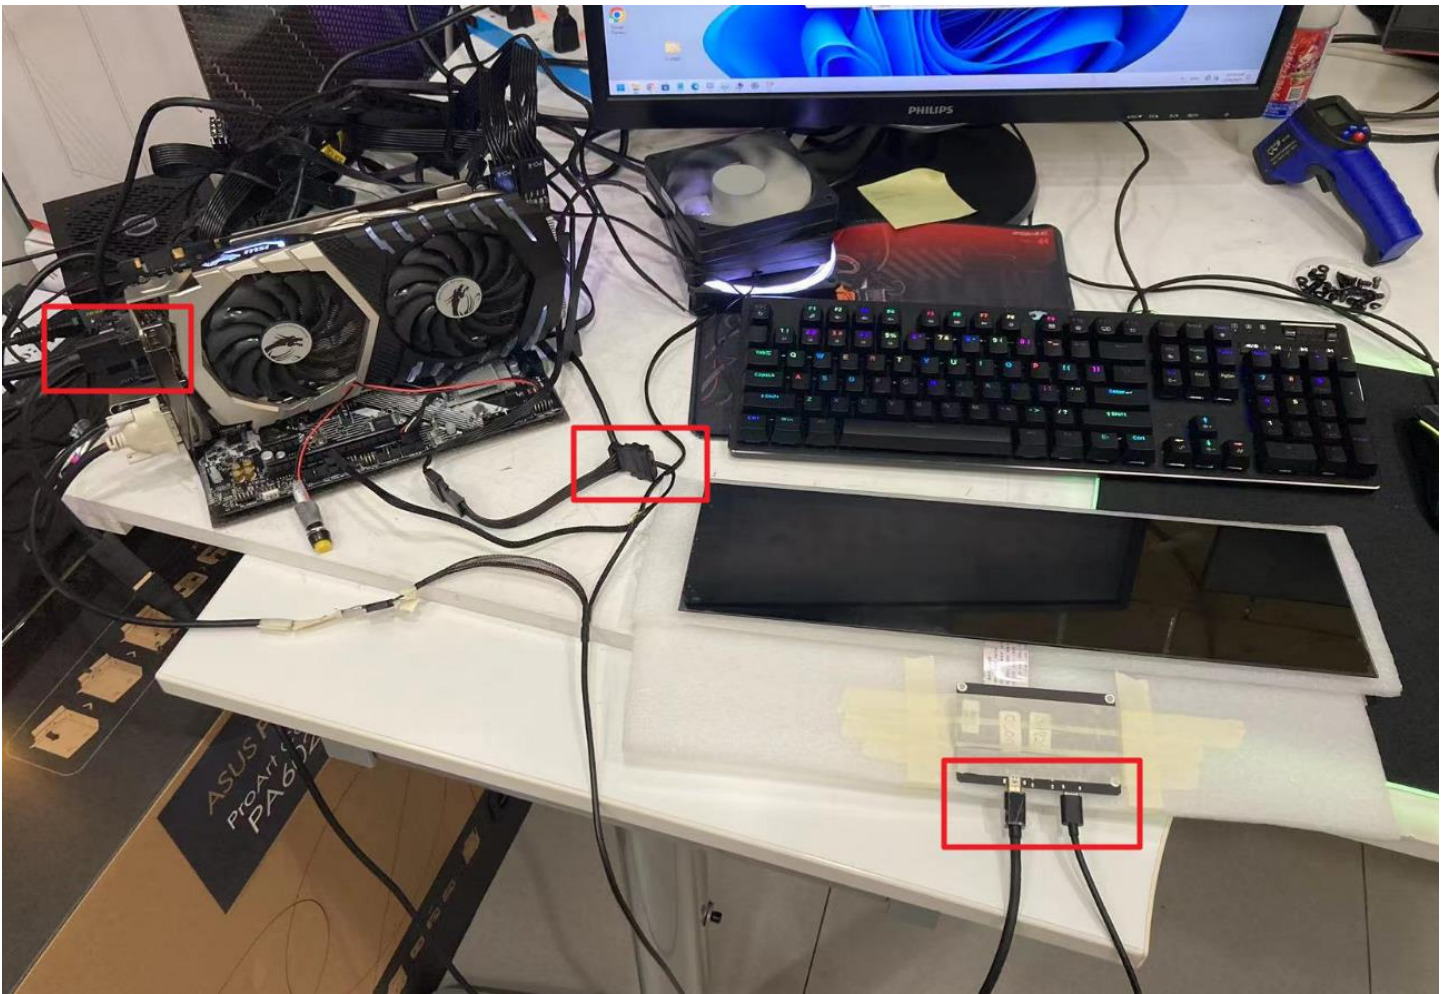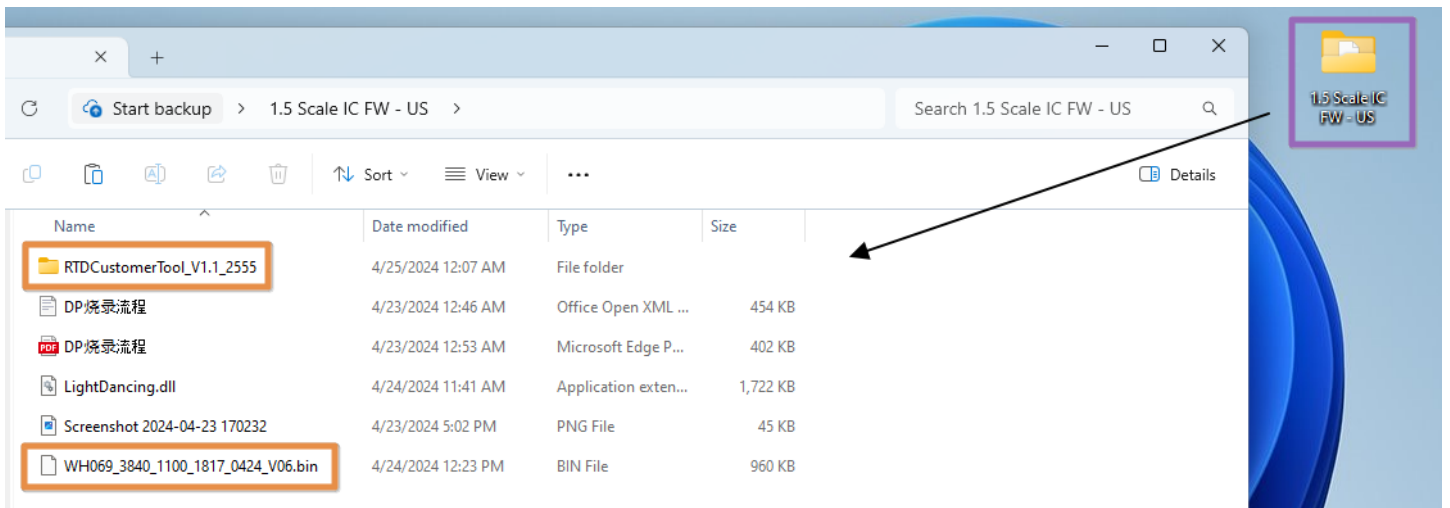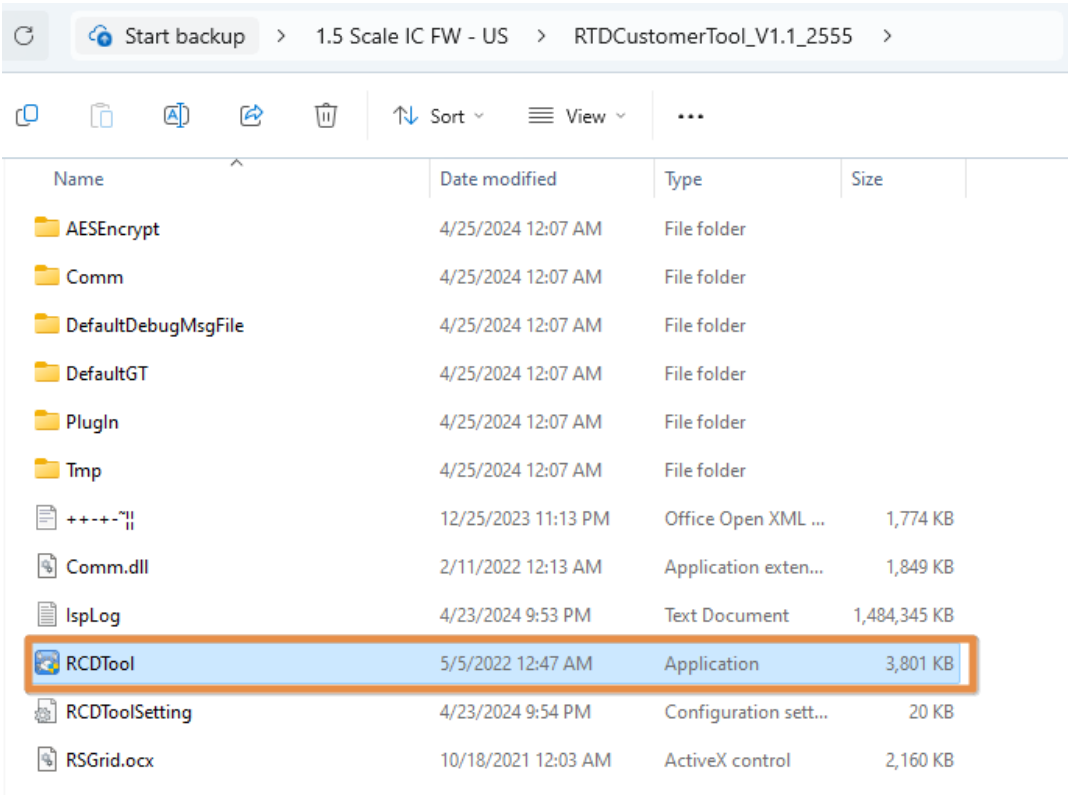Step 1. Stanly version screen, "Type-C" and "DP" need to be connected properly
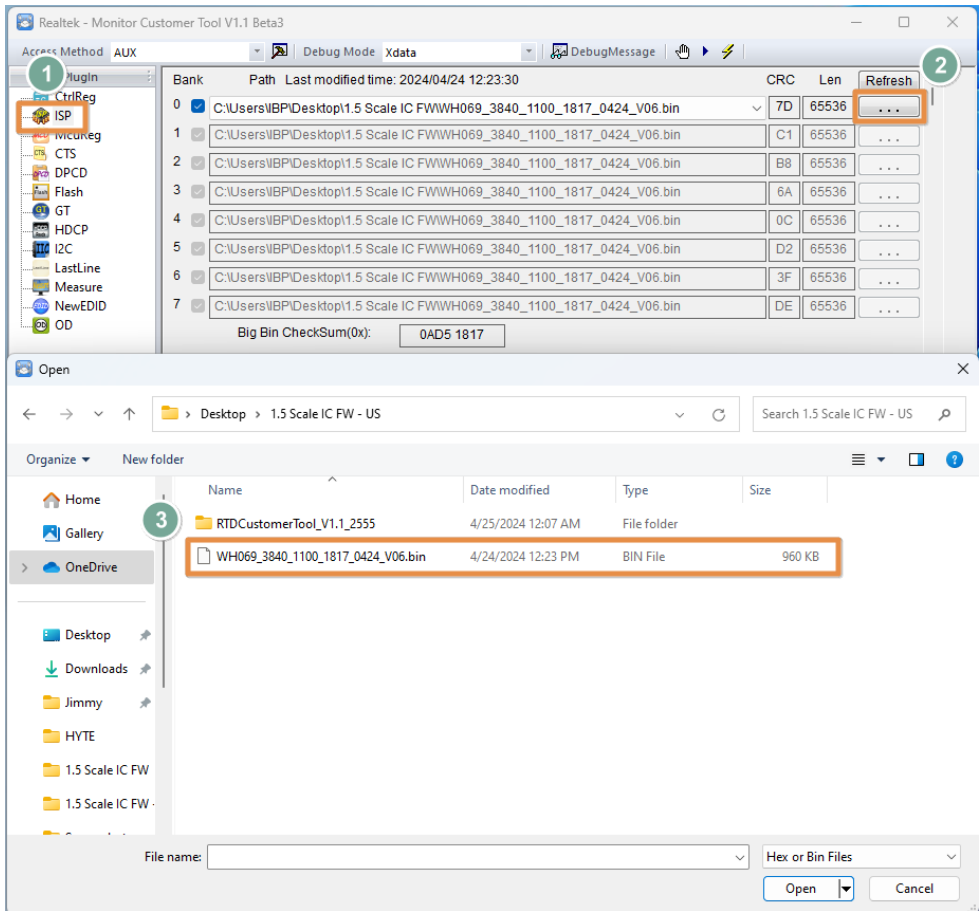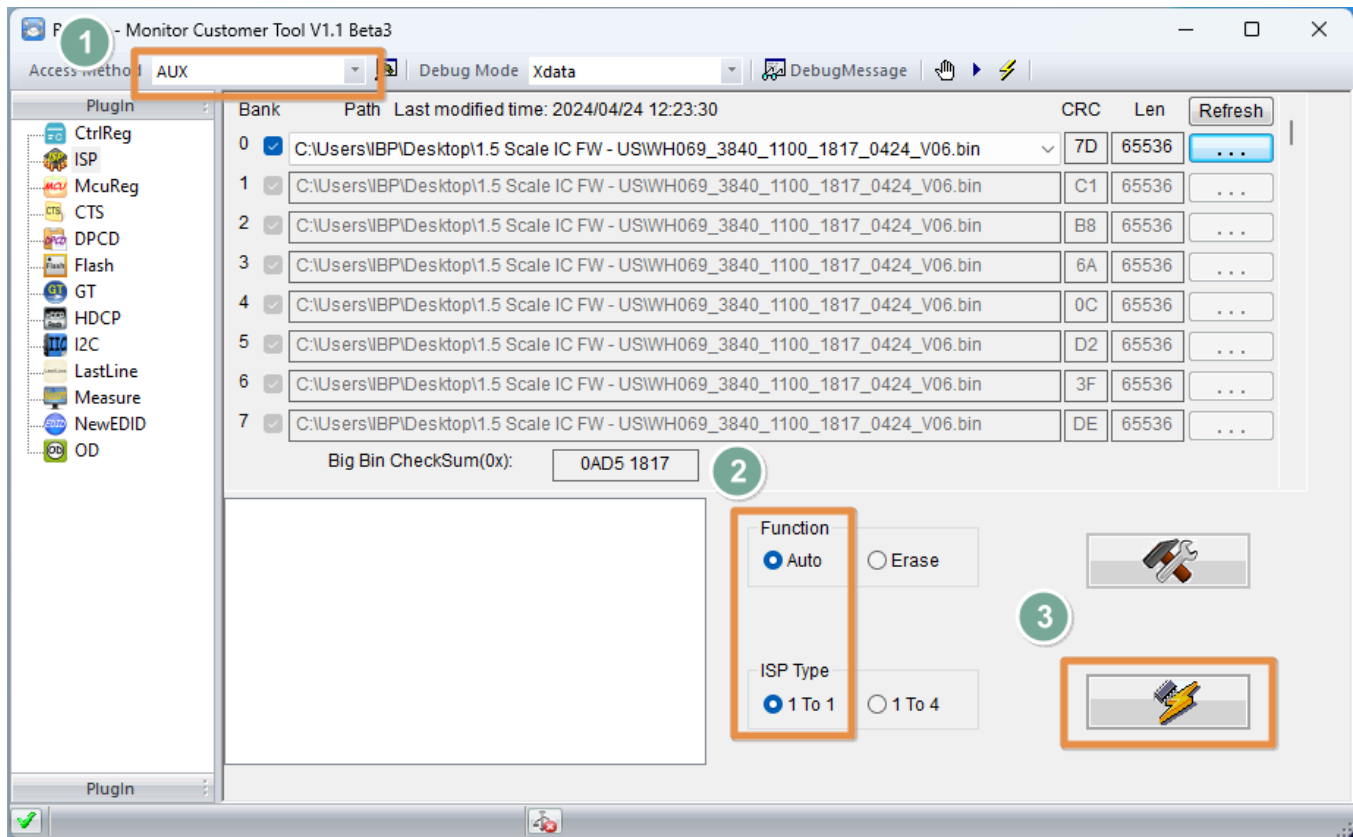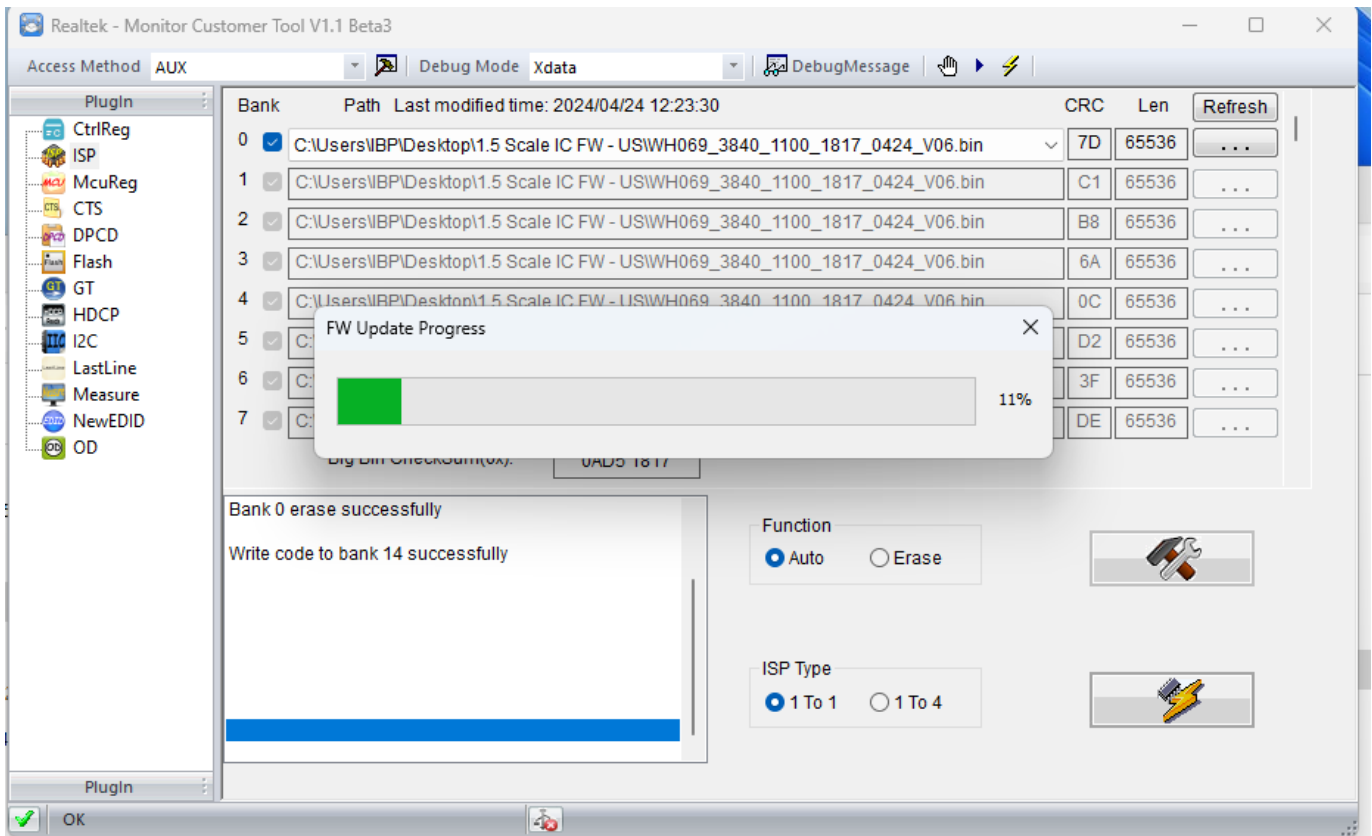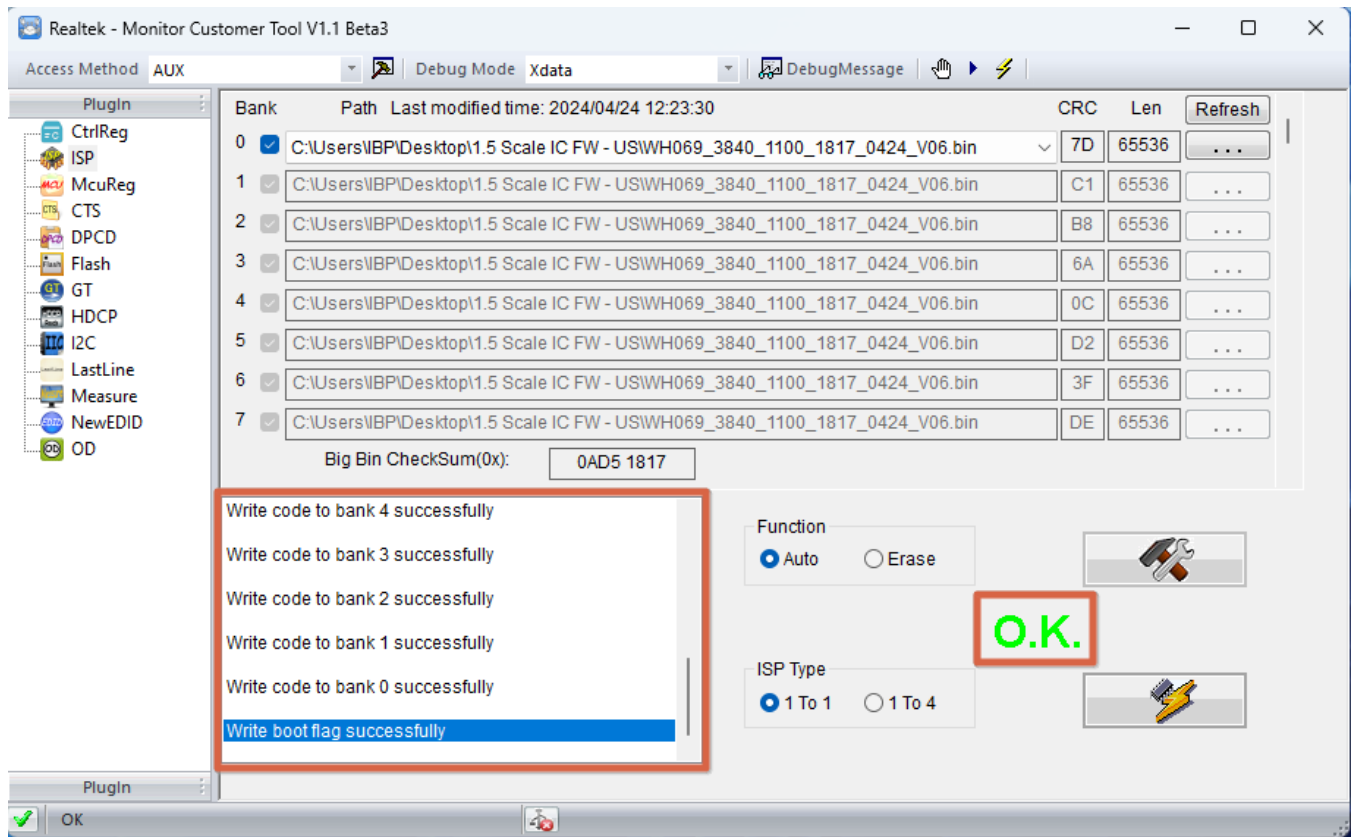

Step 2.

Step 3.

Step 4.

Step 5.

Step 6.

Step 7.

Step 8. If it shows that the programming is successful, please unplug the Type-C and plug it in again.

(有顯示燒錄成功，請將 Type-C 拔掉，再重插上電。)