


Servo motor Connections :-

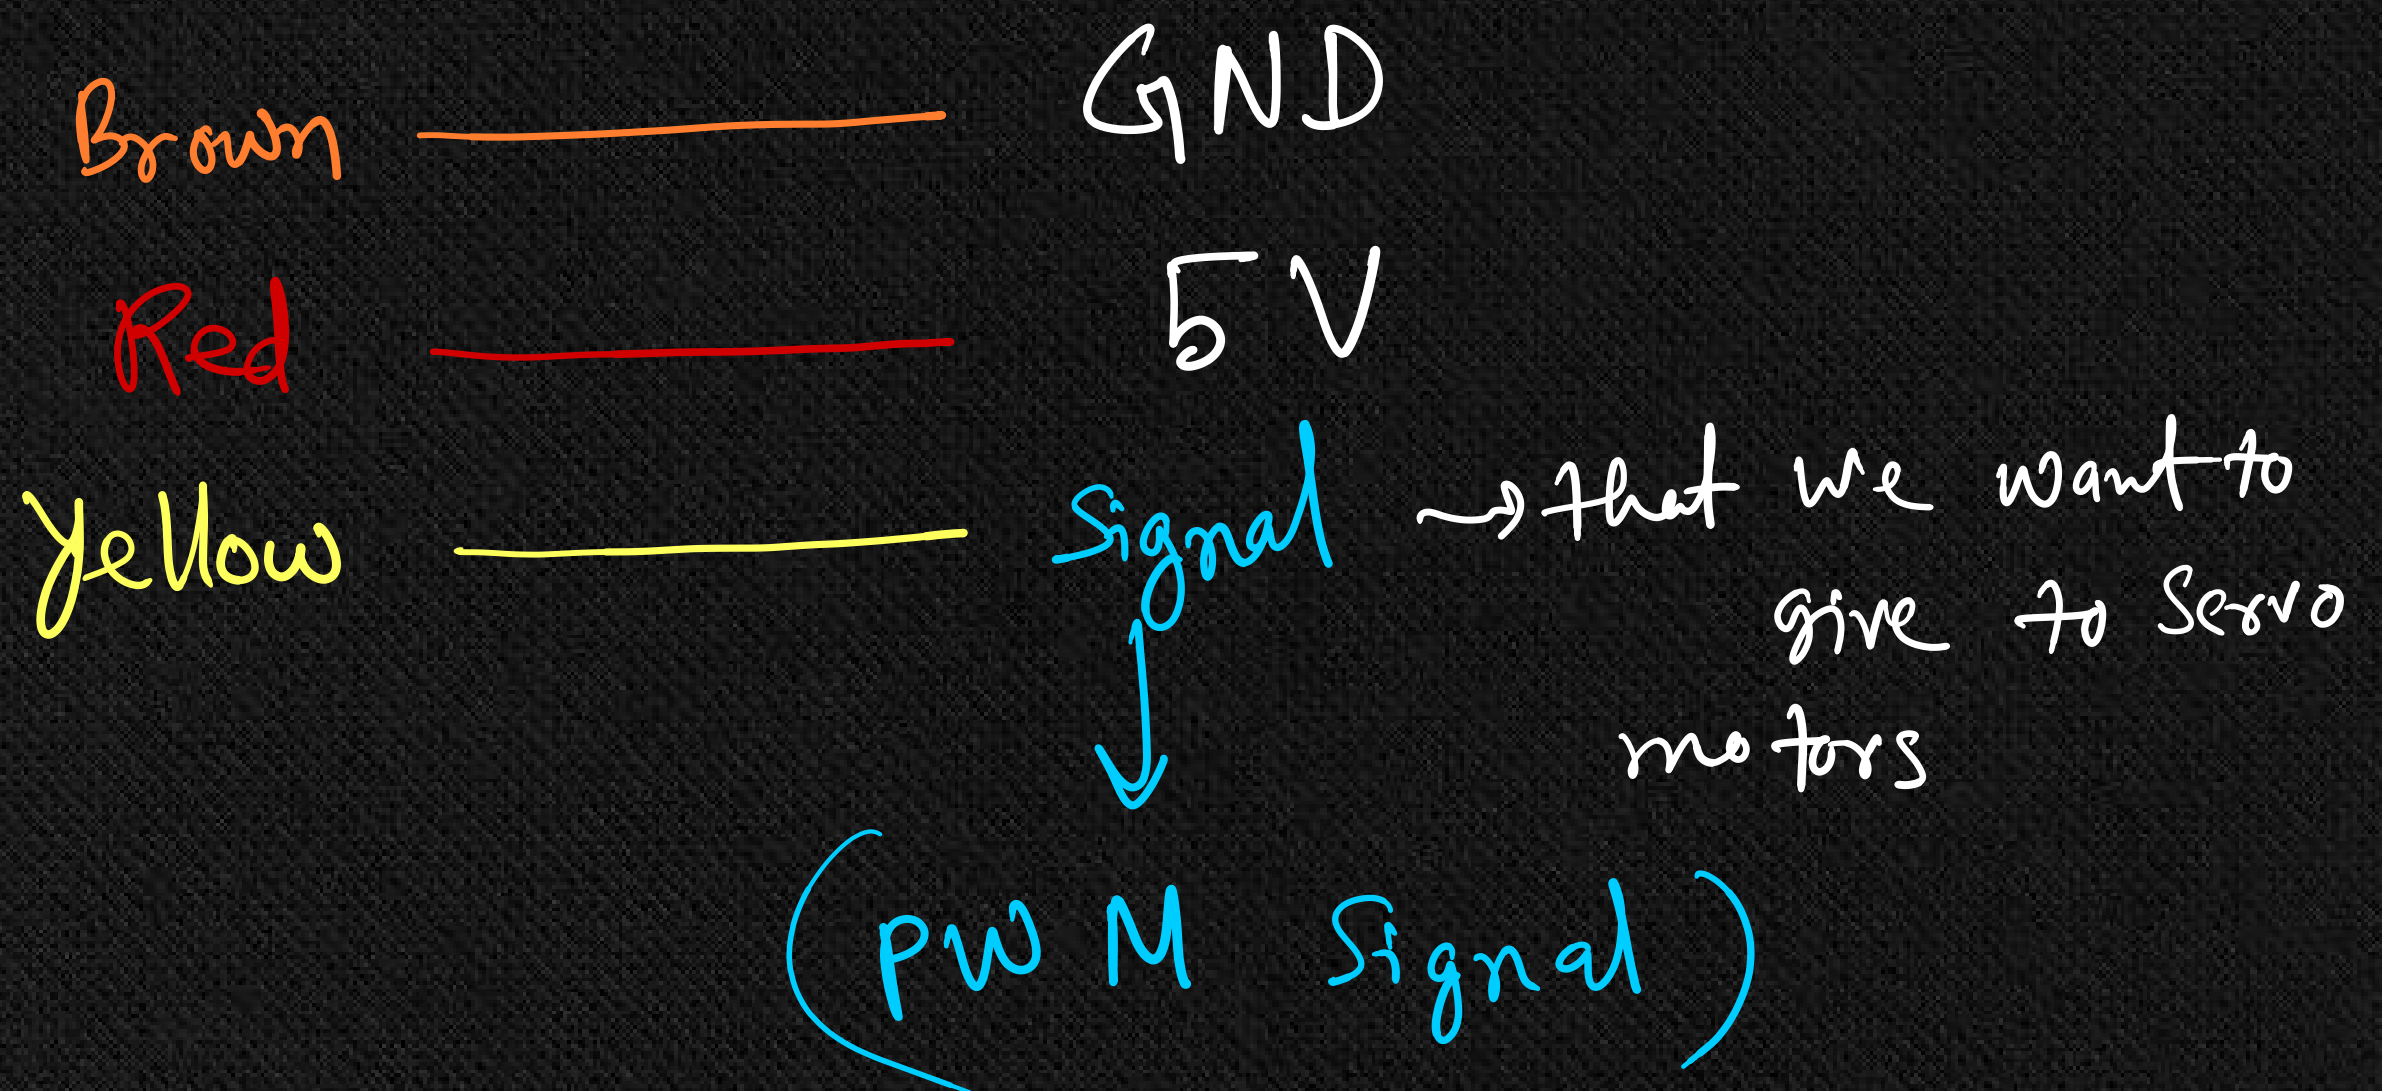

Code ——— ↓

```
#include <servo.h>
```

```
Servo myservo; //create servo object to control a Servo
```

```
int potpin = A0; // analog pin used to connect the potentiometer/signal  
int val; // variable to read the value from analog pin
```

```
void setup() {  
  myservo.attach(9); // attaches the servo on pin 9 to the servo object
```

```
void loop() {  
  val = analogRead(potpin); // Reads the value of the potentiometer (0-1023) value  
  val = map(val, 0, 1023, 0, 180);  
  myservo.write(val);  
  delay(15);  
}
```

Scale it for use with the Servo (value between 0 and 180)
Sets the servo position according to the scale value
waits for the servo motor to get here

min value
max value

How to Know, Serial.println(val);
find max and min