## SERVICE INSTRUCTIONS

The TATA HARRIER EV has been manufactured to give you economical and trouble free performance. To achieve this, please follow the instructions as stated.

Your vehicle is entitled to three free services (labour only). The free service coupons are attached to the sales invoice. Please present these coupons to the servicing dealer while availing free services.

**1st free service** - At 1000-2000 kms. OR 2 months, whichever is earlier.

**2nd free service** - At 7000-8000 kms. OR 6 months, whichever is earlier.

**3rd free service** - At 14500-15500 kms. OR 12 months, whichever is earlier.

All services other than free services are chargeable.

Servicing of the vehicle can be done at any TATA MOTORS EV Authorised Dealer Workshop or TATA MOTORS EV Authorised Service Centre (TASC).

Warranty claims can be settled by any TATA MOTORS EV Authorised Dealer Workshop or TATA MOTORS EV Authorised Service Centre (TASC).

## SERVICE SCHEDULE

| Periodic Maintenance Schedule | | Free Service | | | Paid Service | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Service Intervals In Km (kilometer) or Months Whichever Comes Earlier | Kms | 1500 | 7500 | 15000 | 22500 | 30000 | 37500 | 45000 | 52500 | 60000 | 67500 | 75000 | 82500 | 90000 | 97500 | 105000 | 112500 | 120000 | 127500 | 135000 | 142500 | 150000 |
| | Months | 2 | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 |
| I: Inspect ( Check, Clean, Correct, Top Up, Adjust, Repair, Replace As Necessary) T: Tightening Torque R: Replace | | | | | | | | | | | | | | | | | | | | | | |
| S N | GENERAL | | | | | | | | | | | | | | | | | | | | | |
| 1 | Wash the vehicle & Clean Condenser Fins | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 2 | Check & Top up Fluids (If required): Transaxle Oil, Coolant, Brake Fluid, Battery Electrolyte, Wind Screen washer fluid | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 3 | Check HV Battery box under the vehicle for cracks/leakages | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 5 | Check all the HV cables for looseness, cuts, wear & tear | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 6 | Clean Charging socket area. Also clean dust around hinge area of Charging Port Housing lid. | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 10 | Replace HV Battery breather plug. | | | | | R | | | | R | | | | R | | | | R | | | | R |

| Periodic Maintenance Schedule | | Free Service | | | Paid Service | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Service Intervals In Km (kilometer) or Months Whichever Comes Earlier | Kms | 1500 | 7500 | 15000 | 22500 | 30000 | 37500 | 45000 | 52500 | 60000 | 67500 | 75000 | 82500 | 90000 | 97500 | 105000 | 112500 | 120000 | 127500 | 135000 | 142500 | 150000 |
| | Months | 2 | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 |
| **I: Inspect ( Check, Clean, Correct, Top Up, Adjust, Repair, Replace As Necessary) T: Tightening Torque R: Replace** | | | | | | | | | | | | | | | | | | | | | | |
| 7 | Inspect Battery cooling system (BCS) and Traction cooling system (TCS) | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 8 | Coolant - Battery cooling system (BCS) and Traction cooling system (TCS) | Replace Every 60,000 km/ 36 Months whichever comes earlier | | | | | | | | | | | | | | | | | | | | |
| 9 | Using TDS diagnostic tool check and capture all DTC's. Clear all DTCs. | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 10 | Check all door latches & striker operations, apply grease if required. | | | I | | I | | I | | I | | I | | I | | I | | I | | I | | I |
| 11 | Check for tightening torque of bolt, nuts, stud and fasteners of cradle FEM frame, rear motor & RDW+AWD EDU mounts. | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T |
| 12 | Check for tightening of all bolts and nuts. For severe usage, above checks to be done at every 5000Km or after every severe usage event | | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T |

| Periodic Maintenance Schedule | | Free Service | | | Paid Service | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Service Intervals In Km (kilometer) or Months Whichever Comes Earlier | Kms | 1500 | 7500 | 15000 | 22500 | 30000 | 37500 | 45000 | 52500 | 60000 | 67500 | 75000 | 82500 | 90000 | 97500 | 105000 | 112500 | 120000 | 127500 | 135000 | 142500 | 150000 |
| | Months | 2 | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 |
| **I: Inspect ( Check, Clean, Correct, Top Up, Adjust, Repair, Replace As Necessary) T: Tightening Torque R: Replace** | | | | | | | | | | | | | | | | | | | | | | |
| 13 | Check condition of rubber bushes/parts of front & rear suspension in control arms/linkages, front and rear coil spring seats, front & rear bump stoppers, anti roll bar, stab links, subframe, rubber boots/dust cover/bellow in rack & pinion, steering and suspension ball joints, steering column. Replace if necessary. For severe usage, above checks to be done at every 5,000 km or after every severe usage event | | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | **BRAKES** | | | | | | | | | | | | | | | | | | | | | |
| 14 | Check front & rear brake pads. Replace if necessary. | | | I | | I | | I | | I | | I | | I | | I | | I | | I | | I |

| Periodic Maintenance Schedule | | Free Service | | | Paid Service | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Service Intervals In Km (kilometer) or Months Whichever Comes Earlier | Kms | 1500 | 7500 | 15000 | 22500 | 30000 | 37500 | 45000 | 52500 | 60000 | 67500 | 75000 | 82500 | 90000 | 97500 | 105000 | 112500 | 120000 | 127500 | 135000 | 142500 | 150000 |
| | Months | 2 | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 |
| **I: Inspect ( Check, Clean, Correct, Top Up, Adjust, Repair, Replace As Necessary) T: Tightening Torque R: Replace** | | | | | | | | | | | | | | | | | | | | | | |
| 15 | Replace brake fluid and check brake system components for leakages | Replace Every 45,000 km/ 24 Months whichever comes earlier | | | | | | | | | | | | | | | | | | | | |
| 16 | EPB operation | | I | I | | I | | I | | I | | I | | I | | I | | I | | I | | I |
| | **WHEELS & TYRES** | | | | | | | | | | | | | | | | | | | | | |
| 17 | Wheel alignment & balancing. For severe usage, above checks to be done at every 5000Km or after every severe usage event. | | | I | | I | | I | | I | | I | | I | | I | | I | | I | | I |
| 18 | Check Tyre pressure, condition & rotate. | | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | **TRANSAXLE** | | | | | | | | | | | | | | | | | | | | | |
| 19 | Front e-Drive Oil change interval (First at 7.5K / 6M). Rear e-Drive to be only visually inspected for oil leakage. | | R | | | R | | | | R | | | | R | | | | R | | | | R |

| Periodic Maintenance Schedule | | Free Service | | | Paid Service | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Service Intervals In Km (kilometer) or Months Whichever Comes Earlier | Kms | 1500 | 7500 | 15000 | 22500 | 30000 | 37500 | 45000 | 52500 | 60000 | 67500 | 75000 | 82500 | 90000 | 97500 | 105000 | 112500 | 120000 | 127500 | 135000 | 142500 | 150000 |
| | Months | 2 | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 |
| **I: Inspect ( Check, Clean, Correct, Top Up, Adjust, Repair, Replace As Necessary) T: Tightening Torque R: Replace** | | | | | | | | | | | | | | | | | | | | | | |
| | **ELECTRICAL** | | | | | | | | | | | | | | | | | | | | | |
| 20 | Check specific gravity of battery electrolyte for 12V Aux. battery | | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| 21 | Headlamp focusing | | | I | | I | | I | | I | | I | | I | | I | | I | | I | | I |
| | **A.C. SYSTEM** | | | | | | | | | | | | | | | | | | | | | |
| 22 | Inspect Air-conditioning / HVAC System for satisfactory performance | To be done at every service | | | | | | | | | | | | | | | | | | | | |
| 23 | Replace Pollen filter (if applicable) | | | R | | R | | R | | R | | R | | R | | R | | R | | R | | R |
| 24 | Replace Combi PM2.5 filter (if applicable) | | | R | | R | | R | | R | | R | | R | | R | | R | | R | | R |

| Periodic Maintenance Schedule | | Free Service | | | Paid Service | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Service Intervals In Km (kilometer) or Months Whichever Comes Earlier | Kms | 1500 | 7500 | 15000 | 22500 | 30000 | 37500 | 45000 | 52500 | 60000 | 67500 | 75000 | 82500 | 90000 | 97500 | 105000 | 112500 | 120000 | 127500 | 135000 | 142500 | 150000 |
| | Months | 2 | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 |
| **I: Inspect ( Check, Clean, Correct, Top Up, Adjust, Repair, Replace As Necessary) T: Tightening Torque R: Replace** | | | | | | | | | | | | | | | | | | | | | | |
| | **SUNROOF** | | | | | | | | | | | | | | | | | | | | | |
| 25 | Clean guide rails and drain holes | | | I | | I | | I | | I | | I | | I | | I | | I | | I | | I |
| | **EXTERIOR TRIM** | | | | | | | | | | | | | | | | | | | | | |
| 26 | Grease application on the hinge arm at the tappet area, charging port. | | | I | | I | | I | | I | | I | | I | | I | | I | | I | | I |

**Note:** 1. Beyond 150000 carry out the same services at the same intervals of 7500 kms respectively

2. Vehicle operating in Severe Driving Conditions, conditions are given as below

A: Repeatedly driving short distance of less than 7 km.

B: Extensive low speed driving for long distances.

C: Driving on rough, dusty, muddy, unpaved, graveled or salt-spread roads.

D: Frequently driving in heavy traffic area & in stop & go condition

E: Driving only on uphill, downhill, or mountain roads.

F: Vehicle towing, driving for petrol car, taxi, or other commercial use

G: Frequently driving under high speed & acceleration.

**NOTE**

- *In Free service, labor charges are free, any parts and consumables will be chargeable.*
- *Filters, Fluid, Consumables, Grease, Components, wheel alignment, Wheel Balancing and weights etc will be replaced on chargeable basis.*
- *Check the coolant level and top up as required, replace if it is contaminated /discolored or there is sludge formation.*
- *Periodic maintenance Schedule is for reference. TMPV reserves the rights to change the Periodic Maintenance Schedule.*
- *As the High Voltage (HV) battery is covered under a lifetime warranty** for the first owner, it is mandatory that the vehicle be serviced exclusively at Tata Motors EV Authorised service centers in accordance with the periodic maintenance schedule outlined in the table above, up to 150,000 Kms or 120 months, whichever occurs first. Subsequent to this period, the vehicle must continue to be serviced at intervals of every 7,500 Kms or six months, whichever occurs earlier.*

  ***Refer "High Voltage Battery Warranty: Terms and Conditions" section in owner's manual for details.*

## MOTOR COMPARTMENT

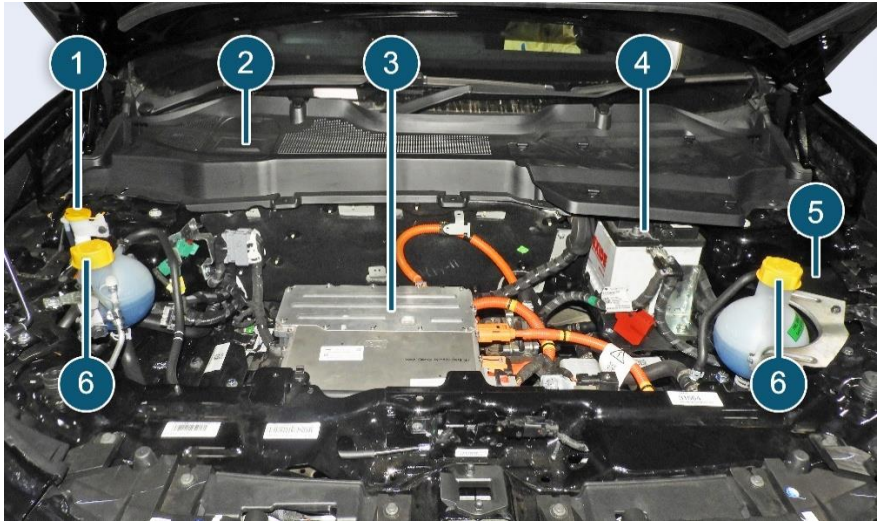


1. Windshield Washer Container
2. Brake Fluid Reservoir
3. High Voltage Components
4. Low Voltage Battery
5. Motor Compartment Fuse Box
6. Coolant Tank

Note: Above view is after opening the frunk cover.

## BRAKE FLUID LEVEL

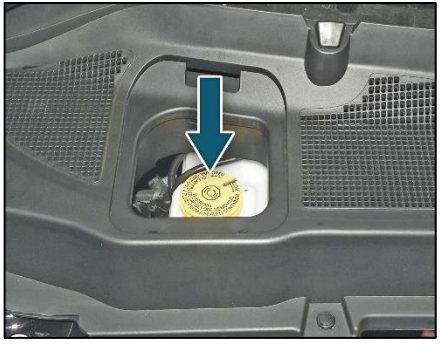

Examine if there is brake fluid in the tank. Fill it if necessary.

**NOTE**

- Do not allow brake fluid to make contact with the skin or eyes.
- Do not allow brake fluid to splash or spill on the paint surface as it will damage the paint. In case of spillage, wipe it off immediately.

***For more clarity about location of Brake Fluid Container and filling cap, please refer respective motor Compartment.***

## WINDSHIELD WASHER FLUID LEVEL

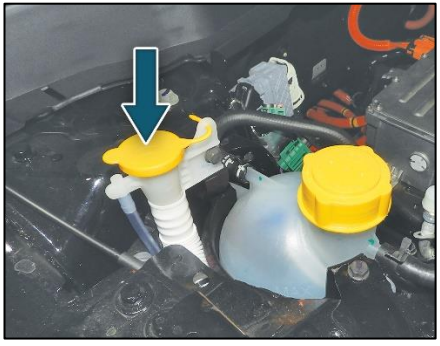

Examine if there is washer fluid in the tank. Fill it if necessary. Use a good quality fluid, diluted with water as necessary.

**NOTE**

- Do not use detergent or any other additive in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.
- Do not operate washer motor with

no fluid in washer tank, washer motor will be damaged.

***For more clarity about location of Windshield Washer Container and filling cap, please refer image of the respective motor Compartment.***

## 12V BATTERY

- Examine the battery for electrolyte level against the marking on the battery outer case.
- Use a proper spanner to loosen and remove cables from the terminals.
- Always disconnect the negative (-ve) terminal first and reconnect it last.
- Ensure battery is securely mounted.
- If you need to connect the battery to charger, remove both the terminal to prevent damage to the vehicle electrical system.
- Apply terminal coats/spray/petroleum jelly to prevent battery terminal from oxidation.
- If your vehicle is equipped with Battery Sensor, then disconnect only the Sensor output cable.
- Refer the below Battery Sensor image for do's and don'ts.

***For location of battery, please refer image of the respective motor Compartment.***

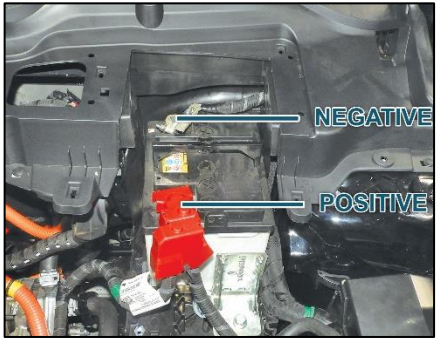


**NOTE**

Use only authorized Battery recommended by TATA MOTORS. Use of any other unauthorized Battery will result into Intelligent Alternator Control (IAC) function deterioration.

**NOTE**

- During normal operation, the battery generates gas which is explosive in nature. A spark or open flame can cause the battery to explode causing very serious injuries.
- Keep all sparks, open flames and smoking materials away from the battery.
- The battery contains sulphuric acid (electrolyte) which is poisonous and highly corrosive in nature. Getting electrolyte in your eyes or on the skin can cause severe burns. Wear protective clothing and a face shield or have a skilled technician to do the battery maintenance.

## TYRES

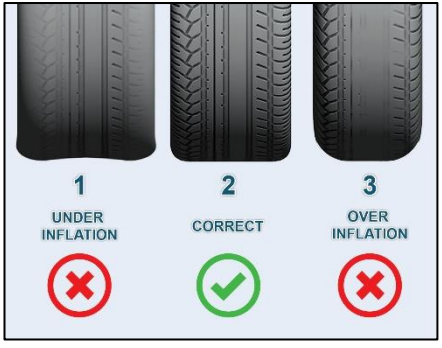


| | | |
|---|---|---|
| 1 | Under inflation | Excessive side tread wear |
| 2 | Correct tyre pressure | Uniform wear |
| 3 | Over inflation | Excessive center tread wear |

## Inflation

Check for inflation and condition of your vehicle tyres periodically.

Check the pressure in the tyres when they are cold.

Keeping the tyres properly inflated gives you the best combination of riding comfort, handling, tyre life and better energy efficiency.

Over inflation of tyres makes the vehicle ride bumpy and harsh. Tyres are more prone to uneven wear and damage from road hazards.

Under inflated tyres reduce your comfort in vehicle handling and are prone to failures due to high temperatures. They also cause uneven wear and more energy consumption.

**NOTE**

Every time you check inflation pressure, you should also examine tyres for uneven wear, damage and trapping of foreign objects in the treads and wear.

## Recommended Tyre Pressures

**NOTE**

Kindly refer Tyre pressure as indicated on tyre pressure sticker provided on vehicle (near driver seat).

## Tyre Rotation

To help increase tyre life rotated at specified intervals or earlier depending on the operation of vehicle. Tyre rotation is recommended for achieving identical wear on each tyre.

The illustrations shows suggested sequence of tyre rotation.

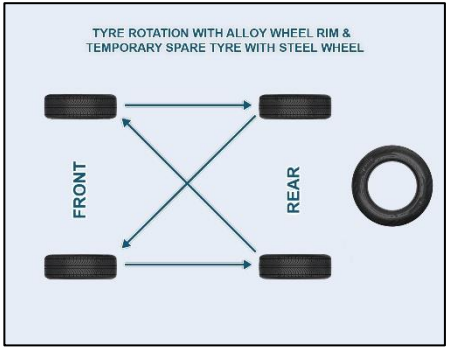


**NOTE**

- Do not use temporary spare wheel for tyre rotation.
- Two or more temporary tyres

should not be used on one vehicle.

- Tyre pressure to be checked every 15 days.
- Tyre pressure of temporary wheel is to be checked at least once in a month.
- Radial tyres tend to wear faster in the shoulder area, particularly in front positions. This makes regular rotation necessary.
- Do not use spare steel wheel rim for tyre rotation, when vehicle is fitted with alloy wheel rims.

## Wheel Alignment and Balancing

### Alignment

Incorrect wheel alignment causes excessive and uneven tyre wear. Check wheel alignment at specified intervals.

### Balancing

Wheels of your vehicle are balanced for better ride comfort and longer tyre life. Balancing needs to be done whenever tyre is removed from rim.

**⚠ WARNING**

If the vehicle vibrates abnormally on a smooth road, have the wheel balanced done immediately.

## Special Winter Equipment

It is recommended that the following items be carried in the vehicle during winter:

- A scraper and stiff-bristled brush to remove ice and snow from the windows and wiper blades.
- A shovel to dig the vehicle out of snow drifts.
- Extra windshield washer fluid to refill the reservoir tank.

## Special Care For Tubeless Tyres

- When you remove the tyre and install it back on the rim, take precautions not to damage tyre bead. Use tyre removal and assembly machines. Damage or cut on tyre bead may cause gradual loss of air and deflation of tyre.
- Do not scratch the inner surface of tubeless tyre with metallic or sharp objects. Tubeless tyres are coated with impermeable layer of rubber from the inner surface which holds the air in the tyre. Removal of this layer due to scratching may cause gradual loss of air and deflation.
- If wheel rim gets damaged in service, get the wheel rim repaired/ replaced immediately. Running the vehicle with damaged rim may cause deflation of tyre and subsequent dislodging of tyre from rim.
- Keep the recommended inflation pressure. Over inflation, in particular, may cause puncture or bursting of tyres.

**NOTE**

Life and wear pattern of tyres depends on various parameters like tyre pressure, wheel alignment, wheel balancing, tyre rotation, etc. It also largely depends on vehicle speed, load carried, usage, driving habits, road conditions, tyre quality, etc. In case fault is suspected to be due to poor quality of tyres, the same may be taken up with concerned tyre manufacturer.

### Tyre Equipment

Summer tyres have a tread designed to provide superior performance on dry pavement. However, the performance of these tyres will be substantially reduced in wet conditions. If you operate your vehicle on wet roads, use all season tyres for all four wheels.

## VEHICLE PARKING for LONG DURATION (NON-USE MAINTENANCE)

If you want to park your vehicle at one place for long duration, following care is to be taken:

- Avoid parking vehicle below 20% SoC continuously for two weeks (<14 days)
- Ideal condition to park vehicle for longer duration (> 14 days) is with 40% to 60% SoC (Disconnect the Aux battery – Ve terminal for longer duration parking)
- After the resting period the vehicle must be charged to 100% using Slow/AC Charging before use.
- During the resting period, the user may choose either of the following options to prevent discharge of low voltage battery.
- Periodically (weekly once) user may switch on the remote Air conditioning for 20-30 mins. This wakes up both the high voltage and low voltage systems and prevents low voltage battery from getting discharged.
- If possible, user may choose to disconnect the negative terminal of the low voltage battery. This results in complete vehicle sleep and minimum loss of charge for both low voltage and high voltage batteries. (First remove the cable from the negative terminal). Ensure that battery is fully charged.
- Park the vehicle in covered, dry and if possible well ventilated premises.
- Use wheel chocks to prevent movement of the car.
- Clean and protect the painted parts using protective wax.
- Clean and protect the shiny metal parts using commercially available special compounds.
- Sprinkle talcum powder on the rubber windscreen wiper and lift them off the glass.
- Slightly open the windows.
- Cover the vehicle with a cloth or perforated plastic sheet. Do not use sheets of imperforated plastic as they do not allow moisture on the vehicle body to evaporate.

- Inflate the tyres to 0.5 bar above the normal specified pressure and check it at regular intervals.
- Check the battery charge every six weeks.

## SMART KEY BATTERY REPLACEMENT

### Procedure

1. Open rear key cover by small tool.
2. Remove battery from battery slot by small tool and replace it with new battery.
3. Ensure that the “+” symbol on the battery is facing upwards. The correct polarity is shown on the battery cover.
4. Close the rear key cover.
5. Make sure that the key cover is intact properly.

**NOTE**

- Use CR 2032 battery only.
- An inappropriately disposed battery can be harmful to the environment and human health. Dispose of the battery according to your local law(s) and regulations.

## REMOTE KEY BATTERY REPLACEMENT

**Procedure**

1. Rotate the back side of remote key and remove the rear cover.
2. Insert the coin in coin slot, rotate and remove the next back cover.
3. Battery will be visible now.
4. Remove the battery and insert the new one. Observe the positive terminal marking to be facing upside.
5. Place the back cover and rotate using coin. Then place the outer cover and rotate.

**NOTE**

- Use 3V, CR 2450 battery only.
- An inappropriately disposed battery can be harmful to the environment and human health. Dispose of the battery according to your local law(s) and regulations.