

4K UHD Driving Recorder

Operation Manual

一、Product Introduction

A driving recorder is a vehicle-mounted device that records high-definition video during driving to protect driving safety and provide accident evidence. The device supports front camera recording (optional rear camera), and has Wi-Fi connection, voice control and TF card storage functions.

Note: 4K ultra-high-definition videos require a high-configuration smartphone or computer player. If the player is stuck, please replace the hardware device and player that supports 4K decoding to play.



Packing List and Instructions

Item Name	describe	How to use	Precautions
Driving recorder body	Main recording equipment	Installed on the windshield or dashboard, automatically records video after connecting to power source	Make sure it does not block your view and check the stability regularly
Original power cord	Connecting to vehicle power supply	Plug into the cigarette lighter socket and make sure it is firmly connected	Check for looseness, it is recommended to use the original wire
Pull back camera	Recording rear view	Installed on the rear windshield, connected to the main device	Avoid blocking the license plate and hide the cables

二、Key Description



Confirm/Power button:

- Short press function: Confirm menu selection, used to confirm the current option or perform an operation in the system menu.
- Long press for 3 seconds function: Turn on or off. If the device is off, press and hold for 3 seconds to turn it on; if it is on, press and hold for 3 seconds to safely shut down the device.

Menu/Camera key:

- Short press function: Enter the system menu and display the device setting interface, including video resolution, loop recording time, date and time and other options.
- Long press for 5 seconds: Photo function, the device will capture a static image of the current screen and save it to the "Snapshot" folder of the SD card, which is suitable for recording specific scenes.

Up/Lock Key:

- Short press function: Move the selection cursor upwards in the system menu to browse the previous menu item; if not in the menu, short press to lock the currently recorded video, mark it as an important file to prevent it from being overwritten in loop recording mode, and the locked file is stored in the "Locked" folder.

Note: The video lock function is suitable for recording traffic accidents or important events. After locking, the file cannot be overwritten cyclically.

Down/Record Button:

- Short press function: Move the selection cursor down in the system menu to browse to the next menu item; if not in the menu, short press to start or pause video recording. If already recording, short press to pause, and another short press to resume recording.

Switch camera/WiFi button:

- Short press function: switch between front and rear cameras. This function is only available on devices that support dual camera mode (such as front + rear camera). It allows users to switch between the front and rear camera images displayed on the screen. It is suitable for viewing real-time recordings from different angles.

Note: Switching cameras is only available in dual-camera mode. This function may not be available on single-camera devices.

- **Long press function :** turn on or off the WiFi function. After long pressing, the device will broadcast a WiFi network starting with "His Dvr_ ". The default password is 12345678, which is suitable for remote control via mobile app.

Note: When connecting to WiFi, make sure that the phone is not connected to other networks, otherwise the app may not be able to detect the device.

Reset hole : Use a thin needle or paper clip to press the button in the reset hole to perform a hardware reset. This is useful if the device is completely unresponsive.

- After restarting, the device will be restored to its initial state. Please note that this operation may cause the loss of unsaved files. It is recommended to try to restart by long pressing the power button first.

TF card holder:

- **Insert TF card:** After the device is powered off, gently insert the card with the gold finger facing the power interface until the card clicks into place.
- **Remove the TF card:** After power off, press the card lightly, and it will pop out after a click sound, then take it out slowly.
- **Note:** Do not forcefully insert or install in reverse to avoid damaging the card slot or card. It is recommended to use a high-quality TF card recommended by the manufacturer and back up files regularly to prevent data loss.

Power interface:

- Used to connect the vehicle power cord to ensure that the plug is secure and prevent it from falling off during driving.
- **Note:** Use the original car power cable, supporting voltage 12V/24V.

Pull back the camera socket:

- Used to connect an optional rear camera to provide rear-view video recording function.
- During installation, connect according to the instructions to ensure that the interface is stable. After activation, you can view the front and rear camera views through mobile phone interconnection .

三、 Operation interface description



Press the Menu/Camera key, you will enter the system menu selection interface, displaying four icons, from left to right: DVR, DVR Setting, File Explorer and Sys Setting. Use the Up/Lock and Down/Record keys to navigate, and short press the Confirm/Power key to confirm the selection.

DVR Function

- After selecting DVR, short press the Confirm/Power button to return to the video interface, which is suitable for quickly exiting the menu and viewing real-time recordings.
- This feature allows users to return to monitoring mode immediately after setup is complete.

DVR Setting Function

- Enter the driving video setting interface, which includes the following detailed options:
 - Loop recording : Select 1 minute or 2 minutes to determine the length of the video clip. Old videos will be automatically overwritten. It is recommended to select according to the capacity of the SD card.

- Video resolution : 2K or 4K is optional. 4K provides higher details but takes up more storage and is suitable for daytime highway conditions.
- Automatic recording after 1 minute of no operation : You can choose to turn it on or off. If turned on, the device will automatically start recording after 1 minute of no user operation. It is suitable for long-term parking monitoring. Research shows that this function may be related to the parking mode.
- Preview mode : You can select front recording, rear recording or picture-in-picture (valid in dual-camera mode) to conveniently view real-time images from different angles.
- Silent recording : You can choose to turn it on or off. When it is turned on, the recording will be without audio, which is suitable for privacy protection.
- Time Watermark : You can choose to turn it on or off. When turned on, the video file will have a time and date watermark to facilitate subsequent evidence collection.
- Parking monitoring : You can choose to turn it on or off. It needs to be used with the ACC hardwire kit. When turned on, it will automatically record when a collision or movement is detected during parking.
- Gsensor sensitivity : Optional off, low or high, adjust the collision detection sensitivity, suitable for parking monitoring or driving safety. Higher sensitivity may cause false triggering and needs to be adjusted according to needs.
- Time-lapse recording duration : selectable off, 15 minutes, 12 hours or 24 hours, suitable for long-term parking monitoring, recording interval frames to save storage, research shows that this function is suitable for long-term parking monitoring.
- Front camera recording mirror : You can choose to turn it on or off. When turned on, the front camera image will be flipped horizontally, which is suitable for specific installation requirements.
- Rear camera recording mirror : You can choose to turn it on or off. When turned on, the rear camera image will be flipped horizontally, which is suitable for rear-view angle adjustment.
- Navigation: Use the Up/Lock key to select upwards, the Down/Record key to select downwards, and short press the Confirm/Power key to confirm the change.

File Explorer Features

- Entering the file management interface allows browsing the videos and photos in the SD card, which are divided into folders such as "Loop" (loop recording), "Locked" (locked files), and "Snapshot" (photos).
- You can delete files or lock important videos through the menu. After locking, they will be stored in the "Locked" folder to prevent loop recording and overwriting.
- Note: Formatting the SD card will delete all files, including locked files. Please back up important data before operation. Studies have shown that regular backup can avoid data loss.

Sys Setting Function

- Enter the system settings interface, which contains the following detailed options:
 - WiFi switch : You can choose to turn it on or off. You can also control it by long pressing the switch camera/WiFi button. Studies have shown that the default password 12345678 needs to be changed regularly to enhance security.
 - WiFi password and QR code : Display the current WiFi password (default 12345678). You can change the password through this option and generate a new QR code to facilitate mobile phone connection. It is recommended to check it every month.
 - Brightness setting : 4 levels of adjustment are provided to suit different lighting environments. Navigate to this item and use the up/down key to select.
 - Sound settings : Provide 4 levels of volume adjustment to control the device prompt sound or key tone volume to suit different user needs.
 - Screen saver time : You can choose to turn off, 10 seconds, 30 seconds or 60 seconds. Set the time for the screen to automatically turn off after no operation to save power consumption. Research shows that 30 seconds is suitable for most users.
 - Language settings : Support multiple languages and select the appropriate display language to suit users in different regions. Research shows that the Japanese option may provide convenience for Japanese product users.
 - Key tone : You can choose to turn it on or off. When it is turned on, the key operation will have sound feedback, which is convenient for blind operation and suitable for night use.
 - Memory formatting : Format the SD card and erase all data to optimize performance. It is recommended to do this once a month and be sure to back up important files.
 - Version information : Displays the current firmware version, making it easy to check for updates. Studies have shown that regular updates can optimize performance.
 - Restore factory settings : Reset all settings (except WiFi) to factory defaults. Be careful and may need to reconfigure. Research shows that this function is suitable for use when the device fails.

4, Mobile Internet APP (Viidure) Installation Instructions

1. Scan the QR code to download :
 1. When using for the first time, scan the QR code below . Use your phone's camera or download a QR code scanning app (such as Google Lens) and scan the QR code.

2. After scanning, the phone will jump to the APP download page, usually the App Store (Apple) or Google Play Store (Android).
3. Click the download button on the page to install the APP.
4. Note : If the QR code is invalid or cannot be scanned, you can search and download it manually.



2. Manual search download :

1. Apple Devices :

1. Open the App Store and tap the search icon in the lower right corner.
2. Enter "Viidure" to search.
3. Find the relevant APP (usually with a dash cam icon) and click "Get" to download.
4. After the installation is complete, click "Open" to enter the APP.
5. If you need to verify your identity, you can enter your Apple ID password or use Touch ID/Face ID to confirm.

2. Android devices :

1. Open the Google Play Store and tap the search bar at the top.
 2. Enter "Viidure" to search. If it is not found, or use the device's default application store (such as Huawei App Store, Xiaomi App Store).
 3. Find the relevant APP and click "Install" to download it.
 4. After the installation is complete, click "Open" to enter the APP.
 5. If a permission request pops up, click Accept to continue.
3. Note : If multiple similar apps appear in the search results, please confirm whether the developer name or icon is consistent with the brand of the dash cam to avoid downloading the wrong app.

Start the dashcam and connect to Wi-Fi

- Start the device :

- Make sure the dash cam is connected to the vehicle's power source (such as a cigarette lighter adapter or hardwire installation), and start the car to activate the device.
- After the device is turned on, a slow blue flashing light indicates that the device is recording. For the red light status, refer to the device manual to confirm whether Wi-Fi is enabled.

- **Connect to a Wi-Fi network :**
 - In your phone's settings, go to Wi-Fi options and make sure Wi-Fi is turned on.
 - the network whose name starts with "Hs iDvr" (for example, His Dvr12345678) in the Wi-Fi list and click Connect.
 - Enter the default password 12345678 and click the "Connect" button.
 - Wait for a few seconds, and when the phone displays "Connected to His Dvr *****", it means the connection is successful.
 - **Frequently Asked Questions :**
 - If the network cannot be found, please make sure the dash cam is powered on. The red light is off, indicating that Wi-Fi is turned on.
 - If the password is incorrect, please make sure to enter 12345678, regardless of upper or lower case.
 - If the connection fails, try turning off other network connections on your phone (such as mobile data) and restarting your phone or dash cam.

Use the APP to synchronize time and format the SD card

- **Open the app and synchronize the time :**
 - Launch the Viidure APP on your phone, and the APP should automatically detect the connected dashcam.
 - If a device selection list pops up, select the device whose name begins with "HiDvr".
 - Grant the APP necessary permissions (such as access to Wi-Fi, storage, etc.), and click "Allow".
 - After the connection is successful, the APP will automatically synchronize the dash cam time with the current time on the phone.
 - If the time is not synchronized, you can find the "Time Synchronization" option in the APP main interface or settings menu and click to synchronize manually.
 - Tip : Make sure your phone's time is set correctly (automatically obtain network time) to avoid synchronization errors.
- **Format SD card :**
 - In the app, navigate to the settings page for your dash cam, which is usually marked by a gear icon in the lower right corner of the main interface .
 - Scroll to the bottom and find the "Format Card " button. Click it and a confirmation dialog box will pop up.
 - Read the prompt, confirm that formatting will delete all data, and click "Confirm" or "OK" to continue.
 - Wait for formatting to complete, and the APP will display "Formatting successful" or similar prompts.
 - Note : Please back up important files before formatting. It is recommended to format the device for the first time to ensure compatibility.


- FAQ : If it says that the SD card is not available, please check whether the card is inserted correctly, or replace it with a high-speed compatible card (such as Class 10 or above).

Additional features and maintenance tips

- **File management** : You can view real-time video, download video files or delete them through the APP

5, Mobile Internet APP (Viidure) Operation Instructions

Software main interface introduction

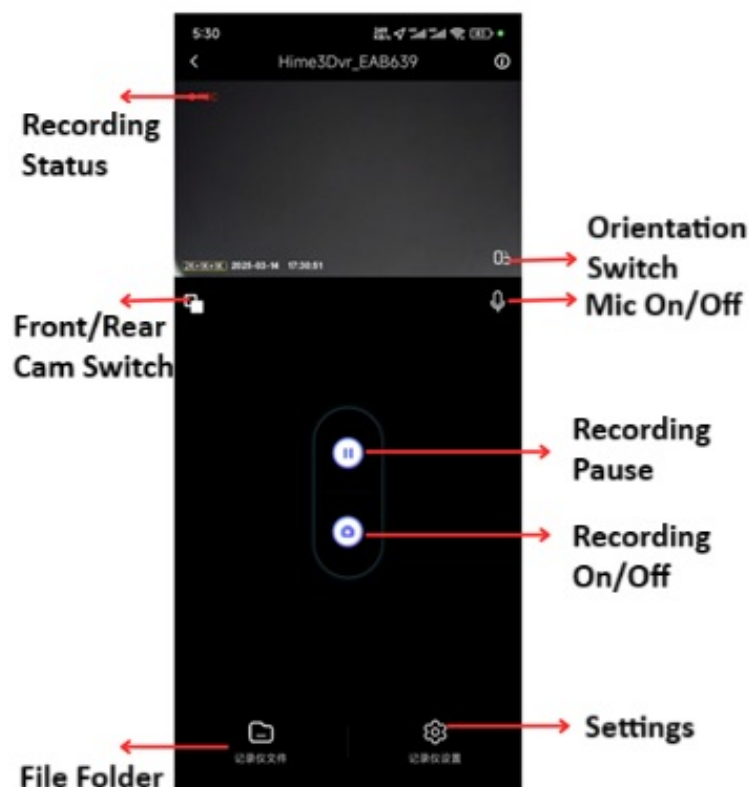

Video Settings

- **Resolution** : User-selectable 2K (2048 x 1080 pixels) or 4K (3840 x 2160 pixels), with frame rate fixed at 30 frames per second.
 - **Control method** : The APP provides a switch button or radio button. Switching resolution may affect the use of storage space. The 4K option is suitable for users who need higher clarity.
 - **Note** : When selecting 4K, it is recommended to ensure that there is enough space on the TF card as the video file is relatively large.
- **Encoding format** : Provides H264 (default) or H265 options. H264 has wider compatibility, while H265 has higher compression efficiency and is suitable for long-duration recording.

- Control method : drop-down menu or radio button. After switching, the device needs to be restarted for it to take effect.
- **Video Length** : Set the length of each segment of the looped video. The options are 1 minute (default), 3 minutes, or 5 minutes.
 - Control method : radio button or time selector, automatically overwrite the earliest file when the loop recording is full.
 - Note : The longer the duration, the larger the single file will be. It is recommended to choose according to the capacity of the TF card.

Audio Settings

- **Recording switch** : You can choose to turn on (default) or off the recording function, which is suitable for privacy protection or legal requirements.
 - Control method : switch button, recording without audio when turned off.
- **Speaker volume** : Adjust the volume of device prompts and voice feedback. Options include Mute, Low (default), Medium, and High.
 - Controls : Slider or segmented selector, suitable for adjusting the volume of voice prompts.

Storage Settings

- **Format TF card** : Support formatting memory card to FAT32, suitable for 128 GB or 512 GB card.
 - Control method : button. After clicking, a confirmation dialog box pops up, prompting "Formatting will delete all data", requiring user confirmation.
 - Note : Please back up important files before formatting. It is recommended to format the device for the first time to ensure compatibility.

Security and surveillance

- **Emergency recording trigger sensitivity** : Adjust the collision detection sensitivity while driving. The options are Off, Low, Medium (default), and High.
 - Control method : Slider or radio button. The higher the sensitivity, the easier it is for the G-sensor to trigger emergency recording and lock the file.
 - Note : Too high sensitivity may cause false triggering, so it is recommended to adjust it according to driving habits.
- **Parking monitoring trigger sensitivity** : collision or motion detection sensitivity in sleep mode, options are Off (default), Low, Medium, and High.
 - Control method : Slider or radio button, hardwire installation or vehicle power support is required when enabled.

- **Note :** Too high sensitivity may cause false triggering due to environmental vibration. It is recommended to select the appropriate setting when parking.
- **Time-lapse recording :** Select the parking monitoring mode. The options are Off (default), 10 minutes, 12 hours, 24 hours, and 48 hours.
 - **Control method :** radio button or time selector. The longer the time, the higher the requirement on the vehicle battery.
 - **Note :** The device may automatically turn off Wi-Fi during time-lapse recording. It is recommended to check the battery status regularly.
- **Vehicle battery protection :** Set the voltage protection threshold. The options are low (11.8V), medium (12V, default), and high (12.2V). The device automatically shuts down when the voltage is below the threshold.
 - **Control method :** Single check box or drop-down menu, suitable for protecting vehicle batteries and preventing parking monitoring from running out of power.
 - **Note :** A threshold that is too high may cause the device to shut down prematurely. It is recommended to adjust it according to the vehicle battery capacity.

Network Settings

- **Modify Wi-Fi information :** You can change the Wi-Fi account and password, which is suitable for personalized settings.
 - **Control method :** text input box, enter the new account and password and save.
 - **Note :** If you forget your password, you can press and hold the camera button to restore the factory settings. The Wi-Fi will be restored to the default (account and password are the initial values).

System Settings

- **Factory Reset :** Reset all settings to factory defaults, including Wi-Fi information.
 - **Control method :** button. After clicking, a confirmation dialog box pops up, prompting "This operation will clear all custom settings" and requiring user confirmation.
 - **Note :** Reconfiguration is required after restoring the factory settings. It is recommended to back up important settings.
- **About the recorder :** View device firmware information, such as version number, device model, etc.
 - **Control method :** Information page, showing firmware version and support contact information.

Additional Features and Notes

- The APP may provide a real-time preview function, allowing users to view the current recording.
- After adjusting the settings, some options may require a device restart to take effect, and the APP should prompt the user.
- It is recommended to check for firmware updates via the APP regularly to ensure optimal device functionality.

3. Detailed parameter description

Screen and connections

- **Screen** : The device has no built-in display screen, and uses a mobile phone APP smart connection method. Users can view real-time video and set parameters through their mobile phones. This is the trend of modern dashcams, which reduces the size of the device and enhances portability.
- **Resolution** : The front-facing camera supports 2K (2048 x 1080 pixels) or 4K (3840 x 2160 pixels) recording at an unspecified frame rate, but typically 30 frames per second, for HD quality. 2K is slightly higher than standard 1080p (1920 x 1080 pixels), while 4K is better for capturing distant details, such as license plates.
- **Optional rear camera** : with a resolution of 1080p, suitable for recording the situation behind the vehicle, which is common in parking or rear collision scenes. The rear camera is not standard and users can purchase it according to their needs.
- **Connection method** : Connect to mobile phone APP (such as Viidure or Recorder) via Wi-Fi, supporting real-time preview and file management .

Video recording and angles

- **Video recording angle** : 170-degree wide-angle lens, covering a wide range, suitable for city driving and highway conditions. 170 degrees may cause a slight fish-eye effect at the edges, but can reduce blind spots .
- **Video format** : supports H265 and H264 compression. H265 has higher compression efficiency and is suitable for use when storage space is limited; H264 has wider compatibility. The storage format is TS (Transport Stream), which is convenient for continuous recording and playback.
- **Image format** : JPEG format, suitable for static photos, commonly used in manual photography or time-lapse video extraction.
- **Video clip** : can be set to 1 minute, 3 minutes or 5 minutes, short clips are easy to manage, long clips are suitable for long-term recording. Users can choose according to the capacity of the TF card.
- **Recording mode** : Loop recording mode, automatically overwrite the oldest file when the storage is full, ensuring continuous recording without manual deletion. Automatic overwriting is suitable for long-term use to prevent the memory card from being full.

- **Seamless recording** : Each video segment is seamlessly connected without missing a second, which may be achieved through a buffer or overlapping recording, similar to the continuity design of high-end dash cams.
- **Time overlay** : To superimpose the exact time on the video, you need to synchronize the mobile phone time through the APP to ensure that the timestamp is correct for use as accident evidence.

Audio and Storage

- **Microphone** : The built-in microphone is turned on by default and can record audio, which is suitable for recording conversations or ambient sounds. Users can turn it off through the APP to protect privacy.
- **Memory card** : Supports external microSD cards with a capacity of 8GB to 512GB , and must be CLASS10 or above to ensure that the writing speed meets the requirements of 4K video recording. The minimum writing speed of CLASS10 is 10MB/s, which is suitable for high-resolution video recording.
- **Storage management** : loop recording will be automatically overwritten. It is recommended to regularly back up important files to a mobile phone or computer to prevent data loss.

Power and Battery

- **Power supply mode** : Start with ACC ignition, connected through the vehicle cigarette lighter or hard wire, convenient to use. ACC power supply automatically turns on when the vehicle starts, suitable for daily driving.
- **Battery** : Optional battery, supports parking mode, suitable for monitoring after the vehicle is turned off. The battery capacity is not clear, but it is usually used for short-term recording, so be aware of the risk of battery exhaustion.
- **Battery protection** : Similar to Thinkware U1000, it supports voltage protection to prevent battery over-discharge.

Sensors and multifunctions

- **Gravity sensor** : The three-axis collision acceleration sensor (G sensor) is enabled by default, which can detect collisions, sudden braking, etc., and automatically lock the current video segment to prevent overwriting. Users can adjust the sensitivity through the APP to suit different driving scenarios.
- **Multi-language** : Supports multiple languages, suitable for international users.
- **Video playback** : Through the APP, you can select specific clips to playback, so you can easily review accidents or specific moments.

Environmental adaptability

- **Temperature range** : -20°C to 75°C, suitable for use in cold winter and hot summer, meets automotive electronic standards.

4. Installation and Usage Notes

1. Installation location and safety

1. Ensure that the device is installed in a suitable position on the windshield or dashboard, does not affect the driver's operation, and meets traffic safety standards. It is recommended to choose a central position with a height that is flush with the driver's line of sight .
2. Use the provided bracket to fix the device and regularly check the installation stability to prevent loosening during driving. It is recommended to check the bracket adhesion once a month .
3. Avoid installing the device in high temperature areas, such as above the engine cover, to prevent overheating and damage to the device. The operating temperature range is -20°C to 75°C .

2. Power and Storage

1. Connect the vehicle power supply correctly to avoid electrical hazards, and regularly check whether the power cord is firmly connected. It is recommended to use the original power cord to prevent voltage instability .
2. Use a compatible high-speed TF card (CLASS10 or above) to back up videos regularly to prevent data loss. It is recommended to use a 128GB or above card , the maximum is no more than 512G , and back up regularly through the APP .
3. Before formatting the TF card, make sure to back up important files. Formatting may clear all data. It is recommended to format it when using it for the first time .

3. Privacy and Recording

1. Understand local laws. Some areas may prohibit recording. It is recommended to turn off the microphone function through the APP. Refer to the privacy laws of various states in the United States. For example, California has strict consumer privacy protection laws .
2. Ensure that recordings do not infringe on the privacy of others, especially in public places or near private residences. EU countries need to comply with GDPR and ensure that recordings do not involve unauthorized collection of personal data .
3. Some Asian countries such as Japan may restrict recording, and it is recommended to turn off the microphone to comply with the law .

4. Driving and handling

1. Do not adjust the equipment while driving. Stop the car before operating it to avoid distraction and accidents. It is recommended to avoid operating the equipment while driving.
2. Clean the lens regularly with a dry soft cloth to avoid water stains or dirt that may affect the video quality. It is recommended to clean it once a month .

3. Check the firmness of the bracket to prevent it from loosening during driving. It is recommended to check it when the vehicle is parked .

5. Legal and Compliance Reminders

1. US regulations

1. Different states in the United States have different regulations on dashcam recordings. Some states allow recording (such as Texas), while some states require consent (such as California). It is recommended to check local privacy laws, such as the California Consumer Privacy Act (CCPA), which has strict restrictions on the collection of personal data .
2. At the federal level, it is recommended to comply with the relevant regulations of the Federal Communications Commission (FCC) to ensure that the equipment does not interfere with wireless communications .
3. It is recommended to consult local legal professionals to ensure compliance and avoid legal risks.

2. Global regulations

1. EU countries are required to comply with the General Data Protection Regulation (GDPR) to ensure that recordings do not involve unauthorized collection of personal data, and it is recommended to pay attention to privacy when using it in public places .
2. Some Asian countries, such as Japan, may restrict recording. It is recommended to turn off the microphone to comply with the law. Refer to the overview of Japan's privacy laws .
3. Australia may require compliance with the Privacy Act 1988 to ensure that recordings do not infringe on the privacy of others .
4. It is recommended that when using it during international travel, you should be aware of the privacy and recording laws of the destination country to avoid breaking the law.

6. Maintenance and Troubleshooting

- **Maintenance suggestions :** Check the device status regularly and update the firmware through the APP to ensure optimal functions. It is recommended to check the firmware once a quarter .
- **Solutions to common problems :** If the device does not start, check the power cord connection; if there is no video recording, check the TF card space; if the Wi-Fi connection fails, check the signal strength .

Parameters and technical specifications

- **Ensure that the device parameters meet the usage requirements, such as resolution 2K/4K, memory card 8-128GB CLASS10, and temperature range -20°C to 75°C .**