

PREDATOR PPX


Stretch Wrapping Machine



SERIAL NUMBER



FULL MANUAL

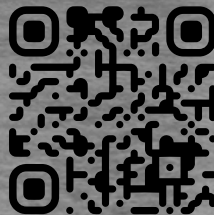

MACHINE OVERVIEW



MACHINE SIZE

91.42 x 62.48 x 92.36 In.

WRAPPING HEIGHT

MAX. 86.6 In.

WRAPPING SIZE

MAX. 41.3 x 41.3 In.


LOAD WEIGHT

3637.6 Lbs.

POWER REQUIRED

110-120 VAC / 60 Hz

CONTROL PANEL

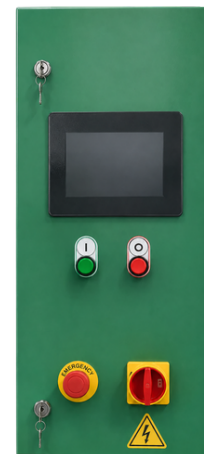

Main Power

Use the main power switch to turn machine ON and OFF.



Pause Button

Use to temporarily stop the wrapping cycle. Press Start to resume.



Emergency Stop

Machine will coast to a stop.



Read full operation manual before using machine.




FILM LOADING + THREADING


1. Open the film carriage safety door.
2. Load the stretch film roll onto the carriage.
3. Thread the film through the carriage rollers according to the diagram.
4. Confirm the cling side is facing the correct direction.
5. Close the carriage safety door before starting the cycle.

FILM ORIENTATION

Cling Inside

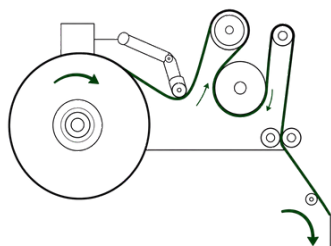

Cling Outside

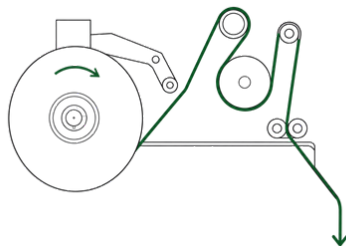

The machine should not be operated with the carriage safety door open.

QUICK TROUBLESHOOTING




Machine will not run

- Check power
- Emergency stop engaged
- Active Alarm
- Carriage door open

Film is not wrapping correctly

- Film not threaded correctly
- Film tension too high/low
- Film roll installed incorrectly

WRAP SETUP

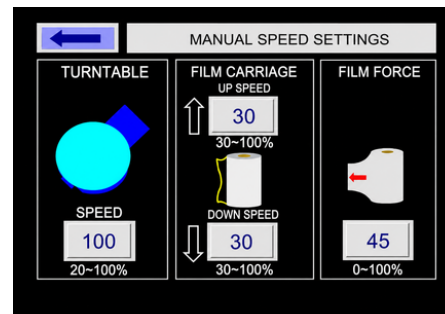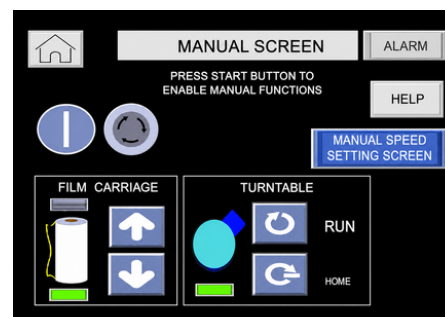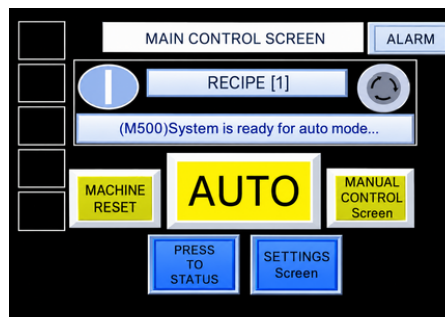

START FROM THE MAIN CONTROL SCREEN

The machine will already be in **AUTO MODE**.

To begin wrapping, press the **START BUTTON** on the control panel.

*To access wrap recipes, select **SETTINGS SCREEN**. For recipes and additional adjustments, see the full operation manual.

OPEN MANUAL SCREEN FOR ADJUSTMENTS

To adjust wrap settings, select **MANUAL CONTROL SCREEN BUTTON**.

On the Manual Screen, you can move the film carriage up and down and run the turntable.

ADJUST MANUAL SPEED SETTINGS

To change speeds, select **MANUAL SPEED SETTING BUTTON**.

Use this screen to adjust:

- Turntable speed
- Film carriage up speed
- Film carriage down speed
- Film force

SERVICE REMINDER

Disconnect power before service, gear changes or electrical work.

Service should be performed by qualified personnel only.

