


Phase Jump Method Atlas (default)

Phase-jump atlas: true frequency remains nominal while voltage phase changes instantaneously. Frequency errors quantify phase-discontinuity rejection, post-event recovery and sign asymmetry.

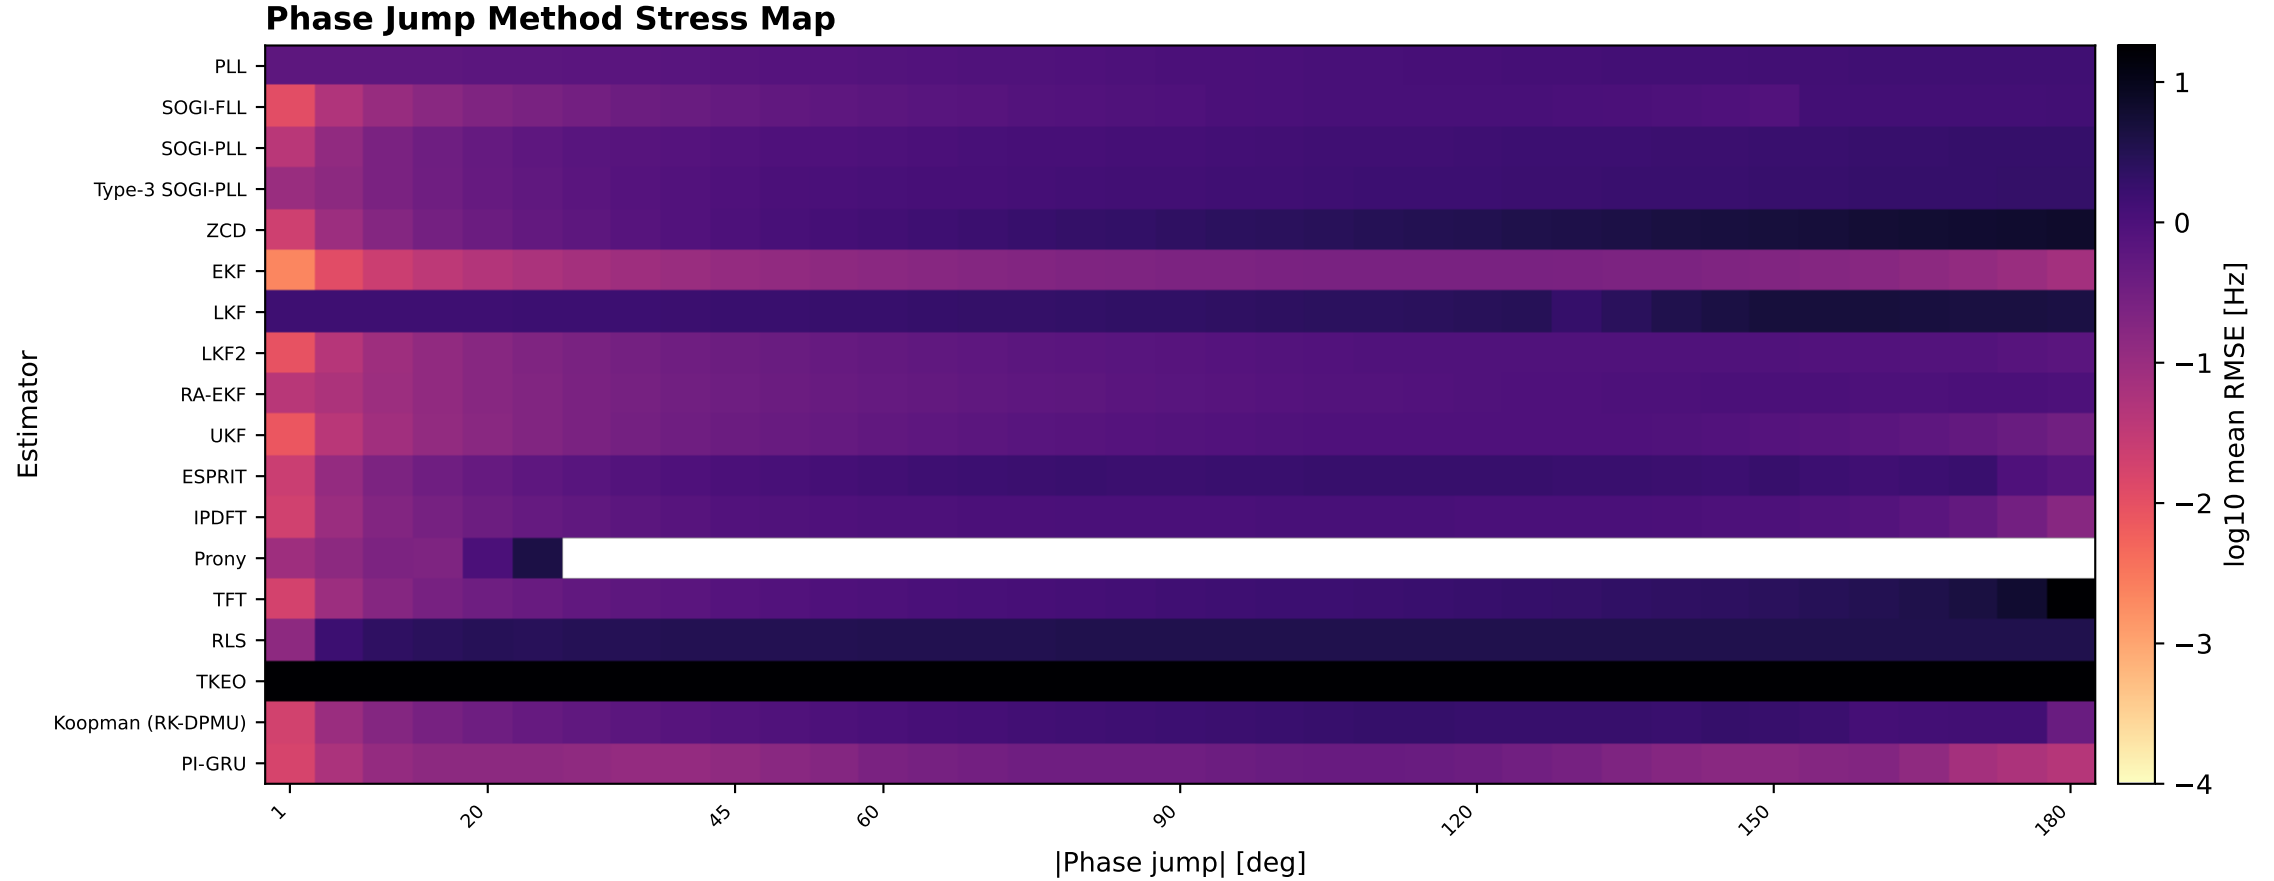

Critical Phase Jump Summary

