


# Magnitude Step Method Atlas (fixed policy)

Pure magnitude step: true frequency remains nominal. Frequency errors quantify AM-to-FM cross-sensitivity and numerical robustness. Upward steps are swells; downward steps are sags. The default sag grid stops below 100% to avoid a zero-voltage test.

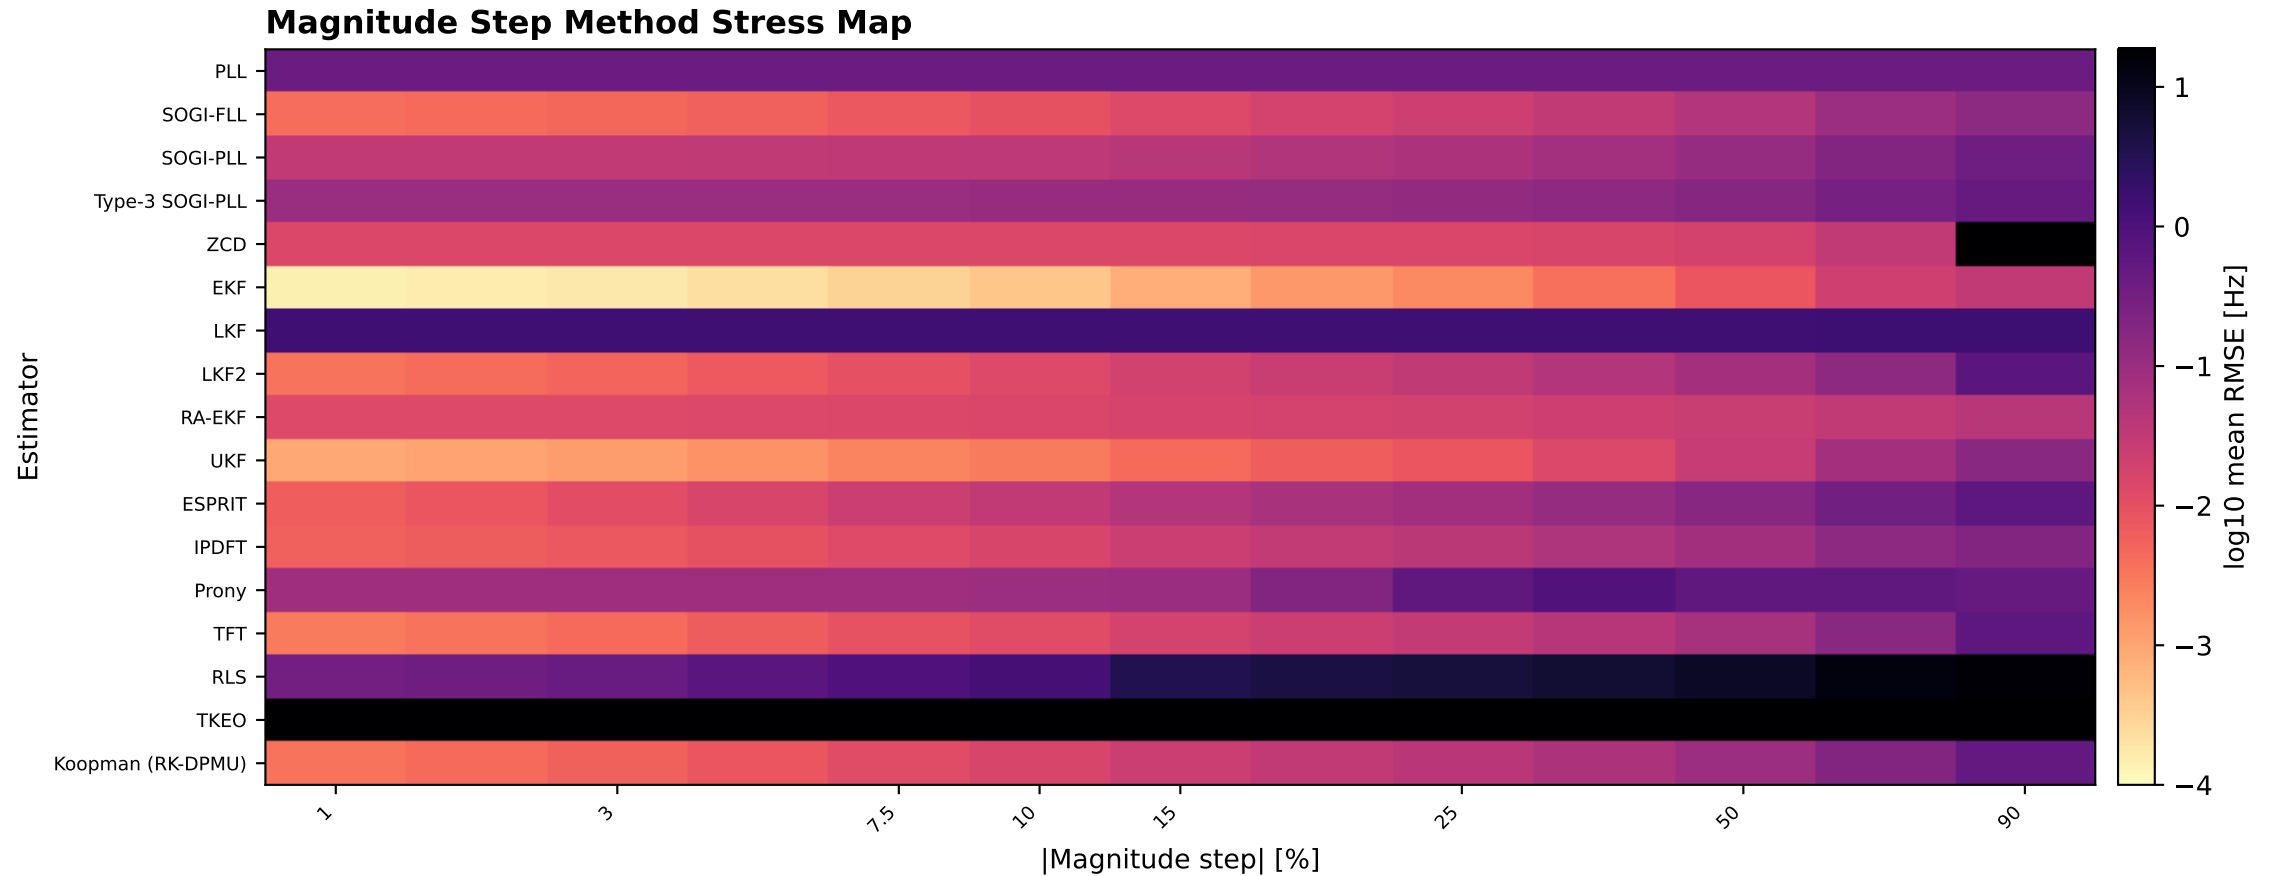

### Critical Magnitude Step Summary

