# Reuse Water System – Runbook

Oct 30, 2026 · @Jose

## Document control

| Item | Detail |
|---|---|
| Document | Reuse Water System – Runbook |
| Version | 3.11 |
| Applies to firmware | `FSM_WashingMachineSystem.ino` and the `GreyWater*` files, firmware 3.11 (3.11: the app asks for the password once per device, with Remember this device; 3.10: a cycle cut short by a power cut can be resumed from the app; 3.9: one fixed letter size per screen font for every message; 3.8: hold START 2 s on the panel for Reuse only, the cycle starts on release; 3.7: app buttons Reuse and save, Reuse only (rinse water to the drain) and Stop cycle; 3.6: four new screen fonts chosen by the household, the earlier ones removed; 3.5: view-only user `viewer` that sees only Overview and Water use; 3.4.1: shorter screen messages, full screen brightness; 3.4: minimum flow to save, screen font chosen in Settings; 3.3.1: alerts tried again for 30 min during an outage; 3.3: screen messages in short pages that explain what is happening and what to do, minutes left, more reliable phone alerts; 3.2: new name Reuse Water System, start-up animation, Helvetica Bold screen font, larger tank icon, buzzer on D1; 3.1: Spanish and English, chosen in Settings; 3.0: safety task, float-switch rules, code split into modules) |
| Intended audience | Installers, operators and maintenance personnel |
| Related documents | `README.md` (firmware change summary); Reuse Water System – Quick Card |

## Purpose and scope

This runbook defines how to install, operate, configure, troubleshoot and maintain the Reuse Water System controller. It covers the controller firmware and the hardware connected directly to it. The washing machine, the plumbing design and the mains electrical installation are outside its scope.

## Safety precautions

**Isolation:** switch off and lock out the valve and pump supply before working on any wiring. The Stop button is a software control and does not isolate power.

**Electrical work:** if the valves or pump run on mains voltage, the SSR load wiring must be installed by a qualified electrician to local regulations, with overcurrent protection and an RCD/GFCI.

**Environment:** mount the controller in an enclosure rated for damp locations, and keep low-voltage wiring separated from mains wiring.

**Hygiene:** grey water contains detergent residue and bacteria. Wear gloves when servicing the tank, sensors and valves. Stored water is not potable.

**Supervision:** do not leave the system unattended during commissioning or after a firmware change.

## Quick start

For everyday use you only need the two buttons and the screen. After the controller is switched on, the screen shows a dog chasing a butterfly for about 4 seconds, then `REUSE WATER` / System ready, then `READY`.

1. **Check the screen** shows `READY` and *Start washer › Press START*.
2. **Load the washing machine** and start its program as usual.
3. **Press START** (the button labelled START) and let go. While you press it the screen shows `REUSE AND SAVE` › *Release to start*; when you let go the cycle starts and the screen changes to `WASH 1 OF 4`.
   **Reuse only:** to use tank water for the wash but send the rinse water to the drain, **hold START for 2 seconds** until the screen changes to `REUSE ONLY` (Spanish `SOLO REUSAR`), then let go.
4. **Let it run.** The top line shows the current step, `WASH 1 OF 4` to `SAVE 4 OF 4`. The message below comes in short parts that change every 3 seconds, for example *Reusing water › 25 min left*. In the last step it shows when the system finishes.
5. **Done.** The screen shows `DONE` with *Reused 26 L › Saved 30 L*, then returns to `READY`.

To cancel at any time, press **STOP** (the button labelled STOP). The screen shows `STOPPED` for 4 seconds.

On a phone connected to the home Wi-Fi, open `http://reusewater.local` to see the same status, start or stop the cycle, and check how much water you have saved (section 11). The app has two ways to start: **Reuse and save** (*Reusar y guardar*) is the normal cycle, the same as the START button; **Reuse only** (*Solo reusar*) also uses tank water for the wash but sends the rinse water to the drain instead of the tank, for example when the rinse water should not be kept.

| If the screen shows | It means | What to do |
|---|---|---|
| A dog chasing a butterfly | The controller has just been switched on (about 4 s) | Nothing; START skips it |
| READY / Start washer › Press START | Waiting for you | Start the washing machine, then press START (hold 2 s for Reuse only) |

| If the screen shows | It means | What to do |
|---|---|---|
| REUSE AND SAVE / Release to start | START is pressed: letting go now starts the normal cycle | Let go, or keep holding for Reuse only |
| REUSE ONLY / Release to start | START held 2 s: letting go starts Reuse only (rinse water to the drain) | Let go |
| START BUTTON / Stuck › Check button | START held 15 s or more; nothing will start | Let go; if it stays, check the button and its wiring |
| WASH 1 OF 4 … SAVE 4 OF 4 | Cycle in progress | Nothing; wait |
| Reusing water | The machine is filling with water saved in the tank | Nothing |
| 25 min left | About how long the cycle still needs, learnt from earlier washes (from the second wash) | Nothing |
| Filling tank › Ends in 18:42 | Rinse water is being stored in the tank for the next wash | Nothing |
| DRAIN 4 OF 4 / Not saving › To the drain | A *Reuse only* wash from the app: the rinse water goes to the drain | Nothing |
| DONE / Reused 26 L › Saved 30 L | Cycle finished; tank water used, and rinse water stored for next time | Nothing |
| STOPPED / Cycle cancelled | You pressed STOP | Press START to begin again |
| No water flow › Check washer › Call installer | A step has waited too long for water | Check the washing machine is running; if it is, press STOP and call your installer (section 8) |
| Blank screen | No power, or a display fault | Check power, then see section 8 |

Button colors are a recommendation; label your buttons to match.

# 1. Overview

The controller runs a 4-step wash cycle (Fill, Drain, Rinse, Drain), reuses grey water from a storage tank for the first fill, and saves the rinse water back to the tank. It runs on an Arduino Nano ESP32, drives five solid-state relays (SSRs), reads two flow sensors and two tank level switches, and reports status on a 128x32 OLED.

## Components

| Group | Device | What it does | Board pin | Part / type |
|---|---|---|---|---|
| Controller | Arduino Nano ESP32 | Runs the program | — | ABX00083 (ESP32-S3, 3.3 V logic) |
| Operator | START button | Starts a cycle | D11 | Momentary push button, normally open |
| Operator | STOP button | Cancels a cycle | D10 | Momentary push button, normally open |
| Operator | OLED screen | Shows status and progress | A4 (SDA), A5 (SCL) | SSD1306, 128x32, I2C 0x3C |
| Operator | Buzzer (optional) | Beeps when a cycle ends and on alarms | D1 / TX0 | Active buzzer module (with its own driver) |
| Sensors | Tap flow sensor | Detects water entering the machine | D2 | YF-B1 |
| Sensors | Drain flow sensor | Detects water leaving the machine | D3 | YF-B10 |
| Sensors | Tank low-level switch | Water at the low mark | D9 | Float switch |
| Sensors | Tank high-level switch | Water at the high mark (tank full) | D8 | Float switch |
| Actuators | Tap valve | Tap water supply | D6 | Solenoid valve via SSR |
| Actuators | Drain valve | Drain path from the machine | D4 | Solenoid valve via SSR |
| Actuators | Fill valve | Sends drain water into the tank | D5 | Solenoid valve via SSR |
| Actuators | Pump | Moves tank water to the machine | D7 | Pump via SSR |
| Actuators | Tank-wash valve | Washes the tank during the tank-water fill | D0 / RX0 | Solenoid valve via SSR |

## Wash cycle summary

1. **Fill (1/4):** the machine fills with tap water, or with tank water when the tank has water and the machine is demanding water. The tank-wash valve pulses every 10 s while tank water is used.
2. **Drain (2/4):** soapy water is drained, not saved.
3. **Rinse (3/4):** the machine fills with tap water.
4. **Drain (4/4):** rinse water is saved to the tank until it is full, but only while the drain flow is above the *Minimum flow to save* (default 0.5 L/min, from 3.4). When the flow drops to that

value or below, the fill valve closes and the drain opens at once, so the last trickle goes to the drain; a new pump-out (a spin) is saved again once it has flowed above the limit for 2 s. This step lasts 20 minutes, then the system returns to Idle.


Source files (from firmware 3.0): `FSM_WashingMachineSystem.ino` (setup and loop), `GreyWaterSystem` (wash cycle), `GreyWaterOutputs` and `GreyWaterTask` (outputs, float switches, safety task), `GreyWaterSensors`, `GreyWaterDisplay`, `GreyWaterDiagnostics`, `GreyWaterSettings`, `GreyWaterNet`, `Ntfy.h` (phone alert message, from 3.3), `FlowMeter.h`, `TankLevel.h`, the screen files `BootAnimation.h`, the screen fonts `FontHyperlegible13.h` … `FontSchoolbook10.h` (from 3.6, see `licenses/README.md`), and the app page `web/dashboard.html` with its Spanish texts `web/es.json`. Libraries: Adafruit GFX, Adafruit SSD1306, AgileStateMachine, WiFiManager.

# 2. Pinout configuration

All pins are defined in `GreyWaterSystem.h` and set up in `setup()`. Outputs are active HIGH (`ssrON = HIGH`); buttons are active LOW with internal pull-ups.

## Board pinout

**Sensors, buttons, valves and buzzer use the D0–D11 header; the display uses A4 and A5**

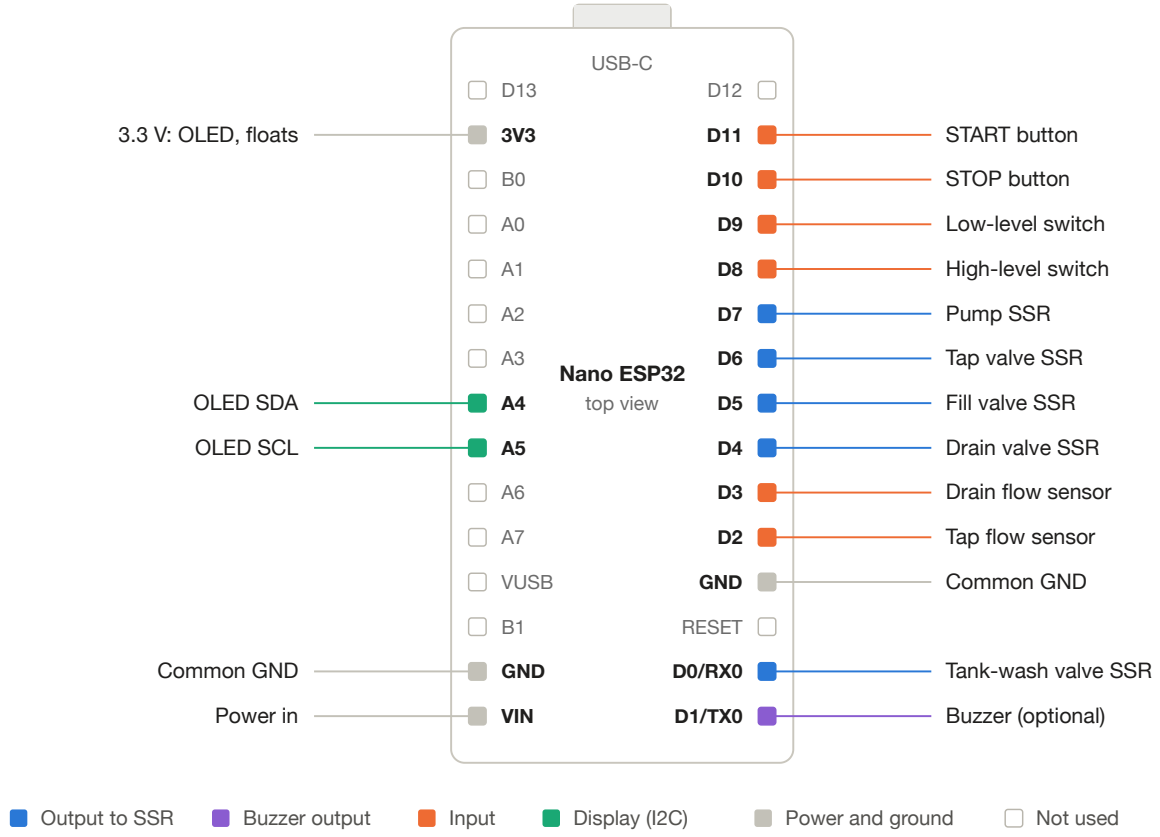


Arduino Nano ESP32 pinout · pins used by this system

Filled squares are the pins in use. Match each pin by the label printed on the board, not by its position, because the drawing is not to scale.

| Board pin | ESP32-S3 GPIO | Connect to | Type | Reads / drives | Firmware name |
|---|---|---|---|---|---|
| **Inputs** | | | | | |
| D2 | GPIO5 | Tap flow sensor signal | Pulse input (interrupt) | Pulses while water flows | `TAP_PIN` |

| Board pin | ESP32-S3 GPIO | Connect to | Type | Reads / drives | Firmware name |
|---|---|---|---|---|---|
| D3 | GPIO6 | Drain flow sensor signal | Pulse input (interrupt) | Pulses while water flows | `DRAIN_PIN` |
| D8 | GPIO17 | Tank high-level switch | Digital input | HIGH = water at the high mark | `IN_HIGHLEVEL` |
| D9 | GPIO18 | Tank low-level switch | Digital input | HIGH = water at the low mark | `IN_LOWLEVEL` |
| D10 | GPIO21 | STOP button (other side to GND) | Input, internal pull-up | LOW = pressed | `STOP_BUTTON` |
| D11 | GPIO38 | START button (other side to GND) | Input, internal pull-up | LOW = pressed | `START_BUTTON` |
| **Outputs** | | | | | |
| D0 / RX0 | GPIO44 | Tank-wash valve SSR, input + | Digital output (shared with UART0 RX) | HIGH = valve on | `OUT_WASH_EV` |
| D1 / TX0 | GPIO43 | Buzzer module signal (optional) | Digital output (shared with UART0 TX) | HIGH = beep | `BUZZER_PIN` |
| D4 | GPIO7 | Drain valve SSR, input + | Digital output | HIGH = valve on | `OUT_DRAIN_EV` |
| D5 | GPIO8 | Fill valve SSR, input + | Digital output | HIGH = valve on | `OUT_FILL_EV` |
| D6 | GPIO9 | Tap valve SSR, input + | Digital output | HIGH = valve on | `OUT_TAP_EV` |
| D7 | GPIO10 | Pump SSR, input + | Digital output | HIGH = pump on | `OUT_MOTOR` |
| **Display** | | | | | |
| A4 | GPIO11 | OLED SDA | I2C data, 400 kHz | — | `Wire` |
| A5 | GPIO12 | OLED SCL | I2C clock, 400 kHz | — | `Wire` |
| **Power** | | | | | |
| 3V3 | — | OLED VCC, level-switch common and buzzer module VCC | 3.3 V supply out | — | — |

| Board pin | ESP32-S3 GPIO | Connect to | Type | Reads / drives | Firmware name |
|---|---|---|---|---|---|
| GND | — | Common ground: buttons, sensors, OLED, buzzer, every SSR input –, and the 5 V supply – | Ground | — | — |
| VIN | — | Controller supply (see the board datasheet for the allowed voltage) | Power in | — | — |

## Wiring requirements

**SSR inputs:** connect each output pin to the SSR's DC input (+) and GND to (–). The board must not drive solenoids or the motor directly.

**Level switches:** D8 and D9 use plain `INPUT`, so each switch needs an external pull-down (or pull-up, with the logic inverted in `getWaterLevelTank()`). A floating input gives random tank levels.

**Buttons:** wire between the pin and GND; no external resistor is needed.

**Flow sensors:** power them at the voltage the sensor and the board's inputs both accept. The Nano ESP32 inputs are 3.3 V only and not 5 V tolerant. If a sensor is powered from 5 V, use the diode and 10 kΩ pull-up shown in the wiring diagrams on D2 and D3. Do not use a resistor divider: with the sensor's own pull-up it can leave the signal just above the pin's switching level, so pulses drop out.

**Pin D0 (tank-wash valve):** D0 is also the board's RX0 serial pin. The sketch's `Serial` uses the USB port, so D0 is free, but do not use `Serial0` in the same sketch. Fit a 10 kΩ resistor from D0 to GND so the SSR stays firmly off while the board starts. Always write `D0` in the code, not a bare `0`.

**Pin D1 (buzzer, optional, from firmware 3.2):** D1 is also the board's TX0 serial pin, so do not use `Serial0`. Use an active buzzer module (one that beeps when its input is HIGH): signal to D1, VCC to 3V3, GND to GND. The chip sends its own start-up messages on TX0 before the firmware runs, so the buzzer may chirp briefly at power-on or after a reset; this is normal. The first line of `setup()` drives D1 LOW. Always write `D1` in the code, not a bare `1`. Until 3.1 the buzzer was on D12.

**Boot state:** `allSSROff()` writes LOW to all five outputs in `setup()`, so every valve and the motor start off.

Pin numbers follow the Arduino labels printed on the board (Arduino IDE: **Tools > Pin Numbering > By Arduino pin (default)**). The GPIO column is for reference only. Source: Arduino Nano ESP32


full pinout.

## Wiring diagrams

Each panel shows one type of device; wire every device of that type the same way, using the pin from the pinout table.


### Sensors and buttons run at 3.3 V; only the SSR load side carries valve power

#### START and STOP buttons (D11, D10)





Uses the internal pull-up: no resistor needed.
Pressed = LOW. Use normally open buttons.

#### Tank level switches (D8, D9)

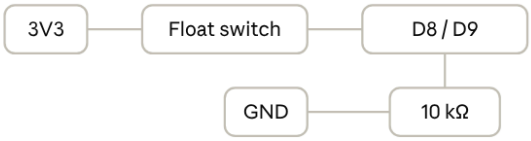


Float up: switch closed, pin reads HIGH.
The 10 kΩ pull-down holds the pin LOW when open.

#### Flow sensors (D2, D3)

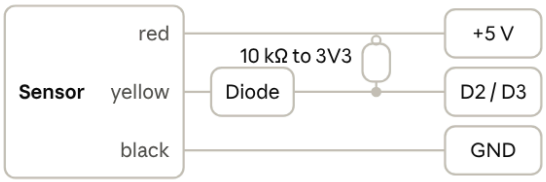


Diode + 10 kΩ pull-up: a clean 0–3.3 V signal.
Diode cathode to the sensor; colors are typical.

#### Valves and pump via SSR (D0, D4–D7)





AC valves: AC-output SSR on the load supply.
DC valves: DC-output SSR and a flyback diode.

#### OLED display (A4, A5)





Address 0x3C; most modules include pull-ups.

#### Power supplies and ground

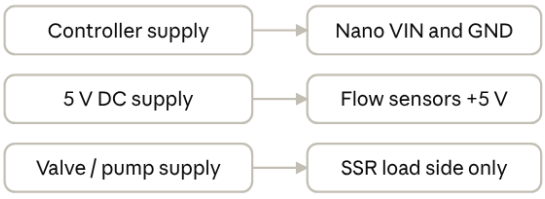


Join low-voltage GNDs; keep load supply separate.

#### Buzzer, optional (D1)

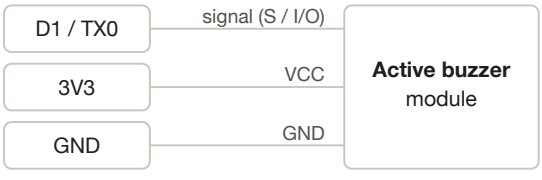


HIGH = beep. A short chirp at power-on is normal (TX0).

#### Choosing the buzzer

Active buzzer module with its own driver (it beeps by itself when its input is HIGH).

A passive buzzer or a bare piezo will not work: the firmware only switches the pin.

Switch it on in the app: Settings → Buzzer.

Wiring diagrams · one circuit per device type

| Device | Wire 1 | Wire 2 | Wire 3 | Extra parts |
|---|---|---|---|---|
| START / STOP button | Pin D11 / D10 | GND | — | None |
| Level switch (×2) | 3V3 | Pin D8 / D9 | — | 10 kΩ from the pin to GND |
| Flow sensor (×2) | Red: +5 V supply | Black: GND | Yellow: pin D2 / D3 through a Schottky diode (cathode to the sensor) | 10 kΩ from the pin to 3V3; optional 1–10 nF from the pin to GND |
| SSR (×5) | Input +: pin D0 or D4–D7 | Input –: GND | — | Load side in series with the valve or pump and its supply |
| OLED | VCC: 3V3 | GND: GND | SDA: A4, SCL: A5 | None |
| Buzzer (optional) | Signal: pin D1 / TX0 | VCC: 3V3 | GND: GND | None (active buzzer module) |

Choose SSRs whose control input switches reliably at 3.3 V (for example, a 3–32 V DC input). Use an AC-output SSR for AC valves and pumps, and a DC-output SSR with a flyback diode across the coil for DC valves.

## 3. Outputs and relay states

From firmware 3.0, only `GreyWaterOutputs` switches the outputs. The active step requests one of the modes below every 250 ms (`OPERATION_DELAY`), and a separate safety task checks the floats and the pump every 20 ms, whatever the rest of the program is doing (for example while a phone loads the app).

| What the system is doing | When | Tap valve (D6) | Drain valve (D4) | Fill valve (D5) | Pump (D7) | Tank-wash valve (D0) | Firmware function |
|---|---|---|---|---|---|---|---|
| Starting up | Power-on | Off | Off | Off | Off | Off | `allSSROff()` |
| Waiting / not saving | Idle, Run, step 4 with tank full | On | On | Off | Off | Off | `noSavingWater()` |

| What the system is doing | When | Tap valve (D6) | Drain valve (D4) | Fill valve (D5) | Pump (D7) | Tank-wash valve (D0) | Firmware function |
|---|---|---|---|---|---|---|---|
| Washing the tank manually | Idle, after Wash tank on the dashboard | On | On | Off | Off | On until the tank is full | `idleStateLogic()` |
| Filling with tap water | Step 1 (tap), step 3 | On | On | Off | Off | Off | `fillWashingMachineWithTapWater()` |
| Filling with tank water | Step 1 (tank), while the machine draws water | Off | On | Off | On; off within 0.3 s of the machine closing its inlet | Pulsed: 2 s every 10 s | `fillWashingMachineWithTankWater()` |
| Draining soapy water | Step 2 | On | On | Off | Off | Off | `drainSoapyWater()` |
| Saving water to the tank | Step 4, tank not full, drain flow above the minimum flow to save | On | Off | On | Off | Off | `checkAndFillWaterTank()` |

**Pump protection (from firmware 2.5):** the pump runs only while water is actually flowing.

- **Fast cut-off:** if no tap-sensor pulse arrives for 0.3 s, the pump stops and the tap valve opens at once. That happens when the machine closes its inlet, or when the pump delivers nothing (air lock, blocked intake, empty pipe). The pump gets 1 s after starting for water to flow.
- **No restart into a closed inlet:** after a cut-off, the pump waits for the machine's next draw.
- **Alert:** after 3 starts with no water in one cycle, the controller sends a *tank pump not pumping* alert.
- **Hardware limit:** firmware cannot remove the last 0.3 s. A pump with a built-in pressure switch, or a bypass back to the tank, protects it fully.

**Interlocks (from firmware 3.0):** applied every 20 ms in every state.

- The fill valve (D5) and the tank-wash valve (D0) never open while the high float is wet. In step 4 the rinse water then goes to the drain, and saving stays off for the rest of that step.
- The pump (D7) never runs while the low float is dry; the tap supplies the machine instead.
- The pump cut-off above keeps working even if the main program is busy.

### Tank level decoding

From firmware 3.0, the safety task reads both switches every 20 ms. Each switch reports its safe reading after 0.2 s (high float wet, low float dry) and the other reading only after 2 s, so a float bobbing at the mark does not switch valves on and off:

| Low switch D9 | High switch D8 | Level | OLED tank icon |
|---|---|---|---|
| LOW | LOW | low | Empty (outline with half-way marks) |
| HIGH | LOW | medium | Half full |
| HIGH | HIGH | high | Full |
| LOW | HIGH | high: the tank is treated as full and the pump is not used. After 3 s it is reported as a switch fault (alert *check level switches*, app *Check float switches*); see section 8 | Full |

### Tank-wash timing

While `fillWashingMachineWithTankWater()` runs, the wash valve opens immediately, stays open for `TANK_WASH_OPEN_TIME` (2 s), and reopens every `TANK_WASH_PERIOD` (10 s). The timer restarts on every state entry. Switching to tap water closes the valve; switching back to tank water in the same state continues the same 10 s cycle.

## 4. Buttons and operator controls

The system has two momentary buttons: Start begins a cycle from Idle, and Stop ends a cycle from any other state. Both are read every `loop()` pass by `updateInputs()` with a 20 ms debounce (`DEBOUNCE_DELAY`).

| Button | Pin | Press it when | What happens | Screen shows | Ignored when |
|---|---|---|---|---|---|
| START | D11 | The screen shows `READY` and the washing machine program is running | From 3.8 the cycle begins when START is released: under 2 s Reuse and save, held 2 s Reuse only (rinse water to the drain), held 15 s nothing (stuck). Step 1 starts after 250 ms. A press during the start-up animation ends it | While held `REUSE AND SAVE`, after 2 s `REUSE ONLY`; then `STARTING`, `WASH 1 OF 4` | A cycle is already running |
| STOP | D10 | You want to cancel the cycle | The system returns to Idle and resets all timers | `STOPPED` for 4 s, then `READY` | The system is already in Idle |

## Operational notes

- **Start in any other state:** ignored. A running cycle cannot be restarted without pressing Stop first.
- **Stop in Idle:** ignored.
- **Stop paths:** from Run and Fill 1/4 the state machine's own transition goes to Idle. From Drain 2/4, Rinse 3/4 and Drain 4/4, `loop()` also forces a reset with `resetFSMToIdle()`. Both end in the same Idle entry.
- **Buttons act while held:** the debounce reports the button as pressed for as long as it is held, not once per press. Holding Start when a cycle ends starts the next cycle straight away.
- **Both buttons at once:** do not press both buttons simultaneously. The resulting state depends on the order in which transitions are evaluated.
- **Stop is not an emergency stop.** In Idle the tap and drain SSRs stay on (`noSavingWater()`). To make the installation safe, isolate the SSR and valve supply (see Safety precautions).


## Standard operating procedure

1. Check that the OLED shows `READY` / Press START.
2. Load the washing machine and start its program.
3. Press Start. The header changes to `1/4 WASH`.
4. No operator action is required while the cycle runs. Progress shows in the header (`1/4` to `4/4`); in step 4 a countdown shows the time left.
5. When the OLED shows `DONE` / Cycle complete, the system is back in Idle.
6. To abort, press Stop at any time.

# 5. Operating procedure

Pressing Start runs the four steps in order; each of steps 1–3 ends only when the flow sensors confirm what the washing machine is doing, and step 4 ends after 20 minutes.

**Start runs four steps, then the system returns to Idle**

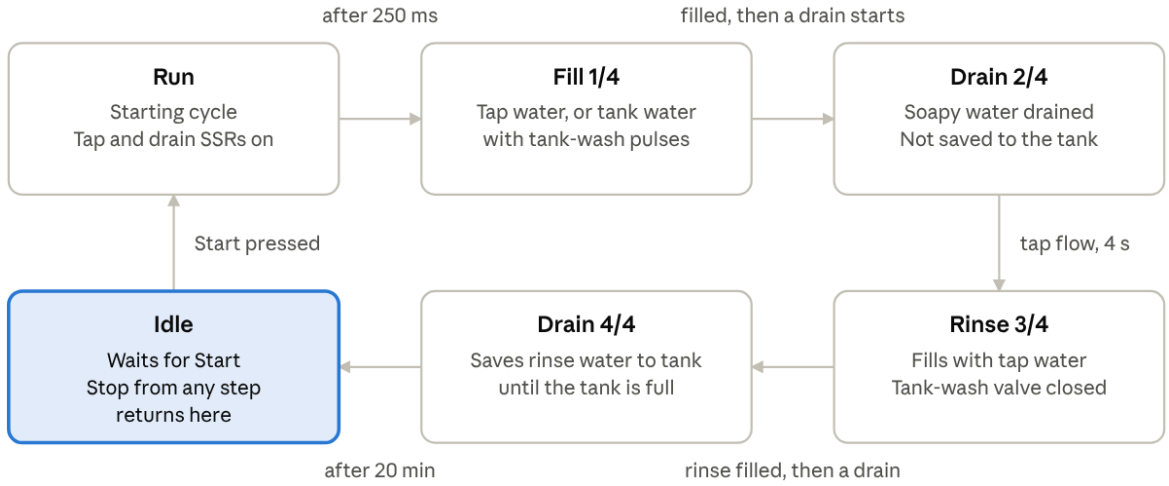


State machine · 6 states, Stop returns to Idle from every step

The diagram reads clockwise from Run. "Flow, 4 s" means the flow rate stayed above the Flow threshold (default 1 L/min) for the flow detection time, `EDGE_DETECTION_DELAY` (4 s).

| State | On entry | Every 250 ms | Next state | Exit condition |
|---|---|---|---|---|
| Idle | Clears buttons, cycle flags, edge flags, flow counters, tank-wash timer; shows the result notice | `noSavingWater()` | Run | Start pressed |
| Run | Clears any notice | `noSavingWater()` | Fill 1/4 | 250 ms elapsed |
| Fill 1/4 | Resets flow counters and tank-wash timer | `checkAndFillWashingMachine()`: tap water if the tank is low or no demand yet, else tank water with wash pulses | Drain 2/4 | The machine is filled (took at least the Minimum fill, default 3 L, and its inlet closed), then a drain starts (`filled1`). A drain before or during the fill does not count. |

| State | On entry | Every 250 ms | Next state | Exit condition |
|---|---|---|---|---|
| Drain 2/4 | Resets flow counters | `drainSoapyWater()` | Rinse 3/4 | Tap flow seen for 4 s: the machine starts its rinse fill (`drained1`) |
| Rinse 3/4 | Resets flow counters | `fillWashingMachineWithTapWater()` | Drain 4/4 | The rinse fill is complete (Minimum fill taken, inlet closed), then a new drain starts: the rinse drain (`filled2`) |
| Drain 4/4 | Resets flow counters; starts the countdown | `checkAndFillWaterTank()`: save to tank while low or medium, else not saving | Idle | `TRANSITION_DELAY` (20 min) elapsed |

Steps 1–3 have no timeout. If the expected flow never arrives, the step waits until Stop is pressed (section 8).

The controller follows the washing machine; it does not command it. Start the machine's own program, then press Start, and keep the machine's program length in line with `TRANSITION_DELAY`.

## 6. OLED display guide

The screen shows the step in the header, two live indicators on the right, and a one-line message below. From firmware 3.3 a message can have up to five short pages that change every 3 seconds (`DISPLAY_PAGE_MS`): what is happening, what it means, and what to do or how long it takes. In the tables below the pages are separated by ›. One line holds only about 15 characters in the large font, so pages say more without making the text smaller.

```
+--------------------------------+
|WASH 1 OF 4           [###] [W] |   header: step + tank level + wash valve
|--------------------------------|
|          Reusing water         |   message: the Screen font, one fixed size;
                                      then "from the tank", "25 min left" (3 s each)
+--------------------------------+
```

| Element | Reads | Meaning |
|---|---|---|
| Header text | `WASH 1 OF 4` etc. | Current step (from 3.3 in words: `WASH 1 OF 4`, `DRAIN 2 OF 4`, `RINSE 3 OF 4`, `SAVE 4 OF 4`; until 3.2 `1/4 WASH`). Built-in 6 px font, at most 16 characters |

| Element | Reads | Meaning |
|---|---|---|
| Tank icon | 17 × 10 px box: empty with half-way marks / half / full | Tank level from the level switches (low / medium / high) |
| `W` icon | Outlined / white box | Tank-wash valve closed / open |
| Message | The font chosen in Settings → Screen font, in one fixed size for every message (from 3.9), centred; pages change every 3 s (from 3.3) | What the system is doing now, what it means, what to do |

## Start-up animation (from firmware 3.2)

After power-on or a restart, a Border Collie chases a butterfly across the whole screen for about 4 seconds: it gallops in, crouches and stalks the butterfly, then sprints after it. Then `REUSE WATER` / System ready shows for 2 seconds, then `READY` / *Start washer › Press START*.

- The rest of the controller starts at the same time: Wi-Fi connects and the safety task runs; the animation does not delay anything.
- Notices that arrive during the animation (the IP address, the Wi-Fi setup key, `INTERRUPTED`) are kept and shown after System ready.
- START, or Wash tank in the app, ends the animation at once. Without a working screen it is skipped.
- The drawings are in `BootAnimation.h` (about 1.6 KB).

## Screen font (from firmware 3.6, one size from 3.9)

In the app, **Settings → Screen → Screen font** chooses the letters of the screen messages. Save the settings and look at the controller screen; try each style from where the screen is usually read, and keep the clearest. The four styles were picked by the household in 3.6 and replace all earlier ones (the six of 3.4, Helvetica Bold included).

| Choice (Spanish) | Style | Made from | Fixed size (capitals) | Widest message |
|---|---|---|---|---|
| Hyperlegible — *Hiperlegible* (default) | Open bold sans, made for readers with low vision | Atkinson Hyperlegible Bold | 12 px | 128 of 128 px |
| Plain sans — *Sencilla* | Plain bold sans, the largest letters of the four | PT Sans Bold | 13 px | 121 of 128 px |
| Terminal bold — *Terminal gruesa* | Pixel font drawn for screens, even letter widths | Terminus Font Bold 8x16 | 12 px | 128 of 128 px |
| Schoolbook bold — *Escolar gruesa* | Serif pixel font, like a school reader | Adobe New Century Schoolbook Bold | 11 px | 124 of 128 px |

From 3.9 every message in a style has the same letter size: the largest in which all 107 message pages (English and Spanish) fit the 128 px line without scrolling, centred under the separator line. The letters never change size between pages or screens. The top line keeps its small built-in font. The change shows on the screen as soon as the settings are saved, and it is kept after a restart. After the upgrade from 3.4 or 3.5 the screen starts in Hyperlegible, because the earlier styles were removed; a history file from before 3.6 restores every setting except the screen font. Font origins and licences: `licenses/README.md` in the firmware folder (free fonts under the SIL Open Font License, and the Adobe pixel font).

## Messages

English, then Spanish. Pages are separated by ›; a page in brackets appears only when it applies. From 3.4 the top line says the step or the event and the message only adds what is new (for example `DONE` shows only the litres).

| Top line | Message pages | What it means | Action needed |
|---|---|---|---|
| Full screen: a dog chasing a butterfly | | The controller has just switched on (about 4 s) | None; START skips it |
| `REUSE WATER`<br>`REUSO DE AGUA` | System ready<br>Sistema listo | Start-up finished (2 s) | None |
| `READY`<br>`LISTO` | Start washer › Press START<br>Inicie lavadora › y pulse START | Waiting for a new cycle; the tank icon shows the tank level | Start the machine’s program, then press START |
| `REUSE AND SAVE`<br>`REUSAR Y GUARDAR` | Release to start<br>Suelte e inicia | START is held (under 2 s); a release starts the normal cycle (3.8) | Let go, or hold to 2 s for Reuse only |
| `REUSE ONLY`<br>`SOLO REUSAR` | Release to start<br>Suelte e inicia | START held 2 s; a release starts Reuse only (3.8) | Let go |
| `START BUTTON`<br>`BOTON START` | Stuck › Check button<br>Atascado › Revise el boton | START held 15 s; nothing starts (3.8) | Let go; check the button if it stays |
| `STARTING`<br>`INICIANDO` | Getting ready...<br>Preparando... | START was released | None |
| `STARTING`<br>`INICIANDO` | Getting ready... › Reuse only<br>Preparando... › Solo reusar | *Reuse only* was started in the app (3.7) | None |

| Top line | Message pages | What it means | Action needed |
|---|---|---|---|
| `WASH 1 OF 4` `LAVADO 1 DE 4` | Waiting to fill (› 25 min left)<br>Esperando agua (› Faltan 25 min) | The machine has not started taking water yet | Start the machine's program if it is not running |
| `WASH 1 OF 4` | Reusing water<br>Reusando agua | The machine is filling with water saved in the tank; the tank is being cleaned (`W` lights every 10 s) | None |
| `WASH 1 OF 4` | Using tap water<br>Agua de la llave | The machine is filling from the tap | None |
| `WASH 1 OF 4` | Tank low › Using tap water<br>Tanque bajo › Agua de la llave | The tank has too little water, so tap water is used | None |
| `WASH 1 OF 4` | Washing... (› 25 min left)<br>Lavando... (› Faltan 25 min) | The machine has filled and is washing | None |
| `DRAIN 2 OF 4` `DESAGUE 2 DE 4` | Draining › soapy water<br>Desaguando › agua jabonosa | Soapy wash water goes to the drain, not the tank | None |
| `RINSE 3 OF 4` `ENJUAGUE 3 DE 4` | Using tap water<br>Agua de la llave | Rinse fill from the tap | None |
| `RINSE 3 OF 4` | Rinsing...<br>Enjuagando... | The machine has filled and is rinsing | None |
| Steps 1, 2 or 3 | No water flow › Check washer › Call installer<br>Sin flujo › Revise lavadora › Pida ayuda | The step has waited longer than the step time limit for water flow | Check the washing machine; if it runs, press STOP and check the Service tab of the app |
| `SAVE 4 OF 4` `AHORRO 4 DE 4` | Filling tank › Ends in 18:42<br>Agua al tanque › Fin en 18:42 | Rinse water is stored; the clock shows when the cycle ends | None |
| `SAVE 4 OF 4` | Low flow › To the drain › Ends in 18:42<br>Flujo bajo › Al desague › Fin en 18:42 | The drain flow is at or below the minimum flow to save, so the fill valve is closed and the rest goes to the drain (from 3.4) | None; saving starts again if the machine pumps out again |

| Top line | Message pages | What it means | Action needed |
|---|---|---|---|
| `SAVE 4 OF 4` | Tank full › Ends in 18:42<br>Tanque lleno › Fin en 18:42 | The tank is full; the rest goes to the drain | Use or empty the tank if this happens often |
| `DRAIN 4 OF 4` `DESAGUE 4 DE 4` | Not saving › To the drain › Ends in 18:42<br>Sin guardar › Al desague › Fin en 18:42 | A *Reuse only* cycle (3.7): the fill valve stays closed and all rinse water goes to the drain; no *tank full* alert | None |
| `TANK CLEANING` `LIMPIEZA TANQUE` | Until full › 9:42 left<br>Hasta llenarse › Quedan 9:42 | Manual tank wash; the clock shows the time left before the safety limit | None |
| `TANK CLEANED` `TANQUE LIMPIO` | Tank full<br>Tanque lleno | The manual wash filled the tank | None |
| `WASH STOPPED` `LAVADO DETENIDO` | Tank not full<br>Tanque no lleno | Stopped from the app, the STOP button, or by a cycle starting | None |
| `WASH STOPPED` | Check tank › Call installer<br>Revise tanque › Pida ayuda | The time limit was reached, or the level switches disagree | Check both float switches and the wash water supply |
| `INTERRUPTED` `INTERRUMPIDO` | Check washer › Resume in app<br>Revise lavadora › Reanude en app<br>(Start again / Inicie de nuevo when it cannot be resumed) | The controller restarted during a cycle (15 s) | Check the washing machine; then Resume cycle in the app within 30 min, or start again |
| `RESUMED` `REANUDADO` | Cycle resumed<br>Ciclo reanudado | The cycle was resumed from the app (4 s) | Nothing; the saved step continues |
| `ReuseWater–Setup` | Wi-Fi setup › Key gw-a1b2c3<br>Configurar Wi-Fi › gw-a1b2c3 | The Wi-Fi setup page is open; the top line is the network to join and the key is its password | Join it on a phone with that key |
| IP address | Wi-Fi connected › App: this IP<br>Wi-Fi conectado › App: esta IP | Connected to the home Wi-Fi; the top line is the app's address (6 s) | Note it, or use `reusewater.local` |

| Top line | Message pages | What it means | Action needed |
|---|---|---|---|
| `UPDATING` `ACTUALIZANDO` | Do not unplug<br>No desconecte | A wireless firmware update is running | Wait; do not switch off |
| `UPDATED` `ACTUALIZADO` | Restarting<br>Reiniciando | The update finished; the controller restarts | None |
| `UPDATE FAILED` `NO ACTUALIZADO` | Try again<br>Reintente | The wireless update did not finish; the old firmware still runs | Try the upload again |
| `STOPPED` `DETENIDO` | Cycle cancelled<br>Ciclo cancelado | STOP was pressed | Press START to run again |
| `DONE` `TERMINADO` | Reused 26 L › Saved 30 L (or Cycle complete)<br>Reusados 26 L › Guardados 30 L (o Ciclo completo) | The cycle finished: tank water used instead of tap water, and rinse water stored for the next wash | None |

**Brightness** (from 3.4): the screen runs at full brightness (contrast 255; the display library starts at 207), so the letters are sharper from a distance.

**Minutes left** (from 3.3): once every step has been timed at least once, steps 1–3 add a page *25 min left* / *Faltan 25 min*. It is the machine's typical time for the rest of the current step (at least 1 minute), the typical times of the later steps, and the fixed length of step 4. Until then the page is left out.

A notice (for example `DONE`) stays on long enough to show each of its pages once (3 s per page), and never less than its own time (4 s; 15 s for `INTERRUPTED`).

Every page fits the screen without scrolling: each one is measured in the 12 px font by `tools/check_screen_text.py` (127 texts and pages in both languages), and short pages use the larger 14 px size. A countdown in a page does not restart the pages. The dashboard shows the same status as full sentences.

Short pages are centred and still. A page wider than 128 px would pause for 1.5 s, then scroll at 50 px/s and repeat. The display only sends a new frame when something changes, when the page changes, while text scrolls, or during the start-up animation.

## 7. Configuration parameters

All timing and behavior settings are `#define`s in `GreyWaterSystem.h`; change them there and re-flash.

| Constant | Default | Unit | Controls | Guidance |
|---|---|---|---|---|
| `OPERATION_DELAY` | 250 | ms | How often each state updates relays and sensors | Keep 100–1000; other timings are rounded to this step |
| `TRANSITION_DELAY` | 1200000 | ms | Length of step 4 (20 min) before returning to Idle | Set to how long the machine's rinse drain lasts |
| `EDGE_DETECTION_DELAY` | 4000 | ms | Flow must last this long to count as "flow detected" | Raise if short spurts end steps early |
| `TANK_WASH_PERIOD` | 10000 | ms | Interval between tank-wash openings | Multiple of `OPERATION_DELAY` |
| `TANK_WASH_OPEN_TIME` | 2000 | ms | Wash valve open time per interval | Less than `TANK_WASH_PERIOD`, else always open |
| `DEBOUNCE_DELAY` | 20 | ms | Button debounce | 20–50 |
| `CONTRL_SSR_DELAY` | 0 | ms | Blocking delay after each SSR write | Keep 0; any value blocks `loop()` 5× per update |
| `DISPLAY_FRAME_MS` | 40 | ms | Frame interval while scrolling and during the start-up animation (25 fps) | Not below about 20 |
| `SCROLL_SPEED_PX` | 2 | px/frame | Scroll speed (50 px/s) | 1–3 |
| `SCROLL_PAUSE_MS` | 1500 | ms | Rest before a long message scrolls | — |
| `SCROLL_GAP_PX` | 40 | px | Gap before a scrolled message repeats | — |
| `NOTICE_DURATION` | 4000 | ms | How long "Cycle stopped" / "Cycle complete" stays | — |
| `BUZZER_PIN` | `D1` | — | Pin of the optional buzzer (D12 until 3.1) | Keep D1 unless the wiring changes; do not use `Serial0` |
| `DEBUG_MODE` | false | — | Serial debug output at 9600 baud | Set true for troubleshooting |
| `SENSOR_TAP_TYPE` | YFB1 | — | Tap flow sensor model | Must match the fitted sensor |
| `SENSOR_DRAIN_TYPE` | YFB10 | — | Drain flow sensor model | Must match the fitted sensor |

The start-up animation speed and stalk length are `INTRO_SPEED_PX` and `INTRO_STALK_FRAMES` in `GreyWaterDisplay.cpp`.

The SSR logic level is set in the `.ino` (`ssrON = HIGH`, `ssrOFF = LOW`). For active-LOW relay boards, swap the two values.

From firmware 2.0, the wash timing, final drain length, flow detection time and alert limits are changed on the dashboard (section 11) and saved in the controller. The `#define` values are only the factory defaults used on first boot.

# 8. Exceptions and troubleshooting

The firmware handles a low or full tank automatically, but it has no timeouts on steps 1–3, so a missing flow signal leaves the cycle waiting until Stop is pressed; from firmware 2.9 it alerts when a step takes longer than the alert time.

## Conditions handled by the firmware

| Condition | Detected by | Automatic response | OLED |
|---|---|---|---|
| Tank low during Fill 1/4 | Level switches | Fills from the tap instead of the tank | Tank low: tap |
| No tap demand yet in Fill 1/4 | Tap flow sensor | Stays on tap water until flow is confirmed | Using tap water |
| Drain flow at or below the minimum flow to save during Drain 4/4 (from 3.4) | Drain flow sensor (2 s average) | Fill valve closes and drain opens on the same 250 ms pass, about 2 s after the flow drops (the measuring time); saving resumes after 2 s above the limit. Logged as *Saving paused* / *Saving resumed*; no phone alert | Low flow |
| Tank full during Drain 4/4 | High-level switch | Stops saving; water goes to the normal drain path | Tank full: drain |
| High float wet, low float dry for 3 s (from 3.0) | Both level switches | Tank treated as full: no saving, no tank wash, no pump; tap water used. High-priority alert, alarm beeps, event logged | App: Check float switches |
| Stop pressed | Stop button | Returns to Idle, clears all flags and timers | Cycle stopped |
| Power loss or reset | — | Restarts in Idle with all outputs off; the cycle is not resumed by itself (from 3.10 the app can resume it within 30 min) | Start-up animation, System ready, then Press START ( `INTERRUPTED` if a cycle was running) |
| `millis()` rollover after 49.7 days | — | Timers use unsigned subtraction, so they keep working | — |

## Faults not detected by the firmware

| Problem | Most likely cause | What to check | How to fix | Who |
|---|---|---|---|---|
| Screen blank, nothing responds | No power, or the display is not detected (from 3.0 the controller keeps running without it and sends an alert) | Power to the board; OLED wires on 3V3, GND, A4, A5 | Reseat the OLED wiring; confirm address 0x3C | Technician |
| Stuck on `WASH 1 OF 4` | One flow sensor reports no water | Washing machine program is running; both flow sensors (D2, D3) | Press STOP; clean or reconnect the sensor | User, then technician |
| Stuck on `DRAIN 2 OF 4` | Tap flow sensor reports no water | Tap valve opens; tap sensor on D2 | Press STOP; check the tap sensor | Technician |
| Stuck on `RINSE 3 OF 4` | Drain flow sensor reports no water | Drain hose and drain sensor on D3 | Press STOP; check the drain sensor on the Service tab (pulses counting with no water = noise: fix the wiring); raise the Flow threshold if a steady trickle continues | Technician |
| Steps change too early | Electrical noise or short spurts of water | Sensor cable routing near mains wires | Separate the sensor cables from mains, pump and valve wiring; fit the diode and pull-up interface; raise the Flow threshold in Settings | Technician |
| Tank icon wrong | Level switch stuck, or a missing pull-down resistor | Move each float by hand and watch the icon | Clean the floats; fit the 10 kΩ pull-downs | Technician |
| Fill keeps switching tap ↔ tank | Float bouncing or water sloshing | Float mounting | Mount the float in a calm spot or a still tube | Technician |
| `W` lights but no tank wash | SSR wired to the wrong pin, or no valve supply | SSR on D0; SSR LED; valve supply | Rewire to D0; restore supply | Technician |
| Tank-wash valve open the whole fill | `TANK_WASH_OPEN_TIME` is not less than `TANK_WASH_PERIOD` | Settings in the app | Set the open time below the interval | Technician |

| Problem | Most likely cause | What to check | How to fix | Who |
|---|---|---|---|---|
| A valve or the pump never switches | Failed SSR, or SSR needs a different logic level | Voltage on the pin (3.3 V when on); SSR LED | Replace the SSR; swap `ssrON` / `ssrOFF` for active-LOW boards | Technician |
| Buzzer silent | Buzzer off in Settings, still wired to D12, or a passive buzzer | Settings → Buzzer; signal wire on D1 (from 3.2); module type | Switch it on; move the wire to D1; use an active buzzer module | Technician |
| Buzzer chirps at power-on | Normal: the chip's start-up messages go out on D1 (TX0) | — | None; it stops as soon as the firmware starts | — |
| Screen stutters, buttons slow | I2C too slow, or a delay added to SSR switching | `Wire.setClock(400000)`; `CONTRL_SSR_DELAY` | Keep 400 kHz and a 0 ms delay | Technician |
| A new cycle starts by itself | START button held or stuck | Button and its wiring | Release or replace the button | User |

### Diagnostic procedure

1. Set `DEBUG_MODE` to `true` in `GreyWaterSystem.h` and flash.
2. Open the Serial Monitor at 9600 baud.
3. Watch the state entries (`Entering state: …`), flow rates, tank level and SSR switching while you reproduce the fault.
4. Set `DEBUG_MODE` back to `false` for normal use; the debug output slows the loop.

Developer note: `DEBUG_PRINT(x)` expands to an `if` without braces. Do not use it as the only statement before an `else`.

## 9. Commissioning and test checklist

Run these checks after installation, after any wiring change, and after flashing new firmware.

### Before power-up

- [ ] Every SSR input is wired to its pin from section 2, with a common GND
- [ ] SSR load side and valve/motor supply are fused and switched off
- [ ] Level switches have pull resistors; buttons go to GND

- [ ] Flow sensor signal levels are safe for the board's inputs
- [ ] If a buzzer is fitted: active buzzer module, signal on D1 (not D12)

## Power-up and idle

- [ ] OLED shows the Border Collie chasing the butterfly (about 4 s), then `REUSE WATER` / System ready for 2 s, then `READY` / *Start washer › Press START*, with no `DONE`
- [ ] Pressing START during the animation ends it at once
- [ ] Messages read clearly in the bold font at the normal viewing distance; each page stays about 3 s, long enough to read
- [ ] All SSRs are off for the first moment, then tap and drain SSRs turn on in Idle
- [ ] Tank icon follows the level switches when each float is lifted by hand (empty, half, full)
- [ ] If a buzzer is fitted: at most a short chirp at power-on, then silent

## Buttons

- [ ] Start in Idle changes the header to `STARTING`, then `WASH 1 OF 4`
- [ ] Stop during each step shows `STOPPED` / *Cycle cancelled* for 4 s, then `READY`
- [ ] Start during a running step has no effect

## Full cycle

- [ ] Fill 1/4 with the tank low uses tap water; the `W` icon stays outlined
- [ ] Fill 1/4 with water in the tank switches to tank water once the machine draws water; the motor runs and `W` turns white for 2 s every 10 s
- [ ] Drain 2/4 shows *Draining › soapy water*; the fill valve stays off
- [ ] Rinse 3/4 uses tap water (*Using tap water*); the wash valve stays closed
- [ ] Drain 4/4 saves water (fill valve on, drain off) and the countdown decreases each second
- [ ] With the tank full, Drain 4/4 shows *Tank full › Ends in …*
- [ ] After 20 minutes the OLED shows `DONE` / Cycle complete, then `READY`; with the buzzer on, two short beeps

## Faults

- [ ] Disconnect the OLED and reset: the controller keeps running and the app's Service tab shows the screen as not working
- [ ] Disconnect a flow sensor in Fill 1/4: the step waits, and Stop still returns to Idle

# 10. Maintenance and firmware deployment

## Maintenance

| Task | Interval | Notes |
|---|---|---|
| Check the OLED tank icon against the real tank level | Monthly | Catches stuck or fouled level switches |
| Clean flow sensors and their inlet screens | Every 3 months | Lint in grey water blocks the YF-B10 drain sensor first |
| Inspect the tank and its wash nozzle | Every 3 months | Adjust the wash valve open time in Settings if sediment builds up |
| Check valves and SSRs switch (run the commissioning "Full cycle" checks) | Every 6 months | Listen for each valve click; check SSR LEDs |
| Check connectors and cable strain relief | Every 6 months | Damp environment |

Intervals are suggested starting points; adjust them to the water quality and how often the machine is used.

## Firmware build and installation

1. Install the Arduino IDE (or arduino-cli) and the board package **esp32 by Espressif Systems**; select **Arduino Nano ESP32**.
2. Install the libraries: Adafruit GFX, Adafruit SSD1306, AgileStateMachine and WiFiManager (from firmware 2.4 the FlowSensor library is no longer needed; the 3.2 screen fonts are part of the sketch).
3. Keep the whole `FSM_WashingMachineSystem` folder together: the `.ino` and every `.cpp` and `.h` file in it. The folder name must stay `FSM_WashingMachineSystem`.
4. Select the board and port, then Upload (over USB, or wirelessly, see section 11).
5. Run the checks in section 9.

## Software modification reference

- Pins, timings and display settings: `GreyWaterSystem.h` (sections 2 and 7).
- Relay combinations and interlocks: `GreyWaterOutputs.h` / `.cpp` (section 3).
- OLED text: `displaySetStatus()` calls in each state's logic function, and the strings returned by `checkAndFillWashingMachine()` and `checkAndFillWaterTank()`. Every screen text is a `TRS("English", "Español")` pair; run `tools/check_screen_text.py` after changing one.

- Screen layout, fonts and start-up animation: `GreyWaterDisplay.cpp`, the `Font*.h` files (made by `tools/make_screen_fonts.py`), `BootAnimation.h`.
- States and transitions: `setupStateMachine()` in the `.ino` (section 5).

## 11. Wi-Fi features (firmware 2.0)

Firmware 2.0 adds a phone dashboard, alerts, water statistics and wireless updates; the wash cycle runs exactly the same when Wi-Fi is missing. From firmware 3.2 the app is called **Reuse Water System** (Spanish: *Sistema de Reúso de Agua*).

### First-time Wi-Fi setup

1. On first boot, after the start-up animation, the screen shows `ReuseWater-Setup` and the setup key, for example `Key gw-a1b2c3` (in Spanish, only the key). The key is unique to each board (from firmware 3.0) and is also printed on the USB serial monitor.
2. On a phone, join the Wi-Fi network **ReuseWater-Setup** with that key. Only if the screen is missing or broken is the key the old shared password `greywater`.
3. A setup page opens (otherwise browse to `192.168.4.1`). Choose the home network and enter its password.
4. The screen shows the controller's IP address for 6 seconds.
5. Open `http://reusewater.local` (or that IP address) and sign in as `admin`, password `greywater`, with **Remember this device** on (from 3.11 the app has its own sign-in form and asks only once per device).
6. In **Settings**, set new passwords and an alert topic (see Phone alerts).

The setup page closes after 3 minutes and the system then runs offline. To open it again, for example after changing the router, hold **STOP for 5 seconds** while the screen shows `READY`.

From firmware 3.0 the setup page only sets the Wi-Fi network and shows information: it cannot install firmware or erase the controller, because it has no password of its own.

> **Name change (3.2):** until firmware 3.1 the app was at `greywater.local`, the setup network was `GreyWater-Setup` and the update port was `greywater`. After the 3.2 update they are `reusewater.local`, `ReuseWater-Setup` and `reusewater`. The IP address, passwords, settings and water history do not change; update any bookmark or home-screen shortcut.

## Dashboard

| Tab | For | Shows |
|---|---|---|
| Overview | Household | What is happening now, using the same words as the controller's screen; **Reuse and save** (normal cycle), **Reuse only** (rinse water to the drain, 3.7) and **Stop cycle**, each start button with a one-line description and a confirmation; the storage tank (level, water age, wash valve) and the Wash tank button |
| Water use | Household | Last wash (when, how long, litres reused and saved); this month's share of washing water that came from the tank, compared with last month; washes, reused, saved and tap water this month; totals by period |
| Service | Installers and technicians | Flow sensors (rate, flowing or not, pulse counts); valves and pump; tank level switches; current step with litres taken and the "machine is filled" guard; Wi-Fi, IP address, uptime, alerts and firmware |
| Settings | Everyone | All the values in the settings table, a test-alert button and a restart button |

**View-only user (from firmware 3.5):** for people who should follow the washes and the water figures but must not change the controller. As `admin`, open **Settings** → **Security**, switch on **View-only user** (*Usuario de solo consulta*), enter a **New viewer password** (8–32 characters, not the dashboard password) and press Save settings. Give that person the user name `viewer` and that password.

- Signed in as `viewer`, the app shows only **Overview** and **Water use**. There is no Reuse and save, Reuse only, Stop cycle, Wash tank, *OK, I checked the machine*, Restore to controller or Restore from file, and no Service or Settings tab. A note under the status says changes need the admin sign-in. Download history file still works.
- The controller itself refuses every change, the settings and the event log from `viewer`, so the limit holds even outside the app.
- To take the access away, switch View-only user off and Save: the viewer password stops working at once. To change it, enter a new one and Save.
- A browser remembers one sign-in per address. To try the viewer on your own phone, use a private browser window, or Sign out (door icon in the top bar) and sign in as `viewer`.
- The STOP button on the controller always works, whoever is signed in to the app.

On the Service tab, the tank-wash valve state is reported by the controller. The other valve and pump states are the expected states for the current step and fill source.

**Refresh (from firmware 2.8.1):** the app updates itself every 2 seconds. The badge in the top bar shows the connection:

- *Online* with the controller's time: updates are arriving.
- *Updating slowly*: no update for 6 seconds, usually weak Wi-Fi.

- *Offline*: the controller cannot be reached.

Press **Refresh** next to the badge to fetch fresh data at once. It cancels any update that is still waiting.

## Keeping the water history

The Water use history survives firmware updates. From firmware 2.8 it is protected in three places:

| Where | What it does |
|---|---|
| The controller | Stores the history twice (main record and backup copy), saves it again before every wireless update, and never overwrites a record it cannot read |
| Every phone that opens the app | Keeps its own copy, updated automatically. If the controller ever comes back without history, the Water use tab shows the phone's copy and a Restore to controller button |
| A history file | Download history file on the Water use tab. Restore from file brings it back, even onto a replaced or fully erased controller |

**If the Water use tab is empty after an update:**

1. Open the app on a phone that was used before the update. Use the same address as usual: `reusewater.local` and the IP address keep separate copies (before 3.2 the address was `greywater.local`).
2. On the Water use tab, press **Restore to controller**. If no phone has a copy, use **Restore from file** with a downloaded history file.
3. Check the Service tab: Water history should read Restored from the app.

**Avoid erasing the controller's memory:** a normal upload keeps the history. A full flash erase removes it, together with the settings and the Wi-Fi network. That covers Burn Bootloader, recovery mode, uploading with another board or partition scheme selected, and Erase All Flash. Download a history file before any such work.

## Safety and service features (firmware 2.9)

| Feature | What happens | Where to see it |
|---|---|---|
| Interrupted cycle | If the power goes off, the program crashes or the watchdog restarts the controller during a cycle, the controller comes back in Ready with all outputs safe. It shows `INTERRUPTED` / Check machine (after the start-up animation), sends a high-priority alert and logs the event. The cycle is not resumed by itself. | Screen, phone alert, Overview notice (until OK or the next Start), Service → Recent events |

| Feature | What happens | Where to see it |
|---|---|---|
| Resume after a power cut (3.10) | The controller keeps a small snapshot of the running cycle in flash: the step, Reuse and save or Reuse only, whether the machine had already filled, and the litres so far. After a cut it still starts in Ready with every output off; the app then asks in a popup *Resume the interrupted cycle?* with three buttons: **Resume cycle** (continues at the start of the saved step, same mode, litres kept), **Not now** (the notice keeps a Resume button) and **Don't resume**. If the machine had already filled in step 1 or 3, the step waits only for the drain that ends it. Offered for 30 min after power-up, only to the admin, only with Start from the dashboard on, and not for a snapshot over 4 h old. Water that flowed in the cut step after its last snapshot is not counted; step 4 starts again with its full length | Popup and Overview notice; screen `INTERRUMPIDO` › *Reanude en app*, then `REANUDADO`; Service → Recent events *Cycle resumed: step n/4* |
| Watchdog | If the program freezes for 5 s, the controller restarts with every output off | Service → Last restart: Watchdog (program froze) |
| Wireless updates | Accepted only while the controller is Ready and no tank wash runs. During a cycle, the Arduino IDE's network upload gets no answer | Service → Wireless updates |
| Valves and pump | The Service tab shows what each output is actually set to | Service → Valves and pump |
| Event log | The last 50 events since the controller started: steps, machine filled, pump on and off with the reason, alerts, tank wash, Wi-Fi, updates, restores | Service → Recent events |
| Sign in once per device (3.11) | The app shows its own sign-in form: user name, password and **Remember this device** (on by default). A remembered phone or computer stays signed in for 400 days, renewed every time the app is opened, so it is asked only once. The controller gives the browser a signed token, never the password. Changing the dashboard password signs out every other device; **Settings → Security → Sign out other devices** does the same without a new password (use it after losing a phone). **Sign out** (door icon in the top bar) signs out this device. `reusewater.local` and the IP address are separate sign-ins | Sign-in form; top bar; Settings → Security; Service → Recent events |
| Password protection | The app asks for new passwords while the defaults are in use. After 5 wrong passwords in a minute from one device, it refuses that device for a minute; other devices keep working (per device from 3.0) | App |
| Buzzer (optional) | An active buzzer module on D1 / TX0 (D12 until 3.1), switched on in Settings: two short beeps when a cycle ends, three long beeps on alarms | Settings → Cycle |
| Typical step times | The controller learns how long steps 1–3 usually take; the app shows "Usually about 25 min" | Overview |

A printable **Quick Card** for the household, with the installer's commissioning checklist, is a separate document.

## Firmware 3.0 to 3.2

| Feature | What happens | Where to see it |
|---|---|---|
| Safety task (3.0) | Every 20 ms, independent of the app and Wi-Fi: reads the floats, stops the pump within about 0.3 s when the machine stops drawing, keeps the fill and tank-wash valves closed while the high float is wet | Service → Valves and pump; Recent events |
| Float-switch fault (3.0) | High float wet with the low float dry for 3 s: the tank is treated as full, the pump is not used, an alert is sent and the alarm beeps | Alert *check level switches*; app *Check float switches*; Service → Tank level switches |
| No screen (3.0) | If the screen does not answer at start-up, the controller runs without it and sends an alert | Service → Screen |
| Confirmed actions (3.0) | The app shows Cycle started, Cycle stopped or Tank wash started only after the controller confirms; Send a test alert reports whether the alert was delivered | App messages; Service → Last alert |
| Loop time and memory (3.0) | The slowest program pass and the free memory, to spot problems early | Service → Slowest loop pass, Memory |
| Language (3.1) | Settings → Language: Español (default) or English, for the app, the screen and the phone alerts. The event log stays in English for service | Settings |
| Screen font (3.4, new styles in 3.6) | Settings → Screen → Screen font: four letter styles for the messages on the controller screen (Hyperlegible, Plain sans, Terminal bold, Schoolbook bold), each in one fixed size for every message (3.9) | Settings; the controller screen |
| New name (3.2) | Reuse Water System (*Sistema de Reúso de Agua*): app title, screen, alert titles (*Reuse Water: …* / *Reúso de Agua: …*), `reusewater.local`, `ReuseWater-Setup`, update port `reusewater`. Settings, history, backups and passwords are kept | App, screen, alerts |
| Start-up animation (3.2) | A Border Collie chases a butterfly across the screen for about 4 s after power-on, then System ready; START ends it | Screen |
| Clearer screen font (3.2) | Messages in Helvetica Bold, 14 px when they fit and 12 px otherwise; larger tank icon in the header | Screen |
| Buzzer on D1 (3.2) | The optional buzzer moved from D12 to D1 (TX0); a short chirp at power-on is normal | Wiring; Settings → Buzzer |

**Spanish screen texts (3.1):** the screen fonts have no accents, so the screen shows short plain words, for example `LISTO` / *Inicie lavadora › y pulse START*, `LAVADO 1 DE 4`, `DESAGUE 2 DE 4`, `ENJUAGUE 3 DE 4`, `AHORRO 4 DE 4`, *Reusando agua › del tanque*, *Agua de la llave*, *Ahorrando agua*, `TERMINADO` (texts from 3.3), and at start-up `REUSO DE AGUA` / Sistema listo. The app shows

the full Spanish sentences. The Wi-Fi setup page itself stays in English (it comes from the WiFiManager library).

## Manual tank wash

Use it to rinse the storage tank between washes. The wash valve opens and closes by itself as soon as the high-level switch reports that the tank is full.

1. Check that the dashboard shows **Ready** and the tank is not full.
2. In the **Storage tank** panel, press **Wash tank**. The screen on the controller shows `TANK CLEANING` with *Until full › 9:42 left*, the time left before the safety limit.
3. Wait. When the high-level switch reports water, the valve closes and the dashboard shows Tank full: wash valve closed.
4. To end it early, press **Stop washing** on the dashboard or **STOP** on the controller. Starting a cycle also ends it.

| The wash ends because | The valve | Screen and dashboard | Phone alert |
|---|---|---|---|
| High-level switch reports full | Closes at once | Tank full: valve closed | Tank wash complete |
| High-level switch wet, low-level switch dry | Closes at once | Level switches disagree: check sensors | Check level switches (high priority) |
| Safety time limit reached (default 10 min) | Closes | Time limit: check level switch | Tank wash time limit (high priority) |
| Stop washing, STOP button, or a cycle starts | Closes | Tank wash stopped | None |

The button is unavailable while a cycle runs or when the tank is already full.

## Phone alerts

Install the free **ntfy** app, subscribe to a long, hard-to-guess topic name, enter the same topic in Settings and press **Send a test alert**. From firmware 3.2 every alert title starts with *Reuse Water:* (Spanish: *Reúso de Agua:*), for example *Reuse Water: tank full*.

| Alert | Sent when | Priority |
|---|---|---|
| Cycle complete | Step 4 finishes; includes litres reused and saved | Low (silent on most phones) |
| Cycle stopped | STOP pressed on the controller or the dashboard | Minimum (silent) |
| Tank full | The tank fills during step 4 and extra water goes to the drain | Low |

| Alert | Sent when | Priority |
|---|---|---|
| Check sensors | Step 1, 2 or 3 runs longer than the alert time (default 90 min) without the expected flow | High |
| Tank water is old | Stored water is older than the limit (default 48 h) | Normal |
| Tank wash complete | A manual tank wash filled the tank and the valve closed | Low |
| Check level switches | A manual wash stopped because the high-level switch is wet but the low-level switch is dry | High |
| Tank wash time limit | A manual wash reached its time limit before the tank reported full | High |
| Tank pump not pumping | The tank pump started 3 times in one cycle without any water flowing; tap water was used instead | High |
| Cycle interrupted | The controller restarted during a cycle (power cut, crash or watchdog) | High |

Routine news is low priority so people don't mute the topic; problems are high priority so they are noticed.

The topic may use only letters, numbers, `-` and `_` (no spaces or accents); Settings refuses anything else. Leave *Alert server* as `https://ntfy.sh`; if the subscribe link (`https://ntfy.sh/your-topic`) is pasted there, the controller removes the topic. Tapping an alert opens the app (from 3.3).

From firmware 3.3.1, an alert that cannot be sent (alert server down or busy, no internet, no Wi-Fi) is kept and tried again for up to 30 minutes: after 5 s, 10 s, 20 s and so on, then every 5 minutes. Up to 6 alerts can wait at the same time, each on its own schedule. *Recent events* on the Service tab shows *Alert failed (code n), trying again for up to 30 min* and later *Alert delivered (try n)* or *Alert failed*. The test alert gives up after 30 seconds, so the app can answer while you wait; if the alert server is down it reports *could not connect*. (3.3.0: 3 tries and 5 minutes for Wi-Fi; until 3.2.0: one try and 60 seconds for Wi-Fi.) Anyone who knows the topic name can read the alerts, so keep it private.

## Wireless firmware updates

1. Stop any running cycle.
2. In the Arduino IDE, choose **Tools > Port** and the network port named `reusewater` (a board still running 3.1 or earlier shows `greywater`).
3. Upload and enter the update password.
4. The controller switches every valve and the pump off, shows `UPDATING`, then restarts with the start-up animation.

## Settings on the dashboard

| Setting | Default | Allowed range |
|---|---|---|
| Wash every | 10 s | 1–600 s |
| Keep the valve open | 2 s | 0.25 s up to the interval minus 0.25 s |
| Manual wash time limit | 10 min | 1–30 min |
| Final drain length (step 4) | 20 min | 1–120 min |
| Flow detection time | 4 s | 1–30 s |
| Flow threshold | 1 L/min | 0.2–10 L/min; water counts as flowing above it and as stopped below it for 2 s |
| Minimum fill | 3 L | 0.5–50 L; water the machine must take before a drain can end Fill 1/4 or Rinse 3/4 |
| Minimum flow to save | 0.5 L/min | 0.5–10 L/min; in Drain 4/4 rinse water goes to the tank only while the drain flow is above this; at or below it the fill valve closes and the drain opens (from 3.4) |
| Start from the dashboard | On | On / off |
| Buzzer | Off | On / off; needs an active buzzer module on D1 (TX0) |
| Warn when a step takes longer than | 90 min | 10–600 min |
| Warn when tank water is older than | 48 h | 1–240 h |
| Alert server / topic | https://ntfy.sh / empty (alerts off) | Create a private topic fills in a random topic and shows the subscribe link |
| Time zone | UTC–5 (`<-05>5`) | Chosen from a list of common zones; Other accepts a POSIX code |
| Language | Español | Español / English, for the app, the screen and the alerts (from 3.1) |
| Screen font | Hyperlegible | Four letter styles for the screen messages, see *Screen font* in section 6 (from 3.4; styles of 3.6) |
| Dashboard and update passwords | `greywater` (the app asks you to change it) | 8–32 characters; the default cannot be chosen again; both take effect at once (from 3.0) |
| View-only user and viewer password | Off | User `viewer`, sees only Overview and Water use; password 8–32 characters, not the dashboard password; off forgets the password (from 3.5) |

## Wi-Fi troubleshooting

| Problem | What to check | How to fix |
|---|---|---|
| `reusewater.local` does not open | Phone on the same Wi-Fi; some Android phones do not support .local names; an old bookmark to `greywater.local` | Use the IP address shown on the screen at start-up, or from the router's device list; update old bookmarks |
| Dashboard says it can't reach the controller | Controller powered; Wi-Fi signal (shown in the page footer) | Press Refresh in the top bar. If it stays Offline or Updating slowly, move the router or add a repeater; below about –80 dBm the link drops |
| Test alert: *could not connect* | The controller reached the internet but not the alert server; the public ntfy.sh server is sometimes down for hours | Open `https://ntfy.sh` on a phone on the same Wi-Fi. If it does not load either, wait and try later: real alerts are tried again for 30 minutes. If it loads, restart the controller |
| No alerts arrive | Topic in Settings matches the app exactly; footer says alerts are on; Service → Last alert and Recent events give the reason | Press Send a test alert. *The server refused the topic*: use only letters, numbers, - and _. *Too many alerts*: wait a few minutes. *No Wi-Fi* / *could not connect*: check the router's internet. Also check the phone's notification permission and battery saver for the ntfy app |
| Cycle complete or Cycle stopped alerts arrive without sound | They are sent at low and minimum priority on purpose | In the ntfy app, open the topic's notification settings to change how low-priority alerts are shown |
| Network changed | — | Hold STOP for 5 s while `READY`, join `ReuseWater-Setup` with the key shown on the screen, and set the new network |
| Wireless upload fails | Network port listed in the IDE (`reusewater`); update password | Retry; if it keeps failing, upload once over USB |
| Water age shows No water stored with water in the tank | The tank level must be above the low switch for 30 s | Check the low-level switch |

## Security

- Change both default passwords on first use.
- Keep the dashboard on the home network; do not forward router ports to it.
- Turn **Start from the dashboard** off in Settings if a cycle could be started while nobody is at the machine.
- The Wi-Fi setup network uses a key unique to each board, shown on the screen while the setup page is open (from firmware 3.0).

# Appendix A. Abbreviations

| Term | Meaning |
|---|---|
| EV | Electrovalve (solenoid valve) |
| FSM | Finite state machine |
| GND | Ground |
| I2C | Two-wire serial bus used by the OLED (SDA data, SCL clock) |
| ISR | Interrupt service routine |
| OLED | Organic LED display |
| RCD / GFCI | Residual-current device / ground-fault circuit interrupter |
| SSR | Solid-state relay |
| TX0 / RX0 | The board's serial transmit / receive pins (UART0), shared with D1 / D0 |

# Appendix B. Revision history

| Version | Date | Description |
|---|---|---|
| 3.11 | 2026-11-06 | Sign in once per device: the app has its own sign-in form with Remember this device (on by default) instead of the browser's password box; a remembered device stays signed in for 400 days, renewed at every visit. Sign out button in the top bar; Settings → Security → Sign out other devices; a new dashboard password signs out the other devices. New endpoints `POST /api/login`, `POST /api/logout` |
| 3.10 | 2026-11-06 | Resume after a power cut: the controller keeps a cycle snapshot in flash (step, mode, filled, litres). After power-up the app asks in a popup to resume; Resume continues at the start of the saved step with the same mode and litres. Offered for 30 min after power-up, admin only, with Start from the dashboard on. Screen `INTERRUMPIDO` › *Reanude en app*, `REANUDADO`; new endpoint `POST /api/interrupted/resume` |
| 3.9 | 2026-11-06 | One fixed letter size per screen font for every message, the largest that fits all texts (Hyperlegible 12 px, Plain sans 13 px, Terminal bold 12 px, Schoolbook bold 11 px), centred; the letters no longer change size between pages |
| 3.8 | 2026-11-06 | Reuse only from the panel: hold START 2 s at READY until the screen shows `SOLO REUSAR`, then let go. The cycle starts when START is released; while it is held the screen shows which cycle starts. A START held 15 s is treated as stuck and starts nothing |
| 3.7 | 2026-11-06 | Overview buttons renamed for what happens to the water: Reuse and save (the normal cycle), Stop cycle, and the new Reuse only, which uses tank water for the wash and sends the rinse water to the drain (step 4 header `DRAIN 4 OF 4`). The START button on the controller always starts Reuse and save |

| Version | Date | Description |
|---|---|---|
| 3.6 | 2026-11-04 | Four new screen fonts picked by the household: Hyperlegible (default), Plain sans, Terminal bold, Schoolbook bold; a long part uses the smaller size of the same font instead of Helvetica 12 px. The six earlier styles, Helvetica Bold included, are removed; the screen starts in Hyperlegible after the upgrade |
| 3.5 | 2026-11-04 | View-only user: a second sign-in, `viewer`, with its own password set in Settings → Security. It sees only Overview and Water use and the controller refuses its changes; off by default |
| 3.4.1 | 2026-11-04 | Shorter screen messages that do not repeat the top line (for example *Desaguando › agua jabonosa*, `TERMINADO` *Reusados 26 L › Guardados 30 L*); full screen brightness |
| 3.4 | 2026-11-04 | Minimum flow to save (default 0.5 L/min): in step 4 a drain flow at or below it closes the fill valve and opens the drain at once, and a new pump-out is saved again; screen *Low flow › To the drain*. Screen font chosen in Settings → Screen: original Helvetica Bold or five 13 px styles (narrow bold, narrow light, semi-narrow, round, classic serif), applied at once and kept after a restart; settings version 8 (3.3 settings are kept) |
| 3.3.1 | 2026-11-03 | Phone alerts that cannot be sent (alert server down, no internet or Wi-Fi) are tried again for up to 30 minutes, each on its own schedule; the test alert still answers within 30 s. The app's subscribe link no longer repeats a topic pasted into Alert server |
| 3.3 | 2026-11-03 | Screen messages explain themselves in short pages that change every 3 s (what is happening, what it means, what to do); steps named in words (`WASH 1 OF 4`); minutes left from the second wash; tank level on the Ready screen; litres reused and saved at the end. Phone alerts: correct failure reason in the app (codes no longer clash with HTTPClient's); up to 3 tries per alert and 5 min wait for Wi-Fi; 10 s network timeouts; topic checked (letters, numbers, - and _); pasted subscribe link removed from the server address; tapping an alert opens the app |
| 3.2 | 2026-10-30 | New name Reuse Water System (`reusewater.local`, `ReuseWater-Setup`, update port `reusewater`, alert titles); Border Collie start-up animation; Helvetica Bold screen font (14 / 12 px); larger tank icon; optional buzzer moved from D12 to D1 (TX0); Runbook and Quick Card rebuilt from editable sources |
| 3.1 | 2026-10-30 | Spanish (Colombia) for the app, the screen and the phone alerts, chosen in Settings → Language (Spanish by default); alerts sent as JSON so accents arrive intact; setup key shown on the screen |
| 3.0 | 2026-10-30 | Safety task and output interlocks; float-switch rules, debouncing and fault alert; runs without a screen; per-board Wi-Fi setup key and no firmware upload on the setup page; update password applied at once; lockout per device; app reports only confirmed actions and alert delivery; compressed app page; code split into modules. Tested on the installed system |
| 2.9 | 2026-10-29 | Interrupted-cycle detection and alert; watchdog; wireless updates blocked during a cycle; real valve and pump states and an event log on the Service tab; password prompt and lockout; settings in the history file; time zone list; private alert topic; quieter routine alerts; typical step times; optional buzzer on D12; full-cycle simulation tests; Quick Card |

| Version | Date | Description |
|---|---|---|
| 2.8.1 | 2026-10-29 | Refresh button in the app's top bar; requests time out so a slow connection no longer freezes the screen; "Updating slowly" badge after 6 s without an update |
| 2.8 | 2026-10-29 | Water history is never lost: stored twice on the controller, unreadable records kept aside, saved before wireless updates; each phone keeps a copy and can restore it; history file download and restore; history source shown on the Service tab |
| 2.7 | 2026-10-21 | Controller screen rewritten for households, all messages fit without scrolling; app reorganised into Overview, Water use, Service and Settings tabs |
| 2.6 | 2026-10-21 | "Machine is filled" guard (fixes the early move to Drain introduced in 2.4); Minimum fill setting; settings migrate without reset |
| 2.5 | 2026-10-21 | Tank pump protection: the pump stops within 0.3 s when the machine closes its inlet; dry-start alert |
| 2.4 | 2026-10-21 | Drain-sensor fault fixed: new flow meter; diode and pull-up sensor wiring; FlowSensor library removed; accessibility fixes |
| 2.3 | 2026-10-21 | Dashboard shows results: This month panel, last wash summary, tank readiness |
| 2.2 | 2026-10-21 | Manual tank wash that stops when the tank is full |
| 2.1 | 2026-10-21 | Redesigned dashboard with Start and Stop buttons; tank-wash valve moved to D0 |
| 2.0 | 2026-10-21 | Wi-Fi: dashboard, phone alerts, statistics, wireless updates, settings |
| 1.2 | 2026-10-19 | Tank-wash valve moved from D12 to D1 |
| 1.1 | 2026-10-19 | Quick start, pinout drawing, wiring diagrams, clearer tables |
| 1.0 | 2026-10-19 | Initial release |