Group 0: System / Group Toggles



CTRL + Alt + D



CTRL + Alt + H



Restart device (confirm y)



→ Group 1 - Keyboard



→ Group 2 - Mouse



→ Group 3 - Macros



→ Group 4 - Scanning



→ Group 4 - Scanning



→ Group 5 - Media



→ Group 6



→ Group 7



→ Group 8





→ Group 9 - Switch

Legend

dot · dash · **→ Group** group switch · **Mouse** mouse / move / click · **Media** consumer controls · **App** application launcher · **Secret** private macro (value hidden) · **Mod** modifier / lock · **System** repeat / system · **iOS** iOS Switch Control action (Group 4) · **Key** keyboard key

Group 1: Keyboard

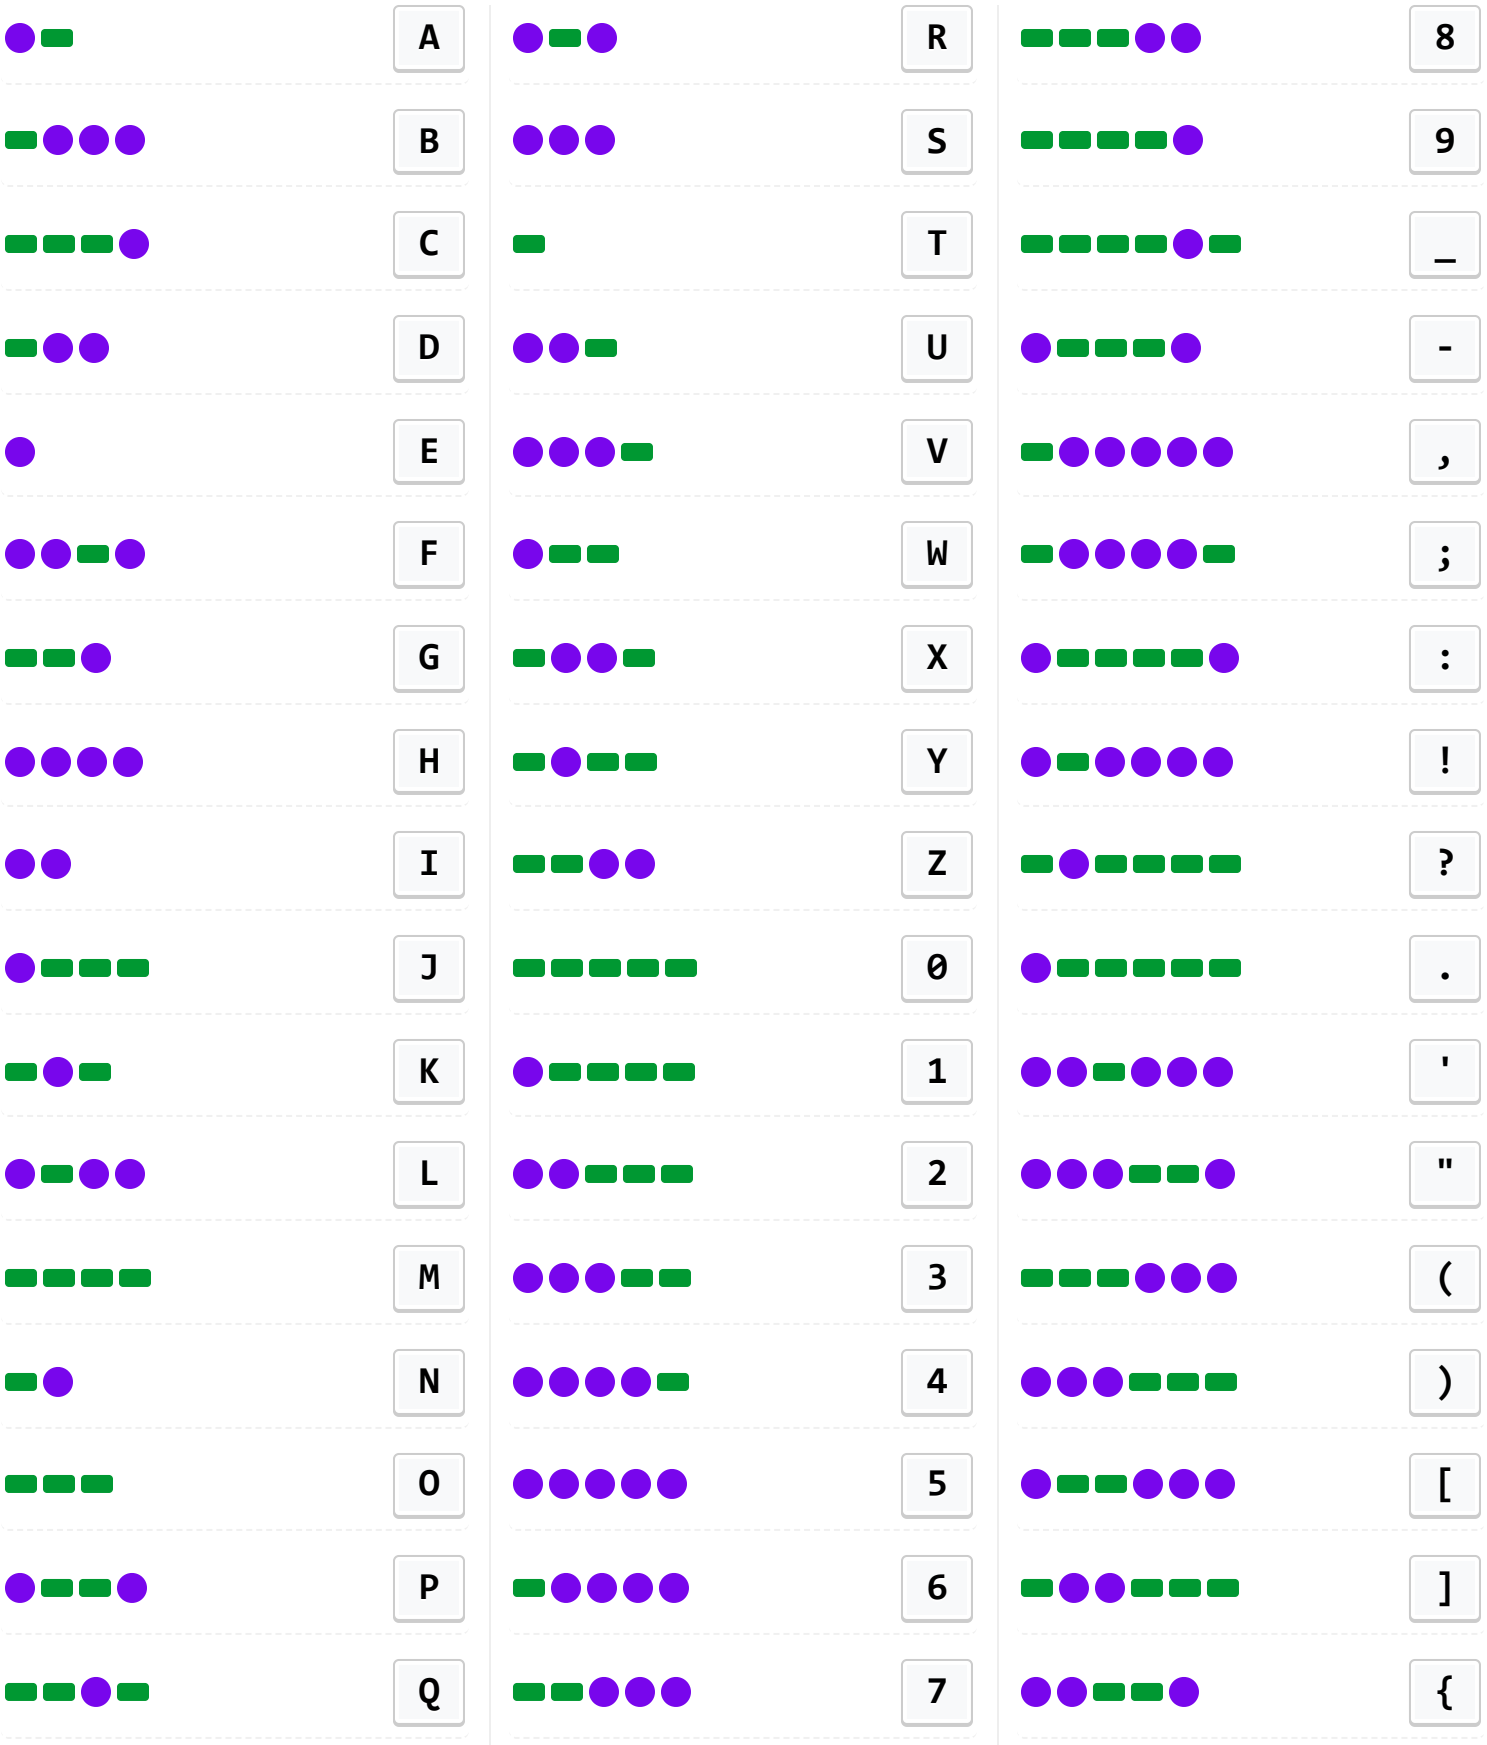

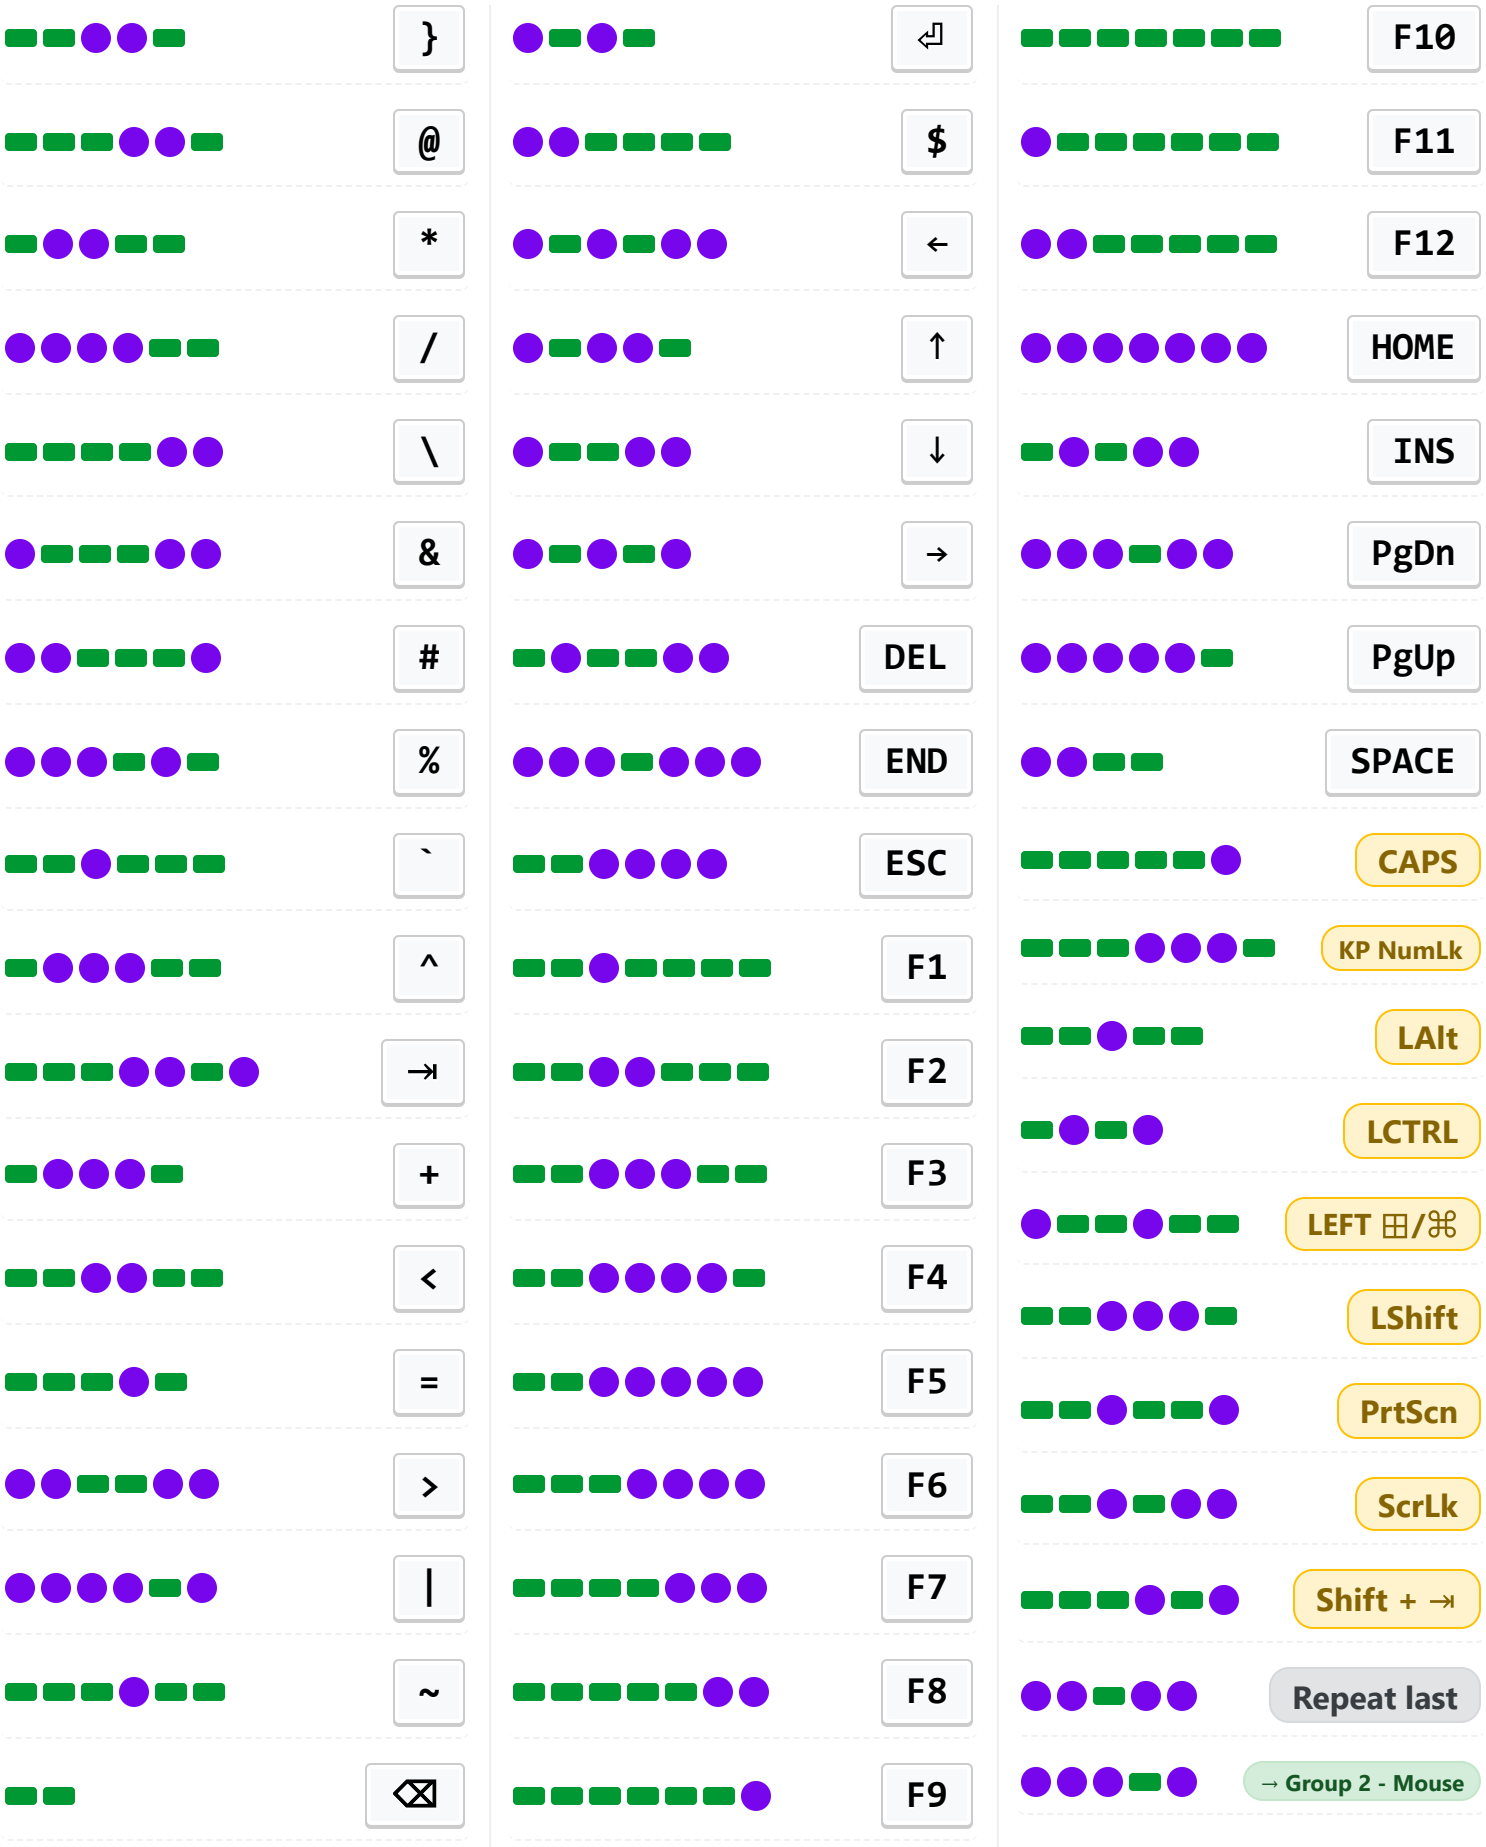
}
⏎
F10
@
$
F11
*
←
F12
/
↑
HOME
\
↓
INS
&
→
PgDn
#
DEL
PgUp
%
END
SPACE
`
ESC
CAPS
^
F1
KP NumLk
⇥
F2
LAlt
+
F3
LCTRL
<
F4
LEFT ⊞/⌘
=
F5
LShift
>
F6
PrtScn
|
F7
ScrLk
~
F8
Shift + ⇥
⌫
F9
Repeat last
→ Group 2 - Mouse

Group 2: Mouse & Windows


⇥


←


↑


↓


→


DEL


ESC


F5


HOME


KP .


KP /


KP ⏎



Menu


PgDn


PgUp


Click left


Click right


Dbl-click left


Dbl-click right


Fast speed



Move ←


Move ←


Move →



Move →


Move ↑



Move ↑


Move ↓


Move ↓


Move ↖


Move ↗


Move ↘


Move ↙


Scroll ↑


Scroll ↓


Slow speed


Toggle drag L



Calculator


⊞/⌘ + ⇥



Alt + ⇥


CTRL + -


CTRL + =


CTRL + Alt + HOME



KP NumLk



RAlt


RCTRL



RCTRL + RAlt + ←


RIGHT ⊞/⌘



RShift


Tap CTRL


Repeat last


Repeat last


Show version screen


→ Group 1 - Keyboard

Group 3: Macros


0


1


2


3


4


5


6


7


8


9


⌫


⏎


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


phrase


🔒 address


🔒 email


🔒 Lock secrets


🔒 name

🔒 password1

🔒 phone


🔒 Unlock secrets (PIN)


🔒 wifi

→ Group 1 - Keyboard

Group 4: Scanning - Enter, Space, F3-F12 (Switch Control)




B



C



F



G



H



J



L



M



O



P



Q



V



X



Y




Z




0



1




2



3




4



5



6



7



8



9



Select Item

⏎



Previous Item

F3



Scanner Menu

F4



Home

F5



Tap

F6




Long Press

F7




Scroll Down

F8




Scroll Up

F9




App Switcher

F10



Notif/Control Center

F11



Siri


F12




Next Item

SPACE


Group 5: Media + App Launchers (USB HID Consumer Controls)

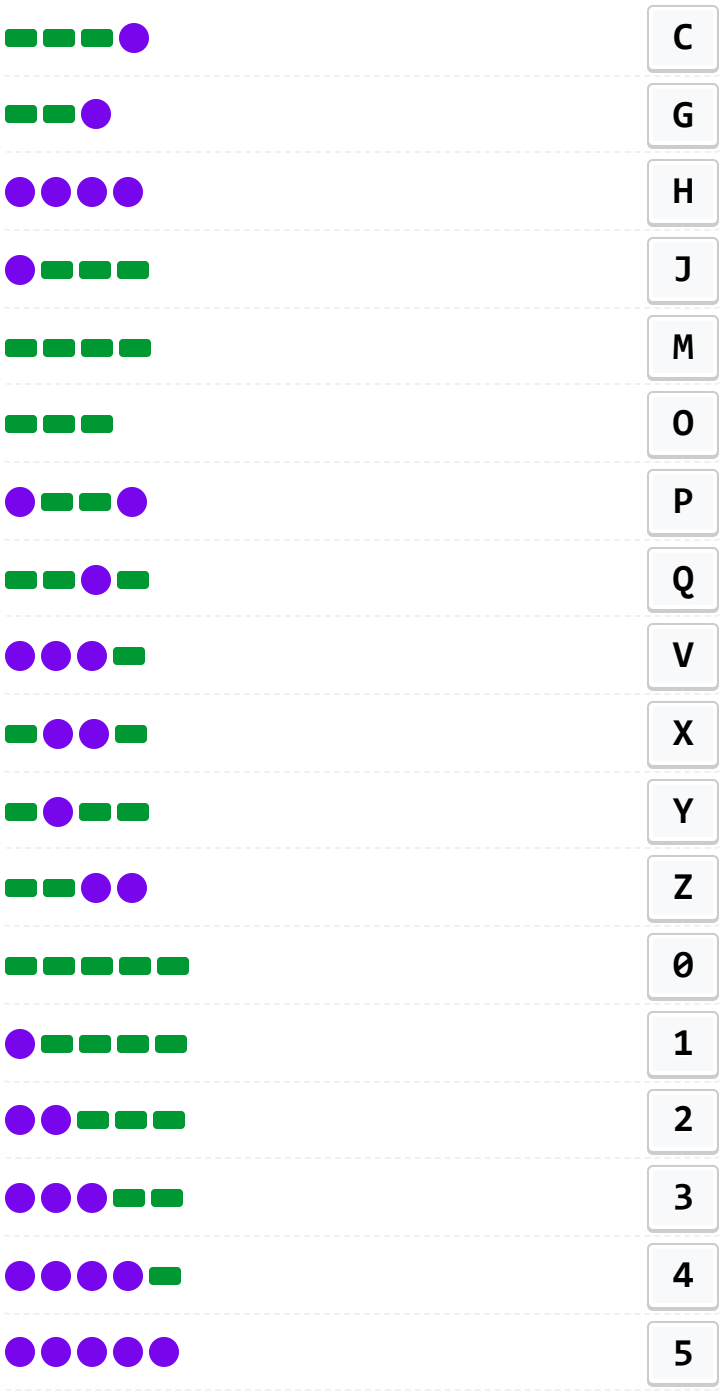

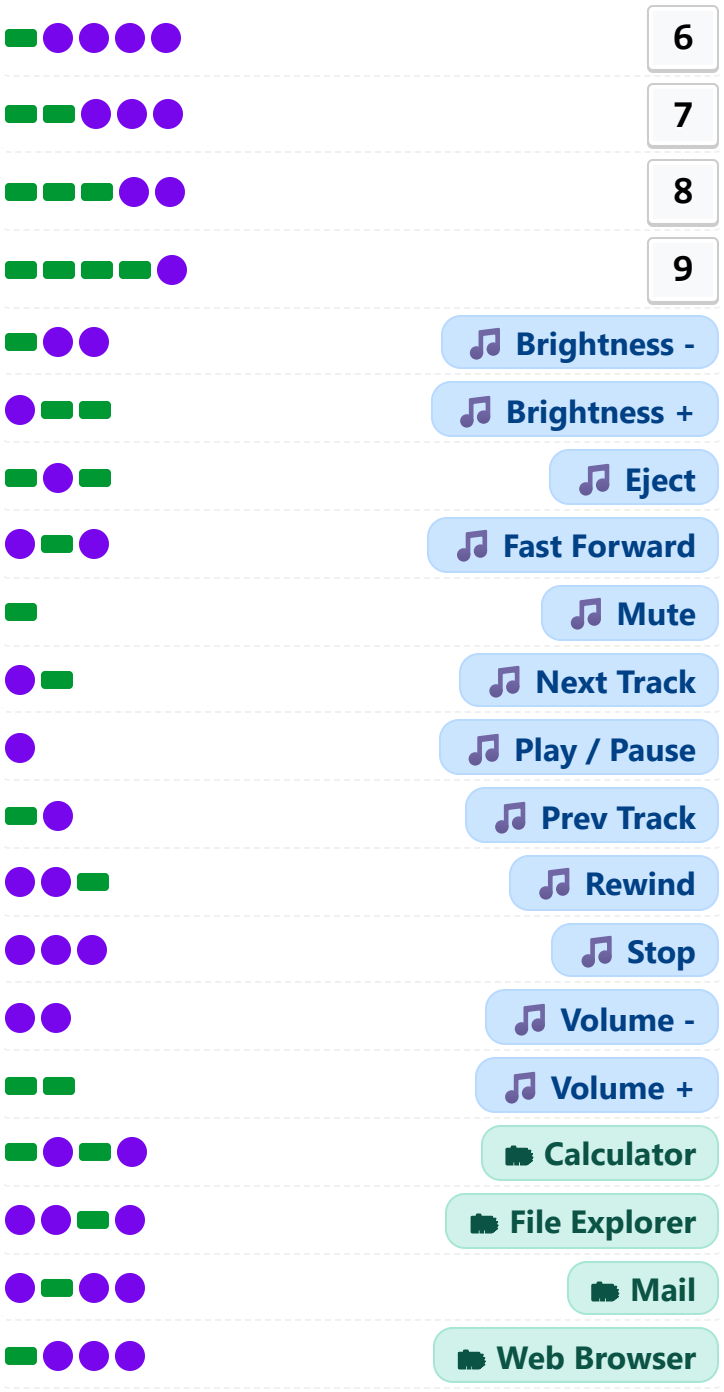

Group 6 (placeholder)

	A
	B
	C
	D
	E
	F
	G
	H
	I
	J
	K
	L
	M
	N
	O
	P
	Q
	S

	T
	U
	V
	W
	X
	Y
	Z
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	🔒 bank_login

Group 7 (placeholder)

	A
	B
	C
	D
	E
	F
	G
	H
	I
	J
	K
	L
	M
	N
	O
	P
	Q
	T

	U
	V
	W
	X
	Y
	Z
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Frequently typed phrase
	My favourite string here

Group 8 (placeholder)

	A
	B
	C
	D
	E
	F
	G
	H
	I
	J
	K
	L
	M
	N
	O
	P
	Q
	T

	U
	V
	W
	X
	Y
	Z
	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Frequently typed phrase
	My favourite string here

Group 9: Switch - sip holds Enter, puff holds Space (no Morse)

`Hold Enter (while you sip)`	`Hold Space (while you puff)`

No Morse codes in this group. The key goes down the moment a sip or puff starts and comes up when it ends - like two plain switches.

To leave (goes to Keyboard): wait 20 seconds without a sip or puff, or hold one puff for 5 seconds. The screen counts down the last 10 seconds, e.g. "KEYBOARD IN 5".