Base: works in every group

	Pause		→ Keyboard
	Release all		→ Macros
	Settings		→ Mouse
	Window to the front		

Key to the colours

dot (sip / dot switch) · dash (puff / dash switch) · **Key** key or text it types · **→ Group** change group

Mouse mouse · **Mod** Ctrl / Shift / Alt / Win · **Secret** password (name only) · **Media** media / app key

System repeat, pause…


Hold a press for the long-press time (1.5 s by default), then let go = next group. Send **.....** for Keyboard, **--------** for Mouse, **....----** for Macros, **.-.-.-** to bring the SwitchMorse window to the front.

Keyboard

	A
	B
	C
	D
	E
	F
	G
	H
	I
	J
	K
	L
	M
	N
	O
	P
	Q

	R
	S
	T
	U
	V
	W
	X
	Y
	Z
	0
	1
	2
	3
	4
	5
	6
	7

	8
	9
	!
	"
	#
	$
	%
	&
	'
	(
	)
	*
	+
	,
	-
	.
	/

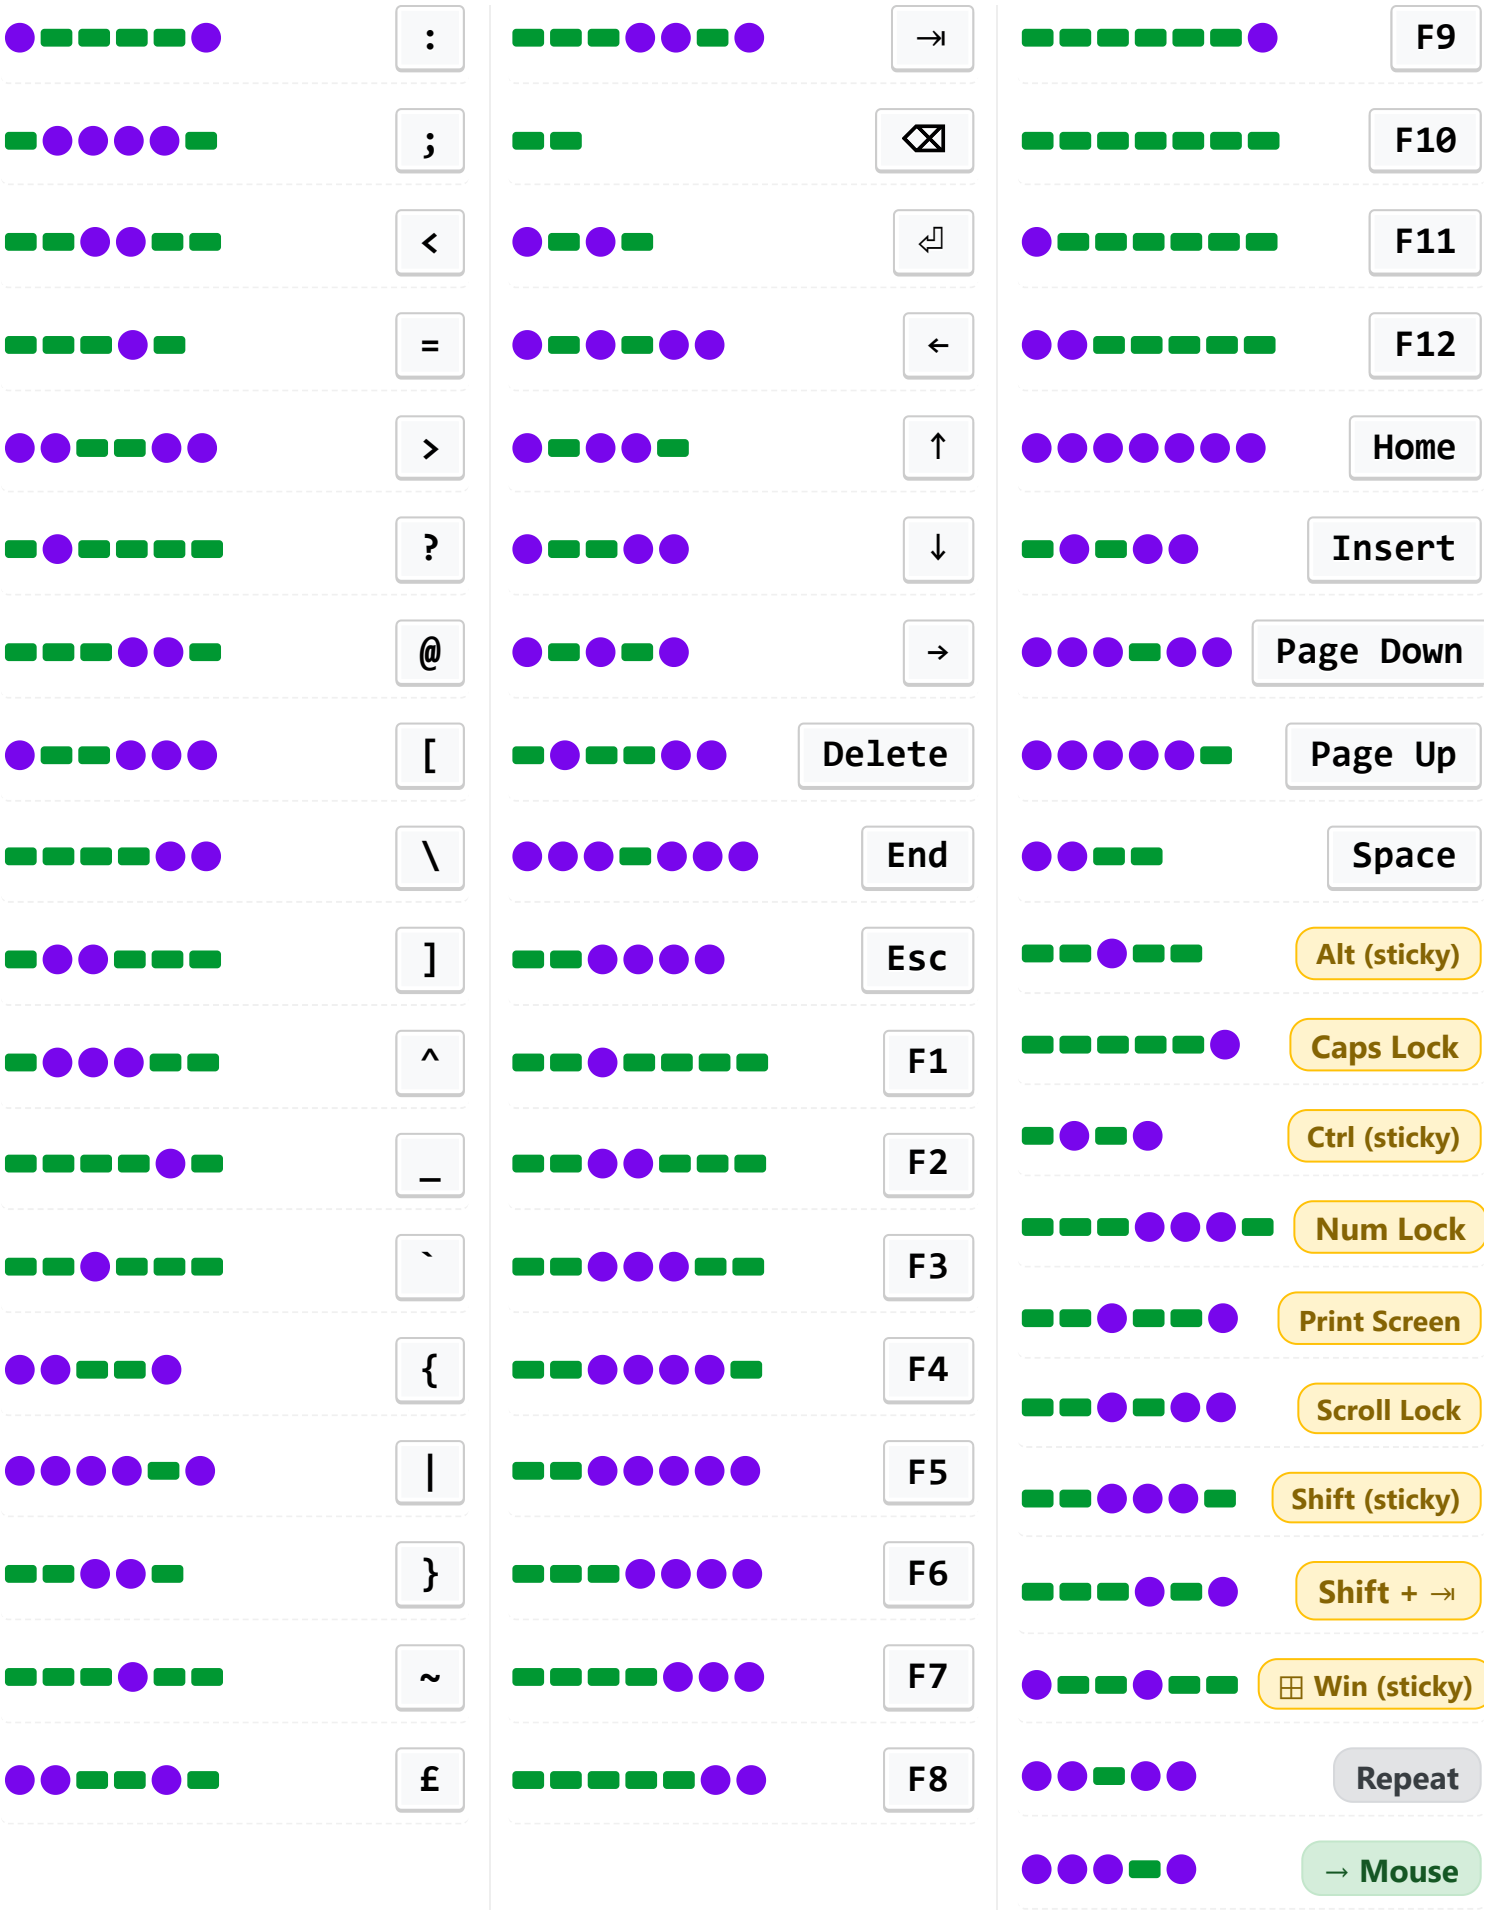
:
;
<
=
>
?
@
[
\
]
^
_
`
{
|
}
~
£
⇥
⌫
⏎
←
↑
↓
→
Delete
End
Esc
F1
F2
F3
F4
F5
F6
F7
F8
F9
F10
F11
F12
Home
Insert
Page Down
Page Up
Space
Alt (sticky)
Caps Lock
Ctrl (sticky)
Num Lock
Print Screen
Scroll Lock
Shift (sticky)
Shift + ⇥
⊞ Win (sticky)
Repeat
→ Mouse


Mouse & Windows















































































































Macros

	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	⌫
	⏎

	"Hello, "
	"Kind regards"
	"No"
	"OK"
	"Thank you"
	"Yes"
	🔒 address
	🔒 email
	🔒 email_pw
	🔒 name
	🔒 phone
	→ Keyboard