DI57G-05

TERMINALS OF ECU

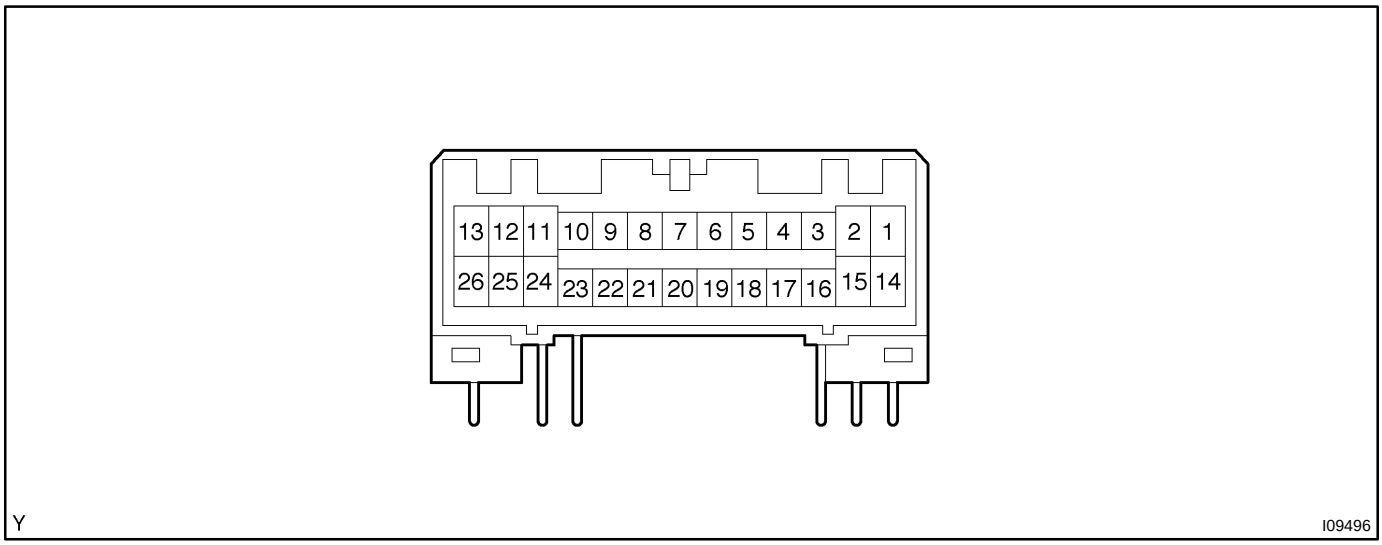

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
POWE (B18-1) - GND (B18-26)	L - W-B	Constant	10 - 14
ECU-B (B18-2) - GND (B18-26)	L-R - W-B		
IG (B18-3) - GND (B18-26)	Y - W-B	Ignition switch OFF or ACC	Below 1.0
		Ignition switch ON	10 - 14
BZR1 (B18-5) - BZR2 (B18-4)	P-B - P-G	Wireless door lock buzzer sounded	10 - 14
		Wireless door lock buzzer not sounded	Below 1.0
BCTY (B18-7) - GND (B18-26)	L-W - W-B	Back door courtesy switch OFF (Closed)	10 - 14
		Back door courtesy switch ON (Open)	Below 1.0
CLS (B18-9) - GND (B18-26)	G-R - W-B	Back door control switch OFF or DOWN	10 - 14
		Back door control switch UP	Below 1.0
OPN (B18-10) - GND (B18-26)	G-Y - W-B	Back door control switch OFF or UP	10 - 14
		Back door control switch DOWN	Below 1.0
CLSM (B18-11) - GND (B18-26)	R - W-B	Back door power window not operating	Below 1.0
		Back door power window operating upward	10 - 14
OPNM (B18-12) - GND (B18-26)	G - W-B	Back door power window not operating	Below 1.0
		Back door power window operating downward	10 - 14
LMTW (B18-13) - GND (B18-26)	R-L - W-B	Window limit switch OFF (Closed)	10 - 14
		Window limit switch ON (Open)	Below 1.0
LSWB (B18-20) - GND (B18-26)*	L-B - W-B	Back door unlock detection switch OFF (Locked)	10 - 14
		Back door unlock detection switch ON (Unlocked)	Below 1.0
LMT2 (B18-22) - GND (B18-26)	GR - W-B	Rear wiper arm storing position	10 - 14
		Rear wiper arm not storing position	Below 1.0
LMT1 (B18-23) - GND (B18-26)	GR-R - W-B	Rear wiper arm between stopping and reversing position	10 - 14
		Rear wiper arm except stopping and reversing position	Below 1.0
WIP- (B18-24) - GND (B18-26)	L-B - W-B	Rear wiper motor not operating	Below 1.0
		Rear wiper motor rotates reversely	10 - 14

WIP+ (B18-25) - GND (B18-26)	L-Y - W-B	Rear wiper motor not operating	Below 1.0
		Rear wiper motor rotates	10 - 14
GND (B18-26) - Body ground	W-B - Body ground	Constant	Below 1.0

*: w/ Theft deterrent system