
DI6CN-03

DTC	C1340 / 47	Center Differential Lock Circuit
-----	------------	----------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1340 / 47	Open or short circuit in center differential lock circuit.	Center differential lock system Center differential lock circuit
		Center differential lock indicator light circuit

WIRING DIAGRAM

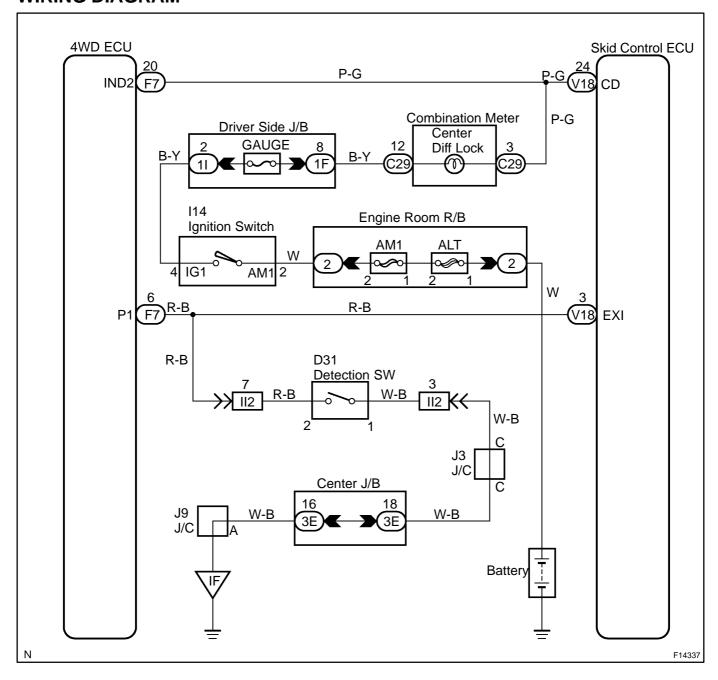

Author: Date: 517

INSPE	PECTION PROCEDURE			
1	Check that center differential is free and center diff. lock switch is OFF.			
	NG Repair ce	nter differential lock system.		
ОК	K			
2	Is DTC output?			
Check [k DTC on page DI-224 .			
	NO Normal.			
YES	ES .			
3	Check that bulb for center diff. lock indicator light is not burnt out.			
	YES Replace i	ndicator light.		
NO	0			
4	4 Check for open circuit in harness and connector between center diff. lock switch and skid control ECU, skid control ECU and center diff. lock indicator light (See page IN-28).			
	NG Repair or	replace harness or connector.		
ОК	K			
Chec	eck and replace skid control ECU.			

2002 4RUNNER (RM887U)

Author: Date:

518