

CPU Stand-Cart

Assembly Instructions



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Hardware & Parts List

CPU STAND





























Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109



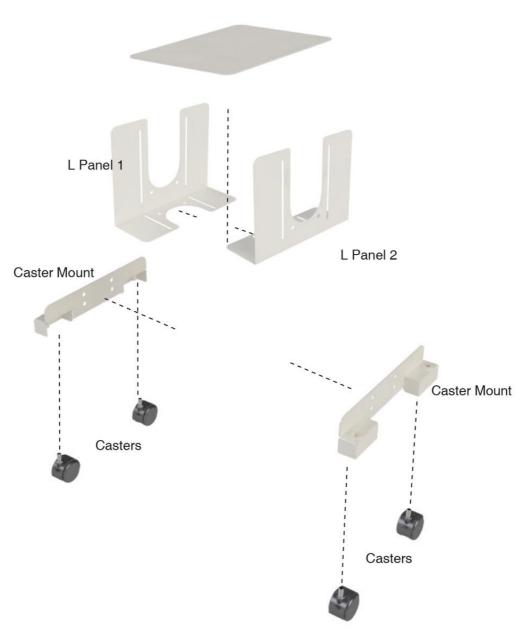











Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

CPU Stand/Cart Configurations

There are three possible configurations.

NOTE: Extender is shown in a bluish color to help you see when it is used.



Short Side Setup: CPU width is 3.5" to 6"







Extender (To be used for CPU towers over 6" Wide)









Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Assembly Step-byStep

Casters



Secure First and second L Panel

Use (4)10-32 x 3/8 Carrige Bolts, (4) 10/32 Thumb Nuts and (4) 12 SS Washers.





Step

Attach Casters or 5/16" Gliders as needed.















Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Assembly Step-byStep

CPU STAND



Secure Second L Panel Assembly

Use (2)10-32 x 3/8 Carrige Bolts, (2) 10/32 Thumb Nuts and (2) 12 SS Washers.



10/32 Thumb Nut



12 SS Washer





Step 3b


Performed when CPU towers over 6" Wide.

Secure Second L Panel Assembly

Use (2)10-32 x 3/8 Carrige Bolts, (2) 10/32 Thumb Nuts and (2) 12 SS Washers.





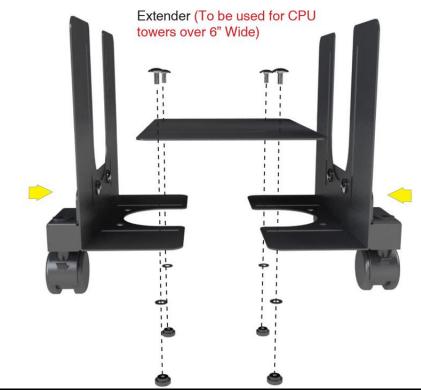











Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Assembly Step-byStep

CPU STAND

Step



Velcro Pads

Velcro Pads

Attach Velcro Pads to both your CPU Tower and CPU Stand, then slide in CPU Tower.







How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Fax: 31