

ELE-TB-CPU-Holder ELE-TB-CPU-Holder

Assembly Instructions



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support:


Hardware & Parts List

ELE-TB-CPU-Holder







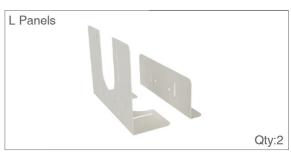




























Support:

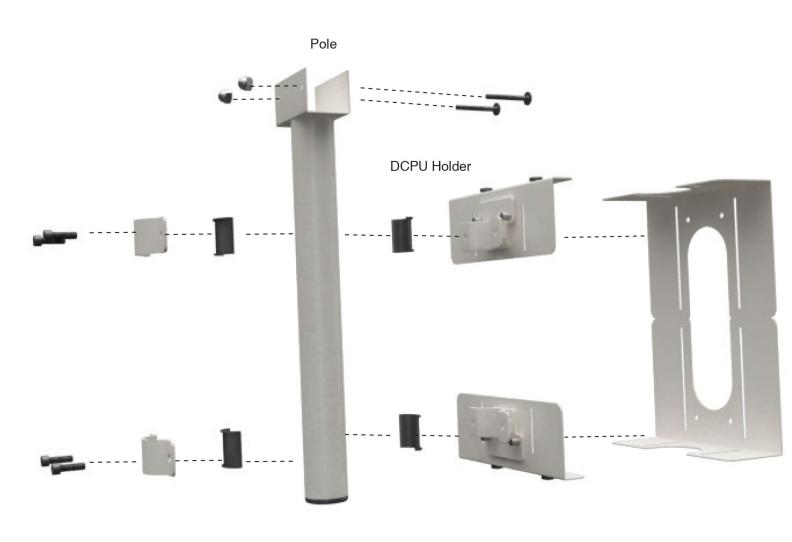











Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

DCPU Holder Configurations

There are three possible configurations.

NOTE: L pieces are shown in two colors to help you differenciate their placement.



Short Side Setup: CPU width is 1.3" to 4"





Long Side Setup: CPU width is 4" to 6"





Longest Side Setup: CPU width is 6" to 11.250"













Support:

Assembly Step-byStep

FLF-TB-CPU-Holder

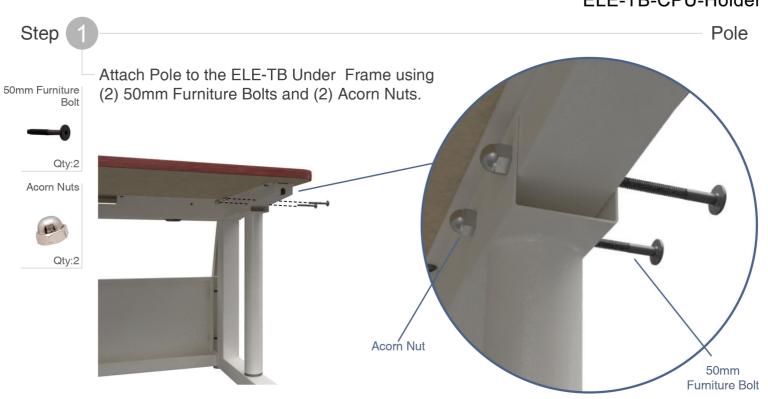

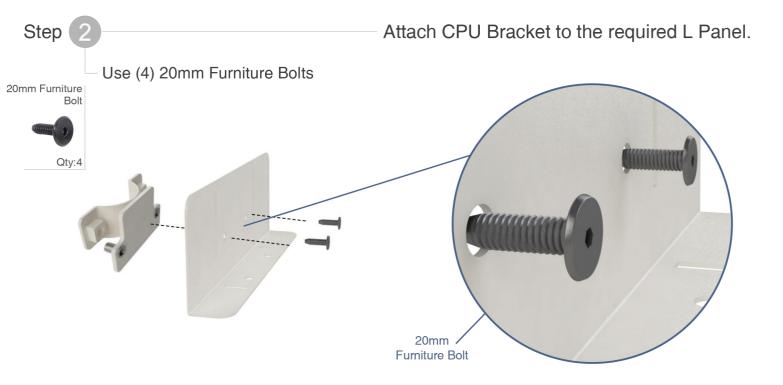













Support:

Assembly Step-byStep

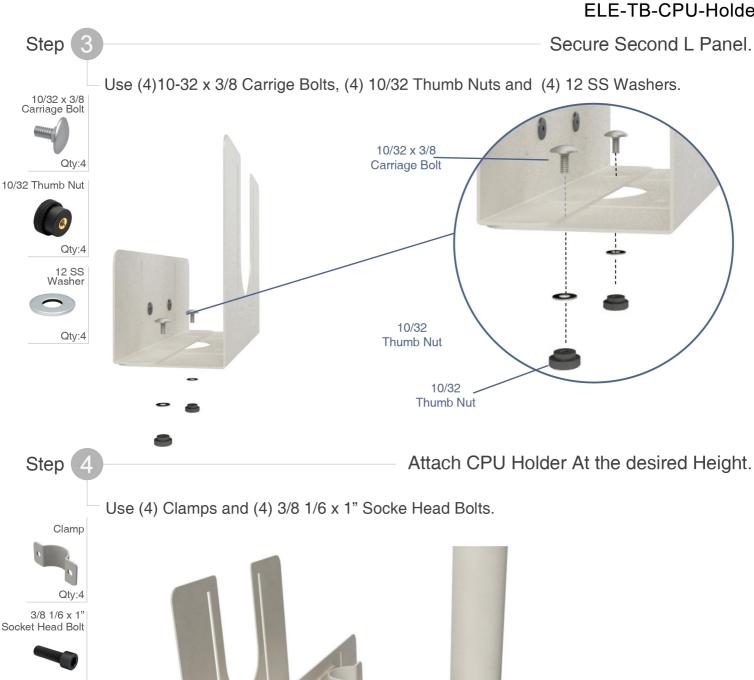



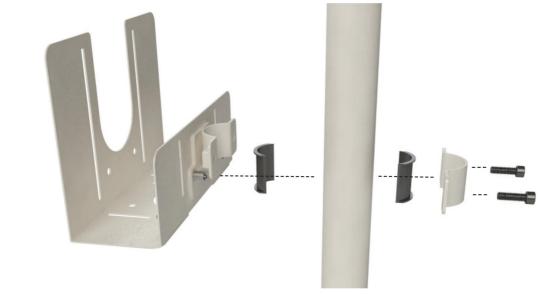











Support:

Assembly Step-byStep

Step

Attach Velcro Pads to both your CPU and CPU Holder.

Once in place, adjust Holder and tighten Thumb Nuts to keep CPU secure.



Velcro Pads

Qty:4





DCPU Holder could be placed anyway you want, inside or outside the legs.



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support: