

### Micro Power Desk Riser

# **Assembly Instructions**



SINGLE





How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

### Micro Power Desktop

#### Hardware Included







1/4"-20 Furniture bolts (x4)



8mm Machine screws (x4 or x8)



Carriage bolt (x3)





1/4" Bolt (x2)



Thumb nut (x4)

Insert key tray onto L flange, make sure guided rails catch both sides of flange. Then push it flush to the moving plate surface.

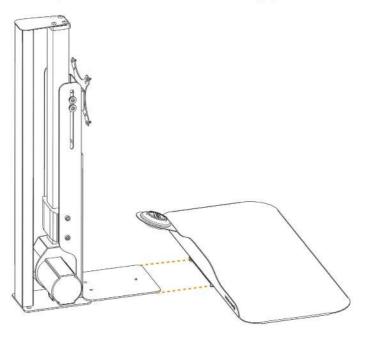

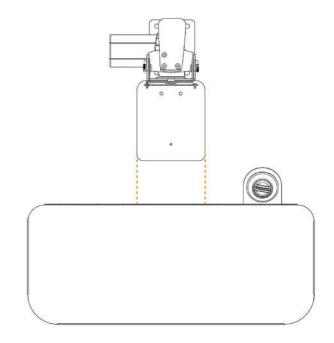













Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

## Micro Power Desktop


2


Tighten Phillips head self tapping screw 3/4 turn. Do not fully tighten screw this will cause friction in between both surfaces.

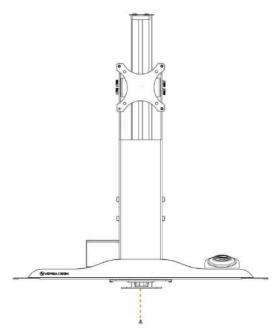

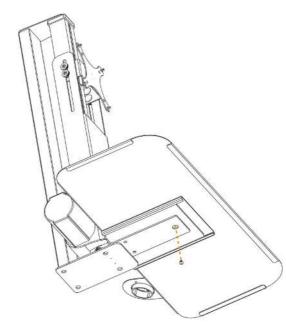

Insert 1/4"-20 Furniture bolts through bottom of base plate into inserts on the bottom of the other assembly. Make sure furniture bolts are securely tighten with allen key.

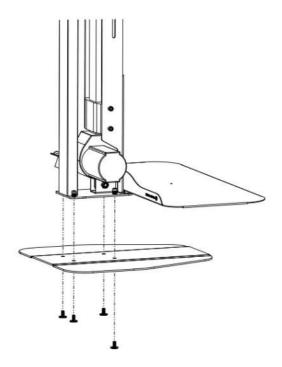

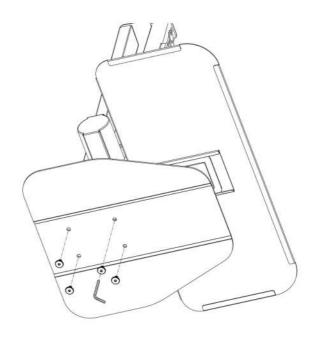










Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

### Micro Power Desktop




Connect male and female switch plugs for hand switch.

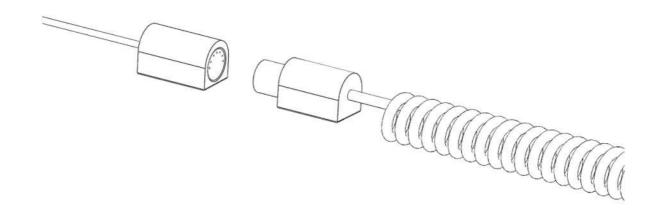

#### **Dual Monitor Instructions**



Insert Lock bolts into self nesting holes and then hand tighten nuts and knob. Adjust to desired position then fully tighten with a wrench.

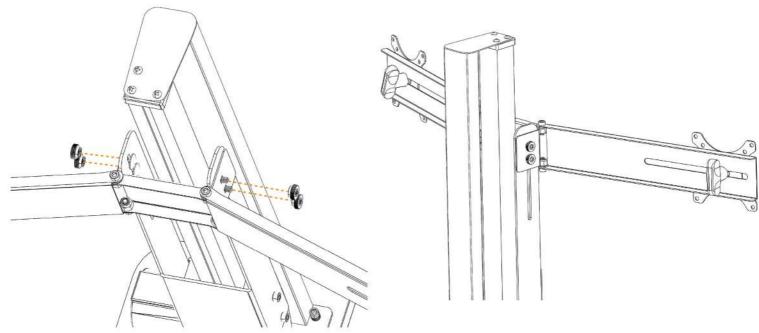









Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com