

# Computer Cart

# **Assembly Instructions**



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











**Support:** 

# Hardware & Parts List Computer Cart











































Additional Tools Required
















Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

# Exploded View Computer Cart

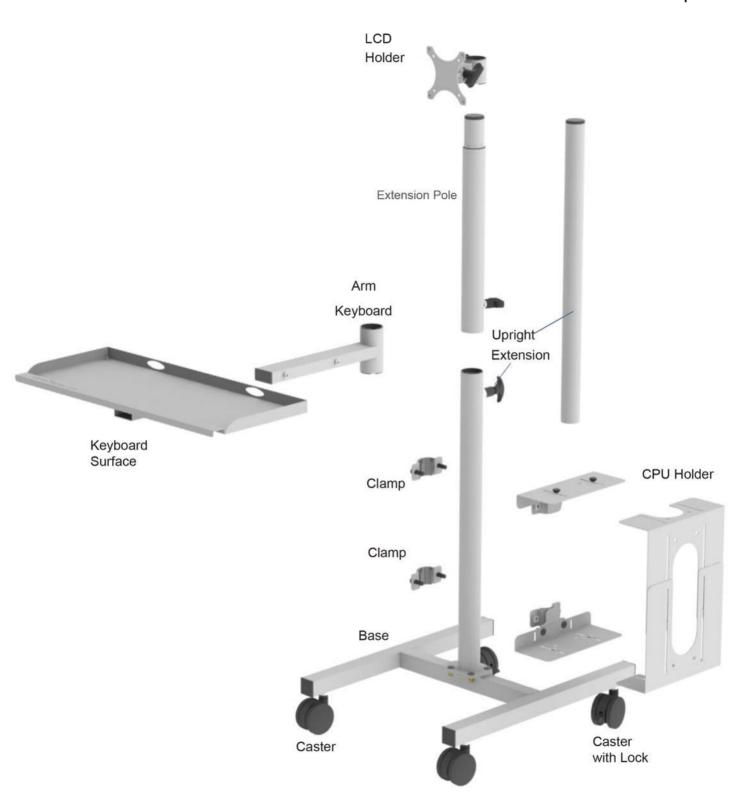












**Support:** 

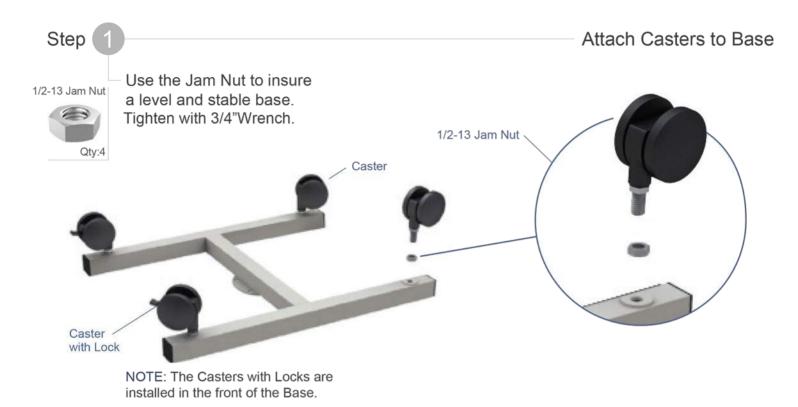













Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

Support:

### **DCPU Holder Configuration**

There are three possible configurations.

NOTE: L pieces are shown in two colors to help you differenciate their placement.



Short Side Setup: CPU width is 1.3" to 4"





Long Side Setup: CPU width is 4" to 6"





Longest Side Setup: CPU width is 6" to 11.250"













Support:

**Computer Cart** 

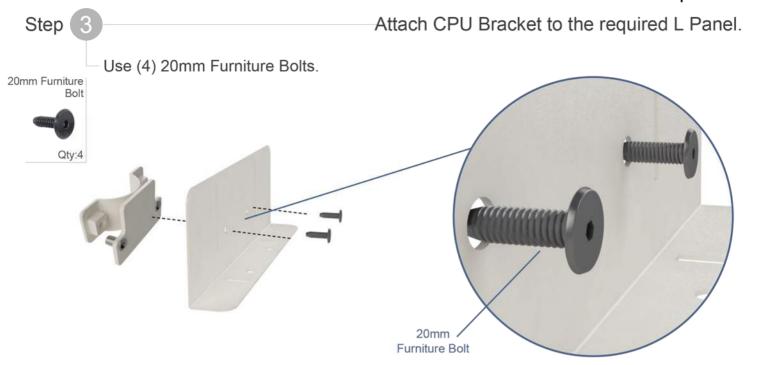

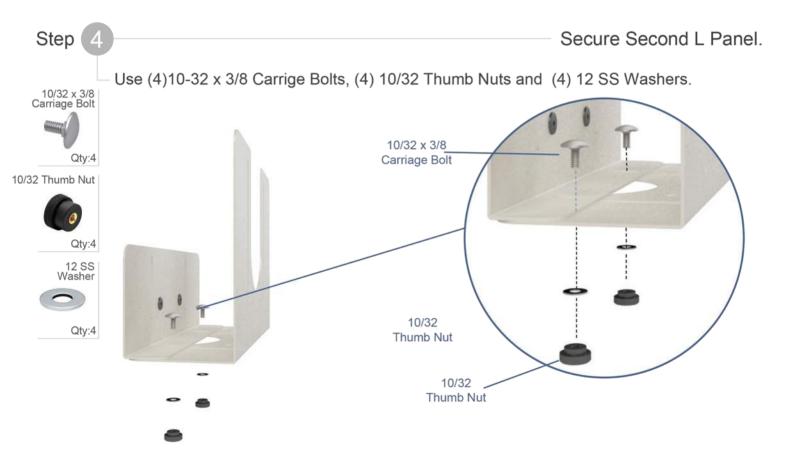











Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

**Computer Cart** 







Qty:4



Velcro








Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

**Computer Cart** 

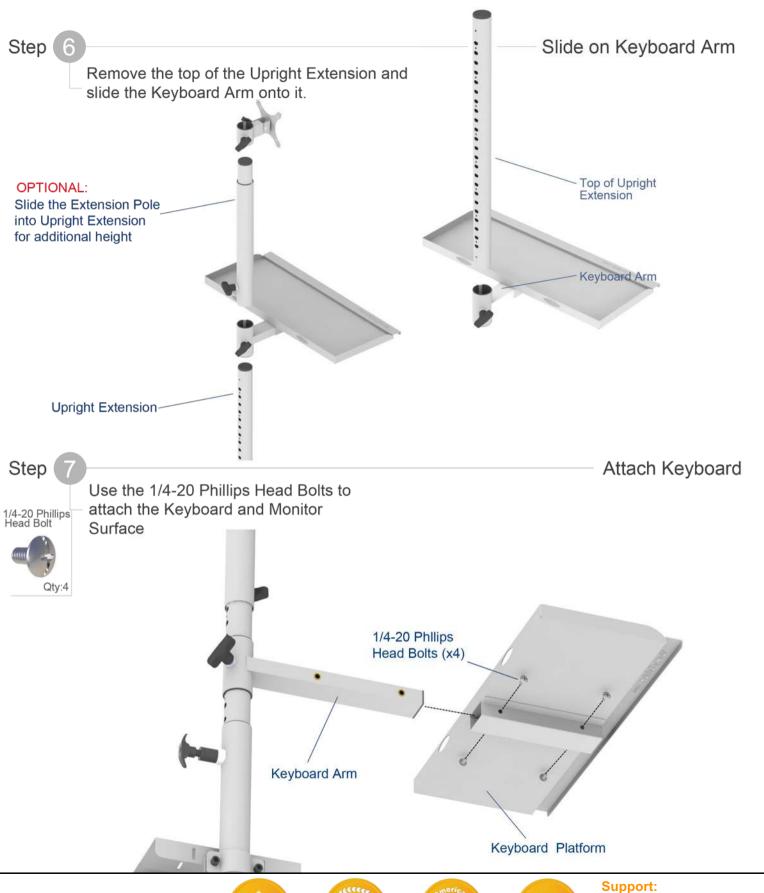











Computer Cart

Step 8

### Screw In Pull Pins

After assembly is complete, make sure to screw down all Pull Pins. This will keep the cart stable and secure.



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.









Support: