How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com.

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061

Lifetime Warranty   Quantity Discounts   Assembled in USA   Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

Main Pole
Qty:1

4mm & 8mm Allen Wrench
Qty:2

3" X 3/8 Concrete Anchor
Qty:4

3" X 3/8 Head Hex Lag
Qty:4

4" Plastic Insert
Qty:1

Base
Qty:1

Keyboard Bracket
Qty:1

Zip Tie & Curly Tie
Qty:5

Keyboard Platform
Qty:1

LCD Holder
Qty:1

8mm Machine Screw
Qty:4

1/4 - 20 Phillips Head Bolt
Qty:4

3/8 - 1/6 x 1" Socket Head Bolt
Qty:2

CPU holder
Qty:1

Clamp Bushing
Qty:2

CPU Holder Mount Bracket
Qty:1

Clamp
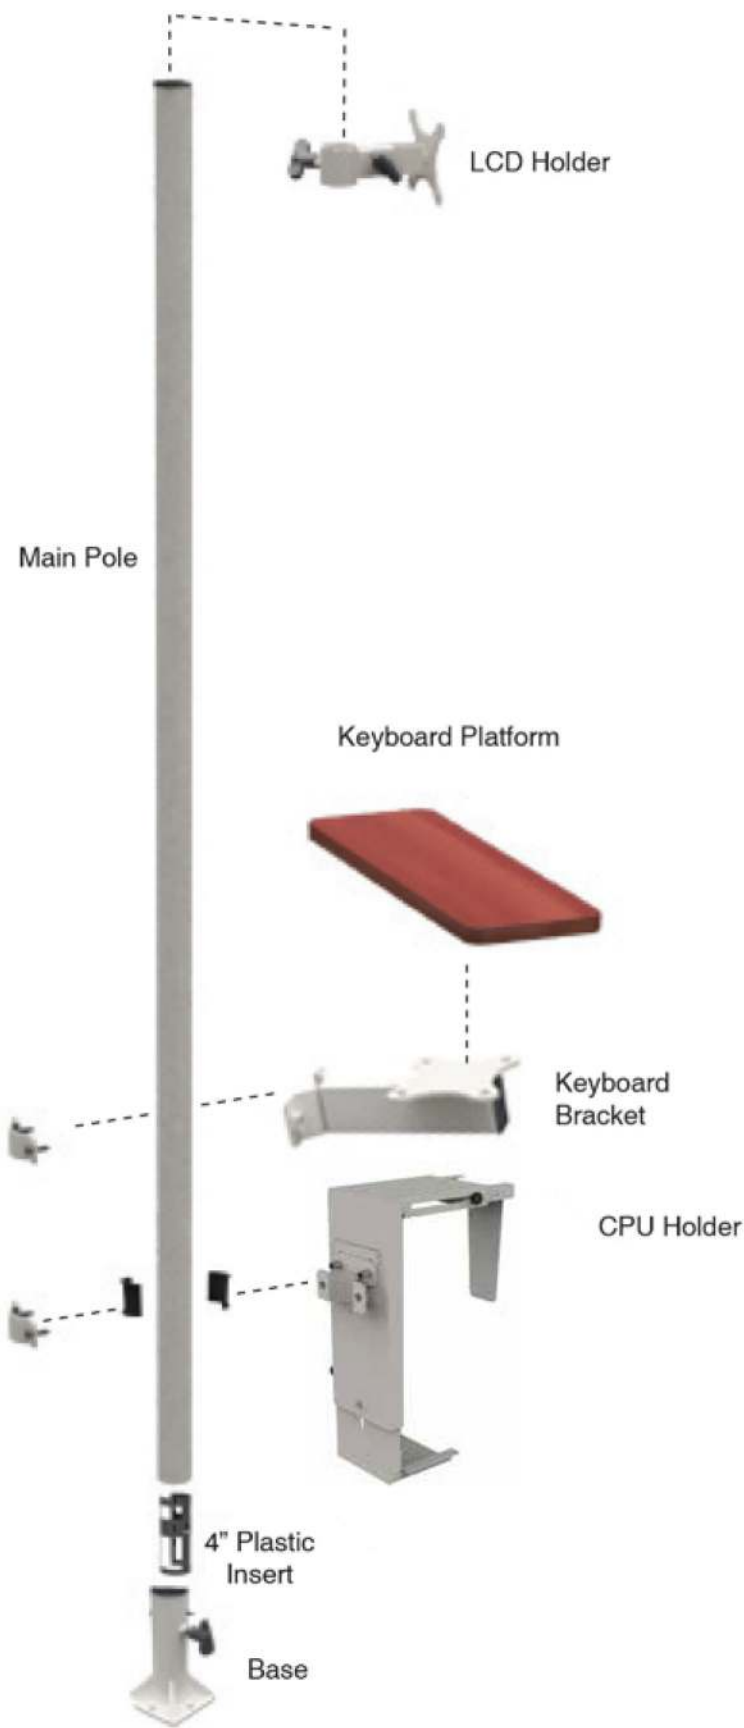Qty:1

1" 7/8 Velcro Pads
1 Velcro Loops
1 Velcro Hooks
Qty:2

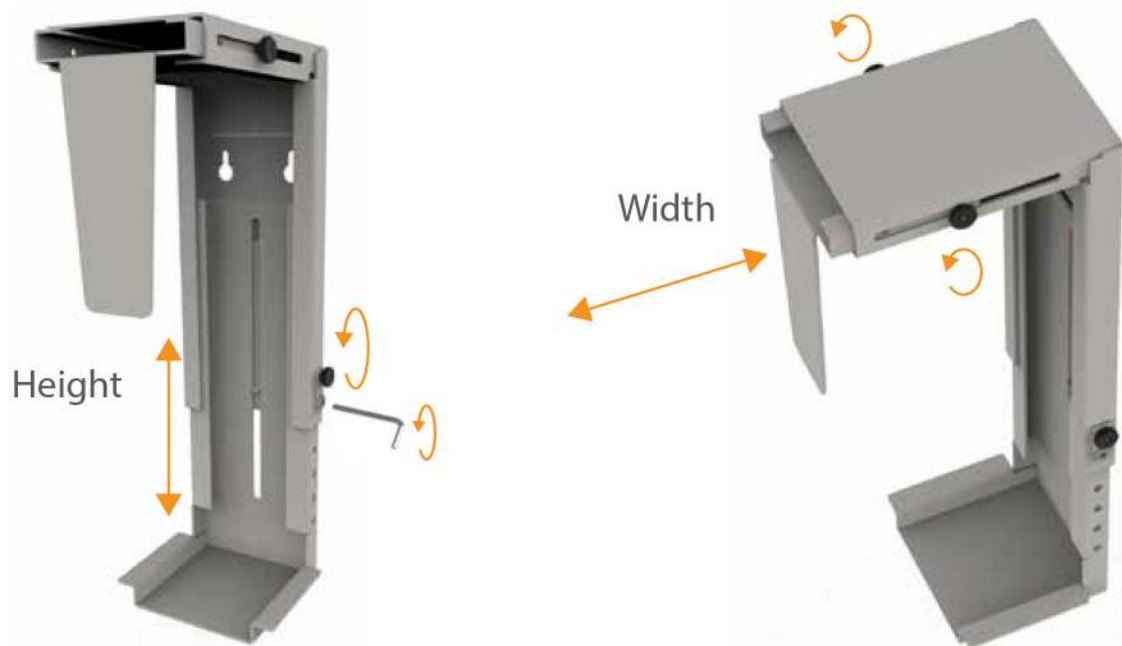Additional Tools Required

Slotted Screw Driver (Optional)

3/4" Wrench

LCD Holder

Main Pole

Keyboard Platform

Keyboard Bracket

CPU Holder

4" Plastic Insert

Base

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061

LIFETIME WARRANTY

Quantity Discounts

Buy American Act Compliant

Lifetime Warranty   Quantity Discounts   Assembled in USA   Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

Assembly Step-by-Step

Step **1**

Attach Base to floor then slide Main Pole onto it and secure T-Knob.

NOTE: Use Base to mark hole patter on floor first, then attach required hardware..

CPU holder Adjustability

Height

Width

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061

LIFETIME WARRANTY
Lifetime Warranty

Quantity Discounts
Quantity Discounts

Buy American Act Compliant
Assembled in USA

Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

Step 2 — Attach mount bracket to CPU holder

Use (2) 20mm Furniture Bolts.

20mm Furniture Bolt
Qty: 2

NOTE: If necessary, loosen the two stoppers and lower bottom piece to expose the mounting holes

mounting holes

loosen and lower

Step 3 — Attach CPU Holder At the desired Height.

Use (1) Clamps and (2) 3/8 1/6 x 1" Socket Head Bolts.

Clamp
Qty: 1

3/8 1/6 x 1" Socket Head Bolt
Qty: 2

Clamp Bushing
Qty: 2

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061

LIFETIME WARRANTY — Lifetime Warranty
Quantity Discounts — Quantity Discounts
Buy American Act Compliant — Assembled in USA
Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

Step 4 ———————————— Attach Velcro Pads to both your CPU and CPU Holder.

Once in place, adjust Holder and tighten
Thumb Nuts to keep CPU secure.

Velcro Pads

Qty: 2

Velcro

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061

LIFETIME WARRANTY   Quantity Discounts   Assembled in USA   Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

Step 6 — Attach Keyboard Bracket

Attach Keyboard Bracket using using one Socket Head Bolt and one T-Knob.

3/8 – 16 x 1"
Socket Head Bolt

Qty:1

T Knob

Qty:1

T knob

3/8 – 16 x 1"
Socket Head Bolt
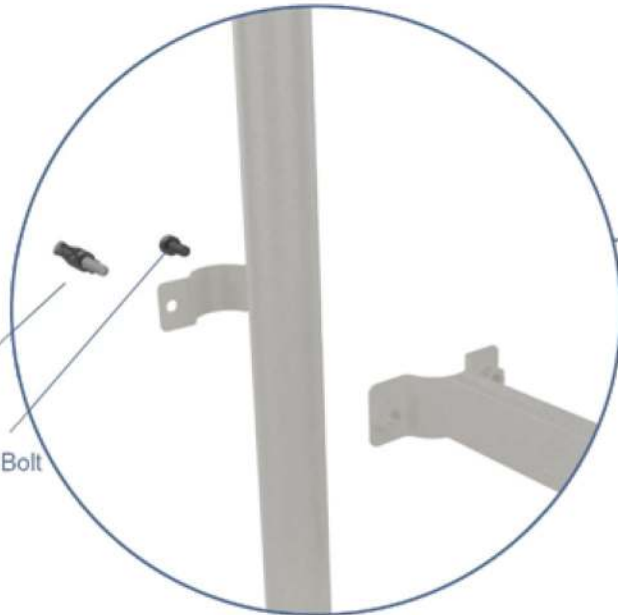
Step 7 — Attach Keyboard Platform.

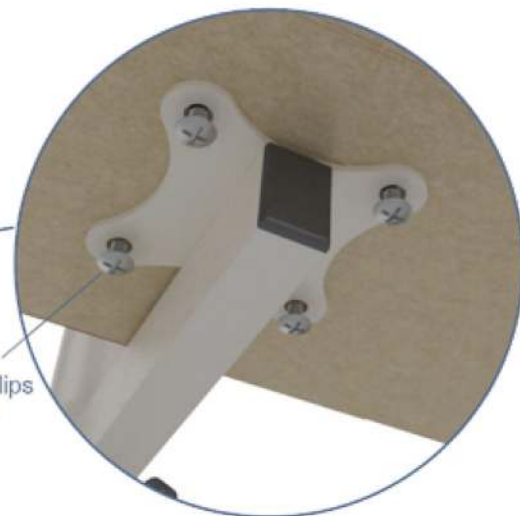Attach Keyboard Platform to Keyboard Bracket using four 1/4-20 Phillips Head Bolts.

1/4-20 Phillips
Head Bolt

Qty:4

1/4-20 Phillips
Head Bolt

Step 8

Attach LCD Holder.

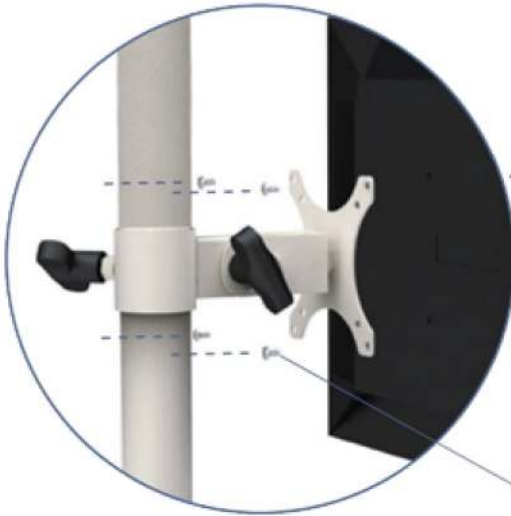Slide Monitor Arm onto Upright Extension and tighten T-Knob.

Step 9

Attach Monitor.

Attach your monitor to the LCD holder using four 8mm Phillips Machine Screws.

8mm Phillips Machine Screw

Qty:4

8 mm Phillips Machine Screw

How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com