

Sentry Floor Mount Computer Station - SFMCS Assembly Instructions



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support:

Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

Hardware List






























































Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

SFMCS

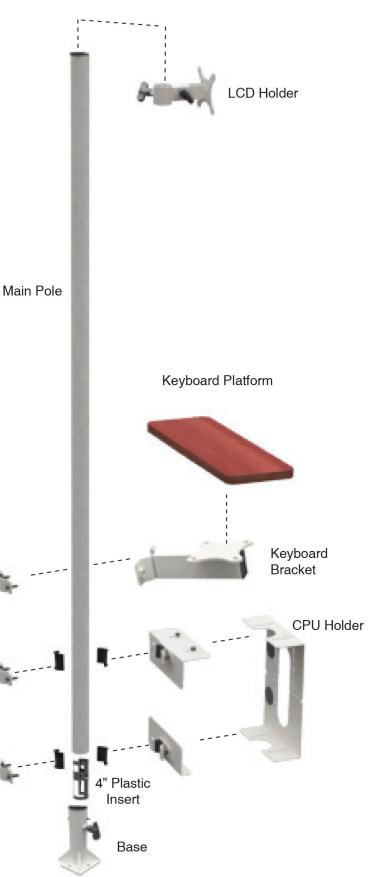











Support: Local: 310-353-7100 Toll Free: 888-929-0322

Fax: 310-353-7109 Support@VersaTables.com Step

Attach Base to floor

Attach Base to floor then slide Main Pole onto it and secure T-Knob. NOTE: Use Base to mark hole patter on floor first, then attach required hardware..

DCPU Holder Configurations

There are three possible configurations.

NOTE: L pieces are shown in two colors to help you differenciate

their placement.



Short Side Setup: CPU width is 1.3" to 4"







Long Side Setup: CPU width is 4" to 6"





Longest Side Setup: CPU width is 6" to 11.250"













Fast Shipping

Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

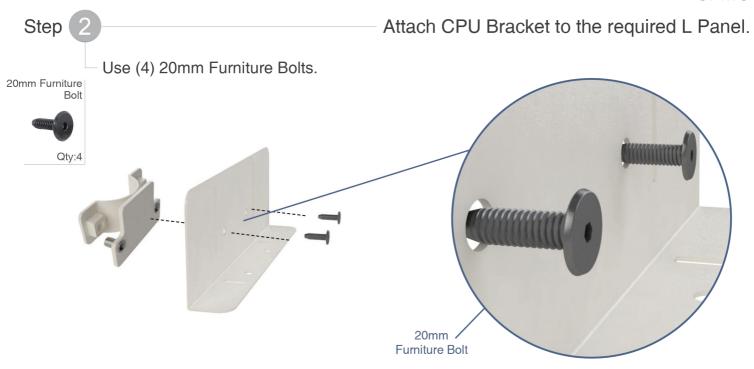

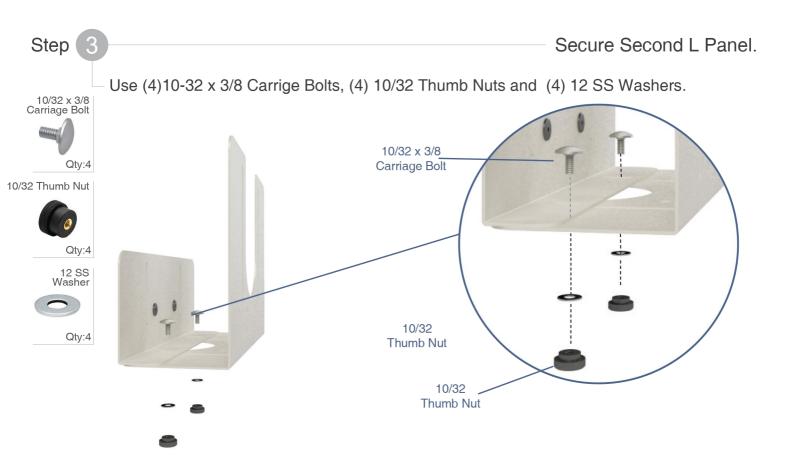











Support: Local: 310-353-7100 Toll Free: 888-929-0322

Fax: 310-353-7109 Support@VersaTables.com







Velcro








Support: Local: 310-353-7100

Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

SFMCS

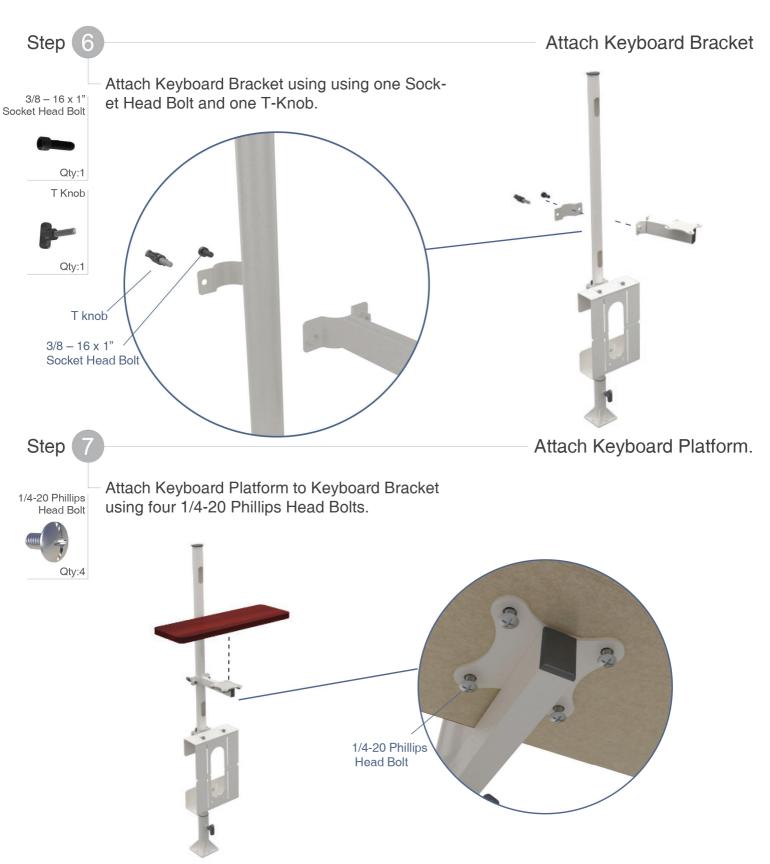













Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com

SFMCS

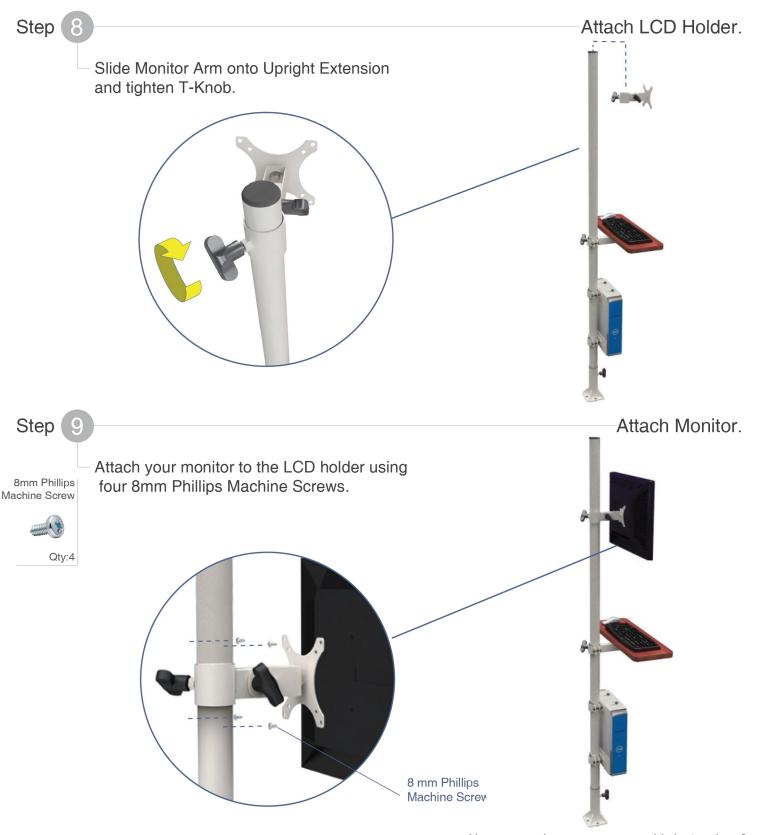













Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109 Support@VersaTables.com