

Dual LFC Fusion Cart

Assembly Instructions



How can we improve our assembly instructions? Your comments and suggestions are important to us. Please e-mail us at: support@versatables.com.











Support:

Hardware & Parts List

Dual LFC Fusion Cart



4mm & 8mm Allen Wrench









































Additional Tools Required
















Dual LFC Fusion Cart

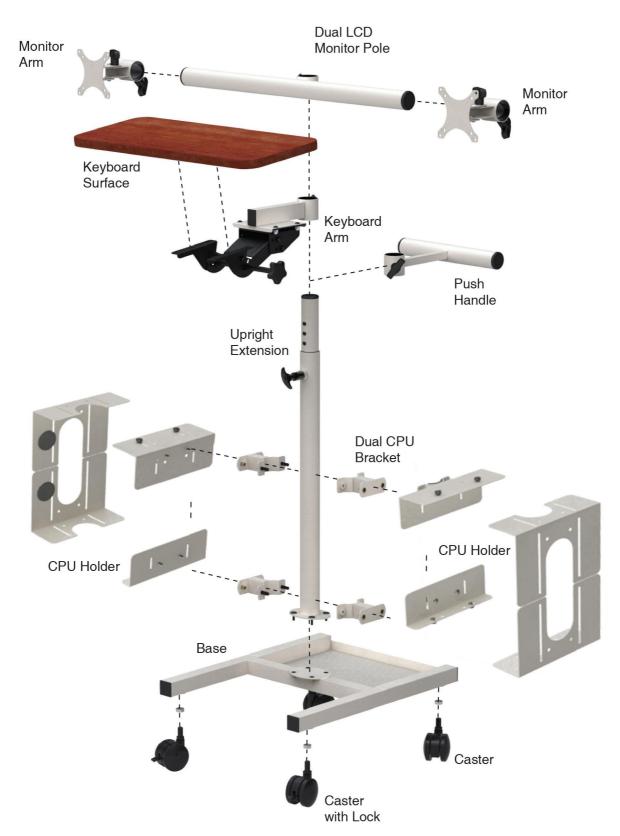











Support:

Dual LFC Fusion Cart



NOTE: The Casters with Locks are installed in the front of the Base.













Support:

Dual LFC Fusion Cart

DCPU Holder Configurations

There are three possible configurations.

NOTE: L pieces are shown in two colors to help you differenciate their placement.



Short Side Setup: CPU width is 1.3" to 4"





Long Side Setup: CPU width is 4" to 6"





Longest Side Setup: CPU width is 6" to 11.250"













Support:

Dual LEC Fusion Cart

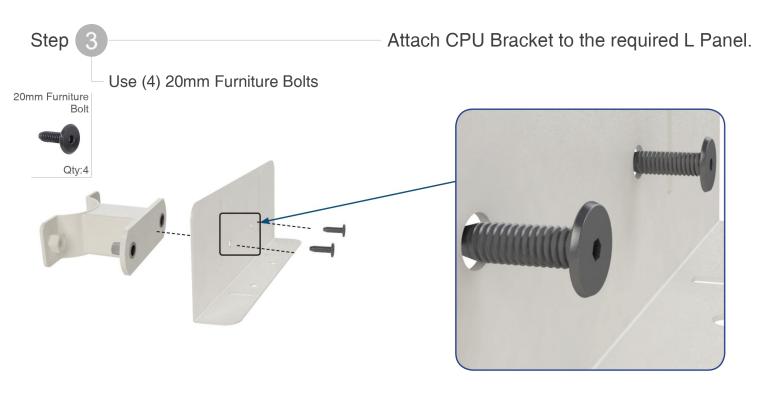

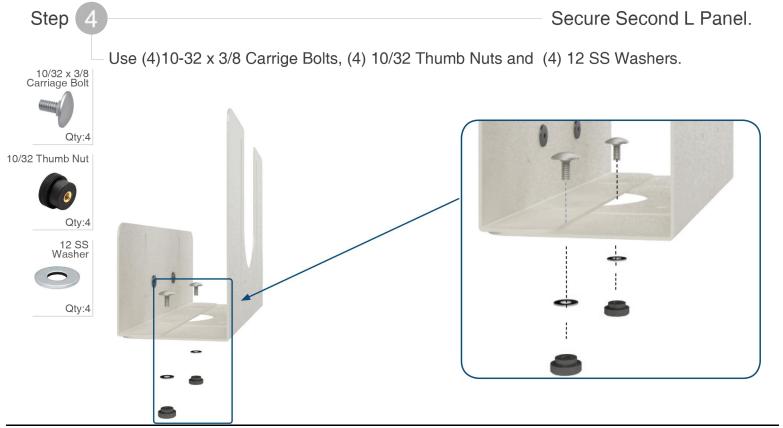











Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

Dual LEC Fusion Carl



Attach CPU Holder At the desired Height.

Use (4) 3/8 1/6 x 1" Socket Head Bolts.





















Support: Local: 310-353-7100 Toll Free: 888-929-0322

Fax: 310-353-7109 Support@VersaTables.com

Dual LEC Fusion Cart

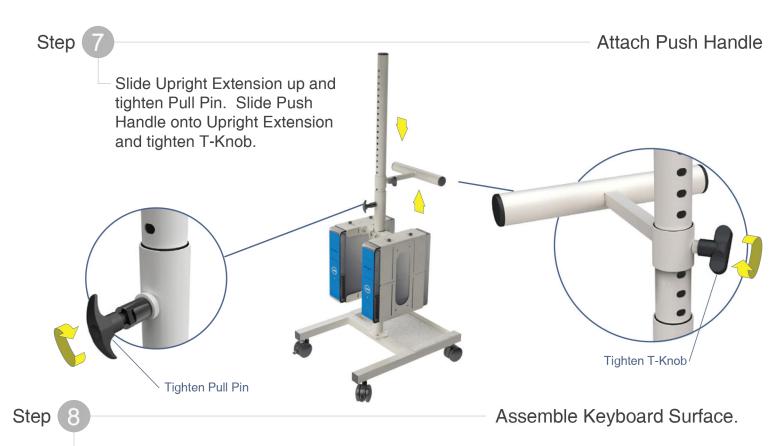

Lay Keyboard Surface Upside Down and attach Keyboard Arm.

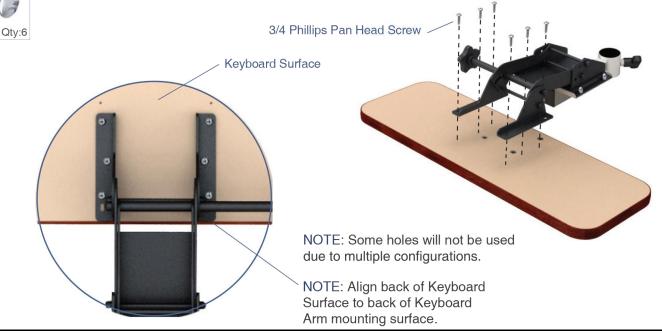



3/4 Phillips Pan Head Screw











Support: Local: 310-353-7100 Toll Free: 888-929-0322 Fax: 310-353-7109

Support@VersaTables.com

Revolution Laptop Notebook Desk Series

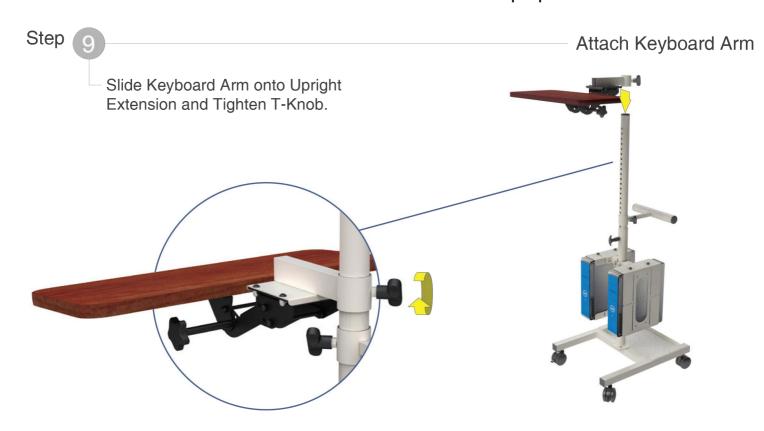

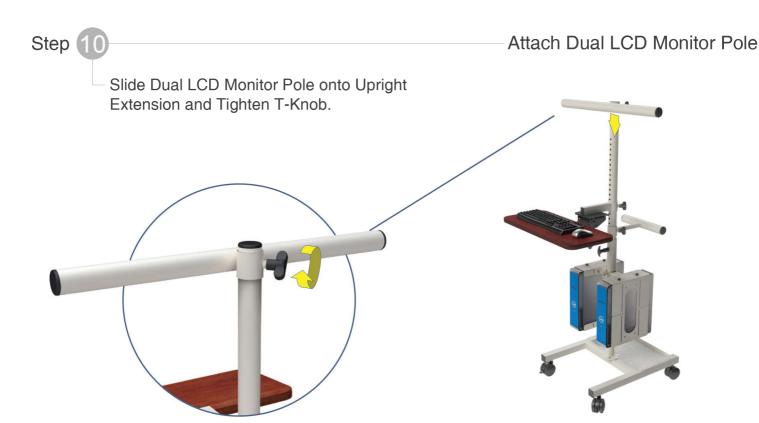












Support: Local: 310-353-7100 Toll Free: 888-929-0322

Fax: 310-353-7109
Support@VersaTables.com

Dual LFC Fusion Cart

Step 11

Attach Monitor Arm

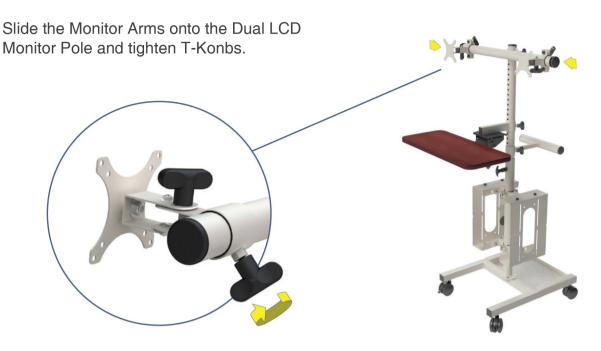

Step 12

Attach Monitors


8mm Phillips Machine Screw



Phillips Screw Driver



Attach your Monitors to the Monitor Arms using eight 8mm Phillips Machine Screws.

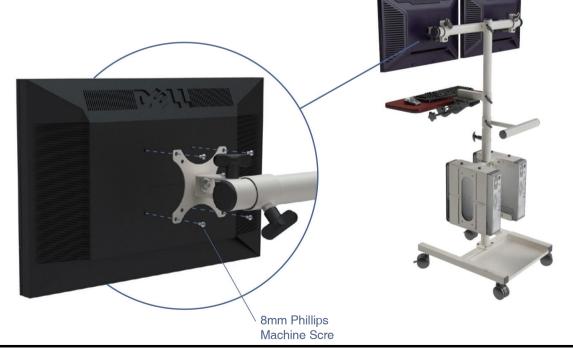











Support: Local: 310

Dual LFC Fusion Cart


NOTE: Steps 13 and 14 are OPTIONAL. The Utility / Printer Platform is an ADDITIONAL ACCESSORY and is acquired separately from the cart.

Step 13

1/4-20 Phillips Head Bolt Utility / Printer Platform

Utility / Printer Bracket

Attach the Utility / Printer Platform to Utility Bracket using (4) 1/4-20 Phillips Head Bolts.

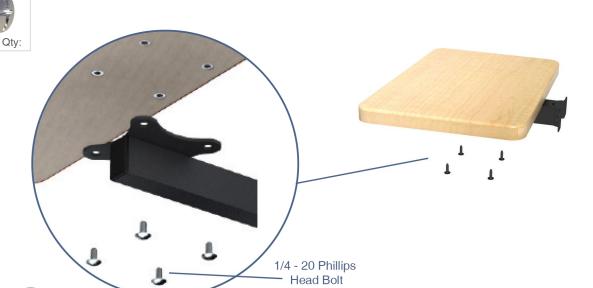

Step

3/8 -16 x 1"

Attach the Utility / Printer Bracket to Cart at the desired height using (1) Clamp Bracket and (2) 3/8-16 x 1" Socket Head Bolts.

